OMRON

Machine Automation Controller
CJ-series
EtherNet/IP™ Units

Operation Manual for NJ-series CPU Unit

CJ1W-EIP21

EtherNet/IP Units



W495-E1-08

- NOTE -

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

Trademarks

- · Sysmac and SYSMAC are trademarks or registered trademarks of OMRON Corporation in Japan and other countries for OMRON factory automation products.
- · Microsoft, Windows, Windows Vista, Excel, and Visual Basic are either registered trademarks or trademarks of Microsoft Corporation in the USA and other countries.
- EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.
- ODVA, CIP, CompoNet, DeviceNet, EtherNet/IP, and QuickConnect are trademarks of ODVA.
- The SD and SDHC logos are trademarks of SD-3C, LLC.





Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

- Copyrights

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

Introduction

Thank you for purchasing an EtherNet/IP Unit.

This manual contains information that is necessary to use the EtherNet/IP Unit. Please read this manual and make sure you understand the functionality and performance of the NJ-series CPU Unit before you attempt to use it in a control system.

Keep this manual in a safe place where it will be available for reference during operation.

Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of introducing FA systems.
- Personnel in charge of designing FA systems.
- Personnel in charge of installing and maintaining FA systems.
- · Personnel in charge of managing FA systems and facilities.

For programming, this manual is intended for personnel who understand the programming language specifications in international standard IEC 61131-3 or Japanese standard JIS B3503.

Applicable Products

This manual covers the following products.

- CJ-series EtherNet/IP Unit
 - CJ1W-EIP21

This manual contains information that is necessary to use a CJ1W-EIP21 EtherNet/IP Unit that is connected to an NJ-series CPU Unit. Use a CJ1W-EIP21 EtherNet/IP Unit with unit version 2.1 or later for an NJ-series CPU Unit. Also use a CPU Unit with unit version 1.01 or later and Sysmac Studio version 1.02 or higher.

Relevant Manuals

The following table provides the relevant manuals for the CJ-series EtherNet/IP Unit. Read all of the manuals that are relevant to your system configuration and application before you use the CJ-series EtherNet/IP Unit. Most operations are performed from the Sysmac Studio Automation Software. Refer to the Sysmac Studio Version 1 Operation Manual (Cat. No. W504) for information on the Sysmac Studio.


					1	Mar	nual					
	В	asic inf	ormatic	on		1	1			1	1	1
Purpose of use	NX-series CPU Unit Hardware User's Manual	NJ-series CPU Unit Hard- ware User's Manual	NJ/NX-series CPU Unit Software User's Manual	NJ/NX-series Instructions Reference Manual	NJ/NX-series CPU Unit Motion Control User's Manual	NJ/NX-series Motion Control Instructions Reference Manual	NJ/NX-series CPU Unit Built-in EtherCAT Port User's Manual	NJ/NX-series CPU Unit Built-in EtherNet/IP Port User's Manual	NJ-series Database Connection CPU Unit User's Manual	NJ-series SECS/GEM CPU Units User's Manual	NJ/NX-series Troubleshooting Manual	CJ-series Special Unit Operation Manuals for NJ-series CPU Unit
Introduction to NX-series Controllers	•											
Introduction to NJ-series Controllers		•										
Setting devices and hardware	•	•										
Using motion control					•							
Using EtherCAT							•					
Using EtherNet/IP								•				
Using the database connection service									•			
Using the GEM Services										•		
Using CJ-series Units												•
Software settings			•									
Using motion control					•							
Using EtherCAT							•					
Using EtherNet/IP								•				
Using the database connection service									•			
Using the GEM Services										•		
Writing the user program			•	•								
Using motion control					•	•						
Using EtherCAT							•					
Using EtherNet/IP								•				
Using the database connection service									•			
Using the GEM Services										•		
Using CJ-series Units												•
Programming error processing											•	
Testing operation and debugging			•									
Using motion control					•							
Using EtherCAT							•					
Using EtherNet/IP								•				
Using the database connection service									•			
Using the GEM Services										•		
Learning about error management and corrections*1	•	A	•		•		•	•	•	•	•	•
Maintenance	•	•										
Using motion control					•							
Using EtherCAT					-		•					
Using EtherNet/IP								•				
Using CJ-series Units												•
			l	ı	l	l	l	1	1	l	l	<u> </u>

^{*1} Refer to the *NJ/NX-series Troubleshooting Manual* (Cat. No. W503) for the error management concepts and an overview of the error items. Refer to the manuals that are indicated with triangles for details on errors for the corresponding Units.

Manual Structure

Page Structure

The following page structure is used in this manual.

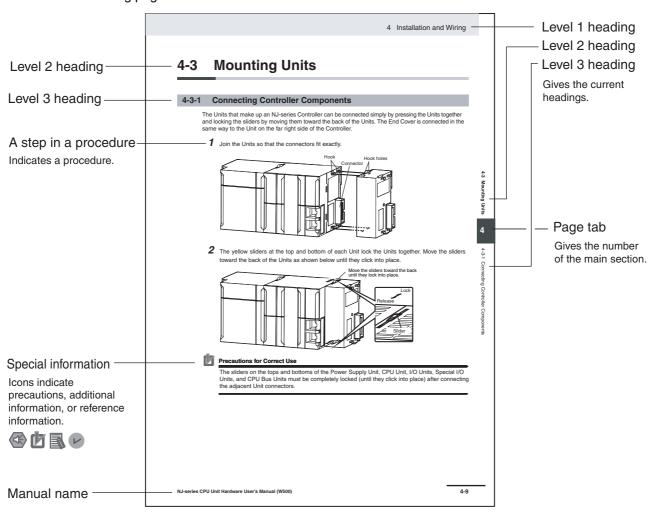

This illustration is provided only as a sample. It may not literally appear in this manual.

Special Information

Special information in this manual is classified as follows:



Precautions for Safe Use

Precautions on what to do and what not to do to ensure safe usage of the product.



Precautions for Correct Use

Precautions on what to do and what not to do to ensure proper operation and performance.



Additional Information

Additional information to read as required.

This information is provided to increase understanding or make operation easier.



Version Information

Information on differences in specifications and functionality for CPU Units with different unit versions and for different versions of the Sysmac Studio is given.

Note References are provided to more detailed or related information.

Precaution on Terminology

In this manual, "download" refers to transferring data from the Sysmac Studio to the physical Controller and "upload" refers to transferring data from the physical Controller to the Sysmac Studio.

For the Sysmac Studio, synchronization is used to both upload and download data. Here, "synchronize" means to automatically compare the data for the Sysmac Studio on the computer with the data in the physical Controller and transfer the data in the direction that is specified by the user.

Sections in this Manual

				1	9
1	Introduction	9	FTP Server	2	10
					.
2	Installing Ethernet	10	Automatic Clock	3	11
	Networks		Adjustment	4	12
	A sala ala a Dania a Mari				
3	Assigning Device Variables for CJ-series Units	11	SNMP Agent	5	13
	Datamatata		Communications Per-		
4	Determining IP Addresses	12	formance and Commu- nications Load	6	Α
	Overes a Otvedia Cattinana				
5	Sysmac Studio Settings for the EtherNet/IP Unit	13	Troubleshooting	7	l
				_ / /	8
6	Testing Communications	Α	Appendices		0
				_/ / /	
7	Tag Data Link Functions		Index		
				_/ /	
0_	Magaga Cammunication	20			
8	Message Communication	IIS			

CONTENTS

Inti	roduction	1
Rel	levant Manuals	2
Ма	nual Structure	3
Sec	ctions in this Manual	5
Ter	rms and Conditions Agreement	12
Sat	fety Precautions	14
Pre	ecautions for Safe Use	19
Pre	ecautions for Correct Use	26
Re	gulations and Standards	29
Ver	rsions	31
Re	lated Manuals	36
Re	vision History	38
Section 1		
1-1	Introduction	1-2 1-2
1-2	System Configuration and Configuration Devices	1-5
1-3	1-3-1 Specifications	4 7
	1-3-2 Part Names and Functions	1-7 1-9
1-4	1-3-3 Dimensions	

Section 2 Installing Ethernet Networks

2-1	Switch Settings on the Front Panel of the EtherNet/IP Unit	2-2
2-2	Mounting the Unit to the CPU Rack or Expansion Rack	2-3
2-3	Selecting the Network Devices	2-4
	2-3-1 Recommended Network Devices	
	2-3-2 Ethernet Switch Types	
	2-3-3 Ethernet Switch Functions	
	2-3-4 Precautions for Ethernet Switch Selection	
2-4	Network Installation	
	2-4-1 Basic Installation Precautions	
	2-4-3 Precautions When Laying Twisted-pair Cable	
	2-4-4 Precautions When Installing and Connecting Ethernet Switches	
2-5	Connecting to the Network	
	2-5-1 Ethernet Connectors	
	2-5-2 Connecting the Cable	
	2-5-3 Noise Countermeasures for Contact Output Units	2-13
Section 3	Assigning Device Variables for CJ-series Uni	ts
3-1	Data Exchange with the CPU Unit	3-2
0.	3-1-1 Data Flow	
	3-1-2 Specifying and Creating Variables	
3-2	Device Variables for the CJ-series Unit	3-6
	3-2-1 Assigning Device Variables for CJ-series Units	
	3-2-2 Device Variables for the CJ-series Unit for Software Switches	
	3-2-3 Device Variables for the CJ-series Unit for Status	
	3-2-4 Device Variables for the CJ-series Unit for Setup	
3-3	User Definition Settings for the Status Area	
	3-3-1 Introduction to User Definition Settings	
	3-3-2 Setting User Definitions	
	3-3-4 Status Information Assigned to the User-defined Area	
Section 4	Determining IP Addresses	
 4-1	IP Addresses	4-2
	4-1-1 IP Address Configuration	4-2
	4-1-2 Allocating IP Addresses	4-3
	4-1-3 Subnet Masks	• • • • • • • • • • • • • • • • • • • •
	4-1-4 CIDR	4-3
4-2	Setting the IP Address of the EtherNet/IP Unit	
	4-2-1 Determining IP Addresses	
	4-2-2 Setting IP Addresses	
• -	4-2-3 Online Connection	
4-3	Private and Global Addresses	
	4-3-1 Private and Global Addresses	
	4-3-2 Using a Private Address for the EtherNet/IP Unit	
	T-0-0 Osing a Global Address for the Etherneth Office	4-12

Section 5	$oldsymbol{ysmac}$ Studio Settings for the EtherNet/IP $oldsymbol{U}$	Jnit
-----------	---	------

5-1	Unit Se	ettings for the EtherNet/IP Unit	5-2
	5-1-1	Updating the Unit Settings	
	5-1-2	Restoring the Default Unit Settings	
5-2	TCP/IP	Settings Display	5-3
5-3	Link S	ettings Display	5-5
5-4	FTP Se	ettings Display	5-6
5-5		Settings Display	
5-6		Settings Display	
5-7		Trap Settings Display	
_		Area Settings Display	
5-8	Status	Area Settings Display	5-13
Section 6	3	Testing Communications	
6-1	Testing	g Communications	6-2
	6-1-1	PING Command	
	6-1-2	Using the PING Command with the EtherNet/IP Unit	6-2
	6-1-3	Host Computer Operation	6-3
Section 7	, -	Tag Data Link Functions	
7-1		uction to Tag Data Links	
	7-1-1	Tag Data Links	
	7-1-2 7-1-3	Data Link Data Areas	
	7-1-3 7-1-4	Tag Data Link Functions and Specifications Overview of Operation	
	7-1- 4 7-1-5	Starting and Stopping Tag Data Links	
	7-1-5 7-1-6	Controller Status	
	7-1-7	Concurrency of Tag Data Link Data	
7-2	Setting	g Tag Data Links	7-16
	7-2-1	Starting the Network Configurator	
	7-2-2	Tag Data Link Setting Procedure	7-18
	7-2-3	Registering Devices	7-19
	7-2-4	Creating Tags and Tag Sets	
	7-2-5	Connection Settings	
	7-2-6	Creating Connections Using the Wizard	
	7-2-7	Creating Connections by Device Dragging and Dropping	
	7-2-8	Connecting the Network Configurator to the Network	
	7-2-9	Downloading Tag Data Link Parameters	
	7-2-10 7-2-11	Uploading Tag Data Link Parameters	
	7-2-11 7-2-12	Verifying the Tag Data LinksStarting and Stopping Tag Data Links	
	7-2-12	Clearing the Device Parameters	
	7-2-13	Saving the Network Configuration File	
	7-2-15	Reading a Network Configuration File	
	7-2-16	Checking Connections	
	7-2-17	Changing Devices	
	7-2-18	Displaying Device Status.	
7-3	Laddei	r Programming for Tag Data Links	
	7-3-1	Ladder Programming for Tag Data Links	
	7-3-2	Status Flags Related to Tag Data Links	
7-4		ata Links with Models Other than NJ-Series CPU Units	
7-5	Quick(Connect	7-78

Section 8 Message Communications

8-1	Overview of the CIP Message Communications Service	
	8-1-1 Overview of the CIP Message Communications Service	
	8-1-2 Message Communications Service Specifications	
8-2	Using CIP Message Communications	
	8-2-1 Overview	
	8-2-2 CIP Communications Instructions	
	8-2-3 Using CIP Communications Instructions	
	8-2-4 Route Path	
	8-2-6 Sample Programming for CIP Connectionless (UCMM) Message Communications	
	8-2-7 Sample Programming for CIP Connection (Class 3) Message Communications	
	8-2-8 Operation Timing	
	8-2-9 Response Codes	
8-3	CIP Objects Sent to the EtherNet/IP Unit	8-31
00	8-3-1 CIP Objects Sent to the EtherNet/IP Unit	
	8-3-2 Identity Object (Class ID: 01 Hex)	
	8-3-3 TCP/IP Interface Object (Class ID: F5 hex)	
	8-3-4 Ethernet Link Object (Class ID: F6 Hex)	8-35
	8-3-5 Controller Object (Class ID: C4 Hex)	
	8-3-6 Connection Configuration Object (Class ID: F3 Hex)	8-40
Section 9	FTP Server	
9-1	Overview and Specifications	9-2
	9-1-1 Overview	9-2
	9-1-2 Specifications	9-2
9-2	FTP Server Function Details	9-3
0 2	9-2-1 Supported Files	
	9-2-2 Connecting to the FTP Server	
9-3	Using the FTP Server Function	0-5
3-3	9-3-1 Procedure	
	9-3-2 List of Settings Required for the FTP Server Function	
9-4	FTP Server Application Example	
9-5	Using FTP Commands	9-7
	9-5-1 Table of Commands	
	9-5-2 Using the Commands	_
9-6	FTP Server Status	0.12
9-0	9-6-1 FTP Status	
9-7	Using SD Memory Card Operations	
	9-7-1 SD Memory Card Types	
	9-7-2 File Types	
	9-7-4 Format of Variable Data	
9-8	FTP File Transfer Time	
9-9	Application Example from a Host Computer	
Section 1	0 Automatic Clock Adjustment	
 10-1	Automatic Clock Adjustment	10-2
_	10-1-1 Overview	10-2
	10-1-2 Specifications	10-2

10-2	Proced	dure to Use the Automatic Clock Adjustment Function	10-3
	10-2-1	Procedure	10-3
	10-2-2	Settings Required for Automatic Clock Adjustment	10-3
	10-2-3	Updating the Clock Information	10-4
Section 1	1 :	SNMP Agent	
	CNIMD	Agent	11.0
11-1	11-1-1	Overview	
	11-1-1	Specifications	
	11-1-2	SNMP Messages	
	11-1-3	MIB Specifications	
11-9	Droce	dure to Use the SNMP Agent	
11-2	11-2-1	Procedures	
	11-2-2	Settings Required for the SNMP Agent	
Section 1		Communications Performance and Commu Load	nications
12-1	Comm	unications System	
	12-1-1	Tag Data Link Communications Method	
	12-1-2	Calculating the Number of Connections	
	12-1-3	Packet Interval (RPI) Accuracy	12-6
12-2	Adjust	ting the Communications Load	
	12-2-1	Checking Bandwidth Usage for Tag Data Links	
	12-2-2	Tag Data Link Bandwidth Usage and RPI	
	12-2-3	Adjusting Device Bandwidth Usage	
	12-2-4	Changing the RPI	
	12-2-5	RPI Setting Examples	
12-3		sponse Time in Tag Data Links	
	12-3-1	Timing of Data Transmissions	
	12-3-2	EtherNet/IP Unit Data Processing Time	
	12-3-3 12-3-4	Effect of Tag Data Links on Task Periods	
12-/		Maximum Tag Data Link I/O Response Time Ige Service Transmission Delay	
12-4	Wessa	ige Service Transmission Delay	12-20
Section 1	3	Troubleshooting	
13-1	Check 13-1-1	ing Status with the Network Configurator The Network Configurator's Device Monitor Function	
	_	-	
13-2	13-2-1	the LED Indicators and Display for Troubleshooting Errors Occurring at the EtherNet/IP Unit	
13-3	Conne	ection Status Codes and Error Processing	13-20
13-4	Error I	_og	13-26
10 4	13-4-1	Error Log Data	
	13-4-2	Error Log Error Codes	
10 5	Event	Logs	
13-5	13-5-1	Overview of the Event Logs	
	13-5-1	Error Table	
	13-5-2	Error Descriptions	
40.0		·	
13-6		eshooting	
	13-6-1 13-6-2	CPU Unit's ERR Lit or Flashing	
	13-6-2	Tag Data Links Fail to Start*	
	. 5 5 5		

		13-6-4 Tag Data Link Problems	
	13-7	7 Cleaning and Maintenance	
		13-7-1 Cleaning	
		13-7-2 Inspection	
	13-8	3 Precautions on Equipment Replacement	13-54
		13-8-1 Precautions When Replacing the EtherNet/IP Unit	
		13-8-2 Settings Required after Unit Replacement	
		13-8-3 EtherNet/IP Unit Replacement Procedure	
	13-9	Replacing Target Nodes during Communications	13-56
		13-9-1 Overview of Target Node Replacement Work	
		13-9-2 Target Node Replacement Procedure	
Apper	ndic	ces	
	A-1	Functional Comparison of EtherNet/IP Functionality on NJ-series CPU Units and Other Series	A-2
	Δ-2	Use the Sysmac Studio to Set the Tag Data Links (EtherNet/IP Connections)	Δ-3
	^-	A-2-1 Overview of the Tag Data Links (EtherNet/IP Connections) Settings with the Sysmac Stu	
		A-2-2 Procedure to Make the EtherNet/IP Connection Settings with the Sysmac Studio	
		A-2-3 EtherNet/IP Connection Settings	A-5
		A-2-4 Making the EtherNet/IP Connection Settings with the Sysmac Studio	
		A-2-5 Checking Communications Status with the Sysmac Studio and Troubleshooting	
		A-2-6 Troubleshooting	A-38
	A-3	EDS File Management	A-43
		A-3-1 Installing EDS Files	A-44
		A-3-2 Creating EDS Files	A-44
		A-3-3 Deleting EDS Files	
		A-3-4 Saving EDS Files	
		A-3-5 Searching EDS Files	
		A-3-6 Displaying EDS File Properties	
		A-3-7 Creating EDS Index Files	A-46
	A-4	Precautions for Using the Network Configurator on Windows XP, Windows Vista,	
		or Windows 7	
		A-4-1 Changing Windows Firewall Settings	A-47
	A-5	Variable Memory Allocation Methods	A-50
		A-5-1 Variable Memory Allocation Rules	
		A-5-2 Important Case Examples	A-59
	A-6	Precautions When Accessing External Outputs in CPU Units	A-63
	A-7	Differences in Available Functions Depending on the CPU Unit (NJ or CJ Series) A-7-1 Functional Differences	
		A-7-2 Differences in Access Methods from the User Program	
	A-8	Version Information	A-96
ndex			

Terms and Conditions Agreement

Warranty, Limitations of Liability

Warranties

Exclusive Warranty

Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

Limitations

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right.

Buyer Remedy

Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Application Considerations

Suitability of Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Disclaimers

Performance Data

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.


Errors and Omissions

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Safety Precautions

Definition of Precautionary Information

The following notation is used in this manual to provide precautions required to ensure safe usage of a CJ-series EtherNet/IP Unit. The safety precautions that are provided are extremely important to safety. Always read and heed the information provided in all safety precautions. The following notation is used.

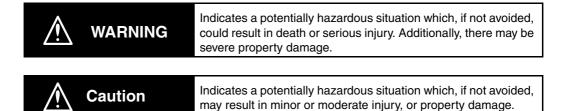



Indicates precautions on what to do and what not to do to ensure safe usage of the product.

Precautions for Correct Use Indicates precautions on what to do and what not to do to ensure proper operation and performance.

Symbols



The circle and slash symbol indicates operations that you must not do. The specific operation is shown in the circle and explained in text. This example indicates prohibiting disassembly.



The triangle symbol indicates precautions (including warnings). The specific operation is shown in the triangle and explained in text. This example indicates a precaution for electric shock.



The triangle symbol indicates precautions (including warnings). The specific operation is shown in the triangle and explained in text. This example indicates a general precaution.



The filled circle symbol indicates operations that you must do.

The specific operation is shown in the circle and explained in text.

This example shows a general precaution for something that you must do.



The triangle symbol indicates precautions (including warnings). The specific operation is shown in the triangle and explained in text. This example indicates a precaution for high temperatures.

Warnings

During Power Supply

Do not touch any of the terminals or terminal blocks while the power is being supplied. Doing so may result in electric shock.



Do not attempt to take any Unit apart. In particular, high-voltage parts are present in the Power Supply Unit while power is supplied or immediately after power is turned OFF. Touching any of these parts may result in electric shock. There are sharp parts inside the Unit that may cause injury.



Fail-safe Measures

Provide safety measures in external circuits to ensure safety in the system if an abnormality occurs due to malfunction of the CPU Unit, slaves, or Units or due to other external factors affecting operation. Not doing so may result in serious accidents due to incorrect operation.



Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits.



The Controller outputs may remain ON or OFF due to deposition or burning of the output relays or destruction of the output transistors. As a countermeasure for such problems, external safety measures must be provided to ensure safe operation of the system.



The CPU Unit will turn OFF all outputs from Basic Output Units in the following cases. The slaves will operate according to the settings in the slaves.



- If an error occurs in the power supply
- · If the power supply connection becomes faulty
- If a CPU watchdog timer error or CPU reset occurs
- If a major fault level Controller error occurs
- While the CPU Unit is on standby until RUN mode is entered after the power is turned ON

External safety measures must be provided to ensure safe operation of the system in such cases.

If external power supplies for slaves or other devices are overloaded or short-circuited, the voltage will drop, outputs will turn OFF, and the system may be unable to read inputs. Provide external safety measures in controls with monitoring of external power supply voltage as required so that the system operates safely in such a case.



Unintended outputs may occur when an error occurs in variable memory or in memory used for CJ-series Units. As a countermeasure for such problems, external safety measures must be provided to ensure safe operation of the system.



Provide measures in the communications system and user program to ensure safety in the overall system even if errors or malfunctions occur in data link communications or remote I/O communications.



If there is interference in remote I/O communications or if a major fault level error occurs, output status will depend on the products that are used. Confirm the operation that will occur when there is interference in communications or a major fault level error, and implement safety measures. Correctly set all of the settings in the slaves and Units.



The NJ-series Controller continues normal operation for a certain period of time when a momentary power interruption occurs. This means that the NJ-series Controller may receive incorrect signals from external devices that are also affected by the power interruption. Accordingly, take suitable actions, such as external fail-safe measures and interlock conditions, to monitor the power supply voltage of the external device as required.



You must take fail-safe measures to ensure safety in the event of incorrect, missing, or abnormal signals caused by broken signal lines, momentary power interruptions, or other causes. Not doing so may result in serious accidents due to incorrect operation.



Voltage and Current Inputs

Make sure that the voltages and currents that are input to the slaves and Units are within the specified ranges.

Inputting voltages or currents that are outside of the specified ranges may cause accidents or fire.



Downloading

Always confirm safety at the destination before you transfer a user program, configuration data, setup data, device variables, or values in memory used for CJ-series Units from the Sysmac Studio. The devices or machines may perform unexpected operation regardless of the operating mode of the CPU Unit.



Actual Operation

Check the user program, data, and parameter settings for proper execution before you use them for actual operation.



Cautions

⚠ Caution

Application

Do not touch any Unit when power is being supplied or immediately after the power supply is turned OFF. Doing so may result in burn injury.



Wiring

Be sure that all terminal screws and cable connector screws are tightened to the torque specified in the relevant manuals. The loose screws may result in fire or malfunction.



Online Editing

Execute online editing only after confirming that no adverse effects will be caused by deviations in the timing of I/O. If you perform online editing, the task execution time may exceed the task period, I/O may not be refreshed with external devices, input signals may not be read, and output timing may change.



Precaution on Error Message That Says an Instruction May Cause Unintended Operation

Instructions may results in unexpected operation and affect the system if you clear the selection of the *Detect an error when an in-out variable is passed to specific instruction argument* Check Box in the Program Check Area. Always confirm that the conditions for use that are given in the *NJ/NX-series Instructions Reference Manual* (Cat. No. W502) are met before you clear the selection of this check box.





Version Information

This error message is displayed by and the above option setting is available on Sysmac Studio version 1.02.

Precautions for Safe Use

Disassembly and Dropping

- Do not attempt to disassemble, repair, or modify any Units. Doing so may result in malfunction or fire.
- Do not drop any Unit or subject it to abnormal vibration or shock. Doing so may result in Unit malfunction or burning.

Mounting

• The sliders on the tops and bottoms of the Power Supply Unit, CPU Unit, I/O Units, and other Units must be completely locked (until they click into place) after connecting the adjacent Unit connectors.

Installation

• Always connect to a ground of 100 Ω or less when installing the Units. A ground of 100 Ω or less must be installed when shorting the GR and LG terminals on the Power Supply Unit.

Wiring

- Follow the instructions in this manual to correctly perform wiring.
 Double-check all wiring and switch settings before turning ON the power supply.
- Use crimp terminals for wiring.
 Do not connect bare stranded wires directly to terminals.
- Do not pull on the cables or bend the cables beyond their natural limit.

 Do not place heavy objects on top of the cables or other wiring lines. Doing so may break the cables.
- Mount terminal blocks and connectors only after checking the mounting location carefully.
 Be sure that the terminal blocks, expansion cables, and other items with locking devices are properly locked into place.
- Always remove any dustproof labels that are on the top of the Units when they are shipped before
 you turn ON the power supply. If the labels are not removed, heat will accumulate and malfunctions
 may occur.
- Before you connect a computer to the CPU Unit, disconnect the power supply plug of the computer from the AC outlet. Also, if the computer has an FG terminal, make the connections so that the FG terminal has the same electrical potential as the GR terminal on the Power Supply Unit. A difference in electrical potential between the computer and Controller may cause failure or malfunction.
- If the external power supply to an Output Unit or slave has polarity, connect it with the correct polarity.
 If the polarity is reversed, current may flow in the reverse direction and damage the connected devices regardless of the operation of the Controller.

Power Supply Design

• Do not exceed the rated supply capacity of the Power Supply Units in the NJ-series Controller. The rated supply capacities are given in the *NJ-series CPU Unit Hardware User's Manual* (Cat. No. W500).

If the capacity is exceeded, operation may stop, malfunctions may occur, or data may not be backed up normally for power interruptions.

Use NJ-series Power Supply Units for both the NJ-series CPU Rack and Expansion Racks.

Operation is not possible if a CJ-series Power Supply Unit is used with an NJ-series CPU Unit or an NJ-series Power Supply Unit is used with a CJ-series CPU Unit.

- Do not apply voltages or connect loads to the Output Units or slaves in excess of the maximum ratings.
- Surge current occurs when the power supply is turned ON. When selecting fuses or breakers for
 external circuits, consider the above precaution and allow sufficient margin in shut-off performance.
 Refer to the relevant manuals for surge current specifications. Refer to the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) for surge current specifications.
- If the full dielectric strength voltage is applied or turned OFF using the switch on the tester, the generated impulse voltage may damage the Power Supply Unit. Use the adjustment on the tester to gradually increase and decrease the voltage.
- Apply the voltage between the Power Supply Unit's L1 or L2 terminal and the GR terminal when testing insulation and dielectric strength.
- Do not supply AC power from an inverter or other device with a square-wave output. Internal temperature rise may result in smoking or burning. Always input a sinusoidal wave with the frequency that is given in the *NJ-series CPU Unit Hardware User's Manual* (Cat. No. W500).
- Install external breakers and take other safety measures against short-circuiting in external wiring.

Turning ON the Power Supply

- It takes up to approximately 10 to 20 s to enter RUN mode after the power is turned ON. The outputs
 during this time behave according to the slave or Unit specifications. Use the RUN output on the
 Power Supply Unit, for example, to implement fail-safe circuits so that external devices do not operate
 incorrectly.
- Configure the external circuits so that the power supply to the control system turns ON only after the
 power supply to the Controller has turned ON. If the power supply to the Controller is turned ON after
 the control power supply, temporary errors may result in incorrect control system signals because the
 output terminals on Output Units may momentarily turn ON when power supply is turned ON to the
 Controller.
- If you transfer data from a backup file on an SD Memory Card to the Controller when the power supply is turned ON, properly select the data groups to transfer. If the data for an unintended data group is transferred to the Controller, it may cause the equipment to operate unpredictably.
- Never turn OFF the power supply to the Controller until RUN mode is entered after the power is turned ON. If the power supply is turned OFF, a Battery-backup Memory Check Error may occur at next time you start operation. If a Battery-backup Memory Check Error occurs, the variables retained are set to their initial values and the Holding, DM and EM Areas in memory used for CJ-series Units are cleared to all zeros. If you want to resume the operation, reload the correct data for the variables retained and CJ-series Unit memory, as required.

Turning OFF the Power Supply

- Never turn OFF the power supply to the Controller when the BUSY indicator is flashing. While the
 BUSY indicator is lit, the user program and settings in the CPU Unit are being backed up in the builtin non-volatile memory. This data will not be backed up correctly if the power supply is turned OFF.
 Also, a major fault level Controller error will occur the next time you start operation, and operation will
 stop.
- Do not turn OFF the power supply or remove the SD Memory Card while SD Memory Card access is
 in progress (i.e., while the SD BUSY indicator flashes). Data may become corrupted, and the Controller will not operate correctly if it uses corrupted data. To remove the SD Memory Card from the CPU
 Unit while the power supply is ON, press the SD Memory Card power supply switch and wait for the
 SD BUSY indicator to turn OFF before you remove the SD Memory Card.
- Do not disconnect the cable or turn OFF the power supply to the Controller when downloading data or the user program from Support Software.
- Always turn OFF the power supply to the Controller before you attempt any of the following.
 - Mounting or removing I/O Units or the CPU Unit
 - · Assembling the Units

- · Setting DIP switches or rotary switches
- · Connecting cables or wiring the system
- · Connecting or disconnecting the connectors

The Power Supply Unit may continue to supply power to the rest of the Controller for a few seconds after the power supply turns OFF. The PWR indicator is lit during this time. Confirm that the PWR indicator is not lit before you perform any of the above.

Operation

- · Confirm that no adverse effect will occur in the system before you attempt any of the following.
 - Changing the operating mode of the CPU Unit (including changing the setting of the Operating Mode at Startup)
 - · Changing the user program or settings
 - · Changing set values or present values
 - Forced refreshing
- After you change any slave or Unit settings, carefully check the safety of the controlled system before
 you restart the Unit.
- If two different function modules are used together, such as when you use CJ-series Basic Units and EtherCAT slaves, take suitable measures in the user program and external controls to ensure that safety is maintained in the controlled system if one of the function modules stops. The relevant outputs will behave according to the slave or Unit specifications if a partial fault level error occurs in one of the function modules.
- Always confirm safety at the connected equipment before you reset Controller errors with an event level of partial fault or higher for the EtherCAT Master Function Module.
 - When the error is reset, all slaves that were in any state other than Operational state due to a Controller error with an event level of partial fault or higher (in which outputs are disabled) will go to Operational state and the outputs will be enabled.
 - Before you reset all errors or restart a slave, confirm that no Controller errors with an event level of partial fault have occurred for the EtherCAT Master Function Module.
- Always confirm safety at the connected equipment before you reset Controller errors for a CJ-series Special Unit. When a Controller error is reset, the Unit where the Controller error with an event level of observation or higher will be restarted.
 - Before you reset all errors, confirm that no Controller errors with an event level of observation or higher have occurred for the CJ-series Special Unit. Observation level events do not appear on the Controller Error Tab Page, so it is possible that you may restart the CJ-series Special Unit without intending to do so.

You can check the status of the _CJB_UnitErrSta[0,0] to _CJB_UnitErrSta[3,9] error status variables on a Watch Tab Page to see if an observation level Controller error has occurred.

Battery Backup

- The user program and initial values for the variables are stored in non-volatile memory in the CPU Unit. The present values of variables with the Retain attribute and the values of the Holding, DM, and EM Areas in the memory used for CJ-series Units are backed up by a Battery. If the Battery is not connected or the Battery is exhausted, the CPU Unit detects a Battery-backup Memory Check Error. If that error is detected, variables with a Retain attribute are set to their initial values and the Holding, DM, and EM Areas in memory used for CJ-series Units are cleared to all zeros. Perform thorough verifications and provide sufficient measures to ensure that the devices perform safe operation for the initial values of the variables with Retain attributes and the resulting operation.
- The absolute encoder home offsets are backed up by a Battery. If the CPU Unit detects a low battery
 voltage or the absence of a mounted battery when the power supply to the Controller is turned ON,
 the absolute encoder home offsets are cleared to zeros and an Encoder Home Offset Read Error
 occurs. Reset the error and perform homing to define home. If you do not define home, unintended
 operation of the controlled system may occur.

Debugging

- Forced refreshing ignores the results of user program execution and refreshes I/O with the specified values. If forced refreshing is used for inputs for which I/O refreshing is not supported, the inputs will first take the specified values, but they will then be overwritten by the user program. This operation differs from the force-set/reset functionality of the CJ-series PLCs.
- You cannot upload or download information for forced refreshing with the Sysmac Studio.
 After downloading data that contains forced refreshing, change to RUN mode and then use the Sysmac Studio to perform the operation for forced refreshing.
 Depending on the difference in the forced status, the control system may operate unexpectedly.
- Do not specify the same address for the AT specification for more than one variable.
 Doing so would allow the same entity to be accessed with different variable names, which would make the user program more difficult to understand and possibly cause programming mistakes.

General Communications

- When you use data link communications, check the error information that is given in _ErrSta (Controller Error Status) to make sure that no error has occurred in the source device. Create a user program that uses reception data only when there is no error in the source device. If there is an error in the source device, the data for the data link may contain incorrect values.
- Unexpected operation may result if inappropriate data link tables are set. Even if appropriate data link tables have been set, confirm that the controlled system will not be adversely affected before you transfer the data link tables. The data links start automatically after the data link tables are transferred.
- All CPU Bus Units are restarted when routing tables are transferred from Support Software to the CPU Unit. Confirm that the system will not be adversely affected by restarting before you transfer the routing tables.
- Tag data links will stop between related nodes while tag data link parameters are transferred during Controller operation. Confirm that the system will not be adversely affected before you transfer the tag data link parameters.

EtherNet/IP Communications

- All related EtherNet/IP nodes are reset when you transfer the settings for the CJ1W-EIP21 Ether-Net/IP Unit (including IP addresses and tag data links settings) from the Support Software. Confirm that the system will not be adversely affected by resetting nodes before you transfer the settings.
- If EtherNet/IP tag data links (cyclic communications) are used with a repeating hub, the communications load on the network will increase. This will increase collisions and may prevent stable communications. Do not use repeating hubs on networks where tag data links are used. Use an Ethernet switch instead.

EtherCAT Communications


- Make sure that the communications distance, number of nodes connected, and method of connection for EtherCAT are within specifications.
 - Do not connect EtherCAT communications to EtherNet/IP, a standard in-house LAN, or other networks. An overload may cause the network to fail or malfunction.
- Malfunctions or unexpected operation may occur for some combinations of EtherCAT revisions of the
 master and slaves. If you disable the revision check in the network settings, use the Sysmac Studio to
 check the slave revision settings in the master and the actual slave revisions, and then make sure
 that functionality is compatible in the slave manuals or other references. You can check the actual
 slave revisions from the Sysmac Studio or on slave nameplates.

- After you transfer the user program, the CPU Unit is restarted and communications with the Ether-CAT slaves are cut off. During that period, the slave outputs behave according to the slave specifications. The time that communications are cut off depends on the EtherCAT network configuration.
- If the Fail-soft Operation parameter is set to stop operation, process data communications will stop for all slaves when an EtherCAT communications error is detected in a slave. The Servo Drive will operate according to the Servo Drive specifications. Make sure that the Fail-soft Operation parameter setting results in safe operation when a device error occurs.
- EtherCAT communications are not always established immediately after the power supply is turned ON. Use the system-defined variables in the user program to confirm that communications are established before attempting control operations.
- If noise occurs or an EtherCAT slave is disconnected from the network, any current communications
 frames may be lost. If frames are lost, slave I/O data is not communicated, and unintended operation
 may occur. The slave outputs will behave according to the slave specifications. For details, refer to
 relevant manuals for each slave. If a noise countermeasure or slave replacement is required, perform
 the following processing.
 - Program the _EC_InDataInvalid (Input Data Disable) system-defined variable as an interlock condition in the user program.
 - Set the PDO communications timeout detection count setting in the EtherCAT master to at least 2.
 Refer to the NJ/NX-series CPU Unit Built-in EtherCAT Port User's Manual (Cat. No. W505) for details.
- When an EtherCAT slave is disconnected or disabled, communications will stop and control of the
 outputs will be lost not only for the disconnected slave, but for all slaves connected after it. Confirm
 that the system will not be adversely affected before you disconnect or disable a slave.
- NX bus communications are not always established immediately after the power supply is turned ON.
 Use the system-defined variables and the EtherCAT Coupler Unit device variables in the user program to confirm that communications are established before attempting control operations.
- You cannot use standard Ethernet hubs or repeater hubs with EtherCAT communications. If you use
 one of these, a major fault level error or other error may occur.

Motion Control


- Confirm the axis number carefully before you perform an MC Test Run.
- The motor is stopped if communications are interrupted between the Sysmac Studio and the CPU
 Unit during an MC Test Run. Connect the communications cable between the computer and CPU
 Unit securely and confirm that the system will not be adversely affected before you perform an MC
 Test Run.
- Always execute the Save Cam Table instruction if you change any of the cam data from the user program in the CPU Unit or from the Sysmac Studio. If the cam data is not saved, the previous condition will be restored when the power is turned ON again, possibly causing unexpected machine operation.
- The positive drive prohibit input (POT), negative drive prohibit input (NOT), and home proximity input (DEC) of the Servo Drive are used by the MC Function Module as the positive limit input, negative limit input, and home proximity input. Make sure that the signal widths for all of these input signals are longer than the control period of the MC Function Module. If the input signal widths are shorter than the control period, the MC Function Module may not be able to detect the input signals, resulting in incorrect operation.
- If you make any changes in the Detailed Settings Area of the Axis Basic Settings Display of the Sysmac Studio, make sure that the devices or machines perform the expected operation before you start actual operation.
 - If the relationship between the functions of the Motion Control Function Module and the EtherCAT slave process data that is assigned to the axes is not correct, the devices or machines may perform unexpected operation.
- Always use the axis at a constant velocity for the MC_DigitalCamSwitch (Enable Digital Cam Switch) instruction.
 - If you set the Count Mode to Rotary Mode, the following operation will occur if you use *OnCompensation* or *OffCompensation* and the axis velocity changes abruptly.

- If the value of *OnCompensation* or *OffCompensation* is equivalent to the time for half a rotation or more, *InOperation* will be FALSE.
- If the value of OnCompensation results in exceeding LastOnPosition, the output timing will be unstable.



FirstOnPosition after compensation

• If the value of *OffCompensation* results in exceeding *FirstOnPosition*, the output timing will be unstable.



• Use the NX_AryDOutTimeStamp (Write Digital Output Array with Specified Time Stamp) instruction only after you confirm that *InOperation* from the MC_DigitalCamSwitch (Enable Digital Cam Switch) instruction is TRUE.

Restoring Data

- You cannot back up, restore, or compare some or all of the settings for certain slaves and Units. Also, you cannot back up, restore, or compare data for disabled slaves or Units. After you restore data, sufficiently confirm that operation is correct before you start actual operation.
- The absolute encoder home offsets are backed up with a Battery in the CPU Unit as absolute encoder information. If any of the following conditions is met, clear the absolute encoder home offsets from the list of data items to restore, and then restore the data. Then, define the absolute encoder home again. If you do not define home, unintended operation of the controlled system may occur.
 - The Servomotor or Servo Drive was changed since the data was backed up.
 - The absolute encoder was set up after the data was backed up.
 - · The absolute data for the absolute encoder was lost.

Battery Replacement

- The Battery may leak, rupture, heat, or ignite. Never short-circuit, charge, disassemble, heat, or incinerate the Battery or subject it to strong shock.
- Dispose of any Battery that has been dropped on the floor or otherwise subjected to excessive shock. Batteries that have been subjected to shock may leak if they are used.
- UL standards require that only an experienced engineer replace the Battery. Make sure that an experienced engineer is in charge of Battery replacement.
- Apply power for at least five minutes before changing the Battery. Install a new Battery within five minutes (at 25°C) of turning OFF the power supply. If power is not supplied for at least 5 minutes, the saved data may be lost.
- Make sure that the required data, including the user program, configurations, settings, variables, and memory used for CJ-series Units, is transferred to a CPU Unit that was replaced and to externally connected devices before restarting operation.
 - Be sure to include the tag data link settings, routing tables, and other CPU Bus Unit data, which are stored in the CPU Unit.

Unit Replacement

- We recommend replacing the Battery with the power turned OFF to prevent the CPU Unit's sensitive
 internal components from being damaged by static electricity and to prevent malfunctions. The Battery can be replaced without turning OFF the power supply. To do so, always touch a grounded piece
 of metal to discharge static electricity from your body before you start the procedure.
 After you replace the Battery, connect the Sysmac Studio and clear the Low Battery Voltage error.
- The absolute encoder home offsets are backed up with a Battery in the CPU Unit as absolute encoder information. When you change the combination of the CPU Unit and Servomotor, e.g., when you add or replace a Servomotor, define the absolute encoder home again.

Disposal

· Dispose of the product and Batteries according to local ordinances as they apply.



 The following information must be displayed for all products that contain primary lithium batteries with a perchlorate content of 6 ppb or higher when shipped to or transported through the State of California, USA.

Perchlorate Material - special handling may apply.

See www.dtsc.ca.gov/hazardouswaste/perchlorate.

The CPU Unit contains a primary lithium battery with a perchlorate content of 6 ppb or higher. Place
the above information on the individual boxes and shipping boxes when shipping finished products
that contain a CPU Unit to the State of California, USA.

Precautions for Correct Use

Storage, Mounting, and Wiring

- Do not operate or store the Controller in the following locations. Operation may stop or malfunctions may occur.
 - · Locations subject to direct sunlight
 - · Locations subject to temperatures or humidity outside the range specified in the specifications
 - · Locations subject to condensation as the result of severe changes in temperature
 - Locations subject to corrosive or flammable gases
 - Locations subject to dust (especially iron dust) or salts
 - Locations subject to exposure to water, oil, or chemicals
 - · Locations subject to shock or vibration
- Take appropriate and sufficient countermeasures when installing the Controller in the following locations.
 - · Locations subject to strong, high-frequency noise
 - · Locations subject to static electricity or other forms of noise
 - · Locations subject to strong electromagnetic fields
 - Locations subject to possible exposure to radioactivity
 - · Locations close to power lines
- Before touching a Unit, be sure to first touch a grounded metallic object in order to discharge any static build-up.
- Install the Controller away from sources of heat and ensure proper ventilation. Not doing so may result in malfunction, in operation stopping, or in burning.
- An I/O bus check error will occur and the Controller will stop if an I/O Connecting Cable's connector is disconnected from the Rack. Be sure that the connectors are secure.
- Do not allow foreign matter to enter the openings in the Unit. Doing so may result in Unit burning, electric shock, or failure.
- Do not allow wire clippings, shavings, or other foreign material to enter any Unit. Otherwise, Unit burning, failure, or malfunction may occur. Cover the Units or take other suitable countermeasures, especially during wiring work.
- For EtherCAT and EtherNet/IP, use the connection methods and cables that are specified in the *NJ/NX-series CPU Unit Built-in EtherCAT Port User's Manual* (Cat. No. W505) and the *NJ/NX-series CPU Unit Built-in EtherNet/IP Port User's Manual* (Cat. No. W506). Otherwise, communications may be faulty.
- Use the rated power supply voltage for the Power Supply Units. Take appropriate measures to ensure
 that the specified power with the rated voltage and frequency is supplied in places where the power
 supply is unstable.
- Make sure that the current capacity of the wire is sufficient. Otherwise, excessive heat may be generated. When cross-wiring terminals, the total current for all the terminals will flow in the wire. When wiring cross-overs, make sure that the current capacity of each of the wires is not exceeded.
- Do not touch the terminals on the Power Supply Unit immediately after turning OFF the power supply. Residual voltage may cause electrical shock.
- If you use reed switches for the input contacts for AC Input Units, use switches with a current capacity
 of 1 A or greater.
 - If the capacity of the reed switches is too low, surge current may fuse the contacts.

Error Processing

- In applications that use the results of instructions that read the error status, consider the affect on the system when errors are detected and program error processing accordingly. For example, even the detection of a minor error, such as Battery replacement during operation, can affect the system depending on how the user program is written.
- If you change the event level of a Controller error, the output status when the error occurs may also change. Confirm safety before you change an event level.

Restoring and Automatically Transferring Data

When you edit the restore command file or the automatic transfer command file, do not change anything in the file except for the "yes" and "no" specifications for the selectable data groups. If you change anything else in the file, the Controller may perform unexpected operation when you restore or automatically transfer the data.

Replacing Slaves and Units

• If you replace a slave or Unit, refer to the operation manual for the slave or Unit for information on the data required for individual slaves or Units and redo the necessary settings.

Task Settings

• If a Task Period Exceeded error occurs, shorten the programs to fit in the task period or increase the setting of the task period.

Motion Control

- Use the system-defined variable in the user program to confirm that EtherCAT communications are established before you attempt to execute motion control instructions. Motion control instructions are not executed normally if EtherCAT communications are not established.
- Use the system-defined variables to monitor for errors in communications with the slaves that are controlled by the motion control function module. Motion control instructions are not executed normally if an error occur in slave communications.
- Before you start an MC Test Run, make sure that the operation parameters are set correctly.
- Do not download motion control settings during an MC Test Run.

EtherCAT Communications

- If you need to disconnect the cable from an EtherCAT slave during operation, first disconnect the software connection to the EtherCAT slave or disable the EtherCAT slave and all of the EtherCAT slaves that are connected after it.
- Set the Servo Drives to stop operation if an error occurs in EtherCAT communications between the Controller and a Servo Drive.
- Make sure that all of the slaves to be restored are participating in the network before you reset a Network Configuration Verification Error, Process Data Communications Error, or Link OFF Error in the EtherCAT Master Function Module. If any slave is not participating when any of these errors is reset, the EtherCAT Master Function Module may access slave with a different node address than the specified node address or the error may not be reset correctly.
- Always use the specified EtherCAT slave cables. If you use any other cable, the EtherCAT master or the EtherCAT slaves may detect an error and one of the following may occur.
 - Continuous refreshing of process data communications will not be possible.
 - Continuous refreshing of process data communications will not end during the set cycle.

Battery Replacement

- Be sure to install a replacement Battery within two years of the production date shown on the Battery label.
- Turn ON the power after replacing the battery for a CPU Unit that has been unused for a long time. Leaving the CPU Unit unused again without turning ON the power even once after the battery is replaced may result in a shorter battery life.
- When you replace the Battery, use the CJ1W-BAT01 Battery Set.

SD Memory Cards

- · Insert the SD Memory Card all the way.
- Do not turn OFF the power supply to the Controller during SD Memory Card access. The files may be corrupted.
 - If there is a corrupted file in the SD Memory Card, the file is automatically deleted by the restoration function when the power supply is turned ON.

Online Editing

When performing online editing in combination of a CPU Unit with a unit version of 1.04 or later and Sysmac Studio version 1.05 or higher, the CPU Unit saves a program updated by the online editing to built-in non-volatile memory. Sysmac Studio shows a message that it is in a backup operation. Do not turn OFF the power supply to the Controller while this message is displayed. If the power supply to the Controller is turned OFF, a Controller error will occur when the power supply is turned ON next time.

Regulations and Standards

Conformance to EC Directives

Applicable Directives

- EMC Directives
- · Low Voltage Directive

Concepts

EMC Directive

OMRON devices that comply with EC Directives also conform to the related EMC standards so that they can be more easily built into other devices or the overall machine. The actual products have been checked for conformity to EMC standards.*

Whether the products conform to the standards in the system used by the customer, however, must be checked by the customer. EMC-related performance of the OMRON devices that comply with EC Directives will vary depending on the configuration, wiring, and other conditions of the equipment or control panel on which the OMRON devices are installed. The customer must, therefore, perform the final check to confirm that devices and the overall machine conform to EMC standards.

* Applicable EMC (Electromagnetic Compatibility) standards are as follows: EMS (Electromagnetic Susceptibility): EN 61131-2 and EN 61000-6-2 EMI (Electromagnetic Interference): EN 61131-2 and EN 61000-6-4 (Radiated emission: 10-m regulations)

Low Voltage Directive

Always ensure that devices operating at voltages of 50 to 1,000 VAC and 75 to 1,500 VDC meet the required safety standards. The applicable directive is EN 61131-2.

Conformance to EC Directives

The NJ/NX-series Controllers comply with EC Directives. To ensure that the machine or device in which the NJ/NX-series Controller is used complies with EC Directives, the Controller must be installed as follows:

- The NJ/NX-series Controller must be installed within a control panel.
- You must use reinforced insulation or double insulation for the DC power supplies connected to DC Power Supply Units and I/O Units.
- NJ/NX-series Controllers that comply with EC Directives also conform to the Common Emission Standard (EN 61000-6-4). Radiated emission characteristics (10-m regulations) may vary depending on the configuration of the control panel used, other devices connected to the control panel, wiring, and other conditions.

You must therefore confirm that the overall machine or equipment complies with EC Directives.

Conformance to KC Standards

Observe the following precaution if you use NX-series Units in Korea.

A 급 기기 (업무용 방송통신기자재) 이 기기는 업무용(A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Class A Device (Broadcasting Communications Device for Office Use)

This device obtained EMC registration for office use (Class A), and it is intended to be used in places other than homes.

Sellers and/or users need to take note of this.

Conformance to Shipbuilding Standards

The NJ-series Controllers comply with the following shipbuilding standards. Applicability to the ship-building standards is based on certain usage conditions. It may not be possible to use the product in some locations. Contact your OMRON representative before attempting to use a Controller on a ship.

Usage Conditions for NK and LR Shipbuilding Standards

- The NJ-series Controller must be installed within a control panel.
- Gaps in the door to the control panel must be completely filled or covered with gaskets or other material.
- The following noise filter must be connected to the power supply line.

Noise Filter

Manufacturer	Model
Cosel Co., Ltd.	TAH-06-683

Software Licenses and Copyrights

This product incorporates certain third party software. The license and copyright information associated with this software is available at http://www.fa.omron.co.jp/nj info e/.

Versions


Unit versions are used to manage the hardware and software in NJ/NX-series Units and EtherCAT slaves. The unit version is updated each time there is a change in hardware or software specifications. Even when two Units or EtherCAT slaves have the same model number, they will have functional or performance differences if they have different unit versions.

Checking Versions

You can check versions in the ID information indications or with the Sysmac Studio.

Checking Unit Versions on ID Information Indications

The unit version is given on the ID information indication on the side of the product.

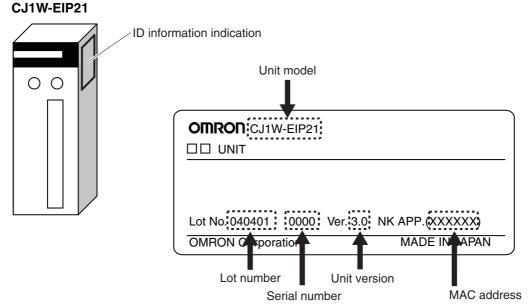

The following information is provided on the ID information indication.

Item	Description
Unit model	Gives the model of the Unit.
Unit version	Gives the unit version of the Unit.
Lot number and	Gives the lot number and serial number of the Unit.
serial number	DDMYY: Lot number, □: For use by OMRON, xxxx: Serial number
	"M" gives the month (1 to 9: January to September, X: October, Y: November, Z: December)
MAC address	Gives the MAC address of the EtherNet/IP Unit.

Checking Unit Versions with the Sysmac Studio

You can use the Sysmac Studio to check unit versions. The procedure is different for Units and for EtherCAT slaves.

Checking the Unit Version of a Unit

You can use the Production Information while the Sysmac Studio is online to check the unit version of a Unit. You can do this for the CPU Unit, CJ-series Special I/O Units, and CJ-series CPU Bus Units. You cannot check the unit versions of CJ-series Basic I/O Units with the Sysmac Studio.

Use the following procedure to check the unit version.

1 Double-click CPU/Expansion Racks under Configurations and Setup in the Multiview Explorer. Or, right-click CPU/Expansion Racks under Configurations and Setup and select *Edit* from the menu.


The Unit Editor is displayed for the Controller Configurations and Setup Layer.


2 Right-click any open space in the Unit Editor and select *Production Information*.
The Production Information Dialog Box is displayed.

Changing Information Displayed in Production Information Dialog Box

1 Click the Show Detail or Show Outline Button at the lower right of the Production Information Dialog Box.

The view will change between the production information details and outline.

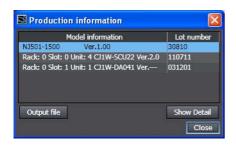

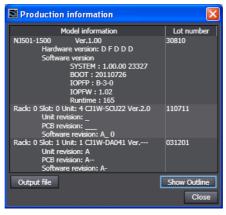

Outline View

Detail View


The information that is displayed is different for the Outline View and Detail View. The Detail View displays the unit version, hardware version, and software versions. The Outline View displays only the unit version.

• Checking the Unit Version of an EtherCAT Slave

You can use the Production Information while the Sysmac Studio is online to check the unit version of an EtherCAT slave. Use the following procedure to check the unit version.

- 1 Double-click EtherCAT under Configurations and Setup in the Multiview Explorer. Or, right-click EtherCAT under Configurations and Setup and select *Edit* from the menu.

 The EtherCAT Tab Page is displayed.
- Right-click the master on the EtherCAT Tab Page and select *Display Production Information*.
 The Production Information Dialog Box is displayed.
 The unit version is displayed after "Rev."

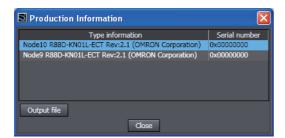

Identifying the Unit Version on the Unit Version Label

CPU Unit and CJ-series Units

A unit version label is included with the Unit. You can attach the label to the front of the Unit to differentiate it from previous EtherNet/IP Units.

Precautions for Correct Use

This section describes the procedure to change the EtherNet/IP Unit version registered in the Sysmac Studio project file.

- Open a controller project that contains the settings for a CJ1W-EIP21 with a unit version of 2.1 on the Sysmac Studio.
- **2** Right-click CJ1W-EIP21 Ver2.1 in the CPU/Expansion Racks Tab Page and select **Save Special Unit Settings** from the menu. This saves the settings in the parameter file with an UPF file name extension.
- **3** The procedure in this step varies depending on the conditions below.
 - You used other applications than the Sysmac Studio to make the EtherNet/IP connection settings (tag data link settings)
 - (1) Open the I/O Map on the Sysmac Studio. Copy the CJ1W-EIP21 variables in the I/O Map and paste them to a Microsoft Excel worksheet. Then save the file.
 - (2) Right-click CJ1W-EIP21 Ver2.1 in the CPU/Expansion Racks Tab Page and select *Change Model* from the menu. This changes the CJ1W-EIP21 unit version in the configuration to 3.0.
 - (3) Copy the variables pasted on the Microsoft Excel worksheet. Open the I/O Map on the Sysmac Studio and paste the copied variables in the Variable field for the CJ1W-EIP21. This completes the restoration.
 - You used the Sysmac Studio to make the EtherNet/IP connection settings (tag data link settings), or you want to prevent from following the former procedures in this step
 - (1) Prepare the Controller with the same CPU and Expansion Racks configuration after replacing the CJ1W-EIP21 with it with a unit version of 3.0. Connect the Controller and the Sysmac Studio online.
 - (2) Select Compare and Merge menu in the CPU/Expansion Racks Tab Page to change the CJ1W-EIP21 unit version registered in the controller project from 2.1 to 3.0.
- 4 Right-click CJ1W-EIP21(NJ) Ver3.0 in the CPU/Expansion Racks Tab Page and select *Read Special Unit Settings* from the menu. Select the parameter file with the UPF file name extension that is saved in step 2 to import it. This completes the restoration. This completes the unit version change.

CIP Revision

The following table gives the CIP revision that is supported by the unit version of the EtherNet/IP Unit.

CJ1W-EIP21

Unit version	CIP revision
2.1	2.04
3.0	3.01 and 3.02

Unit Versions and Programming Device Versions

The following versions of the Sysmac Studio and Network Configuration are required to set the Ether-Net/IP Unit.

• CJ1W-EIP21

Unit version	Sysmac Studio			
Offic version	Version 1.01 or lower	Version 1.02	Version 1.11 or later	
2.1	Not supported.	Supported.	Supported.	
3.0	Not supported.	Not supported.	Supported.	

Unit version	Netwo	ork Configurator for EtherNet/IP		
Offit version	Version 3.40 or lower	Version 3.50	Version 3.57 or later	
2.1	Not supported.	Supported.	Supported.	
3.0	Not supported.	Not supported.	Supported.	

Unit Versions and Applicable CPU Units

The following table gives the CPU Units to which you can connect the EtherNet/IP Unit according to the unit version of the EtherNet/IP Unit.

Unit version	CPU Unit		
Offit version	CJ-series CPU Unit	NJ-series CPU Unit	
2.0 or earlier	Supported.	Not supported.	
2.1	Supported.	Supported.*	
3.0	Supported.	Supported.*	

^{*} A CPU Unit with unit version 1.01 or later and Sysmac Studio version 1.02 (for unit version 2.1) or 1.11 (for unit version 3.0) are required.

Related Manuals


The followings are the manuals related to this manual. Use these manuals for reference.

Manual name	Cat. No.	Model numbers	Application	Description
NX-series CPU Unit Hardware User's Manual	W535	NX701-□□□□	Learning the basic specifications of the NX-series CPU Units, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NX-series system is provided along with the following information on the CPU Unit. • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection Use this manual together with the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501).
NJ-series CPU Unit Hardware User's Manual	W500	NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Learning the basic specifications of the NJ-series CPU Units, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NJ-series system is provided along with the following information on the CPU Unit. • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection Use this manual together with the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501).
NJ/NX-series CPU Unit Software User's Manual	W501	NX701 NJ501 NJ301 NJ101	Learning how to program and set up an NJ/NX-series CPU Unit. Mainly software information is provided.	The following information is provided on an NJ/NX-series CPU Unit. CPU Unit operation CPU Unit features Initial settings Programming based on IEC 61131-3 language specifications Use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500) or <i>NX-series CPU Unit Hardware User's Manual</i> (Cat. No. W535).
NJ/NX-series Instruc- tions Reference Manual	W502	NX701 NJ501 NJ301 NJ101	Learning detailed specifica- tions on the basic instruc- tions of an NJ/NX-series CPU Unit.	The instructions in the instruction set (IEC 61131-3 specifications) are described. When programming, use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500) or <i>NX-series CPU Unit Hardware User's Manual</i> (Cat. No. W535) and with the <i>NJ/NX-series CPU Unit Software User's Manual</i> (Cat. No. W501).
NJ/NX-series CPU Unit Motion Control User's Manual	W507	NX701 NJ501 NJ301 NJ101	Learning about motion control settings and programming concepts.	The settings and operation of the CPU Unit and programming concepts for motion control are described. When programming, use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500) or <i>NX-series CPU Unit Hardware User's Manual</i> (Cat. No. W535) and with the <i>NJ/NX-series CPU Unit Software User's Manual</i> (Cat. No. W501).

Manual name	Cat. No.	Model numbers	Application	Description
NJ/NX-series Motion Control Instructions Ref- erence Manual	W508	NX701 NJ501 NJ301 NJ101	Learning about the specifications of the motion control instructions that are provided by OMRON.	The motion control instructions are described. When programming, use this manual together with the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) or NX-series CPU Unit Hardware User's Manual (Cat. No. W535), and with the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501) and NJ/NX-series CPU Unit Motion Control User's Manual (Cat. No. W507).
NJ/NX-series CPU Unit Built-in EtherCAT® Port User's Manual	W505	NX701-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Using the built-in EtherCAT port on an NJ/NX-series CPU Unit.	Information on the built-in EtherCAT port is provided. This manual provides an introduction and provides information on the configuration, features, and setup. Use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500) or <i>NX-series CPU Unit Hardware User's Manual</i> (Cat. No. W535) and with the <i>NJ/NX-series CPU Unit Software User's Manual</i> (Cat. No. W501).
NJ/NX-series CPU Unit Built-in EtherNet/IP TM Port User's Manual	W506	NX701-000 NJ501-000 NJ301-000 NJ101-000	Using the built-in Ether- Net/IP port on an NJ/NX- series CPU Unit.	Information on the built-in EtherNet/IP port is provided. Information is provided on the basic setup, tag data links, and other features. Use this manual together with the <i>NJ-series CPU Unit Hardware User's Manual</i> (Cat. No. W500) or <i>NX-series CPU Unit Hardware User's Manual</i> (Cat. No. W535) and with the <i>NJ/NX-series CPU Unit Software User's Manual</i> (Cat. No. W501).
NJ-series Database Con- nection CPU Units User's Manual	W527	NJ501-1□20	Using the database connection service with NJ-series Controllers	Describes the database connection service.
NJ-series SECS/GEM CPU Unit User's Manual	W528	NJ501-1340	Using the GEM Services with NJ-series Controllers	Information is provided on the GEM Services.
NJ/NX-series Trouble- shooting Manual	W503	NX701-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Learning about the errors that may be detected in an NJ/NX-series Controller.	Concepts on managing errors that may be detected in an NJ/NX-series Controller and information on individual errors are described. Use this manual together with the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) or NX-series CPU Unit Hardware User's Manual (Cat. No. W535) and with the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501).
Sysmac Studio Version 1 Operation Manual	W504	SYSMAC- SE2□□□	Learning about the operat- ing procedures and func- tions of the Sysmac Studio.	Describes the operating procedures of the Sysmac Studio.
CJ-series EtherNet/IP TM Units Operation Manual for NJ-series CPU Unit	W495	CJ1W-EIP21	Learning how to use the EtherNet/IP Unit	Information on using an EtherNet/IP Unit that is connected to an NJ-series CPU Unit is provided. Information is provided on the basic setup, tag data links, and other features. Use this manual together with the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) and NJ-series CPU Unit Software User's Manual (Cat. No. W501).

Revision History

A manual revision code appears as a suffix to the catalog number on the front and back covers of the manual.



Revision code	Date	Revised content
01	March 2012	Original production
02	May 2012	Added information on functional support for unit version 1.02 and later of the CPU Units.
		Corrected mistakes.
03	August 2012	Made changes accompanying release of unit version 1.03 of the CPU Unit.
04	February 2013	Made changes accompanying release of unit version 1.04 of the CPU Unit.
05	April 2013	Corrected mistakes.
06	November 2014	The allowable bandwidth was increased to 12,000 pps.
07	April 2015	Added information on the NJ101- NJ-series CPU Units.
		Corrected mistakes.
08	July 2015	Added services to open and close connections to individual nodes.
		Corrected mistakes.


Introduction

1-1	Introdu	uction 1-2	2
	1-1-1	EtherNet/IP Features	2
	1-1-2	Features of the EtherNet/IP Unit	3
1-2	Systen	n Configuration and Configuration Devices 1-	5
	1-2-1	Devices Required to Construct a Network	5
	1-2-2	Support Software Required to Construct a Network 1-	6
1-3	EtherN	et/IP Unit 1-7	7
	1-3-1	Specifications	7
	1-3-2	Part Names and Functions 1-	9
	1-3-3	Dimensions	5
1-4	Introdu	action to Communications Services 1-10	6
	1-4-1	CIP (Common Industrial Protocol) Communications Services 1-10	6
	1-4-2	BOOTP Client 1-18	8
	1-4-3	FTP Server 1-18	8
	1-4-4	Automatic Clock Adjustment	9
	1-4-5	Specifying Host Names	9
	1-4-6	SNMP Agent 1-20	0
1-5	EtherN	et/IP Communications Procedures	1
	1-5-1	Basic Operation	1
	1-5-2	Procedure for Using Tag Data Links 1-2	3
	1-5-3	Using EtherNet/IP Network Functions	

Introduction 1-1

1-1-1 EtherNet/IP Features

EtherNet/IP is an industrial multi-vendor network that uses Ethernet. The EtherNet/IP specifications are open standards managed by the ODVA (Open DeviceNet Vendor Association), just like DeviceNet. EtherNet/IP is not just a network between Controllers. It is also used as a field network. Because Ether-Net/IP uses standard Ethernet technology, various general-purpose Ethernet devices can be used in the network.

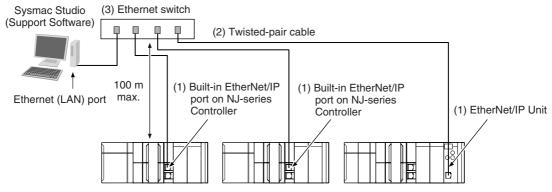

EtherNet/IP System Configuration Example

High-speed, High-capacity Data Exchange through Tag Data Links

The EtherNet/IP protocol supports implicit communications, which allows cyclic communications (called tag data links in this manual) with EtherNet/IP devices.

Tag Data Link (Cyclic Communications) Cycle Time

Tag data links (cyclic communications) operate at the cyclic period specified for each application, regardless of the number of nodes. Data is exchanged over the network at the refresh cycle set for each connection, so the communications refresh cycle will not increase even if the number of nodes is increased, i.e., the concurrency of the connection's data is maintained. Because the refresh cycle can be set for each connection, each application can communicate at its ideal refresh cycle. For example, interprocess interlocks can be transferred at high speed, while the production commands and the status monitor information are transferred at low speed.

1-1-2 Features of the EtherNet/IP Unit

Tag Data Links

Cyclic communications between Controllers or between Controllers and other devices are possible on an EtherNet/IP network. Tag data links can quickly perform data exchanges for up to 184,832 words of data.

Message Communications

You can send CIP commands to devices on the EtherNet/IP network when required by execution of CIP communications instructions in a program. As a result, it is possible to send and receive data with devices on the EtherNet/IP network.

BOOTP Client

If the EtherNet/IP Unit is set in the BOOTP settings, the BOOTP client operates when the Controller power is turned ON, and the IP address is obtained from the BOOTP server. It is possible to set all of the IP addresses of multiple EtherNet/IP Units at the same time.

• Built-in FTP Server for File Transfers to and from Host Computers

An FTP server is built into the Controller. You can use it to read and write data within the Controller as files from workstations and computers with FTP clients. The FTP server enables the transfer of large amounts of data from a client without any additional ladder programming.

Automatic Controller Clock Adjustment

The clocks built into Controllers connected to Ethernet can be automatically adjusted to the time of the clock in the SNTP server. If all of the clocks in the system are automatically adjusted to the same time, time stamps can be used to analyze production histories.

* A separate SNTP server is necessary to automatically adjust the Controller clocks.

Socket Services

Socket services can be used to send/receive data between general-purpose applications and Controllers. You can use these communications services to send and receive any data to and from remote nodes, i.e., between host computers and Controllers or between Controllers. You can execute socket communications instructions in order in a program to execute communications processes with the socket services. There are two socket services, the UDP socket service and TCP socket service.

Host Names

You can directly specify IP addresses, but you can also use the host names instead of the IP addresses for SNTP servers, SNMP managers, or the destinations of socket instructions and CIP communications instructions (DNS client or hosts settings). This is useful, for example, when server IP addresses change for system revisions because the IP addresses are automatically found when host names are used.

- * A separate DNS server is necessary to use host names with the DNS client.
- * The DNS server is specified directly using its IP address.

Network Management with an SNMP Manager

The SNMP agent passes internal status information from the EtherNet/IP Unit to network management software that uses an SNMP manager.

* A separate SNMP manager is necessary for network management.

Support for QuickConnectTM (Originator Only)

Devices can be replaced during network operation.

Complete Troubleshooting Functions

A variety of functions are provided to quickly identify and handle errors.

- · Self-diagnosis at startup
- · Event log that records the time of occurrence and other error details



Additional Information

CIP (Common Industrial Protocol)


CIP is a shared industrial protocol for the OSI application layer. The CIP is used in networks such as EtherNet/IP, CompoNet, and DeviceNet. Data can be routed easily between networks that are based on the CIP. You can therefore easily configure a transparent network from the field device level to the host level. The CIP has the following advantages.

- Destination nodes are specified by a relative path, without fixed routing tables.
- The CIP uses the producer/consumer model. Nodes in the network are arranged on the same level and it is possible to communicate with required devices whenever it is necessary. The consumer node will receive data sent from a producer node when the connection ID in the packet indicates that the node requires the data. Because the producer can send the same data with the same characteristics in a multicast format, the time required for the transfer is fixed and not dependent on the number of consumer nodes. (Either multicast or unicast can be selected.)

1-2 System Configuration and Configuration Devices

1-2-1 Devices Required to Construct a Network

The basic configuration for an EtherNet/IP system includes one Ethernet switch to which nodes are attached in star configuration using twisted-pair cable.

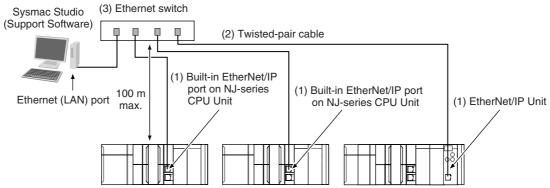

The following products are also required to build a network. Obtain them in advance.

	Network device	Function
(1)	Per Node NJ501-□□□, NJ301-□□□, or NJ101-□□□ NJ-series CPU Unit (built-in EtherNet/IP port) CJ-series CJ1W-EIP21 EtherNet/IP Unit *1 OMRON PLCs CJ2H-CPU□-EIP or CJ2M-CPU3□ CJ2 CPU Unit (built-in EtherNet/IP port) CS-series CS1W-EIP21 EtherNet/IP Unit	These Units are used to connect to an EtherNet/IP network.
(2)	Twisted-pair cable	The twisted-pair cable has a RJ45 Modular Connector at each end. This cable is used to connect the built-in EtherNet/IP port or EtherNet/IP Unit to an Ethernet switch. Use an STP (shielded twisted-pair) cable of category 5, 5e, or higher.
(3)	Ethernet switch	This is a relay device that connects multiple nodes in a star LAN. For details on recommended devices to configure a network, refer to 2-3-1 Recommended Network Devices.

^{*1} The CJ1W-EIP21 can be mounted only to an NJ-series CPU Unit with unit version 1.01 or later and Sysmac Studio version 1.02 or higher.



Precautions for Correct Use


- You cannot place the Sysmac Studio online with an NJ-series CPU Unit if you connect through an EtherNet/IP Unit.
- You cannot perform troubleshooting from an HMI if you connect an HMI to the Controller through an EtherNet/IP Unit.

1-2-2 Support Software Required to Construct a Network

This section describes the Support Software that is required to construct an EtherNet/IP network. The EtherNet/IP Unit has Ethernet Settings and Tag Data Link Settings, which are stored in the non-volatile memory in the EtherNet/IP Unit. Support Software is provided for each, as described below.

EtherNet/IP Unit Settings: Sysmac Studio

Use the Sysmac Studio to set the basic settings, such as the IP address and subnet mask of the EtherNet/IP Unit. The Sysmac Studio can also be used to check if data I/O is being performed correctly for tag data links.

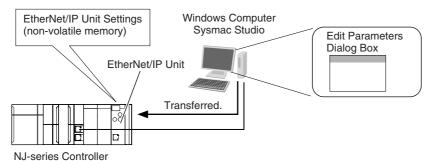

Refer to the Sysmac Studio Version 1 Operation Manual (Cat. No. W504) for details on the Sysmac Studio.

Tag Data Link Settings: Network Configurator


Use the Network Configurator to set the tag data links for the EtherNet/IP Unit. (The Network Configurator is included in the Sysmac Studio Standard Edition.) The main functions of the Network Configurator are given below.

1) Setting and Monitoring Tag Data Links (Connections)

The network device configuration and tag data links (connections) can be created and edited. After connecting to the network, the device configuration and tag data link settings can be uploaded and monitored.

2) Multi-vendor Device Connections

EDS files can be installed and deleted so that you can construct, set, and manage networks that contain EtherNet/IP devices from other companies. The IP addresses of EtherNet/IP devices can also be changed.

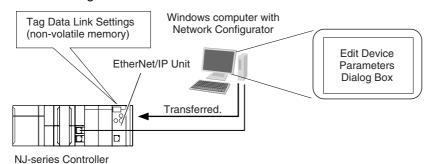

For details on the Network Configurator, refer to Section 7 Tag Data Link Functions.



Additional Information

You can also use the Sysmac Studio to set the tag data links. Refer to *A-2 Use the Sysmac Studio to Set the Tag Data Links (EtherNet/IP Connections)* for details on setting the tag data links in the Sysmac Studio.

1-3 EtherNet/IP Unit

1-3-1 Specifications

	Item	Specifications
Product		EtherNet/IP Unit
Unit classification		CPU Bus Unit
Mounting location		CPU Rack or Expansion Rack
Number of mountable Units		4 max.
Communications p	rotocol	TCP/IP or UDP/IP
Supported services		Sysmac Studio connection, tag data link, CIP message communications, FTP server, automatic clock adjustment (SNTP client), SNMP agent, DNS client, and BOOTP client
Physical layer		100Base-TX or 10Base-T (100Base-TX is recommended.) *1
	Media access method	CSMA/CD
	Modulation	Baseband
	Transmission paths	Star form
Transmission specifications	Baud rate	100 Mbps (100Base-TX)
opcomounone	Transmission media	Shielded twisted-pair (STP) cable, Category 5, 5e, or higher
	Transmission distance	100 m max. (distance between hub and node)
	Number of cascade connections	There is no limitation when an Ethernet switch is used.
	Number of connections	256
		0.5 to 10,000 ms in 0.5-ms increments
	Packet interval (refresh cycle)	Packet intervals can be set independently for each connection. (Data is refreshed over the network at the preset interval and does not depend on the number of nodes.)
	Allowed communications bandwidth per Unit	6000 to 12000 pps *2 (Units with unit version 2.1 or earlier: 6,000 pps)
	Number of registrable tore	This includes the heartbeat.
	Number of registrable tags	256
	Tag types	Network variables CIO, Work, Holding, DM, or EM Area
	Number of tags per connection (= 1	8 (7 tags when the tag set contains the Controller status)
CIP service: Tag data links (cyclic	tag set)	o (7 tags when the tag set contains the controller status)
communications)	Maximum link data size per node	369,664 bytes
		1,444 bytes *3
	Maximum data size per connection	Note Data concurrency is maintained within each connection. Refer to 7-1-7 Concurrency of Tag Data Link Data for methods to maintain concurrency.
	Number of registrable tag sets	256 (1 connection = 1 tag set)
	Maximum size of 1 tag set	722 words (The Controller status uses 1 word when the tag set contains the Controller status.)
	Changing tag data link parameters when Controller is in RUN mode	Supported *4
	Multi-cast packet filter *5	Supported
	QuickConnect	Supported for originator only. *6


	Item	Specifications
	Class 3 (connected)	Number of connections: 128 (clients + servers)
		Number of clients that can communicate at one time: 32 max.
CIP message ser-	UCMM (unconnected)	Number of servers that can communicate at one time: 32
vice: Explicit		max.
messages *6	CIP routing *7	Supported. CIP routing is supported for the following remote Units: NJ501-□□□□, NJ301-□□□□, NJ101-□□□□, CS1W- EIP21, CJ1W-EIP21, CJ2H-CPU□□-EIP, and CJ2M-CPU3□.
Agents	Agents	SNMPv1 or SNMPv2c
SNMP	MIB	MIB-II
EtherNet/IP conformance test		Conforms to CT8
Ethernet interface		10Base-T or 100Base-TX
Ethernet interface		Auto negotiation or fixed settings
		NJ101-□□□□ CPU Units (unit version 1.10 or later)
Applicable CPU Un	iits	NJ301-□□□□ CPU Units (unit version 1.01 or later)
		NJ501-□□□□ CPU Units (unit version 1.01 or later)
Unit current consu	mption	5 VDC 410 mA max.
Weight		94 g max.
Dimensions		$31 \times 90 \times 65 \text{ mm (W} \times H \times D)$

- *1 If tag data links are being used, use 100Base-TX.
- *2 Here, pps means "packets per second" and indicates the number of packets that can be processed in one sec-
- *3 To use a data size of 505 bytes or higher, the system must support a large forward open (an optional CIP specification). The CS, CJ, and NJ-series Units support a large forward open, but before connecting to nodes of other companies, confirm that those devices also support it.
- *4 If the parameters of the EtherNet/IP Unit are changed, the Unit is restarted. When other nodes are in communications with the affected node, the communications will temporarily time out and automatically recover after the restart.
- *5 Because the EtherNet/IP Unit is equipped with an IGMP client (version 2), unnecessary multicast packets can be filtered by an Ethernet switch that supports IGMP snooping.
- *6 This feature is supported for EtherNet/IP Units manufactured in or after July 2015.
- *7 The EtherNet/IP Unit uses the TCP/UDP port numbers shown in the following table. Do not set the same port number for more than one TCP/UDP service.

Service	Protocol	Port number	Remarks
EIP data links	UDP	2222	Fixed values
Used by system	UDP	2223, 2224	
CIP messages	TCP	44818	
FTP client data transfer port	TCP	20	
DNS client	TCP/UDP	53	
BOOTP client	UDP	68	
FTP client control port	TCP	21	You can change the port number in
SNTP client	UDP	123	the Unit Settings on the Sysmac Studio.
SNMP agent	UDP	161	Studio.
SNMP trap	UDP	162	


^{*8} A CPU Unit with unit version 1.01 or later and Sysmac Studio version 1.02 or higher are required to use CPU routing.

1-3-2 Part Names and Functions

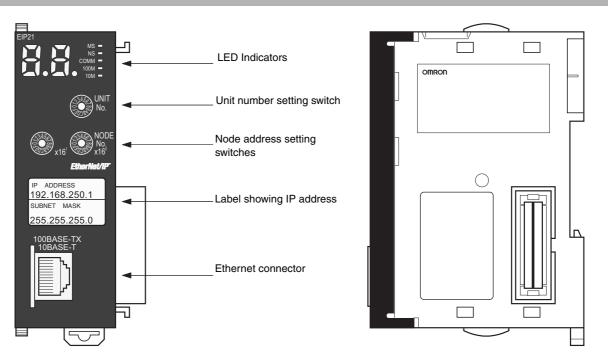

Ethernet Address Notation


A specific Ethernet address is allocated to all devices connected to the Ethernet network. The Ether-Net/IP Unit's address is listed in 12-digit hexadecimal on the right side of the Unit.

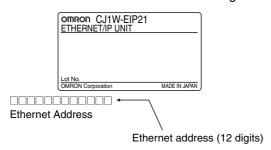



Additional Information

An IP address label is included with the EtherNet/IP Unit, so the user can record the user-set IP address and subnet mask on the label, and affix the label to the front of the Unit. When this label is affixed to the front of the Unit, it is easy to confirm the Unit's IP address and subnet mask.

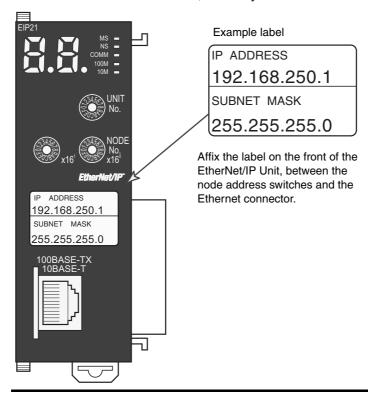

Indicators (LEDs)

An EtherNet/IP Unit is equipped with the following indicators that indicate the operating status of the node itself and the overall network.



Status Indicators: MS, NS, COMM, 100M, and 10M

The MS (Module Status) indicator indicates the status of the node itself and the NS (Network Status) indicator indicates the status of the network.

The COMM, 100M, and 10M indicators indicate the status of Ethernet communications.

The MS and NS indicators can be green or red. The COMM, 100M, and 10M indicators are yellow. These indicators can be lit, flashing, or not lit. The following table shows the meaning of these indicator conditions.


Refer to Section 13 Troubleshooting for details on using these indicators for troubleshooting.

Indicator	Name	Color	LED status	Indicated operating status
		Red	Lit	Fatal error
MS	Module Status	neu	Flashing	Recoverable error
IVIS	Wodule Status	Green	Lit	Normal
			Not lit	Power supply OFF
		Red	Lit	Fatal error
		neu	Flashing	Recoverable error
NS Network Status	Green	Lit	Tag data link and message connections established	
		Green	Flashing	Tag data link and message connections not established
			Not lit	Offline or power supply OFF
СОММ	Communication	Yellow	Lit	Transferring data
COMIN	Communication	Tellow	Not lit	Not transferring data
100M	100Mbps	100Mbps Yellow	Lit	100BASE-TX link established
TOUN	TOUMBPS		Not lit	100BASE-TX link not established
10M 10Mbp	10Mbno	Valler	Lit	10BASE-TX link established
	Tolvibps	Yellow	Not lit	10BASE-TX link not established

Seven-segment Display

When the power is turned ON (or the Unit is restarted), all of the segments will flash twice, the IP address set in the EtherNet/IP Unit will be displayed on the 7-segment display just once, from right to left. Afterwards, the rightmost 8 bits of the IP address is displayed in hexadecimal during normal operation.

Example 1: Displaying IP Address 192.168.250.10

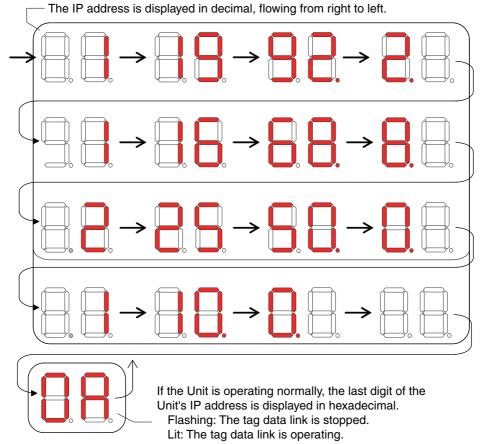

If an error occurs, the error code will be displayed alternately with the rightmost byte of the affected device's IP address. For details on error codes, refer to Section 13 Troubleshooting.

Example 2: Displaying Multiple Error Sources

- A d6 error (failed to establish connection) occurred with IP address 192.168.250.8.
- A d6 error (failed to establish connection) occurred with IP address 192.168.250.9.
- A d5 error (verification error, target nonexistent) occurred with IP address 192.168.250.64.
- A C6 error (multiple switches ON) and EA error (EtherNet/IP Advanced Setting Error) occurred at the local EtherNet/IP Unit, IP address 192.168.250.10.

The last digit of the Unit's IP address is displayed in hexadecimal.


There is no particular priority to the order in which the errors are displayed. All of the errors are displayed repeatedly in order.

Right and Left Dot LEDs

If an error occurred in two or more devices with the same rightmost byte in their IP addresses, the Right Dot LED will be lit while the device error is being displayed.

Example: Displaying the Following Errors

- A d6 error (failed to establish connection) occurred with IP address 10.0.1.8.
- A d6 error (failed to establish connection) occurred with IP address 10.0.2.8.

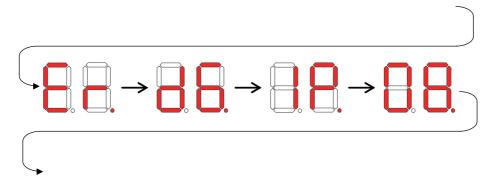

Switch Settings

Unit Number Setting Switch

The Unit Number Setting Switch sets the unit number of the EtherNet/IP Unit as a CPU Bus Unit.



Setting method	Setting range	
One-digit hexadecimal	0 to F	

Note The unit number is factory-set to 0.

The unit number can be set to any number in the setting range (0 to F), as long as the same number is not set on another CPU Bus Unit in the same Controller.



Precautions for Correct Use

- Use a small screwdriver to make the setting, and be sure not to damage the rotary switch.
- Always turn OFF the Controller's power supply before setting the unit number.



Additional Information

- The unit number is factory-set to 0.
- If the same unit number is set on more than one CPU Bus Unit mounted in a Controller, a unit number duplication error will occur in the Controller and the EtherNet/IP Unit will not be able to start operating.

Node Address Setting Switch

The Node Address Setting Switch sets the node address of the EtherNet/IP Unit.



Setting method	Setting range	
Two-digit hexadecimal	01 to FE	

Note The node address is factory-set to 01. With the default settings, the values set on these switches become the last two digits of the IP address of the EtherNet/IP Unit.

Default IP address = 192.168.250.node address

With the factory-default node address setting of 01, the default IP address is 192.168.250.1.

The node address can be set to any number in the setting range (01 to FE), as long as the same address is not set on another node in the network.





Additional Information

• If the node address setting is changed during operation, the MS Indicator will flash red.

1-3-3 Dimensions

• CJ1W-EIP21

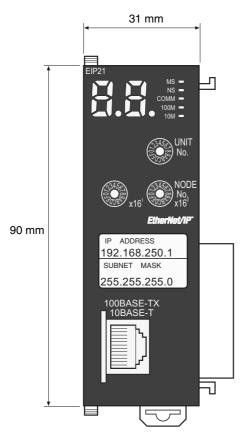

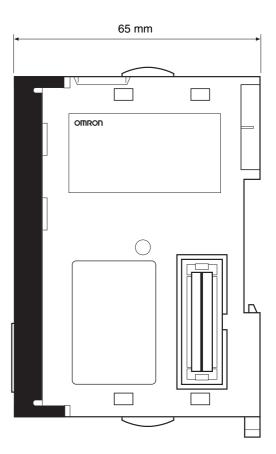


Introduction to Communications Services

CIP (Common Industrial Protocol) Communications Services 1-4-1

Tag Data Links (Cyclic Communications)

A program is not required to perform cyclic data exchanges with other devices on the EtherNet/IP network. Normally, a connection is started with the target device for each tag set that was created with the Network Configurator to start communications for tag data links for an EtherNet/IP Unit. One connection is used per tag set. You can register up to 256 connections. The following table gives the EtherNet/IP Unit tag and tag set specifications.


Tags	Tag sets
Total size of all tags ≤ 184,832 words	Maximum size of 1 tag set ≤ 722 words (The maximum size is 721 words when the tag set includes the Controller status.)
Maximum size of 1 tag ≤ 722 words (The maximum size is 721 words when the tag set includes the Controller status.)	Number of tags per tag set ≤ 8 (7 tags/tag set when the tag set includes the Controller status)
	Note Input and output variables cannot be combined.
Number of registrable tags ≤ 256	Number of registrable tag sets ≤ 256

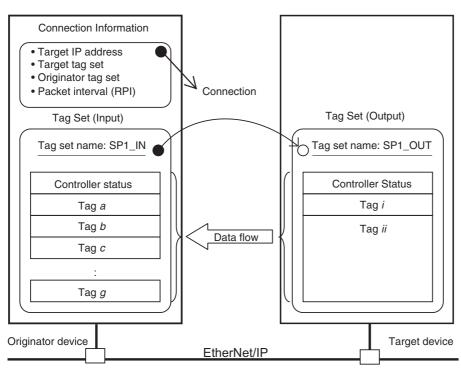


In this example, a connection is established with the originator's tag list with tags a to g (inputs), which are in a tag set called SP1_IN, and the target's tag list with tags i and ii (outputs), which are in a tag set called SP1_OUT.

CIP Message Communications

User-specified CIP commands can be sent to devices on the EtherNet/IP network. CIP commands, such as those for reading and writing data, can be sent and their responses received by executing the CIP communications instructions from the user program in the NJ-series CPU Unit.

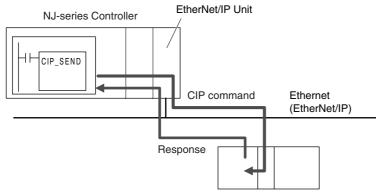

By specifying a route path, you can send CIP messages (CIP commands and responses) to a device on another CIP-based network segment via a built-in EtherNet/IP port or the EtherNet/IP Unit (CIP routing function for message communications). The maximum number of levels of CIP routing via the ports is eight for any combination of CS, CJ, and NJ-series CPU Units. Note that the number of levels of IP routing using an L3 Ethernet switch is not counted in the number of levels of CIP routing via the ports.

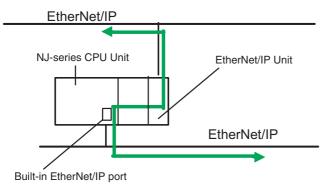



Additional Information

In CIP routing, a node (Unit) that routes information subtracts the equivalent of one hop from the timeout, deletes its own address from the route information, and relays the information to the next node (Unit).

When a timeout is specified, the timeout for the actual request service processing is set in the last hop. In the case of relay hops, the timeout for the relay route must be added to the timeout for the request.

OMRON products that support CIP subtract 5 seconds per hop.




Version Information

You can use the EtherNet/IP Unit with a CPU Unit with unit version 1.01 or later and Sysmac Studio version 1.02 or higher.

1-4-2 **BOOTP Client**


You set the EtherNet/IP Unit in the BOOTP settings to use the BOOTP client to obtain settings, such as the EtherNet/IP Unit IP address.

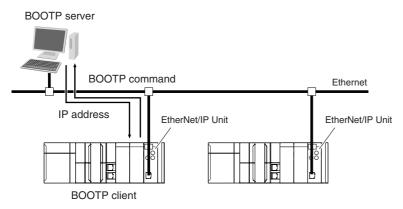


The EtherNet/IP Unit IP address is obtained from the BOOTP server when the power is turned ON.

1-4-3 **FTP Server**


An FTP server is built into the EtherNet/IP Unit so that files can be read from and written to the SD Memory Card in the CPU Unit of the Controller from computers at other Ethernet nodes. This makes it possible to exchange data files between a host computer and the Controller with the host computer as the FTP client and the Controller as the FTP server.

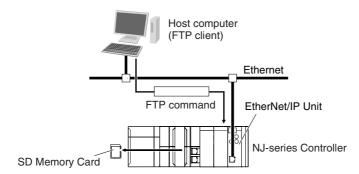



1-4-4 Automatic Clock Adjustment

With the EtherNet/IP Unit, clock information is read from the SNTP server at the specified times or when the Clock Information Adjustment Switch is changed to TRUE. The internal clock time in the CPU Unit is updated with the read time.

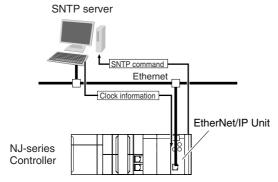




Precautions for Correct Use

An SNTP server is required to use automatic clock adjustment.

1-4-5 Specifying Host Names

You can directly specify IP addresses, but you can also use the host names instead of the IP addresses for SNTP servers, SNMP managers, or the destinations of CIP communications instructions (DNS client).

Example: Setting Host Names on the DNS Server

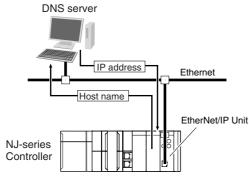




Precautions for Correct Use

A DNS server is required to use the server host names for the DNS client.

SNMP Agent 1-4-6


The SNMP agent passes internal status information from the EtherNet/IP Unit to network management software that uses an SNMP manager.

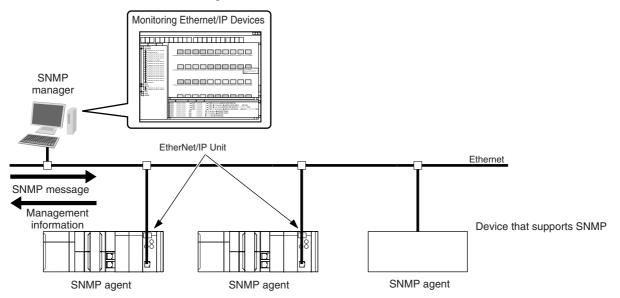

SNMP Trap

When specific conditions occur, the EtherNet/IP Unit that is set as the SNMP agent sends status notification reports to the SNMP manager. The SNMP manager can learn about changes in status even without periodically monitoring of the EtherNet/IP Unit. Status notification reports are sent under the following conditions.

- · When the Controller is turned ON
- · When links are established
- · When an SNMP agent fails to be authorized

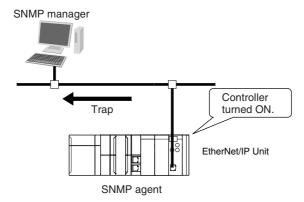

1-5 EtherNet/IP Communications Procedures

1-5-1 Basic Operation

This section provides the basic procedures for the EtherNet/IP Unit.

Use the Sysmac Studio to create the programs and set the Unit.

Refer to the *Sysmac Studio Version 1 Operation Manual* (Cat. No. W504) for specific procedures on the Sysmac Studio.

1 Set the unit number and node address on the rotary switches on the front of the Unit.

 \downarrow

2-1 Switch Settings on the Front Panel of the Ether-Net/IP Unit

2 Mount the Unit to the CPU Rack or Expansion Rack.

2-2 Mounting the Unit to the CPU Rack or Expansion Rack

3 Wire the Ethernet network with twisted-pair cable.

2-5 Connecting to the Network

4 Register the EtherNet/IP Unit in the Sysmac Studio.

Sysmac Studio Version 1 Operation Manual (Cat. No. W504)

- 1. Create a project.
- 2. Register the EtherNet/IP Unit in the Unit Configuration.

Register the EtherNet/IP Unit in the Unit Configuration in **CPU/Expansion Racks** under **Configurations and Setup**. When you register the Unit, set the device name and unit number as well.

 \downarrow

- **5** Assign the device variables for the CJ-series Unit to the I/O ports on the Sysmac Studio.
- · Select existing variables and assign them.
- · Enter new variable names.
- · Automatically create the device variable names.

6 Create the initial settings for the EtherNet/IP Unit on the Sysmac Studio.

Section 5 Sysmac Studio Settings for the EtherNet/IP Unit

- Set up the EtherNet/IP Unit in the Edit Special Unit Settings Tab Page.
- Set the TCP/IP settings and Ethernet settings as required.

 \downarrow

7 Set the IP address of the EtherNet/IP Unit with the Sysmac Studio.

Section 4 Determining IP Addresses

Set the IP address in one of the following ways:

- Default: 192.168.250.1 (subnet mask = 255.255.255.0)
- Set a user-specified IP address.
- · Obtain the IP address from the BOOTP server.

l

8 Turn ON the power supply to the Controller.

Turn ON the power supply to the Controller. If there is a Unit Configuration registered in the CPU Unit and it does not agree with the actual configuration of the Units, an I/O Setting Check Error will occur. If that occurs, reset the Controller according to step 10, below, to clear the error.

l

9 Transfer the user program.

Transfer the user program, Unit Configuration and Setup, and variable information from the Sysmac Studio to the CPU Unit. At this point, the Special Unit Setup is not transferred to the EtherNet/IP Unit.

 \downarrow

10Update the Special Unit Setup.

Use one of the following methods to transfer the Special Unit Setup that you made in the Edit Special Unit Settings Tab Page from the CPU Unit to the EtherNet/IP

- · Reset the Controller.
- · Restart the EtherNet/IP Unit.
 - Click the Restart Button in the Edit Special Unit Setup Dialog Box.
 - Change the Unit Restart Flag in the device variables for the CJ-series Unit to TRUE.

Restart Flag

System-defined variable	Data type	R/W	Meaning		Description
_CJB_CBU** Restart	BOOL	RW	CPU Bus Unit Restart Flag		The CPU Bus Unit is restarted. The Unit is not restarted.
				Default:	FALSE

("**" is replaced by the unit number.)

 \downarrow

11 Execute a PING command from the computer to test communications.

Section 6 Testing Communications

1-5-2 Procedure for Using Tag Data Links

This section gives the setup procedure up to starting tag data links. Use the Network Configurator to set the tag data link parameters to use for tag data links.

1

Import the settings of the variables that you specified for the tags on the Sysmac Studio to the Network Configurator.

7-2-4 Creating Tags and Tag Sets

2

Use Network Configurator to create the tag data link table.

Section 7 Tag Data Link Functions

- Create the network configuration.
- Set the tags, tag sets, and connections.

3 Connect the Network Configurator online.

7-2-8 Connecting the Network Configurator to the Network

4

Download the tag data link settings.

7-2-9 Downloading Tag Data Link Parameters

5 Start the tag data links (the links start automatically when power is turned ON).

7-2-12 Starting and Stopping Tag Data Links

6 Check operation.

1-3-2 Part Names and Functions

· Check the indicators on the EtherNet/IP Unit.

- Section 13 Troubleshooting
 Tag
- Use the Sysmac Studio to check the communications status with the All Tag Data Link Communications Status system-defined variable.

 Use the monitor function of the Network Configurator to confirm that the tag data links are in normal operation.



Additional Information

Status information on the target nodes for tag data links is provided in device variables for the CJ-series Unit. You can also store it in user-defined variables.

User-defined Variables to Which the Status Areas Are Assigned on page 3-5.

1-5-3 **Using EtherNet/IP Network Functions**

Using the Message Communications Service

CIP Communications Instructions

Execute CIP communications instructions in the user program.

Section 8 Message Communications

 \downarrow

Check operation.

1-3-2 Part Names and Functions

 Use the Sysmac Studio to check the communications status with the end codes of the instructions (Done, Err, and ErrorID).

Section 13 Troubleshooting

Using the FTP Server

Use the Sysmac Studio to set the initial settings of the EtherNet/IP Function Module.

Section 9 FTP Server

• Set the FTP settings (enabling FTP, login name, and password).

Connect to the FTP server in the NJ-series CPU Unit from an FTP client application.

- Input the FTP login name and password to log onto the EtherNet/IP Unit.
- · Check the event log to see if FTP started.

Using the Automatic Clock Adjustment

Use the Sysmac Studio to set the initial settings of the EtherNet/IP Function Module.

Section 10 Automatic Clock Adjustment

• Set the SNTP settings (enabling SNTP and execution conditions).

Execute automatic clock adjustment.

Execute automatic adjustment at specified times.

Using the SNMP Agent

Use the Sysmac Studio to set the initial settings of the EtherNet/IP Function Module.

Section 11 SNMP Agent

- Set the SNMP settings.
- · Set the SNMP trap settings

Check operation.

Check the event log to see if the SNMP agent started.

Using BOOTP

1

Use the Sysmac Studio to set the initial settings of the EtherNet/IP Function Module.

Section 5 Sysmac Studio Settings for the EtherNet/IP Unit

• Set the BOOTP settings.





Check operation.

- Check the event log to see if BOOTP started.
- Check online status with the device variables for the CJ-series Unit.



Installing Ethernet Networks


2-1	Switch Settings on the Front Panel of the EtherNet/IP Unit				
2-2	Mounti	ng the Unit to the CPU Rack or Expansion Rack	2-3		
2-3	Selecting the Network Devices				
	2-3-1	Recommended Network Devices	2-4		
	2-3-2	Ethernet Switch Types	2-5		
	2-3-3	Ethernet Switch Functions	2-5		
	2-3-4	Precautions for Ethernet Switch Selection	2-6		
2-4	Network Installation				
	2-4-1	Basic Installation Precautions	2-8		
	2-4-2	Recommended Network Devices	2-8		
	2-4-3	Precautions When Laying Twisted-pair Cable	2-9		
	2-4-4	Precautions When Installing and Connecting Ethernet Switches	2-10		
2-5	Connec	cting to the Network	<u>!-12</u>		
	2-5-1	Ethernet Connectors	2-12		
	2-5-2	Connecting the Cable	2-12		
	2-5-3	Noise Countermeasures for Contact Output Units	2-13		

Switch Settings on the Front Panel of 2-1 the EtherNet/IP Unit

Setting the Unit Number

The unit number is used to identify individual CPU Bus Units when more than one CPU Bus Unit is mounted to the same Controller. Use a small screwdriver to make the setting, taking care not to damage the rotary switch. The unit number is factory-set to 0.







Precautions for Correct Use

- Turn OFF the power supply before setting the unit number.
- If you set the unit number of the EtherNet/IP Unit in the Unit Configuration on the Sysmac Studio, make sure that the rotary switches are set to the same unit number. If different unit numbers are set in the Unit Configuration and on the rotary switches, an I/O Setting Check Error will occur.

Setting the Node Address

The node addresses are used by the FINS communications service to identify individual EtherNet/IP Units (nodes).

Use the node address switches to set the node address as a hexadecimal value. Do not set the same node address as any other node on the same Ethernet network.

If the FINS communications service is not used on the Ethernet network, then it is all right for the same node address to be set on two or more EtherNet/IP Units.

The node address must meet the following conditions.

If the conditions are not met, an error will occur (the MS indicator will flash red and the 7-segment display will show H4 (Node Address Setting Error)) and the EtherNet/IP Unit will stop operating.

- Set the node address to between 01 and FE hex.
- · Set the node address on the rotary switches and the lowest field of the IP address (i.e., the host ID) of the EtherNet/IP Unit to the same value.

If you cannot use the same value for the node address and the lowest field of the IP address of the EtherNet/IP Unit, you must use the IP address table method or the combined method for address conversion. Refer to Section 5 Sysmac Studio Settings for the EtherNet/IP Unit for details.



NODE

Setting range: 01 to FE (1 to 254 decimal)

The left switch sets the sixteens digit (most significant digit) and the right switch sets the ones digit (least significant digit). The node address is factory-set to 01.




Precautions for Correct Use

Turn OFF the power supply before setting the node address.

2-2 Mounting the Unit to the CPU Rack or Expansion Rack

You can mount EtherNet/IP Units to an NJ-series CPU Rack or a CJ-series Expansion Rack. Mount an EtherNet/IP Unit in any of the positions shown below using the sliders on the top and bottom of the Unit. You can mount a maximum of four EtherNet/IP Units in a single Controller. If EtherNet/IP Units are mounted in combination with other CPU Bus Units, the maximum total number of CPU Bus Units that can be mounted is 16.

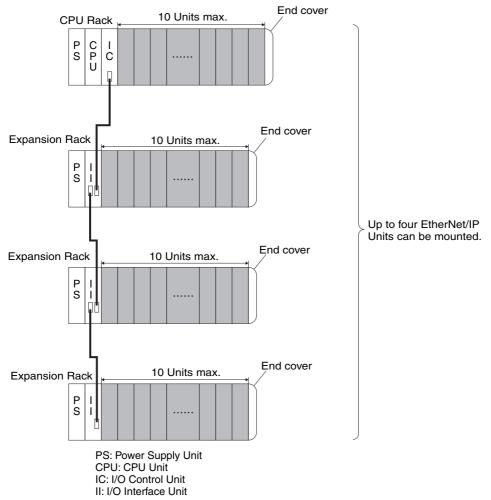



Additional Information

The CJ1W-EIP21 EtherNet/IP Unit's maximum current consumption is 410 mA. Be sure that the total current consumption of all the Units that are mounted to the same CPU Rack or Expansion Rack does not exceed the output capacity of the Power Supply Unit.

Selecting the Network Devices 2-3

2-3-1 **Recommended Network Devices**

The following table shows the devices recommended for use with the EtherNet/IP.

Ethernet Switches

Manufacturer	Model	Description		
OMRON	W4S1-03B	Packet priority control (QoS): EtherNet/IP control data priority		
	W4S1-05B	Failure detection: Broadcast storm, LSI error detection		
	W4S1-05C	• 10/100Base-TX		
		Auto negotiation		
		Number of ports: three for the W4S1-03B, or five each for the W4S1-05B and W4S1-05C		
		Failure detection output (W4S1-05C only)		
Cisco Systems, Inc.	Consult the manufacturer.			
	http://www.cisco.com/			
CONTEC USA Inc.	Consult the manufacturer.			
	http://www.contec.com/			
Phoenix Contact USA	Consult the manufacturer.			
	https://www.phoenixcontact.com			

Twisted-pair Cables and Connectors

Applicable EtherNet/IP communications cables and connectors vary depending on the used baud rate. Use an STP (shielded twisted-pair) cable of category 5 or higher. You can use either a straight or cross cable.

Cabling materials used for EtherNet/IP communication cables are shown in the table below. "100Base-TX" in the "Product" column of the table below indicates that either 100Base-TX or 10Base-T can be used.

Product		Manufacturer	Model
Sizes and conductor	Cables	Tonichi Kyosan Cable, Ltd.	NETSTAR-C5E
pairs: AWG 24 × 4			SAB 0.5 × 4P
pairs		Kuramo Electric Co., Ltd.	KETH-SB
		SWCC Showa Cable Systems Co. Ltd.	FAE-5004
	RJ45 Connectors	Panduit Corporation	MPS588
Sizes and conductor pairs: AWG 22 × 2 pairs *1	Cables	Kuramo Electric Co., Ltd.	KETH-PSB-OMR
		Nihon Electric Wire & Cable Co., Ltd.	PNET/B
	RJ45 Assembly Connectors	OMRON	XS6G-T421-1
Sizes and conductor	Cables	Fujikura Ltd.	F-LINK-E 0.5mm × 4P
pairs: $0.5 \text{ mm} \times 4$ pairs	RJ45 Connectors	Panduit Corporation	MPS588

^{*} We recommend that you use cables and connectors in above combinations.

Boots

Product	Model	Contact phone number
TSUKO	MK Boots (IV) LB	TSUKO



Precautions for Correct Use

- Always use an Ethernet switch for tag data links in the network.
- If a repeater hub is used for EtherNet/IP tag data links (cyclic communications), the network's communications load will increase, data collisions will occur frequently, and stable communications will be impossible.

2-3-2 Ethernet Switch Types

Unmanaged Layer 2 (L2) Ethernet Switches

These Ethernet switches use the Ethernet MAC address to switch ports. Ordinary Ethernet switches have this function. Ethernet switch functions and settings cannot be changed.

Managed Layer 2 (L2) Ethernet Switches

These Ethernet switches use the Ethernet MAC address to switch ports. Ethernet switch functions and settings can be changed with special software tools for Ethernet switches running on a network node. You can also collect analytical data. These Ethernet switches provide more-advanced functions than unmanaged layer 2 Ethernet switches.

2-3-3 Ethernet Switch Functions

This section describes the Ethernet switch functions that are important for an EtherNet/IP network. For an EtherNet/IP Unit, consider whether the Ethernet switch supports these functions when you select the Ethernet switch.

- Multicast filtering
- QoS (Quality of Service) for TCP/UDP port numbers (L4)

Multicast Filtering

Multicast filtering transfers multicast packets to the specific nodes only. This function is implemented in the Ethernet switch as IGMP snooping or GMRP. "Specific nodes" are nodes equipped with an IGMP client that have made transfer requests to the Ethernet switch. (OMRON EtherNet/IP Units are equipped with an IGMP client.) When the Ethernet switch does not use multicast filtering, multicast packets are sent to all nodes, just like broadcast packets, which increases the traffic in the network. Settings must be made in the Ethernet switch to enable this function. There must be enough multicast filters for the network.

QoS (Quality of Service) Function for TCP/UDP Port Numbers (L4)

This function controls the priority of packet transmissions so that packets can be sent with higher priority to a particular IP address or TCP (UDP) port. The TCP and UDP protocols are called transport layer protocols, leading to the name L4 (layer 4) QoS function. When tag data links and message communications are executed on the same network, tag data links can be sent at higher priority to prevent problems such as transmission delays due to message communications traffic and packet losses due to buffer overflow. Settings must be made in the Ethernet switch to enable this function and give higher priority to tag data link packets.

Support for the above two functions is as follows for the different types of Ethernet switches.

Ethernet switch types	Multicast filtering	L4 QoS	Remarks
Unmanaged L2 Ethernet switches	None	None	
Managed L2 Ethernet switches	Provided.	Provided.	Both functions must be set with a special software tool.
OMRON W4S1-series Ethernet switches	None	Provided.	L4 QoS is set with a switch. No software tool is necessary.



Additional Information

If the Network Configurator is used to set the connection type in the connection settings to a multicast connection, multicast packets are used. If the connection type is set to a point-to-point connection, multicast packets are not used.

2-3-4 **Precautions for Ethernet Switch Selection**

The functions supported by the Ethernet switch may affect tag data link transmission delays and the settings in the Controller configurations and setup. In addition, if the Ethernet switch supports advanced functions, special settings are required for those functions. When you select an Ethernet switch, it is necessary to consider whether to select the Ethernet switch based on the kind and amount of communications you want to execute in the network. Refer to the following precautions when you select an Ethernet switch. Refer to 12-2 Adjusting the Communications Load to estimate the communications load for tag data links.

Selecting the Ethernet Switch Based on the Types of Network **Communications**

Executing Tag Data Links Only

We recommend that you use an L2 Ethernet switch without multicast filtering or an L2 Ethernet switch with multicast filtering. An L2 Ethernet switch with multicast filtering prevents increased traffic due to unnecessary multicast packets, so the tag data links can operate at higher speed. If either of the following conditions exists, the amount traffic will be the same for both kinds of L2 Ethernet switches (with or without multicast filtering).

- The tag data links are set to share the same data with all nodes in the network. (The multicast packets are transferred to all nodes in the network, just like a broadcast.)
- The tag data link settings are all one-to-one (unicast) and multicast packets cannot be used.

If multicast filters are being used, settings must be made in the Ethernet switch. There must be enough multicast filters for the network being used.

Executing Tag Data Links and Message Communications

We recommend an L2 Ethernet switch with multicast filtering and L4 QoS. If you set tag data links for higher-priority transmission, it is possible to prevent problems such as transmission delays due to message communications traffic and packet losses due to buffer overflow. You must make special settings in the Ethernet switch when using the multicast filtering function and L4 QoS function.

Selecting the Ethernet Switch Based on the Ethernet Switch's Supported Functions

L2 Ethernet Switch without Multicast Filtering

We recommend this kind of Ethernet switch when only tag data links are executed and any of the following conditions is met.

- The tag data links are set to share the same data with all nodes in the network. (The multicast packets are transferred to all nodes in the network, just like a broadcast.)
- The tag data link settings are all one-to-one (unicast) and multicast packets cannot be used.
- · There is little traffic in the tag data links.

No special settings are required for an L2 Ethernet switch without multicast filtering.

L2 Ethernet Switch with Multicast Filtering

We recommend this kind of Ethernet switch when only tag data links are executed and the following condition is met.

• There are many 1:N links (where N represents some number of nodes in the network) in the tag data link settings, i.e., there are many multicast packets used, or there is heavy traffic in the tag data links.

Special settings are required for an L2 Ethernet switch with multicast filtering. There must be enough multicast filters for the network.

L3 Ethernet Switch with Multicast Filtering and L4 QoS Functions

We recommend this kind of Ethernet switch when both tag data links and message communications are executed. If you set tag data links for higher-priority transmission, you can prevent problems such as transmission delays due to message communications traffic and packet losses due to buffer overflow. Special settings must be made in the Ethernet switch when using the multicast filtering function and L4 QoS function. There must be enough multicast filters for the network.



Precautions for Correct Use

- Ask the Ethernet switch manufacturer for setting procedures for the Ethernet switch.
- Install the Ethernet switch so that its environmental resistance specifications are not exceeded. Ask the Ethernet switch manufacturer for information on the environmental resistance of the Ethernet switch.

Network Installation 2-4

2-4-1 **Basic Installation Precautions**

- Take the greatest care when you install the Ethernet System. Be sure to follow ISO 8802-3 specifications. Be sure you understand them before attempting to install an Ethernet System.
- · Unless you are already experienced in installation of communications systems, we strongly recommend that you employ a professional to install your system.
- Do not install Ethernet equipment near sources of noise. If a noisy environment is unavoidable, take adequate measures against noise interference, such as installation of network components in metal cases or the use of optical cable in the system.
- · When using a shielded cable with the shields on both ends of the cable connected to connector hoods, ground loops induced by improper grounding methods may decrease noise immunity and cause device damage. To prevent ground loops caused by differences in potential between device grounding points, the reference potential between the devices must be stabilized. Design grounding appropriately so that noise current does not flow to ground lines between the devices. For grounding methods, refer to the NJ-series CPU Unit Hardware User's Manual (Cat. No. W500) and the NXseries CPU Unit Hardware User's Manual (Cat. No. W535).
- To obtain information on laying EtherNet/IP cable, contact ODVA. ODVA web site: http://www.odva.org
- When you install an EtherNet/IP network that combines an information network with the control system, and the communications load may be heavy due to tag data links, we recommend that you set up the network so that the load does not affect communications. For example, install the tag data links in a segment that is separate from the information network.

2-4-2 **Recommended Network Devices**

Refer to 2-3 Selecting the Network Devices for the devices recommended for use with the EtherNet/IP Unit.

2-4-3 Precautions When Laying Twisted-pair Cable


Connecting the Shield to Connector Hoods

Between an EtherNet/IP Port and an Ethernet Switch

Connect the cable shields to the connector hoods as described in either a) or b) below.


a) Connecting the shields at both ends of the cable

Connect the shields at both ends of the cables to connector hoods.

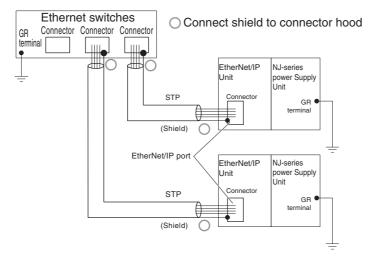

b) Connecting the shields on the Ethernet switch side only

Connect only the shield at the end of the cable on the Ethernet switch side to the connector hood.

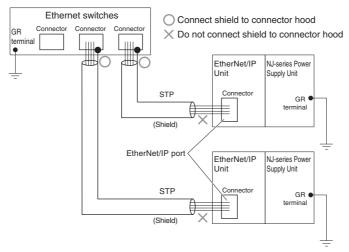



Additional Information

Noise immunity may be reduced and device damage may occur due to ground loops, which can occur due to improper shield connections and grounding methods. It may be possible to alleviate this problem by connecting only the Ethernet switch side as described in b), rather than connecting both ends as described in a).

Between two Ethernet switches

Regardless of which baud rate is used, check with the Ethernet switch manufacturers for information about installing the network between Ethernet switches, and in particular whether or not it is necessary to connect the cable shields to the connector hoods.

Other Precautions When Laying the Twisted-pair Cable

- Press the cable connector in firmly until it locks into place at both the Ethernet switch and the Ether-Net/IP Unit.
- Do not lay the twisted-pair cable together with high-voltage lines.
- Do not lay the twisted-pair cable near devices that generate noise.
- Do not lay the twisted-pair cable in locations subject to high temperatures or high humidity.
- Do not lay the twisted-pair cable in locations subject to excessive dirt and dust or to oil mist or other contaminants.

2-4-4 **Precautions When Installing and Connecting Ethernet Switches**


Precautions When Installing Ethernet Switches

- Do not ground the Ethernet switch in the same location as a drive-system component, such as an
- · Always use a dedicated power supply for the Ethernet switch's power supply. Do not use the same power supply for other equipment, such as an I/O power supply, motor power supply, or control power
- Before installation, check the Ethernet switch's environmental resistance specifications, and use an Ethernet switch that is appropriate for the ambient conditions. Contact the Ethernet switch manufacturer for details on Ethernet switch's environmental resistance specifications.

Ethernet Switch Connection Methods

 Connect two Ethernet switches to each other as follows: Connect an MDI port to an MDI-X port with a straight cable. Connect two MDI ports or two MDI-X ports with a cross cable.

Note It is very difficult to distinguish cross cables and straight cables by appearance. Incorrect cables will cause communications to fail. We recommend cascade connections with straight cables whenever possible.

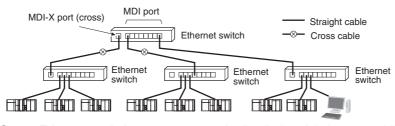

· Some Ethernet switches can automatically distinguish between MDI and MDI-X. When this kind of Ethernet switch is used, straight cable can be used between Ethernet switches.



Precautions for Correct Use

Adjust the EtherNet/IP Unit's link settings to match the communications settings of the connected Ethernet switch. If the settings do not match, the link will be unstable and prevent normal communications. The following table shows the allowed settings for each Ethernet switch communications mode. (Auto-Nego: Auto negotiation, Full: Full duplex, Half: Half duplex)

		EtherNet/IP Unit						
Ethernet switch		Auto-	10 Mbps	s (fixed)	100 Mbp	s (fixed)		
		Nego Full Half			Full Half			
Auto-Nego		Best		OK		OK		
10 Mbps (fixed)	Full		OK					
	Half	OK		OK				
100 Mbps (fixed)	Full				Best			
	Half	OK				OK		

Best = Recommended; OK = Allowed; --- = Not allowed.

Connecting to the Network 2-5

2-5-1 **Ethernet Connectors**

The following standards and specifications apply to the connectors for the Ethernet twisted-pair cable.

- Electrical specifications: Conforming to IEEE 802.3 standards.
- Connector structure: RJ45 8-pin Modular Connector (conforming to ISO 8877)




Connector pin	Signal name	Abbr.	Signal direc- tion
1	Transmission data +	TD+	Output
2	Transmission data –	TD-	Output
3	Reception data +	RD+	Input
4	Not used.		
5	Not used.		
6	Reception data –	RD-	Input
7	Not used.		
8	Not used.		
Hood	Frame ground	FG	

2-5-2 **Connecting the Cable**



Precautions for Correct Use

- Turn OFF the power supply to the Controller before you connect or disconnect twisted-pair
- Allow more than enough space for the bending radius of the twisted-pair cable. The space that is required depends on the communications cable and connector that you use. Contact the manufacturer or sales agent.

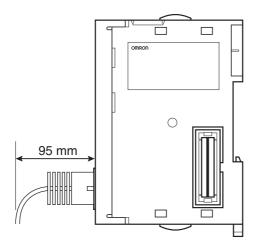


- 1 Lay the twisted-pair cable.
- 2 Connect the cable to the Ethernet switch.
- 3 Connect the twisted-pair cable to the connector on the EtherNet/IP Unit. Be sure to press the connectors (both the Ethernet switch side and Ethernet side) until they lock into place.

2-5-3 Noise Countermeasures for Contact Output Units

When an EtherNet/IP Unit and Contact Output Unit are mounted in the same Controller, communications errors may occur due to the noise that is generated by the contact outputs. Take either of the following countermeasures.


Separating the Units

Separate the EtherNet/IP Unit as far as possible from the Contact Output Units.

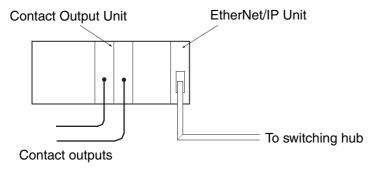

Separating the Cables

Separate the twisted-pair cable that is connected to the EtherNet/ IP Unit as far as possible from the wiring to the Contact Output Units.

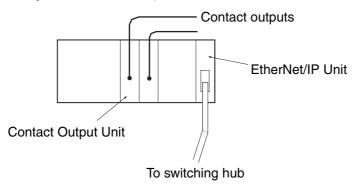



Assigning Device Variables for CJ-series Units

3-1	Data Ex	xchange with the CPU Unit	3-2
	3-1-1	Data Flow	3-2
	3-1-2	Specifying and Creating Variables	3-5
3-2	Device	Variables for the CJ-series Unit	3-6
	3-2-1	Assigning Device Variables for CJ-series Units	3-6
	3-2-2	Device Variables for the CJ-series Unit for Software Switches	3-6
	3-2-3	Device Variables for the CJ-series Unit for Status	3-8
	3-2-4	Device Variables for the CJ-series Unit for Setup	3-16
3-3	User D	efinition Settings for the Status Area 3	3-17
	3-3-1	Introduction to User Definition Settings	3-17
	3-3-2	Setting User Definitions	3-17
	3-3-3	Accessing the User-defined Status Area	3-17
	3-3-4	Status Information Assigned to the User-defined Area	3-18

Data Exchange with the CPU Unit

Data exchange between the EtherNet/IP Unit and CPU Unit is performed with the I/O ports that are assigned to the EtherNet/IP Unit and, if required, the memory used for CJ-series Units.

Refer to 3-2 Device Variables for the CJ-series Unit for information on I/O ports.

3-1-1 **Data Flow**


The exchange of data between the CPU Unit and the EtherNet/IP Unit is described in the following table and figure.

Types of Data Exchange

Access method from the user program	AT specification	Timing of data exchange	Classification of Unit data
Device variables for CJ-		During I/O refreshing	Software switches
series Unit	ating data		Status *1
	I/O ports for setup data	During I/O refreshing	IP address display/setting area
User-defined variables	Memory used for CJ-series Units	During I/O refreshing	Status *2

The target PLC operating and error information, Unit status, communications status, registered/normal target nodes, and FINS/TCP connection status are sent as status.

*2 The target PLC operating and error information and the registered/normal target node table are sent as status.

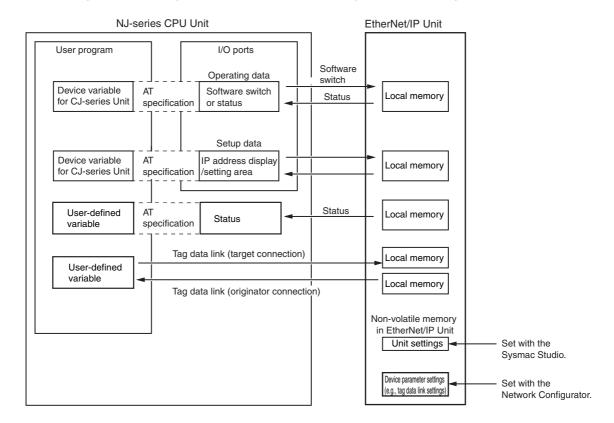

Device Variables for CJ-series Unit

A device variable for a CJ-series Unit is a variable with an AT specification to an I/O port. In the user program, you can use device variables for a CJ-series Unit to access Configuration Units, such as the EtherNet/IP Unit.

Refer to *Specifying Device Variables for CJ-series Units* on page 3-5 for information on assigning I/O ports for device variables for CJ-series Units.

I/O Ports

An I/O port is a logical interface that is used by the CPU Unit to exchange data with an EtherNet/IP Unit or other Configuration Unit.

The names of I/O ports are defined in advance for each Unit model number and function.

I/O ports are automatically created when you create the Unit Configuration on the Sysmac Studio.

Refer to 3-2 Device Variables for the CJ-series Unit for information on the I/O ports that are defined for the EtherNet/IP Unit.

There are two types of I/O ports for an EtherNet/IP Unit: I/O ports for operating data and I/O ports for setup data.

Operating Data

Software Switches

Software switches for output from the CPU Unit to the EtherNet/IP Unit are provided, such as the Tag Data Link Start Bit.

Software switch data is stored in the I/O ports for operating data that are assigned to the Ether-Net/IP Unit.

From the user program, you can use a device variable for the CJ-series Unit to access the data or manipulate the switch. The software switches are updated during I/O refreshing.

Status

Status data for input from the EtherNet/IP Unit to the CPU Unit is provided, such as the Communications Status. Status data is stored in the I/O ports for operating data that is assigned to the EtherNet/IP Unit.

From the user program, you can use a device variable for the CJ-series Unit to access the status data.

The status data is updated during I/O refreshing.

Setup Data

• IP Address Display/Setting Area

You normally set the setup data from the Edit Special Unit Settings Tab Page of the Sysmac Studio. You can also set the setup data from the user program by using the setup device variables for the CJ-series Unit with AT specifications to the applicable I/O ports.

Setup data is stored in the I/O ports for setup data that is assigned to the EtherNet/IP Unit. The setup data is backed up by a battery when the power supply is interrupted.

The data is transferred to the EtherNet/IP Unit to update it whenever the Controller is reset or the EtherNet/IP Unit is restarted.

User-defined Variables

User-defined variables are used to perform tag data links and other communications for an EtherNet/IP Unit that is connected to an NJ-series CPU Unit. For details on user-defined variables, refer to the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501).

Access Methods from the User Program

The CPU Unit and EtherNet/IP Unit exchange data through the memory used for CJ-series Units in the CPU Unit.

Refer to the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501) for details on the memory used for CJ-series Units.

To exchange data, use the data that is listed in the following table in the user program.

Type of data	Access method
Software switches	Device variables for the CJ-series Unit
Status data	
Setup data	
Status data	User-defined variables
Data that is updated with tag data links	

3-1-2 Specifying and Creating Variables


Specifying Device Variables for CJ-series Units

Assign the device variables for the CJ-series Unit to the I/O ports in the I/O Map on the Sysmac Studio. Specify the assigned variable names as given below.

- (1) Select existing variables and assign them.
- (2) Enter new variable names.
- (3) Automatically create the device variable names.

The configuration of the automatically created variable names (3, above) is shown below.

Device Variable Names for CJ-series Units

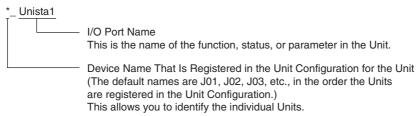

Refer to 3-2 Device Variables for the CJ-series Unit for details information on the device variables for the CJ-series Unit.

In further descriptions, the variable names that are automatically generated for the device variables for the CJ-series Unit are used, such as *_TDLStartCmd.

User-defined Variables to Which the Status Areas Are Assigned

If you assign the status areas to user-defined variables, there is a data type for a structure that is defined in advance for that purpose.

To use that data type, register the structure data type for the EtherNet/IP Unit in advance in the CPU/Expansion Racks Tab Page of the Controller Configurations and Setup.

Right-click the Unit in the CPU/Expansion Racks Tab Page of the Controller Configurations and Setup, and then select *Register Data Types for Units* from the menu to register the data type.

After you register the structure data type for the EtherNet/IP Unit, you create a user-defined variable that uses that structure data type to assign the status areas.

You can then use that user-defined variable in the user program to read information from the status area.

Refer to 3-3 User Definition Settings for the Status Area for information on setting the status area.

Data Type for User-defined Status Area

Structure data type name	Member	Data type
_sCJEIP21_User_StaArea	RegTargetSta (Registered Target Node Table)	_uCJEIP21_TargetSta
	EstbTargetSta (Normal Target Node Table)	_uCJEIP21_TargetSta
	TargetPLCMdSta (Target Node PLC Operating Flags)	_uCJEIP21_TargetSta
	TargetPLCErrSta (Target Node PLC Error Flags)	_uCJEIP21_TargetSta

Device Variables for the CJ-series 3-2 Unit

The section describes the device variables for the CJ-series Unit individually.

In this section, the variable names that are created automatically in the I/O Map are used.

3-2-1 Assigning Device Variables for CJ-series Units

An NJ-series Controller predefines the following three types of data as I/O ports for the operating data and setup data of an EtherNet/IP Unit.

The device variables for the CJ-series Unit are assigned to I/O ports to use them.

- (1) Software switches (Serve as commands from the CPU Unit to the EtherNet/IP Unit.)
- (2) Status (Gives the status of the EtherNet/IP Unit, error information, network status, and tag data link target status.)
- (3) Setup (Stores the IP address that is set for the EtherNet/IP Unit.)

The three types of device variables for the EtherNet/IP Unit are described individually below.

Refer to A-7-2 Differences in Access Methods from the User Program for the operating data and setup data addresses that correspond to the device variables for the CJ-series Unit.

Device Variables for the CJ-series Unit for Software Switches 3-2-2

These variables are used for outputs from the CPU Unit to the EtherNet/IP Unit.

Device variable name for CJ-series Unit	Data type	R/W	Meaning	Description
*_TDLStartCmd	BOOL	RW	Tag Data Link Start Bit	The tag data links start when this variable is changed to TRUE.
				FALSE: Tag data link operation has started.
				Default: FALSE
*_TDLStopCmd	BOOL	RW	Tag Data Link Stop Bit	The tag data links stop when this variable is changed to TRUE.
				FALSE: Tag data link operation has stopped.
				Default: FALSE
*_AdjTmCmd	BOOL	RW	Adjust Clock Bit	The clock is automatically adjusted when this variable is changed to TRUE.
				Default: FALSE

Tag Data Link Start Bit (*_TDLStartCmd)

Start the tag data links by changing this variable to TRUE. If the tag data links are already operating, the signal is ignored. The tag data links start operating automatically after the tag data link parameter settings are downloaded from the Network Configurator, the power to the Controller is turned ON, or the Unit is restarted.

If the Tag Data Link Stop Bit was changed to TRUE to stop the tag data links, you can restart the tag data links by changing the Tag Data Link Start Bit to TRUE.

After the tag data links start, the EtherNet/IP Unit automatically changes the Tag Data Link Start Bit to FALSE. Do not force this variable to FALSE. It is automatically changed to FALSE by the Unit.

Tag Data Link Stop Bit (*_TDLStopCmd)

Stop the tag data links by changing this variable to TRUE. After the tag data links stop, they will remain stopped until the Unit is restarted or the Tag Data Link Start Bit is changed to TRUE. (The tag data links will also start automatically when the tag data link parameter settings are downloaded from the Network Configurator.)

If the tag data links are already stopped, the signal will be ignored.

Message communications can be performed while the tag data links are stopped.

After the tag data links stop, the EtherNet/IP Unit automatically changes the Tag Data Link Stop Bit to FALSE. Do not force this variable to FALSE. It is automatically changed to FALSE by the Unit.

Adjust Clock Bit (*_AdjTmCmd)

Automatically adjust the time on the clock by changing this variable to TRUE. The SNTP server used to adjust the time is set in the Unit Setup.

After the clock time is adjusted, the EtherNet/IP Unit automatically changes the Adjust Clock Bit to FALSE. Do not force this variable to FALSE. It is automatically changed to FALSE by the Unit.

Device Variables for the CJ-series Unit for Status 3-2-3

These variables are used for inputs from the EtherNet/IP Unit to the CPU Unit.

Target PLC Information

This variable provides information on the target PLCs that are connected to the EtherNet/IP Unit when the EtherNet/IP Unit is the originator.



Additional Information

- · This status information is enabled when the Controller status is included in the communications data in both the originator and target node.
- This device variable for the CJ-series Unit provides information for only nodes 0 to 63.
- If it is necessary to get the error status of nodes higher than node 63, refer to 3-3 User Definition Settings for the Status Area.

Target Node PLC Operating Flags (EtherNet/IP Unit to CPU Unit) (*_TargetPLCMdSta [0] to [63])

This variable provides information on the target PLCs that are connected to the EtherNet/IP Unit when the EtherNet/IP Unit is the originator.

The information in this variable is valid only when the corresponding element in the Normal Target Node Table is TRUE.

If the corresponding element in the Normal Target Node Table is FALSE, the Target Node PLC Operating Flags the previous operating status.

Device variable name for CJ-series Unit	Data type	R/W	Meaning	Description
*_TargetPLCMdSta [0] to [63]	ARRAY [063] OF BOOL	R	Target Node PLC Operating Flags	TRUE: The target PLC is operating. FALSE: Other than the above. Default: 0000

Target Node PLC Error Flags (EtherNet/IP Unit to CPU Unit) (*_TargetPLCErrSta [0] to [63])

This variable indicates Controller errors (an OR of major faults, partial faults, and minor faults) in the target PLCs that are connected to the EtherNet/IP Unit when the EtherNet/IP Unit is the originator.

The information in this variable is valid only when the corresponding element in the Normal Target Node Table is TRUE.

If the corresponding element in the Normal Target Node Table is FALSE, the Target Node PLC Error Flags retains the previous operating status.

Device variable name for CJ-series Unit	Data type	R/W	Meaning	Description
*_TargetPLCErrSta [0] to [63]	ARRAY [063] OF BOOL	R	Target Node PLC Error Flags	TRUE: There is a major, partial, or minor fault in the CPU Unit of the corresponding target node. FALSE: Other than the above.

Unit Status Information

This variable gives the status of the EtherNet/IP Unit.

● Unit Status 1 (EtherNet/IP Unit to CPU Unit) (*_UnitSta1)

Device variable name for CJ- series Unit	Data type	R/W	Meaning		Description
*_UnitSta1	WORD	R	Unit Status 1	Bit 00: U	Init Error
				Bit 01: N	letwork Error
				Bit 04: U	Init Memory Error
				Bit 05: C	communications Controller Error
				Bit 06: IF	Address Duplication
				Bit 09: L	ink OFF Error
				Bit 14: S	tatus Area Layout Setting Error
*_UnitErr	BOOL	R	Unit Error Occurred	TRUE:	An error occurred in the operation of the EtherNet/IP Unit. This variable changes to TRUE when any of the following variables in Unit Status 1 changes to TRUE. (That is, it is an OR of the status of the following variables.) * NetEr
					_
					*_UnitMemErr * LANHwErr
					*_IPAdrDupErr
					* LkOffErr
					*_UserStaAreaCfgErr
				FALSE:	None of the above errors currently exists. (If any of the errors did occur, it has been cleared.)
				Default:	FALSE
*_NetErr	BOOL	R	Network Error Occurred	TRUE:	There is one or more network-related errors. (This is an OR of the Communications Status 1 and 3 variables.)
				FALSE:	None of the above errors currently exists. (If any of the errors did occur, it has been cleared.)
				Default:	FALSE
*_UnitMemErr	BOOL	R	Unit Memory Error	TRUE:	An error occurred in accessing the Unit's internal non-volatile memory (device error).
				FALSE:	A non-volatile memory error has not occurred. Once this error occurs, it is not cleared. (The variable remains TRUE.)
				Default:	FALSE
*_LANHwErr	BOOL	R	Communications Controller Error	TRUE:	An error occurred in the communications controller.
				FALSE:	A communications controller error has not occurred. This variable remains TRUE until the power supply is cycled.
				Default:	FALSE

Device variable name for CJ- series Unit	Data type	R/W	Meaning		Description
*_IPAdrDupErr	BOOL	R	IP Address Duplication Error	TRUE:	An ARP was sent with the specified IP address, indicating that an IP address duplication was detected. An address duplication is detected if there is an ARP response. If there is an ARP response, it is assumed that there is an address duplication. This variable changes to FALSE if the power is cycled, the Controller is reset, or the Ether-Net/IP Unit is restarted. (The Ethernet interface stops.)
				FALSE: Default:	Other than the above. FALSE
*_LkOffErr	BOOL	R	Link OFF Error	TRUE:	An error occurred in establishing a link with the Ethernet switch.
				FALSE:	A link was normally established with the Ethernet switch.
				Default:	FALSE
*_UserStaAreaCfgErr	BOOL	R	Status Area Layout Setting Error	TRUE:	There is an error in the layout settings for the allocated words in the CIO Area. In this case, operation uses the default layout of the allocated words in the CIO Area. However, if a word that does not exist is specified, the user-set pattern of the layout of the allocated words in the CIO Area is used for operation and the user settings area is not refreshed.
				FALSE:	for the allocated words in the CIO Area.
				Default:	FALSE

● Unit Status 2 (EtherNet/IP Unit to CPU Unit) (*_UnitSta2)

Device variable name for CJ- series Unit	Data type	R/W	Meaning	Description
*_UnitSta2	WORD	R	Unit Status 2	Bit 00: Online
				Bit 01: Tag Data Link in Operation
				Bit 02: Operating IP Address Change
				Bit 11: User Settings Area Enabled
				Bit 14: Multiple Switches ON Error
				Bit 15: Error Log Stored
*_ETNOnlineSta	BOOL	R	Online	TRUE: The Unit is online. (The EtherNet/IP Unit can perform communications processing.)
				FALSE: The Unit is not online. The EtherNet/IP Unit goes offline in the following cases:
				 IP Address Duplication Error
				 Ethernet Communications Controller Error (hardware error)
				 BOOTP Server Error

Device variable name for CJ-	Data	R/W	Meaning		Description
series Unit	type	11/ 44			<u> </u>
*_TDLOprSta	BOOL	R	Tag Data Link Operating	TRUE:	The tag data links are operating. This variable changes to TRUE in the following cases:
					 The EtherNet/IP Unit was set as an origi- nator and then the power was cycled, the Controller was reset, or the EtherNet/IP Unit was restarted.
					 The Unit is set as the originator and the Tag Data Link Start Bit was changed to TRUE.
				FALSE:	The tag data links are stopped. This variable changes to FALSE when communications stop in the following cases:
					 The tag Data Link Stop Bit was set to TRUE.
					Hardware error
					IP Address Duplication Error
					BOOTP Server Error
					 Basic Ethernet Settings Error
					Memory Error (MAC Address Error)
*_IPAdrChgErr	BOOL	R	Operating IP Address Change	TRUE:	The setting on the node address switches was changed during CPU Unit operation.
				FALSE:	The setting on the node address switches is the same as when CPU Unit operation started.
*_UserStaAreaEnblSta	BOOL	R	User Setting Area Enabled	TRUE:	The data in the user settings area is enabled. This variable changes to TRUE when the user settings are specified to use for the layout of the allocated words in the CIO Area and refreshing of the user settings area starts.
				FALSE:	The data in the user settings area is disabled. Communications stop in the following cases and this variable changes to FALSE.
					When the default layout is specified for the allocated words in the CIO Area
					When the user settings specified for the allocated words in the CIO Area and there is an error in the layout settings
*_MultiSwOnErr	BOOL	R	Multiple Switches ON Error	TRUE:	Two or more software switches where changed to TRUE simultaneously. (Unused software switches are ignored.)
				FALSE:	The next control operation started.
*_ErrLogStoreSta	BOOL	R	Error Log Stored	TRUE:	An error record was registered in the error log.
				FALSE:	There are no errors in the error log. This variable also changes to FALSE when an error log clear request is received.

Communications Status Information

The status of the tag data links and Ethernet is given in the following variables.

• Communications Status 1 (EtherNet/IP Unit to CPU Unit) (*_CommSta1)

The status of the tag data links is given in the following variable.

Device variable name for CJ- series Unit	Data type	R/W	Meaning	Description
*_CommSta1	WORD	R	Communications Sta-	Bit 00: Verification Error
			tus 1	Bit 02: Tag Data Link Error
				Bit 04: Invalid Communications Parameter
				Bit 05: Tag Refresh Error
				Bit 06: Tag Database Error
				Bit 14: All Tag Data Link Communications Status
				Bit 15: Tag Data Link Communications Status
*_TDLOpnErr	BOOL	R	Verification Error	TRUE: The information registered for a target node in the tag data link parameters is different from the actual node information. Main causes:
				 The specified target does not exist.
				The variable name does not match.
				The connection size is different.
				Connection resources are insufficient.
				FALSE: A verification error has not occurred. This variable also changed to FALSE when a verification error is cleared.
*_TDLErr	BOOL	R	Tag Data Link Error	TRUE: There were one or more errors in a connection as an originator. This status does not indicate the following errors.
				 Errors in connections as a target
				Connection timeout due to a Link OFF Error with the Ethernet switch
				FALSE: An error has not occurred in any connection as an originator.
*_CommParamErr	BOOL	R	Invalid Communications Parameter	TRUE: Changes to TRUE when there was an error in the validation check of tag data link parameters stored in the Unit's non-volatile memory, and a checksum error occurred. (Includes parameters related to basic Ethernet settings.) The tag data links will stop.
				FALSE: The validation check of parameters in non-volatile memory was normal.
*_TagRefreshErr	BOOL	R	Tag Refresh Error	TRUE: Changes to TRUE when a specified data area or address range is not supported in tag data links.
				FALSE: The specified data areas and addresses are supported in tag data links.
*_TagDbErr	BOOL	R	Tag Database Error	TRUE: A tag database error occurred in the CPU Unit when a variable name is used incor- rectly in a setting for the EtherNet/IP Unit (tag data link, status area allocations set- ting, etc.). (CJ2H-CPU6□-EIP or CJ2M- CPU3□ only)
				FALSE: Change to FALSE when a variable name is not used in a setting for the EtherNet/IP Unit, when a tag database error has not occurred, or when a previous error has been cleared.

Device variable name for CJ- series Unit	Data type	R/W	Meaning	Des	cription
*_TDLAllRunSta	BOOL	R	All Tag Data Links Operating	FRUE: Tag data links a nections as the	are communicating in all con-
				FALSE: A tag data link tions as the ori	failed in one or more connec- ginator.
				FALSE even if some tag	data links are communicat-
*_TDLRunSta	BOOL	R	Tag Data Links Operating	9	are communicating in one or ons as the originator.
					ag data link is communicating as the originator.
				FALSE even if the Unit is	s communicating as a target.)

Communications Status 2 (EtherNet/IP Unit to CPU Unit) (*_CommSta2)

The status of Ethernet is given in the following variable.

D	evice variable name for CJ- series Unit	Data type	R/W	Meaning	Description	
*_(CommSta2	WORD	R	Communications Sta-	Bit 00: F	TP Status
				tus 2	Bit 14: L	ink Status
	*_FTPSta	BOOL	R	FTP Status	TRUE:	The FTP server is operating (i.e., when there is an FTP client connection).
					FALSE:	The FTP is on standby (i.e., waiting for a client connection).
	*_LkSta	BOOL	R	Link Status	TRUE:	A link was established with the Ethernet switch.
					FALSE:	The link with the Ethernet switch was stopped.

• Communications Status 3 (EtherNet/IP Unit to CPU Unit) (*_CommSta3)

The error status of Ethernet is given in the following variable.

Device variable name for CJ- series Unit	Data type	R/W	Meaning	Description
*_CommSta3	WORD	R	Communications Sta-	Bit 02: Basic Ethernet Setting Error
			tus 3	Bit 03: IP Address Table Error
				Bit 04: IP Router Table Error
				Bit 05: DNS Server Error
				Bit 06: Routing Table Error
				Bit 09: Ethernet Advanced Setting Error
				Bit 10: BOOTP Server Error
				Bit 11: SNTP Server Error
				Bit 14: Address Mismatch
				Bit 15: Non-volatile Memory Error
*_ETNBaseSetErr	BOOL	R	Basic Ethernet Set- tings Error	TRUE: One of the following Ethernet settings is not correct.
				 TCP/IP settings (IP address, subnet mask, or link settings)
				FALSE: The settings are normal.
*_IPAdrTblErr	BOOL	R	IP Address Table Error	TRUE: The IP address table information is not correct.
				FALSE: The IP address table information is correct.
*_IPRouterTblErr	BOOL	R	IP Router Table Error	TRUE: The IP router table information is not correct.
				FALSE: The IP router table information is correct.

Device variable name for CJ- series Unit	Data type	R/W	Meaning		Description
*_DNSSvrErr	BOOL	R	DNS Server Error	TRUE:	The DNS client failed to connect to the DNS server (timeout).
				FALSE:	DNS is not set up. Or, DNS server information is set and the connection was successful.
*_RTblErr	BOOL	R	Routing Table Error	TRUE:	The routing table information is not correct.
				FALSE:	The routing table information is correct.
*_ETNAdvSetErr	BOOL	R	Ethernet Advanced Setting Error	TRUE:	One of the following Ethernet settings is not correct.
					FINS settings
				FALSE:	The settings are normal.
*_BootpSvrErr	BOOL	R	BOOTP Server Error	TRUE:	There was a failure to connect to the BOOTP server (timeout).
				FALSE:	The BOOTP is not set up, or the BOOTP server is set up and an IP address was normally obtained from the BOOTP server.
*_SNTPSvrErr	BOOL	R	SNTP Server Error	TRUE:	The SNTP client failed to connect to the server (timeout).
				FALSE:	SNTP is not set up or SNTP is set up and the connection was successful.
*_AdrMismatchErr	BOOL	R	Address Mismatch	TRUE:	The target IP address conversion method is set to Automatic generation, but the local IP address' host ID does not match the FINS node address.
				FALSE:	Other than the above setting status.
*_MemErr	BOOL	R	Non-volatile Memory Error	TRUE:	There is an error in the non-volatile memory in EtherNet/IP Unit.
				FALSE:	The non-volatile memory in EtherNet/IP Unit is normal.

Target Node Information

The following variables provide information on the target nodes that are connected to the EtherNet/IP Unit when the EtherNet/IP Unit is the originator.



Additional Information

These variables give the status of only nodes 0 to 63. If it is necessary to get the error status of nodes higher than node 63, refer to 3-3 User Definition Settings for the Status Area.

Registered Target Node Table (EtherNet/IP Unit to CPU Unit) (*_RegTargetSta [0] to [63])

This variable provides registration information on tag data links of the target nodes that are connected to the EtherNet/IP Unit when the EtherNet/IP Unit is the originator.

Device variable name for CJ- series Unit	Data type	R/W	Meaning		Description
*_RegTargetSta [0] to [63]	ARRAY [063]	R	Registered Target Node Table	TRUE:	Indicates that the node's tag data link is registered.
	OF BOOL			FALSE:	Indicates that the node's tag data link is not registered.

Normal Target Node Table (EtherNet/IP Unit to CPU Unit) (*_EstbTargetSta [0] to [63])

This variable shows the connection status of the target nodes that are connected with the Ether-Net/IP Unit as the originator. The elements of the array change to TRUE after all data for multiple connections for individual target devices is refreshed in the CPU Unit.

Device variable name for CJ- series Unit	Data type	R/W	Meaning		Description
*_EstbRegTargetSta [0] to [63]	ARRAY [063] OF	R	Normal Target Node Table	TRUE:	The connection for the corresponding node was established normally.
	BOOL			FALSE:	The connection for the corresponding node was not established normally.

3-2-4 **Device Variables for the CJ-series Unit for Setup**

IP Address Display/Setting Area (*_IPAdrCfg)

Use the following variable to check or set the IP address of the EtherNet/IP Unit.

	evice variable name for CJ- series Unit	Data type	R/W	Meaning	Description
*_	PAdrCfg	DWORD	RW	IP Address Dis- play/Setting Area	Default: 00000000
	*_IPAdr1Cfg	USINT	RW	IP Address 1	Part (1) of the IP Address of the EtherNet/IP Unit
	*_IPAdr2Cfg	USINT	RW	IP Address 2	Part (2) of the IP Address of the EtherNet/IP Unit
	*_IPAdr3Cfg	USINT	RW	IP Address 3	Part (3) of the IP Address of the EtherNet/IP Unit
	*_IPAdr4Cfg	USINT	RW	IP Address 4	Part (4) of the IP Address of the EtherNet/IP Unit

The IP address is stored as shown below.

Byte	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
First byte		(1)							(2)							
First byte + 1				(3	3)								(4)			

IP Address: (1).(2).(3).(4) (hex)

If the IP address is set to a value other than 0.0.0.0 in the TCP/IP Configuration, this area will act as an IP Address Display Area and the IP address set in the TCP/IP Configuration will be read and stored here when the power is turned ON or the Unit is restarted.

If the IP address in the TCP/IP Configuration is set to 0.0.0.0, this value is read by the EtherNet/IP Unit when the power is turned ON or the Unit is restarted and is used as the IP address.

If the IP address in these words and the TCP/IP Configuration are both set to 0.0.0.0, the default IP address (192.168.250.Node_address) will be used. For details on the IP address settings, refer to Section 4 Determining IP Addresses.



Precautions for Correct Use

- If the IP address is set to a value other than 0.0.0.0 in the TCP/IP Settings, that address is written to this variable even if you set the variable to a different IP address.
- It is not possible to set the following IP addresses.
 - IP addresses where all network number bits are 0 or 1.
 - IP addresses where all host number bits are 0 or 1.
 - IP addresses where all subnet number bits are 1.
 - IP addresses that start with 127 (7F hexadecimal, e.g., 127.35.21.16).

3-3 User Definition Settings for the Status Area

3-3-1 Introduction to User Definition Settings

If the EtherNet/IP Unit is the originator of a connection, you can store the corresponding target node status information in a user-defined variable instead of the default device variable for the CJ-series Unit.

Although the default device variable for CJ-series Unit provides information only for nodes 0 to 63, you can obtain the information for 256 nodes if you use user definition settings for an area.



Additional Information

The information in this variable is valid only when the corresponding element in the Normal Target Node Table is TRUE. If the corresponding element in the Normal Target Node Table is FALSE, the Target Node PLC Operating Flags retains the previous operating status.

3-3-2 Setting User Definitions

Use the following procedure to set the user-defined status area in the Special Unit Setup in the Controller Configurations and Setup.

1 Set the layout type in the Status Area Settings Tab Page to *User setting*.

2 For the allocated area, specify the variable to which to assign the status area.

3-3-3 Accessing the User-defined Status Area

In the user program, you can specify the user-defined variable that is specified for the status area to access the status area.

The user-defined variable that is specified for the status area is defined by using the preregistered data type for the user-defined status area (_sCJEIP21_User_StaArea).

To use this data type, you must make the following setting in advance in the Sysmac Studio to register the data type so that you can use it.

Right-click the Unit in the CPU/Expansion Racks Tab Page of the Controller Configurations and Setup, and then select *Register Data Types for Units* from the menu.

Data Type for the Status Area

Data Type for the Status Area (_sCJEIP21_User_StaArea)

The data type contains a different member for each type of status information.

Each member uses the data type for storing target node information (_uCJEIP21_TargetSta).

Structure data type name	Member	Data type
_sCJEIP21_User_StaArea	RegTargetSta (Registered Target Node Table)	_uCJEIP21_TargetSta
	EstbTargetSta (Normal Target Node Table)	_uCJEIP21_TargetSta
	TargetPLCMdSta (Target Node PLC Operating Flags)	_uCJEIP21_TargetSta
	TargetPLCErrSta (Target Node PLC Error Flags)	_uCJEIP21_TargetSta

Data Type for Storing Target Node Information (_uCJEIP21_TargetSta)

Information is stored for nodes 0 to 255.

This variable is a union, which allows access with different data types.

You can specify different data types to access the data: a BOOL array variable with 256 elements, 256 BOOL variables, or WORD variables.

Structure data type name	Member	Data type
_uCJEIP21_TargetSta	TargetSta	array[0255] of BOOL
	TargetStaWd	array[015] of WORD

3-3-4 Status Information Assigned to the User-defined Area

Registered Target Node Table (EtherNet/IP Unit to CPU Unit)

This variable gives the registration status of the target nodes. It is valid only when the EtherNet/IP Unit is the originator of the connection.

- x.RegTargetSta.TargetSta [0] to [255]
- x. RegTargetSta.TargetStaWd [0] to [15]
- x: The name of the user-defined variable that is specified for the status area in the user settings.

Bit	Meaning	Status	Manipulated by	Unit operation	Reference
	Registered Target Node Table	TRUE	EtherNet/IP Unit	The tag data links are registered.	3-2-3 Device Vari- ables for the CJ-
		FALSE	EtherNet/IP Unit	The tag data links are not registered.	series Unit for Status

Normal Target Node Table (EtherNet/IP Unit to CPU Unit)

This variable gives the connection status of the target nodes. The elements of this variable change to TRUE after all data for multiple connections for individual target devices is refreshed in the CPU Unit.

- x.EstbTargetSta.TargetSta [0] to [255]
- x. EstbTargetSta.TargetStaWd [0] to [15]
- x: The name of the user-defined variable that is specified for the status area in the user settings.

Bit	Meaning	Status	Manipulated by	Unit operation	Reference
	Normal Target Node Table	TRUE	EtherNet/IP Unit	The corresponding element changes to TRUE after all data for multiple connections for the target device is refreshed in the CPU Unit.	3-2-3 Device Vari- ables for the CJ- series Unit for Status
		FALSE	EtherNet/IP Unit	Other than the above.	

Target Node PLC Operating Flags (EtherNet/IP Unit to CPU Unit)

This variable gives the operating status of the target PLCs. It is valid only when the EtherNet/IP Unit is the originator. The elements of this variable are valid only when the corresponding elements in the Normal Target Node Table is TRUE. If the corresponding element in Normal Target Node Table is FALSE, the element in the Target Node PLC Operating Flags gives the previous operating status.

- x.TargetPLCMdSta.TargetSta [0] to [255]
- x. TargetPLCMdSta.TargetStaWd [0] to [15]
- x: The name of the user-defined variable that is specified for the status area in the user settings.

Bit	Meaning	Status	Manipulated by	Unit operation	Reference
	Target Node PLC Operating Flags	TRUE	EtherNet/IP Unit	The target PLC is operating.	3-2-3 Device Vari- ables for the CJ-
		FALSE	EtherNet/IP Unit	Other than the above.	series Unit for Status

Target Node PLC Error Flags (EtherNet/IP Unit to CPU Unit)

This variable indicates Controller errors (an OR of major faults, partial faults, and minor faults) in the target PLCs.

The elements of this variable are valid only when the corresponding elements in the Normal Target Node Table is TRUE. If the corresponding element in Normal Target Node Table is FALSE, the element in the Target Node PLC Error Flags indicates the previous error status.

- x.TargetPLCErrSta.TargetSta [0] to [255]
- x. TargetPLCErrSta.TargetStaWd [0] to [15]
- x: The name of the user-defined variable that is specified for the status area in the user settings.

Bit	Meaning	Status	Manipulated by	Unit operation	Reference
	Target Node PLC Error Flags	TRUE	EtherNet/IP Unit	A major fault, partial fault, or minor fault occurred in the corresponding PLC.	3-2-3 Device Vari- ables for the CJ-
		FALSE	EtherNet/IP Unit	Other than the above.	series Unit for Status


Determining IP Addresses

4-1	IP Add	resses	. 4-2
	4-1-1	IP Address Configuration	. 4-2
	4-1-2	Allocating IP Addresses	. 4-3
	4-1-3	Subnet Masks	. 4-3
	4-1-4	CIDR	. 4-3
4-2	Setting	the IP Address of the EtherNet/IP Unit	. 4-4
	4-2-1	Determining IP Addresses	. 4-4
	4-2-2	Setting IP Addresses	. 4-5
	4-2-3	Online Connection	. 4-7
4-3	Private	and Global Addresses	4-10
	4-3-1	Private and Global Addresses	4-10
	4-3-2	Using a Private Address for the EtherNet/IP Unit	4-11
	4-3-3	Using a Global Address for the EtherNet/IP Unit	4-12

IP Addresses

4-1-1 **IP Address Configuration**

IP addresses are made up of 32 bits of binary data that specify the network number (net ID) and host number (host ID). The network number identifies the network, and the host number identifies the node (or host) on the network. IP addresses are divided into three classes, A, B, and C, so that the address system can be selected according to the scale of the network. (Classes D and E are not used.)

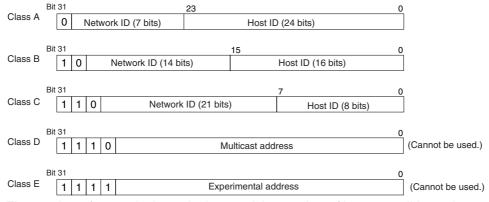

The number of networks in each class and the number of hosts possible on the network differ according to the class.

Class	Number of networks	Number of hosts
Class A	Small	2 ²⁴ – 2 max. (16,777,214 max.)
Class B	Medium	2 ¹⁶ – 2 max. (65,534 max.)
Class C	Large	28 – 2 max. (254 max.)

The 32 bits of binary data in an IP address are divided into four sections of eight bits each. IP addresses are represented by the decimal equivalent of each of the four octets in the 32-bit address, each separated by a period.

For example, the binary address 10000010 00111010 00010001 00100000 would be represented as 130.58.17.32.


4-1-2 Allocating IP Addresses

You must assign IP addresses nodes so that each IP address is assigned only once in the network or between several networks.

4-1-3 Subnet Masks

Operation and management of a network can become very difficult if too many nodes are connected on a single network. In such a case it can be helpful to configure the system so that a single network is divided up into several subnetworks. Internally the network can be treated as a number of subnetworks, but from the outside it acts as a single network and uses only a single network ID. To establish subnetworks, the host ID in the IP address is divided into a subnet ID and a host ID by using a setting called the subnet mask. The subnet mask indicates which part of the host ID is to be used as the subnet ID. All bits in the subnet mask that correspond to the bits in the IP address used either as the network ID or subnet ID are set to "1," and the remaining bits, which correspond to the bits in the IP address actually used for the host ID, are set to "0."

The following example shows the subnet mask for an 8-bit subnet ID used in class-B IP addresses.



Set the same subnet mask for all of the nodes on that subnetwork. The EtherNet/IP Unit supports CIDR (Classless Inter-Domain Routing). The subnet mask can be set to 192.0.0.0 to 255.255.252. If subnetworks are not used, set the following subnet mask values for IP address classes A to C.

Class	Subnet mask
Class A	255.0.0.0
Class B	255.255.0.0
Class C	255.255.255.0

4-1-4 CIDR

CIDR, or classless interdomain routing, is used to assign IP addresses that do not use classes. IP addresses that use classes are separated into blocks according to network IDs and host IDs, resulting in inefficient usage of IP address space. CIDR does not use classes, so IP address space can be divided as required to more efficiently use IP address space. For example, using a subnet mask setting with CIDR enables building a horizontally distributed network exceeding 254 nodes even if a class C address block (e.g., 192, 168...) is used.

Subnet Mask Range
192.0.0.0 to 255.255.255.252

Setting the IP Address of the 4-2 **EtherNet/IP Unit**

4-2-1 **Determining IP Addresses**

Use one of the following methods to set the IP address of the EtherNet/IP Unit.


Setting a User-specified IP Address

If you need to change the default IP address of the EtherNet/IP Unit or if you need to use the Ether-Net/IP Unit with another EtherNet/IP node, set the IP address to the required value.

Automatically Obtaining the IP Address from the BOOTP Server

There are two methods to automatically obtain an IP address.

- Obtain the IP address from the BOOTP server each time the power is turned ON.
- · Obtain the IP address from the BOOTP server once when the power is turned ON and then do not allow it to change.

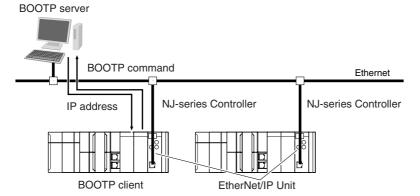


4-2-2 Setting IP Addresses

Use the Sysmac Studio to set the IP address of the EtherNet/IP Unit.

1 Select the setting method for IP addresses.

Set the IP address of the EtherNet/IP Unit in the Special Unit Setup that is registered in the Unit Configuration of the Sysmac Studio.

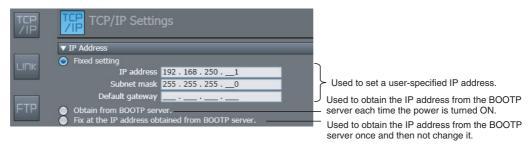

Refer to 5-2 TCP/IP Settings Display for details.

- Connect the Sysmac Studio to the NJ-series CPU Unit via a USB connection or the Ethernet network.
- **3** Connect the Sysmac Studio online to the NJ-series CPU Unit. Refer to *4-2-3 Online Connection* for the procedure to connect online.
- **4** Use one of the following methods to download the IP addresses that were set on the Sysmac Studio to the NJ-series CPU Unit.
 - Go online with the Controller, and then select *Synchronization* from the Controller Menu. The data on the computer and the data in the physical Controller are compared automatically.
 - Click the Transfer to Controller Button.

Note Use the Synchronization Menu of the Sysmac Studio to upload and download data.

- **5** Restart the EtherNet/IP Unit.
 - Click the **Restart** Button in the Edit Special Unit Setup Dialog Box.
- **6** When the EtherNet/IP Unit restarts, check the status of the 7-segment display on the EtherNet/IP Unit.

If the 7-segment display goes out, goes through the test sequence, and then displays the IP address, the EtherNet/IP Unit has recognized the new TCP/IP settings (the IP address in this case).

7 IP address is reflected in the EtherNet/IP Unit as follows:

Setting a User-specified IP Address

After the IP address settings are downloaded, the set IP address is automatically saved in the EtherNet/IP Unit.

Obtaining the IP Address from the BOOTP Server Each Time the Power Is Turned ON

After the data is downloaded, the IP address that was obtained from the BOOTP server is automatically saved in the EtherNet/IP Unit. Each time the power supply is turned ON, the IP address from the BOOTP server is automatically saved in the EtherNet/IP Unit.



Additional Information

If you cannot obtain the IP address from the BOOTP server or the obtained IP address is not correct, select the Fixed setting Option in the IP Address Area and manually set the IP address, subnet mask, and default gateway. Requests to the BOOTP server to obtain the IP address will continue if there is a failure to connect to the BOOTP server.

Obtaining the IP Address from the BOOTP Server Once When the Power Is Turned ON and Then Not Allow It to Change

After the I/O address is downloaded, the IP address from the BOOTP server is automatically saved in the EtherNet/IP Unit and then the same address is used.



Additional Information

- The TCP/IP Settings Display is not updated even if the IP address is obtained normally from the BOOTP server. To check the IP address that was obtained from the BOOTP server on the TCP/IP Display, upload the project from the NJ-series Controller.
- If the Controller power supply is turned ON when the IP address was not normally obtained from the BOOTP server, the setting remains at the default setting (i.e., at a fixed setting).
- · After the IP address is obtained from the BOOTP server, the EtherNet/IP Unit IP address setting is automatically set to Fixed setting.


4-2-3 Online Connection

Connect the Sysmac Studio online to the NJ-series CPU Unit.


Types of Connections between the CPU Unit and Computer That Runs the Sysmac Studio

The CPU Unit and the computer that runs Sysmac Studio are connected as shown below via USB or Ethernet:

USB Connection

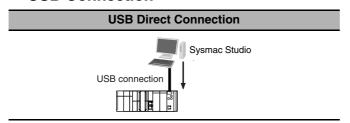

Ethernet Connection

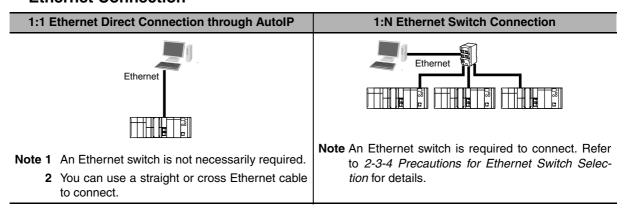



Precautions for Correct Use

You cannot place the Sysmac Studio online with an NJ-series CPU Unit if you connect through an EtherNet/IP Unit.

Connection from USB Across Ethernet

1:N USB Remote Connection USB Ethernet

Note An Ethernet switch is required to connect. Refer to 2-3-4 Precautions for Ethernet Switch Selection for details.



Additional Information

Auto IP automatically assigns IP addresses in Windows 98 and later operating systems. Unique IP addresses are automatically assigned from the address 169.254.0.0 to 169.254.255.255.



Precautions for Correct Use

If there is more than one node with the same IP address in the EtherNet/IP network, the Ether-Net/IP Unit will connect to the node that it detects first. An IP Address Duplication Error will not occur.


Online Connection Procedure

Connect the CPU Unit and the computer that runs the Sysmac Studio via USB or Ethernet, and then perform the following procedure.

Select Controller - Communications Setup and click the OK Button in the Sysmac Studio Project Window.


1:1 Connection

Direct Connection

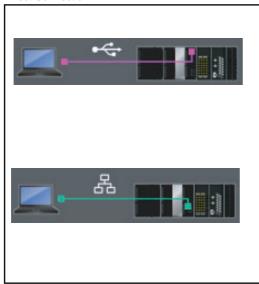

1:N Connection

EtherNet/IP Connection

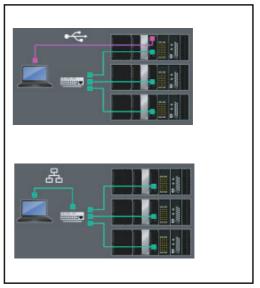



Precautions for Correct Use

- If the IP address is duplicated or not set correctly, communications are not possible via the EtherNet/IP network.
- The IP address range shown below is used by the system and cannot be specified. 169.254.0.0 to 169.254.255.255 192.168.255.0 to 192.168.255.255
- Due to Ethernet restrictions, you cannot specify the IP addresses that are described below.
 - An IP address that is all 0's or all 1's
 - IP addresses that start with 127, 0, or 255 (decimal)
 - An IP address with a host ID that is all 0's or all 1's
 - . An IP address with a network ID that is all 0's or all 1's
 - Class-D IP addresses (224.0.0.0 to 239.255.255.255)
 - Class-E IP addresses (240.0.0.0 to 255.255.255.255)

Connecting from a Saved Project

The connection configuration that is set (USB or EtherNet/IP) is saved in the project. (The file is xxx.smc.) If you open a saved project on the Sysmac Studio, you can connect to the EtherNet/IP network without redoing the settings.

Checking the Current IP Address

You can use the following device variable for the CJ-series Unit to check the IP address that is set for the EtherNet/IP Unit.

	Device variable name for CJ- series Unit	Data type	R/W	Meaning	Description
*_IPAdrCfg		DWORD	RW	IP address dis- play/setting area	Default: 00000000
	*_IPAdr1Cfg	USINT	RW	IP Address 1	Part (1) of the IP Address of the EtherNet/IP Unit
	*_IPAdr2Cfg	USINT	RW	IP Address 2	Part (2) of the IP Address of the EtherNet/IP Unit
	*_IPAdr3Cfg	USINT	RW	IP Address 3	Part (3) of the IP Address of the EtherNet/IP Unit
	*_IPAdr4Cfg	USINT	RW	IP Address 4	Part (4) of the IP Address of the EtherNet/IP Unit

The IP address is stored as shown below.

Byte	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
First byte				(1	1)								(2)			
First byte + 1				(3	3)								(4)			

IP Address: (1).(2).(3).(4) (hex)


Private and Global Addresses

4-3-1 **Private and Global Addresses**


There are two kinds of IP addresses, private and global.

IP address	Description
Global address	These are IP addresses that connect directly to the Internet. Allocated by application to NIC, each address is unique in the world, and as many as 4.3 billion can be allocated worldwide.
Private address	These are IP addresses for Intranet (LAN) use. Direct connection to the Internet is not possible. Frames that include private IP addresses are restricted by the router from being sent outside the LAN.

Generally, as shown below, global addresses in the intranet are allocated only to IP routers (such as broadband routers) interfaced with the Internet. All other nodes in the intranet, which includes the EtherNet/IP Unit, are allocated private addresses.

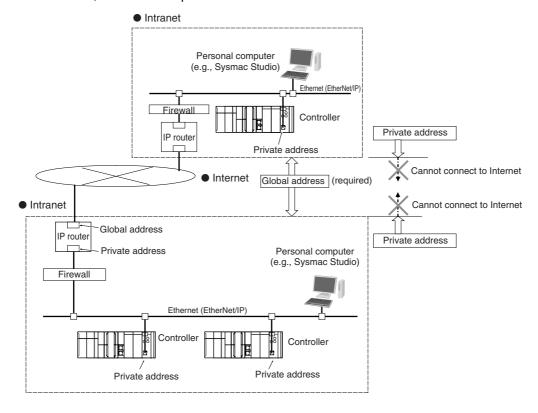

4-3-2 Using a Private Address for the EtherNet/IP Unit

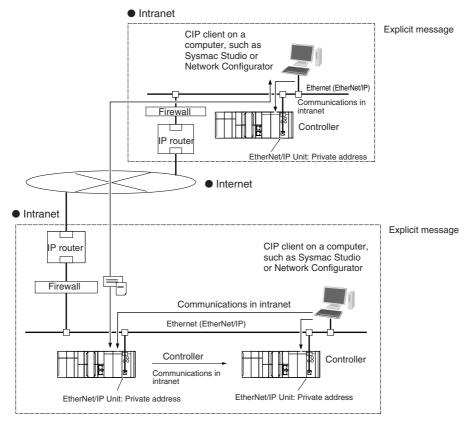

• Conditions for Communications Applications

If the EtherNet/IP Unit uses a private address, you can use explicit message communications service under the following conditions.

- The explicit message communications service can be executed on the intranet between Ether-Net/IP Units with private addresses only.
- A device such as a personal computer (CIP applications including the Network Configurator) cannot connect online and communicate over the Internet with an EtherNet/IP Unit that has a private address. Explicit message communications are also not possible over the Internet between EtherNet/IP Units with private addresses.




Precautions for Correct Use

Network Security and Firewalls

To set up an intranet through a global address involves network security considerations. Be sure to consult with a network specialist in advance and consider installation of a firewall. After a firewall has been set up by a communications company technician, there may be some applications that cannot be used. Be sure to check first with the communications company technician.

Using a Global Address for the EtherNet/IP Unit 4-3-3

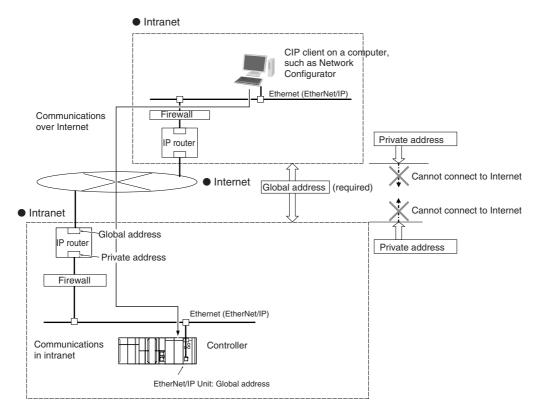

Conditions for Communications Applications

You can use the explicit message communications service over the Internet under the following conditions.

- A device such as a personal computer (a CIP application including the Network Configurator) can connect online and communicate over the Internet with an EtherNet/IP Unit that has a global address.
- The TCP port number (44818) or UDP port number (44818) that is used for EtherNet/IP cannot be used because it is prohibited by a firewall in the communications path.



Precautions for Correct Use

Network Security and Firewalls

To set a global IP address for an EtherNet/IP Unit involves network security considerations. It is recommended that the user contract with a communications company for a dedicated line, rather than for a general line such as a broadband line. Also, be sure to consult with a network specialist and consider security measures such as a firewall. After a firewall has been set up by a communications technician, there may be some applications that cannot be used. Be sure to check first with the communications technician.



Sysmac Studio Settings for the EtherNet/IP Unit

5-1	Unit Se	ttings for the EtherNet/IP Unit	5-2
	5-1-1	Updating the Unit Settings	. 5-2
	5-1-2	Restoring the Default Unit Settings	. 5-2
5-2	TCP/IP	Settings Display	5-3
5-3	Link Se	ettings Display	5-5
5-4	FTP Se	ttings Display	5-6
5-5	SNTP S	Settings Display	5-7
5-6	SNMP	Settings Display	5-9
5-7	SNMP	Trap Settings Display	5-11
5-8	Status	Area Settings Display	5-13

Unit Settings for the EtherNet/IP Unit **5-1**

Set up the EtherNet/IP Unit on the Edit Special Unit Settings Tab Page on the Sysmac Studio.

5-1-1 Updating the Unit Settings

To update the Unit settings in the EtherNet/IP Unit, first transfer them from the Sysmac Studio to the CPU Unit and then perform one of the following methods.

As a result, the Unit settings are transferred from the CPU Unit to the EtherNet/IP Unit.

Resetting the Controller

When you reset the Controller, the Unit settings are transferred from the CPU Unit to the EtherNet/IP Unit when the CPU Unit restarts.

Restarting the EtherNet/IP Unit

When you restart the EtherNet/IP Unit with one of the following methods, the Unit settings are transferred from the CPU Unit to the EtherNet/IP Unit.


- Click the Restart Button in the Edit Special Unit Settings Tab Page.
- Change the Restart Flag (_CJB_CBU**Restart) in the system-defined variables for the Ether-Net/IP Unit to TRUE.

5-1-2 **Restoring the Default Unit Settings**

You can restore the Unit settings to their default values.

Click the Restart Button in the Edit Special Unit Settings Tab Page, set the restart type for the Ether-Net/IP Unit to Reset all to default, and then restart the EtherNet/IP Unit.

5-2 TCP/IP Settings Display

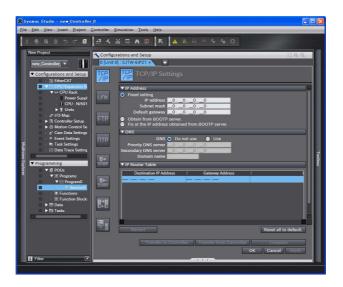

IP Address

Setting	Description	Default
IP address setting method	Select one of the following IP address setting methods for the EtherNet/IP Unit.*1	Fixed setting
	Fixed setting	
	Obtain from BOOTP server	
	Fix at the IP address obtained from BOOTP server	
IP Address *2	Set the IP address for the EtherNet/IP Unit.	None *3
Subnet mask *2	Set the subnet mask for the EtherNet/IP Unit.	None
Default gateway *4	Set the IP address of the default gateway for the EtherNet/IP Unit.	None
	This setting is not required when a default gateway is not used.	

^{*1} For details on setting IP addresses, refer to 4-2 Setting the IP Address of the EtherNet/IP Unit.

^{*2} These settings are required if you select *Fixed setting*.

^{*3} The node address that is set on the rotary switches on the front panel of the EtherNet/IP Unit is set as the default

^{*4} This setting is valid if you set IP address setting method to Fixed setting.

DNS

Setting	Description	Default
DNS	Enable using DNS if a DNS is used to resolve host names when host names are specified for the remote communications nodes in CIP communications and socket instructions.	Do not use.
	A DNS server is required to use DNS.	
Priority DNS server *1*2	Set the IP address of the DNS server.	None
Secondary DNS server	You can set priority and secondary IP addresses.	None
Domain name*1	Sets the name of the domain to which the EtherNet/IP Unit belongs.	None
	The EtherNet/IP Unit does not use the domain name in actual communications.	
	(Single-byte alphanumeric characters, dots, and hyphens: 48 characters max.)	

^{*1} These settings are required when DNS is used.

- *2 Due to Ethernet restrictions, you cannot specify the IP addresses that are described below.
 - IP addresses that start with 127, 0, or 255 (decimal)
 - Class-D IP addresses (224.0.0.0 to 239.255.255.255)
 - Class-E IP addresses (240.0.0.0 to 255.255.255.255)

IP Router Table


Setting	Description	Default
Destination IP address	Set these settings when the EtherNet/IP Unit communicates with nodes on	None
Gateway address	other IP network segments via an IP router.	None
	You can set up to eight combinations of IP addresses and gateway addresses.	
	Specify 0 for the host portions of the IP addresses.	
	Refer to the following section for a setting example for the IP router table.	




Additional Information

IP Router Table Setting Example

Set the following IP router table in node A to use tag data links or CIP message communications between node A and node B through the IP router. When you set the IP router table, node A sends packets to the gateway IP address (130.25.36.253) if communications instructions are executed on node A and addressed to node B.

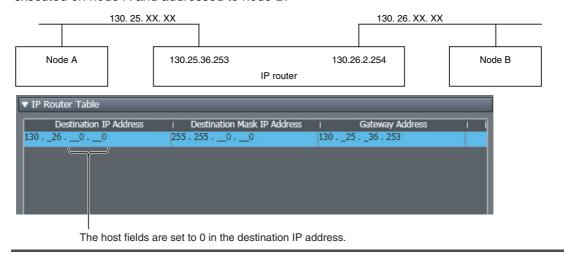


5-3 Link Settings Display

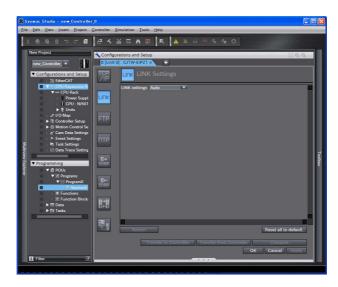

Setting	Description	Default
LINK settings	Set the baud rate for the EtherNet/IP Unit.	Auto
	• Auto	
	10 Mbps Half Duplex	
	• 10 Mbps Full Duplex	
	• 100 Mbps Half Duplex	
	• 100 Mbps Full Duplex	

5-4 FTP Settings Display

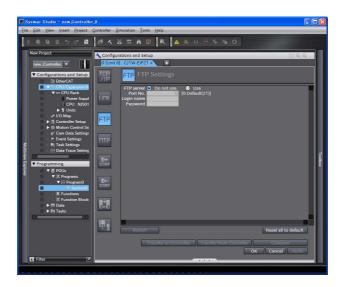

Setting	Description	Default
FTP server	Specify whether to use the FTP server.	Do not use.
	FTP connections from external devices will not be possible if the <i>Do not use</i> Option is selected.	
Port No. *1*2	Set the FTP port number of the EtherNet/IP Unit. It is normally not necessary to change this setting.	0 (port No. 21)
	The port number that is one less than the specified port number is used for data transfer.	
Login name *1	Set the login name to externally connect to the EtherNet/ IP Unit via FTP.	None
	(You can use up to 12 alphanumeric characters.) *3	
Password *1	Set the password to externally connect to the EtherNet/IP Unit via FTP. (You	None
	can use up to 8 alphanumeric characters.) *3	

^{*1} These settings are required to use the FTP server.

^{*3} The login name and password are case sensitive.




Additional Information

Refer to Section 9 FTP Server for details on the FTP server.

^{*2} The following ports are used by the system and cannot be set by the user: 9600 and 44818.

5-5 SNTP Settings Display

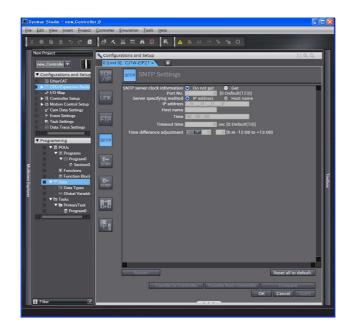

Setting	Description	Default
SNTP server clock information	Specify whether to get the clock information from the SNTP server and use it to update the clock time in the CPU Unit.	Do not get.
Port No. *1*2	Set the port number to use to connect to the SNTP server to obtain clock information. It is normally not necessary to change this setting.	0 (port No. 123)
Server specifying method *1	Set the method to use to specify the SNTP server to obtain clock information.	IP address
	IP address	
	Host name	
IP address *3	Set the IP address of the SNTP server.	None
	(Set this setting if the server specifying method is set to the <i>IP address</i> Option.)	
Host name	Set the host name of the SNTP server (i.e., the domain name of the host).	None
	(Set this setting if server specifying method is set to the <i>Host name</i> Option.)	
	(You can use up to 200 single-byte alphanumeric characters, dots, and hyphens with up to 63 single-byte alphanumeric characters between dots.)	
Time	Set the time at which the SNTP server is accessed to synchronize the clock.	00:00:00
[hours:minutes:seconds]	(Setting range: 00:00:00 to 23:59:59)	
Timeout time (seconds) *1	Set the timeout detection time.	0 (10 s)
	(Setting range: 1 to 255 seconds)	
	If the remote host does not respond, retry processing is performed four times within the time interval that is set here.	
Time difference adjustment	Set the time to offset the clock in the CPU Unit when setting the clock in the CPU Unit to the time obtained from the SNTP server. To use the time from the SNTP server as is, enter 0 for the time difference adjustment.	+0: 0 (h: m)

^{*1} These settings are required to get the clock information from the SNTP server.

- IP addresses that start with 127, 0, or 255 (decimal)
- Class-D IP addresses (224.0.0.0 to 239.255.255.255)
- Class-E IP addresses (240.0.0.0 to 255.255.255.255)

^{*2} The following ports are used by the system and cannot be set by the user: 53, 68, 161, 162, 2222, 9600, and 44818.


^{*3} Due to Ethernet restrictions, you cannot specify the IP addresses that are described below.



Additional Information

Refer to Section 10 Automatic Clock Adjustment for details on obtaining clock information from the SNTP server.

5-6 SNMP Settings Display

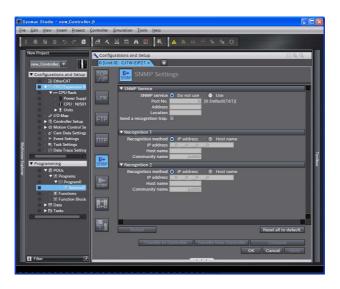

SNMP Service

Setting	Description	Default
SNMP Service	Specify whether to use the SNMP monitor service.	Do not use.
	If not using the SNMP monitor service is specified, an SNMP manager cannot connect from an external device.	
Port No. *	Set the port number to use to connect to the SNMP server that is used to connect from an SNMP manager.	0 (port No. 161)
	It is normally not necessary to change this setting.	
Address	Set the communications device administrator name and installation location as text information. You do not necessarily have to input all items. This information is read by	Do not use. 0 (port No. 161) None None Not selected. (Not used.)
Location	the SNMP manager. (You can input up to 200 alphanumeric characters for each item.)	None
Send a recognition trap	Set whether to send an authentication trap.	None Not selected. (Not
	If you select <i>Send a recognition trap</i> and there is access from an SNMP manager that is not set in Recognition 1 or Recognition 2, an authentication trap is sent to the SNMP manager.	used.)
	If you select <i>Send a recognition trap</i> , specify the SNMP trap settings on the SNMP Trap Tab Page.	

^{*} The following ports are used by the system and cannot be set by the user: 53, 68, 123, 162, 2222, 9600, and 44818.



Additional Information

Refer to Section 11 SNMP Agent for details on the SNMP service.

● Recognition 1 *1

Setting	Description	Default
Recognition method	Set the method to use to specify SNMP managers for which access is permitted.	IP address
	IP address	
	Host name	
	Make these settings to permit access by only certain SNMP managers.	
	Access is not allowed unless an IP address or host name is set.	
IP address *2	Set the IP address of the SNMP manager.	0.0.0.0
	If the default setting of 0.0.0.0 is used, access is permitted from all SNMP managers.	
	(Set this setting if the recognition method in the recognition 1 settings is set to the <i>IP address</i> Option.)	
Host name	Set the host name of the SNMP manager.	None
	(Set this setting if the recognition method in the recognition 1 settings is set to the <i>Host name</i> Option.)	
	(You can use up to 200 single-byte alphanumeric characters, dots, and hyphens with up to 63 single-byte alphanumeric characters between dots.)	
Community name	Set the community name to enable the SNMP manager to access information from the EtherNet/IP Unit.	public
	(Single-byte alphanumeric characters, dots, and hyphens: 200 characters max.)	

■ Recognition 2 *2


Setting	Setting Description	
Recognition method	Set the method to use to specify SNMP managers for which access is permitted.	IP address
	IP address	
	Host name	
	Make these settings to permit access by only certain SNMP managers.	
	Access is not allowed unless an IP address or host name is set.	
IP address *2	Set the IP address of the SNMP manager.	0.0.0.0
	If the default setting of 0.0.0.0 is used, access is permitted from all SNMP managers.	
	(Set this setting if the recognition method in the recognition 2 settings is set to the <i>IP address</i> Option.)	
Host name	Set the host name of the SNMP manager.	None
	(Set this setting if the recognition method in the recognition 2 settings is set to the <i>Host name</i> Option.)	
	(You can use up to 200 single-byte alphanumeric characters, dots, and hyphens with up to 63 single-byte alphanumeric characters between dots.)	
Community name	Set the community name to enable the SNMP manager to access information from the EtherNet/IP Unit.	public
	(Single-byte alphanumeric characters, dots, and hyphens: 200 characters max.)	

^{*1} These settings are required if the SNMP service is enabled.

- IP addresses that start with 127, 0, or 255 (decimal)
- Class-D IP addresses (224.0.0.0 to 239.255.255.255)
- Class-E IP addresses (240.0.0.0 to 255.255.255.255)

^{*2} Due to Ethernet restrictions, you cannot specify the IP addresses that are described below.

5-7 SNMP Trap Settings Display

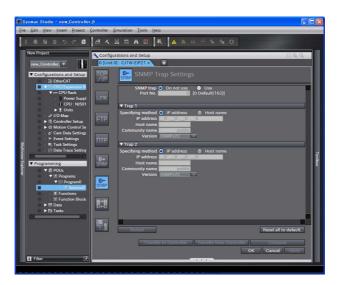

SNMP Trap

Setting	Description	Default
SNMP trap	Specify whether to use the SNMP trap (network error detection).	Do not use.
	If the SNMP trap service is not enabled, SNMP traps are not sent to the SNMP manager.	
Port No. *1	Set the port number to use to connect to the SNMP server.	0 (port No. 162)
	It is normally not necessary to change this setting.	

^{*1} The following ports are used by the system and cannot be set by the user: 53, 68, 123, 161, 2222, 9600, and 44818.



Additional Information

Refer to 11-1-1 Overview for details on the SNMP trap.

• Trap 1 *1

Setting	Setting Description	
Specifying method	Set the specifying method for the SNMP manager destination for SNMP traps.	IP address
	• IP address	
	Host name	
IP address *2	Set the IP address of the SNMP manager.	0.0.0.0
	(Set this setting if the specifying method in the trap 1 settings is set to the <i>IP address</i> Option.)	
Host name	Set the host name of the SNMP manager.	None
	(Set this setting if the specifying method in the trap 1 settings is set to the <i>Host name</i> Option.)	
	(You can use up to 200 single-byte alphanumeric characters, dots, and hyphens with up to 63 single-byte alphanumeric characters between dots.)	
Community name	Set the community name.	public
	(You can use up to 200 alphanumeric characters.)	
Version	Set the version of the SNMP manager.	SNMPv2C
	• SNMPv1	
	• SNMPv2C	

• Trap 2 *1


Setting Description		Default
Specifying method	Set the specifying method for the SNMP manager destination for SNMP traps.	IP address
	• IP address	
	Host name	
IP address *2	Set the IP address of the SNMP manager.	0.0.0.0
	(Set this setting if the specifying method in the trap 2 settings is set to the <i>IP</i> address Option.)	
Host name	Set the host name of the SNMP manager.	None
	(Set this setting if the specifying method in the trap 2 settings is set to the <i>Host name</i> Option.)	
	(You can use up to 200 single-byte alphanumeric characters, dots, and hyphens with up to 63 single-byte alphanumeric characters between dots.)	
Community name	Set the community name.	public
	(You can use up to 200 alphanumeric characters.)	
Version	Set the version of the SNMP manager.	SNMPv2C
	• SNMPv1	
	• SNMPv2C	

^{*1} These settings are required if the SNMP trap is set is enabled.

- IP addresses that start with 127, 0, or 255 (decimal)
- Class-D IP addresses (224.0.0.0 to 239.255.255.255)
- Class-E IP addresses (240.0.0.0 to 255.255.255.255)

^{*2} Due to Ethernet restrictions, you cannot specify the IP addresses that are described below.

5-8 Status Area Settings Display

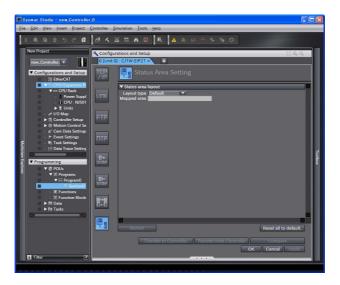

Status Area Layout

Setting	Description			
Layout Type	Layout Type Select the variables in which to store the status information on the target nodes that are connected to the EtherNet/IP Unit when the EtherNet/IP Unit is the originator.			
	Default The following device variables for the CJ-series Unit are used. *_TargetPLCMdSta (Target Node PLC Operating Flags) *_TargetPLCErrSta (Target Node PLC Error Flags) *_RegTargetSta (Registered Target Node Table) *_EstbTargetSta (Normal Target Node Table) User Setting Select this setting to store the status information in a user-defined variable.			
Mapped area	If the <i>Layout Type</i> is set to <i>User Definition</i> , enter the name of the user-defined variable in which to store the status information on the target nodes.	None		



Testing Communications


3-1	Testing	Communications	6-2
	6-1-1	PING Command	6-2
	6-1-2	Using the PING Command with the EtherNet/IP Unit	6-2
	6-1-3	Host Computer Operation	6-3

Testing Communications 6-1

If the basic settings (in particular the IP address and subnet mask) have been made correctly for the EtherNet/IP Unit, then it is possible to communicate with nodes on the EtherNet/IP network. This section describes how to use the PING command to test communications with the EtherNet/IP Unit.

6-1-1 **PING Command**

The PING command sends an echo request packet to a remote node and receives an echo response packet to confirm that the remote node communications are normal. The PING command uses the ICMP echo request and responses. The echo response packet is automatically returned in the ICMP. The PING command is normally used to check the connections of remote nodes when you set up a network. The EtherNet/IP Unit supports both the ICMP echo request and response functions. If the remote node returns a normal response to the PING command, then the nodes are physically connected correctly and Ethernet node settings are correct.

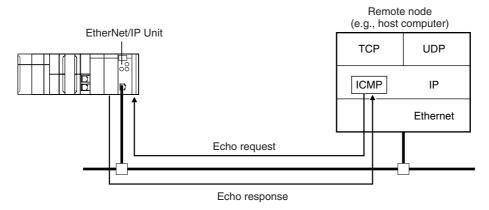

6-1-2 Using the PING Command with the EtherNet/IP Unit

The EtherNet/IP Unit automatically returns the echo response packet in response to an echo request packet sent by another node (e.g., host computer).

6-1-3 Host Computer Operation

The PING command can be executed from the host computer to send an echo request packet to an EtherNet/IP Unit. The following example shows how to use the PING command in the host computer.

Application Method

Input the following command at the host computer's prompt (\$):

```
$ ping IP_address (host_name)
```

The destination is specified by its IP address or host name.



Additional Information

The PING command is not supported by some host computers.

Application Example

In this example, a PING command is sent to the node at IP address 130.25.36.8. The "\$" in the example represents the host computer prompt.

Normal Execution

```
$ ping 130.25.36.8

PING 130.25.36.8: 56 data bytes

64 bytes from 130.25.36.8: icmp_seq=0. time=0. ms

64 bytes from 130.25.36.8: icmp_seq=0. time=0. ms

∴ ∴ ∴ ∴ ∴ ∴

64 bytes from 130.25.36.8: icmp_seq=0. time=0. ms

← Press the Ctrl+C Keys to cancel execution.

---- 130.25.36.8 PING Statistics ----

9 packets transmitted, 9 packets received, 0% packets loss

round-trip (ms) min/avg/max = 0/1/16

$
```

Error

```
$ ping 130.25.36.8

PING 130.25.36.8: 56 data bytes

---- 130.25.36.8 PING Statistics ----
9 packets transmitted, 0 packets received, 100% packets loss

$ Executes the PING command.

Press the Ctrl+C Keys to cancel execution.
```

Refer to the command reference manual for your computer's OS for details on using the PING command.



Tag Data Link Functions

7-1	Introdu	uction to Tag Data Links	-2
	7-1-1	Tag Data Links	'-2
	7-1-2	Data Link Data Areas	'-3
	7-1-3	Tag Data Link Functions and Specifications	'-6
	7-1-4	Overview of Operation	'- 7
	7-1-5	Starting and Stopping Tag Data Links	10
	7-1-6	Controller Status	10
	7-1-7	Concurrency of Tag Data Link Data 7-	12
7-2	Setting	ן Tag Data Links	16
	7-2-1	Starting the Network Configurator	16
	7-2-2	Tag Data Link Setting Procedure	18
	7-2-3	Registering Devices	19
	7-2-4	Creating Tags and Tag Sets	21
	7-2-5	Connection Settings	32
	7-2-6	Creating Connections Using the Wizard	42
	7-2-7	Creating Connections by Device Dragging and Dropping	44
	7-2-8	Connecting the Network Configurator to the Network	48
	7-2-9	Downloading Tag Data Link Parameters	51
	7-2-10	Uploading Tag Data Link Parameters	54
	7-2-11	Verifying the Tag Data Links 7-	57
	7-2-12	Starting and Stopping Tag Data Links	61
	7-2-13	Clearing the Device Parameters	63
	7-2-14	Saving the Network Configuration File	64
	7-2-15	Reading a Network Configuration File	66
	7-2-16	Checking Connections	67
	7-2-17	Changing Devices	
	7-2-18	Displaying Device Status	70
7-3	Ladder	Programming for Tag Data Links	71
	7-3-1	Ladder Programming for Tag Data Links	71
	7-3-2	Status Flags Related to Tag Data Links	75
7-4	Tag Da	ta Links with Models Other than NJ-Series CPU Units 7-7	76
7-5	QuickC	Connect	78

Introduction to Tag Data Links

7-1-1 Tag Data Links


Tag data links enable cyclic tag data exchanges on an EtherNet/IP network between Controllers or between Controllers and other devices. Variables are assigned to tags. (You can also assign I/O memory addresses to tags.) The settings for tag data links are made with the Network Configurator. Refer to 7-2 Setting Tag Data Links for information on how to make the settings.



Additional Information

You can also use the Sysmac Studio to set the tag data links. Refer to A-2 Use the Sysmac Studio to Set the Tag Data Links (EtherNet/IP Connections) for details on setting the tag data links in the Sysmac Studio.

With a tag data link, one node requests the connection of a communications line to exchange data with another node. The node that requests the connection is called the originator, and the node that receives the request is called the target.

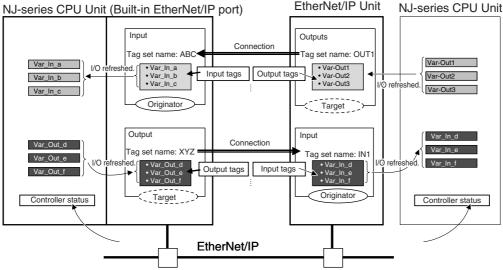

For communications between Controllers, the connection information is set in the EtherNet/IP Unit of the Controller that receives (consumes) the data (i.e., the originator).



Additional Information

For communications between a Controller and an I/O device, the connection information is set in the EtherNet/IP Unit that is the originator. If an I/O device is used, the Network Configurator must have an EDS file installed that includes connection information for the I/O device. Refer to A-3 EDS File Management for the installation procedure.

The output words and input words for each node for which data is exchanged are set in the connection information. These words are called the output tag set and input tag set. A tag set must specify at least one tag. The size of the data for data exchange is the total size of the tags included in the tag set. The size of the output tag set and the size of the input tag set must match.

7-1-2 Data Link Data Areas

Tags

A tag is a unit that is used to exchange data with tag data links. Data is exchanged between the local network variables and remote network variables specified in the tags or between specified I/O memory areas.



Precautions for Correct Use

To maintain concurrency in the values of network variables that are assigned to tags, you must set refreshing tasks. Refer to 7-1-7 Concurrency of Tag Data Link Data for details.

Tag Sets

When a connection is established, from 1 to 8 tags (including Controller status) is configured as a tag set. Each tag set represents the data that is linked for a tag data link connection. Tag data links are therefore created through a connection between one tag set and another tag set. A tag set name must be set for each tag set.

Data for the tags is exchanged in the order that the tags are registered in the tag sets. Register the tags in the same order in the input and output tag sets.

Note A connection is used to exchange data as a unit within which data concurrency is maintained. Thus, data concurrency is maintained for all the data exchanged for the tags in one data set.




Precautions for Correct Use

Data for the tags is exchanged in the order that the tags are registered in the tag sets. Register the tags in the same order in the input and output tag sets.

Example

In the following example, input tags a to g at the originator are a tag set named SP1_IN and output tags *i* and *ii* are a tag set named *SP1_OUT*. A connection is set between these two tag sets.

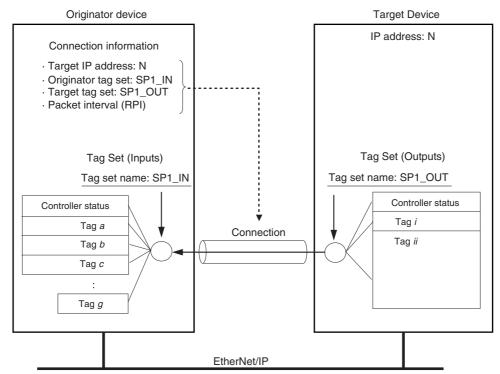


There are both input (consume) and output (produce) tag sets. Each tag set can contain only input tags or only output tags. The same input tag cannot be included in more than one input tag set.

Number of Tags in Tag Sets

You can set any tag sets containing one or more tags for the input and output tag sets for one connection. For example, you can set a tag set with one tag for the input tag set and set a tag set with more than one tag for the output tag set.


Tag Sets with Only One Tag Each

With basic Network Configurator procedures, each tag set contains only one tag.

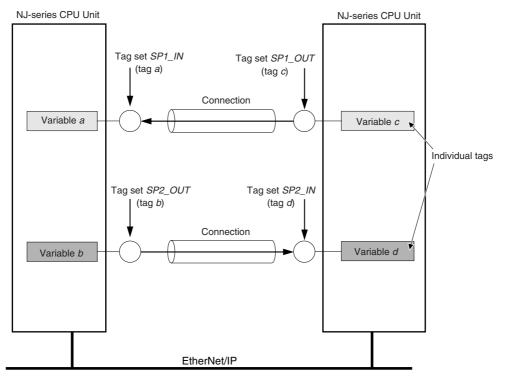

Tag Sets with Multiple Tags Each

As shown below, tags can be grouped. You can place up to eight tags (with a total of up to 722 words) in one tag set.

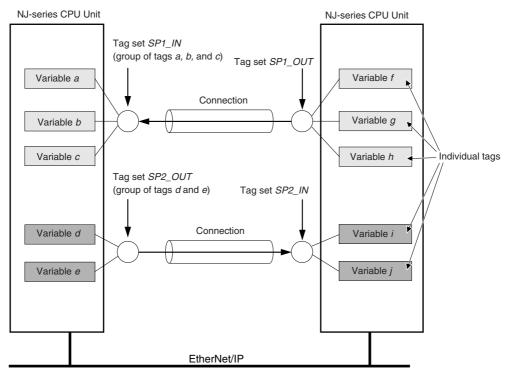

Note To enable a connection, each tag set must include only input tags or only output tags. (Both input and output tags cannot be included in the same tag set.)

7-1-3 **Tag Data Link Functions and Specifications**

The tag data link and performance specifications of the NJ-series CPU Unit are given below.

Item		Specification	
Communications type		Standard EtherNet/IP implicit communications (connection-type cyclic communications)	
Setting method		After you have set the tags, tag sets, and connections with the Network Configurator, you must download the tag data link parameters to all devices on the EtherNet/IP network. You can export the network variables that you created on the Sysmac Studio to a CSV file. You can then import the file to the Network Configurator and assign the network variables to tags. After the parameters are downloaded, the EtherNet/IP Units are restarted to start the tag data links.	
Tags*1	Supported variable types	You can specify the following network variables as tags. *2, *3 • Global variables	
	Maximum number of words per tag	722 words (1,444 bytes)	
	Maximum number of tags	256*4	
Tag sets	Maximum number of tags per tag set	8 (7 when Controller status is included)	
	Maximum number of words per tag set	722 words (1,444 bytes)	
	Maximum number of tag sets	256	
Connections		Maximum number of connections per Unit: 256	
Connection type		Each connection can be set for 1-to-1 (unicast) or 1-to-N (multi-cast) communications.	
Packet interval (RPI)		0.5 to 10,000 ms in 0.5-ms increments	
		The packet interval can be set separately for each connection.	

^{*1} To specify a specific I/O memory address for a tag, create a variable, use an AT specification of the I/O memory address on the Sysmac Studio, and then specify the variable with the AT specification for the tag.

*3 The following table lists the variables that you can specify as tags.

Туре		Example	Specification
Variables with basic data types		aaa	Supported.
Enumerated variables		bbb	Supported.
Arroy variables	Arrays	bbb	Supported.
Array variables	Elements	ccc[2]	Supported.
Structure variables	Structures	ddd	Supported.
Structure variables	Member	ddd.xxx	Supported.
Union variables	Unions	eee	Not supported.
Official variables	Member	еее.ууу	Supported.

^{*2} You can import network variables created in the Sysmac Studio to the Network Configurator as tags. However, variables with a Network Publish attribute that have variable names that are the same as the I/O memory address notation, such as "0000" and "H0000" are not exported to CSV files.

7-1-4 Overview of Operation

In this manual, the connection information that is set is called tag data link parameters. This section describes how to set tag data links with the Sysmac Studio and the Network Configurator.

Setting Network Variables (Sysmac Studio)

First, create any variables that you want to use for tag data links as network variables in the Sysmac Studio.

1 Set the Network Publish attribute to Input or Output in the Global Variable Table for the variables you want to use for tag data links (i.e., as tags).

2 To maintain concurrency in tag data within a tag set, set all tags (i.e., variables with a Network Publish attribute) within the same tag set as follows:

Set a refreshing task for variables with a Network Publish attribute to maintain concurrency as described below for tag data link data.*

Note If a variable that uses an AT specification is used as a tag, you do not need to set a refreshing task. It is refreshed in the primary periodic task.

Refer to 7-1-7 Concurrency of Tag Data Link Data for details on the concurrency of tag data link data.

- Maintain concurrency in the tag data in a tag set.
- The timing of updating network variables that are assigned to tags is synchronized with the execution period of the program that accesses the network variables.



Precautions for Correct Use

You cannot use the following notation, which specifies an I/O memory address, in the variable name of any variable used in a tag data link.

- 1) Variable names that contain only single-byte numerals (Example: 001)
- 2) Variable names with the following single-byte letters (uppercase or lowercase) followed by single-byte numerals
 - H (Example: H30)W (Example: w30)D (Example: D100)
 - E0_ to E18_

Setting and Downloading Tag Data Link Parameters (Network Configurator)

The tag data link parameters (e.g., connection information) that are described below are created with the Network Configurator, and then the parameters are downloaded to all originator devices on the EtherNet/IP network. When the tag data links are used on the EtherNet/IP Unit, use the Network Configurator to make the following settings.

Creating the Configuration Information

You can register the EtherNet/IP ports and EtherNet/IP Units to create the connections that define the tag data links. Refer to the 7-2-3 Registering Devices for details.

2 Setting Tags

Create CPU Unit variables for input (consume) tags and output (produce) tags. You can create up to 256 tags for an EtherNet/IP Unit on an NJ-series CPU Unit. (There is a maximum data size of 1,444 bytes (722 words) for each tag.) You can import and export network variables that are created on the Sysmac Studio to CSV files. This allows you to register them as tags on the Network Configurator. Output tags can be defined to clear output data to 0 or to hold the output data from before the error when a fatal error occurs in the CPU Unit.

3 Setting Tag Sets

You can create output tag sets and input tag sets and assign tags to them. (You can create a total of up to eight I/O tag sets.) You can create up to 256 tag sets for an EtherNet/IP Unit on an NJ-series CPU Unit. (The maximum data size of 1 tag set is 1,444 bytes (722 words).) You can specify the Controller status in a tag set to indicate the CPU Unit's operating status (operating information and error information).

Setting Connections

The target device output tag set and the originator device input tag set are associated as connections. You can open a total of up to 32 connections for the EtherNet/IP Unit.




Additional Information

Counting Connections

The number of connections is the total of the number of input tag sets that receive data and the number of nodes that send data for output tag sets. (Refer to the following figure.) One connection is consumed for each connection setting whether the connection is a multi-cast connection or a unicast (point-to-point) connection.


Example of Calculating the Number of Connections Example for EtherNet/IP Unit with IP address of 192.168.250.254 in bidirectional connection with 128 nodes

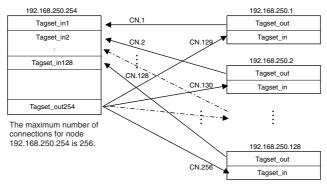

An EtherNet/IP Unit must be mounted to the Controller to increase the maximum number of connections. (Refer to the following figure.)

Example of Calculating the Number of Connections
The maximum number of connections (32) per port would be exceeded if a built-in EtherNet/IP port with an IP address of 192.168.250.254 is used in a bidirectional connection with 17 nodes.

In this case, bidirectional communications can be performed with 17 nodes or more by adding an EtherNet/IP Unit with the IP address of, for example, 192.168.250.253 to the same Controller, creating an output tag set in the new EtherNet/IP Unit, and creating connections.

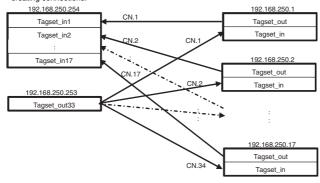



Version Information

You can use the CJ1W-EIP21 EtherNet/IP Unit mounted to an NJ-series Controller with a CPU Unit with unit version 1.01 or later and Sysmac Studio version 1.02 or higher.

Setting the Requested Packet Interval (RPI)

The RPI is the I/O data refresh cycle on the Ethernet line when performing tag data links. The RPI can be set separately for each connection. You can set the EtherNet/IP Unit to between 0.5 and 10,000 ms (in 0.5-ms increments). The default setting is 50 ms. With EtherNet/IP, data is exchanged on the communications line at the packet interval that is set for each connection, regardless of the number of nodes.

Setting Connection Type

You can select a multi-cast connection or unicast (point-to-point) connection as the connection type in the tag data link connection settings. With a multi-cast connection, you can send an output tag set in one packet to multiple nodes and make allocations to the input tag sets. A unicast connection separately sends one output tag set to each node, and so it sends the same number of packets as the number of input tag sets. Therefore, multi-cast connections can decrease the communications load if one output tag set is sent to multiple nodes. If multi-cast connections are used, however, use an Ethernet switch that has multi-cast filtering, unless the tag set is received by all nodes in the network. If an Ethernet switch without multi-cast filtering is used, the multi-cast packets are broadcast to the entire network, and so packets are sent to nodes that do not require them, which will cause the communications load on those nodes to increase. To use a multi-cast connection and send an output tag set in one packet to multiple nodes, the following settings for the receiving node must be the same as the settings of the sending node: the connection type (multi-cast), the connection I/O types, packet internals (RPI), and timeout values.



Precautions for Correct Use


The performance of communications devices is limited to some extent by the limitations of each product's specifications. Consequently, there are limits to the packet interval (RPI) settings. Refer to 12-2 Adjusting the Communications Load and set an appropriate packet interval (RPI).

7-1-5 **Starting and Stopping Tag Data Links**

Tag data links are automatically started when the data link parameters are downloaded from the Network Configurator and the power supply to the NJ-series Controller is turned ON. Thereafter, you can start and stop tag data links for the entire network or individual devices from the Network Configurator. Starting and stopping tag data links for individual devices must be performed for the originator. Furthermore, you can use the device variables for the CJ-series Unit to start and stop the entire network. Refer to 7-2-12 Starting and Stopping Tag Data Links for details.

7-1-6 **Controller Status**


You can include the Controller status as a member of a tag set in the data sent and received. The Controller status consists of flags that show the operating status of the CPU Unit to which the EtherNet/IP Unit is mounted. It includes operating information and error information. If the Controller status is specified as an output (send) tag, the Controller status is added to the start of the tag set in the following format. (Select the Include Option for the Controller Status in the upper right of the Edit Tag Set Dialog Box.)




To receive the Controller status, specify the Controller status for the In - Consume Tab Page in the dialog box used to edit the receive tag set. (Select the Include Option for the Controller Status in the upper right of the Edit Tag Set Dialog Box.) When a tag data link is started, the contents of the Controller status is stored in the device variables for the CJ-series Unit that are given below.

- *_TargetPLCMdSta (Target Node PLC Operating Flags)
- *_TargetPLCErrSta (Target Node PLC Error Flags)

Sending the Target Node PLC Operating Flags of the Target Node with an IP Address of 192.168.250.2.

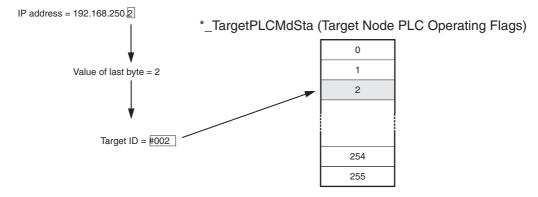

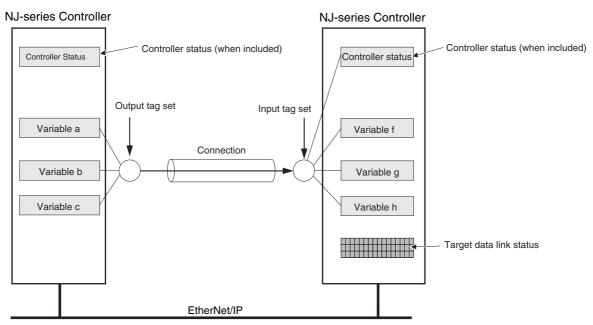



Additional Information

The target ID may be duplicated depending on the IP addresses of the target nodes. In this case, it is necessary to change the target ID with the Network Configurator so that the same address is not used twice. For information on how to change the target node ID, refer to step 4 under 7-2-5 Connection Settings.

When you use multiple connections to communicate with one specific node, the information in the Controller status is stored in the following variables if the Controller status is specified in the input tags and the output tags for all connections.

Controller status	Variable name	Description of operation
Target Node PLC Operating Flags	*_ <i>TargetPLCMdSta</i> (Target Node PLC Operating	This variable shows the operation information of the Controller at the target node.
	Flags)	When the EtherNet/IP Unit Is the Originator of the Connection
		The array element that corresponds to the target ID at the target is TRUE when all information for all connections of the relevant target node is shows operating status. You can change the target ID of the IP address from the Network Configurator. This status information is enabled when the Controller status is included in the communications data in both the originator and target node. This variable is updated when necessary.



Additional Information

Even if you specify including the Controller status in the output (produce) tags, you do not necessarily need to include it in the input (consume) tags. If you do not include the Controller status in an input (consume) tag, the contents of the Controller status is not updated in the Target Node PLC Operating Flags and Target Node PLC Error Flags variables, but it is sent in the input (consume) tag. Therefore, you can use the Controller status data that was received in the input (consume) tag as receive data.

7-1-7 **Concurrency of Tag Data Link Data**

To maintain the concurrency of data in a tag data link, you must set a refreshing task for each network variable that is assigned to a tag.

- Maintain concurrency in the tag data in a tag set.
- The timing of updating network variables that are assigned to tags is synchronized with the execution period of the program that accesses the network variables.



Additional Information

A refreshing task maintains concurrency of the value of a global variable from all tasks that access that global variable. This is achieved by specifying a single task that can write to that global variable and not allowing any other task to write to that global variable. For details on refreshing tasks, refer to the NJ-series CPU Unit Software User's Manual (Cat. No. W501).


Maintaining Concurrency in the Tag Data in a Tag Set

To maintain concurrency in the values of multiple tags in a tag set, the tags (variables with a Network Publish attribute) must satisfy the following four conditions.

- (1) The tags must be assigned to the same tag set (connection).
- (2) A refreshing task must be set for the network variables assigned to the tags, and the refreshing task must be the same for all tags in the tag set.*

Note If you set a refreshing task for a network variable, you must set a variable access time to allocate enough time to access the network variable from outside of the Controller.

- (3) A tag that uses AT specification must not be included in the same tag set.
- (4) The variable access time set for each task must be set to a higher value than is required to transfer the tag data. Refer to 12-3-3 Effect of Tag Data Links on Task Periods for details on the variable access time and data transfer.
- Setting Refreshing Tasks for Tags (Network Variables)
 Concurrency of the tags in the tag set is maintained.

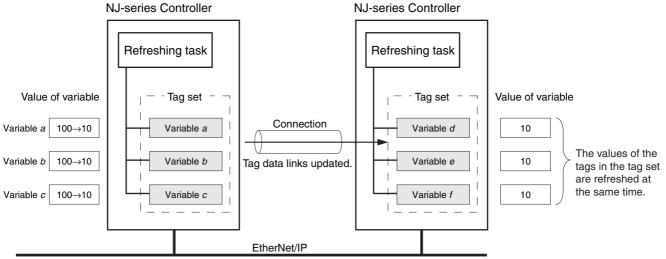



Additional Information

You do not need to set a refreshing task for variables (tags) that use an AT specification because they are updated in the primary periodic task.

NJ-series Controller NJ-series Controller Refreshing task Refreshing task Value of variable Value of variable Tag set Tag set The values of Connection Variable $a \mid 100 \rightarrow 10$ Refreshed. Variable a Variable d 10 tags in the tag set are Variable $b \mid 100 \rightarrow 10$ Variable b Variable *e* 10 Refreshed. Tag data links updated not refreshed Variable $c \mid 100 \rightarrow 10$ Variable f 100 Not refreshed. Variable c at the same time.

 Not Setting Refreshing Tasks for Tags (Network Variables) Concurrency of the tags in the tag set is not maintained.

EtherNet/IP


• The timing of updating network variables that are assigned to tags is synchronized with the execution period of the program that accesses the network variables.

Set the refreshing task for the network variables assigned to the tags to the task that contains the program that accesses those network variables.

Difference between the Operation of Tags with a Refreshing Task and Tags without a Refreshing

When you set a refreshing task for tags (network variables) that is the same as the task that contains the program that accesses them, those tags are refreshed at the same time as the execution of the program. Refreshing of tags (network variables) that have no refreshing task is handled by the system service with the lowest execution priority, and therefore it is not synchronized with the execution of the program.

- (1) Execution timing of the program
- (2) Refresh timing of network variables (tags) with the primary periodic task* set as the refreshing task*
- (3) Refresh timing of network variables (tags) that do not have the primary periodic task set as the refreshing task

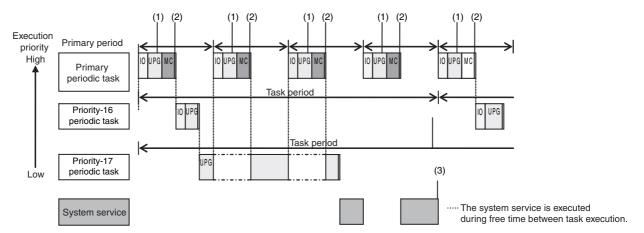

*: Refreshed during system common processing 2 in the task processing.



Additional Information

If a program needs to access a network variable with an AT specification, set the program in the primary periodic task so that it matches the refresh timing of the network variable that uses an AT specification.




Additional Information

Relationship between Refreshing Tasks and Data Concurrency in Tag Data Links

If you do not specify a refreshing task for global variables in tag data links, the following may occur.

- 1. When the data is sent for the output tag set, another task may have already written different values before that data is sent, depending on the timing of the task.
- 2. When data is received by an input tag set, another task may write different values after that data is received, depending on the timing of the task.

Therefore, to maintain the concurrency of data in tag data links, you must specify the same refreshing task on both the output CPU Unit and the input CPU Unit.

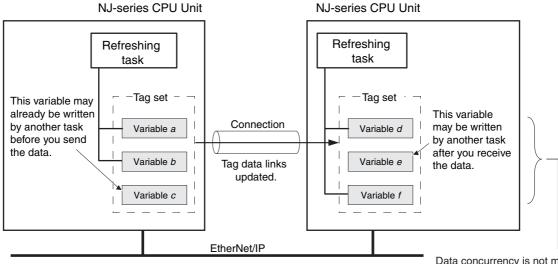

Data concurrency is not maintained unless you assign the same refreshing task for both the output and the input tags.

Required Processing Time to Maintain Concurrency

When you set a refreshing task for tags (network variables) to maintain the concurrency of data link data, the processing time required for that specified task increases. Due to this increase in task processing time, the refreshing of tag data link data may not occur during the packet interval (RPI) period set for each connection. Therefore, you need to adjust the packet interval (RPI) settings to match the period of the task specified as the refreshing task. Refer to 12-3-3 Effect of Tag Data Links on Task Periods for details.

Task Setup Procedure

- (1) Set the global variables for which to specify a refreshing task, and set the refreshing tasks and accessing tasks in the Settings for Exclusive Control of Variables in Tasks in the Task Setup on the Sysmac Studio.
- (2) Set the variable access time for each refreshing task.

For details, refer to the NJ-series CPU Unit Software User's Manual (Cat. No. W501).

7-2 **Setting Tag Data Links**



Additional Information

You can also use the Sysmac Studio to set the tag data links. Refer to A-2 Use the Sysmac Studio to Set the Tag Data Links (EtherNet/IP Connections) for details on setting the tag data links in the Sysmac Studio.

7-2-1 **Starting the Network Configurator**


Procedure

Tag data links are set from the Network Configurator. Use the following procedure to start the Network Configurator.

Using the Windows Start Menu


To start the Network configurator, select **OMRON** – **Sysmac Studio** – **Network Configurator for EtherNetIP** – **Network Configurator** from the Windows Start Menu.

When the Network Configurator starts, the following window is displayed.

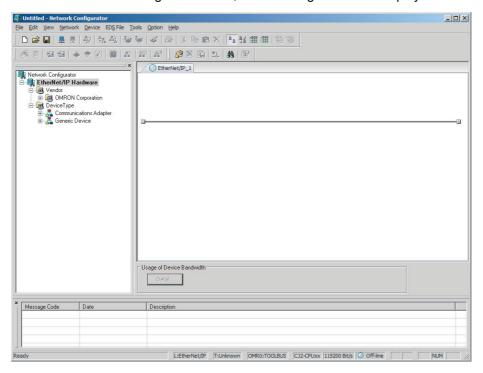


Main Window


The Main Window consists of a Hardware List and a Network Configuration Pane, as shown in the following diagram.

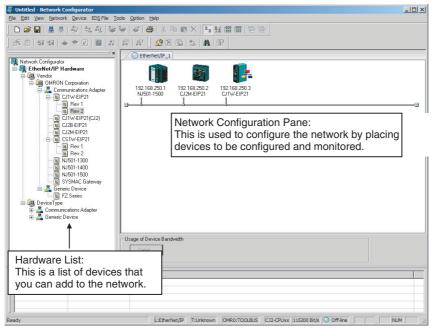

To manage two or more networks, you can select **Network** – **Add** to add a new Network Configuration Pane. You can add a new Network Configuration Pane.

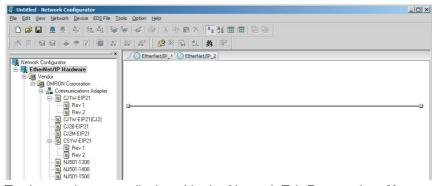

To change the name displayed in the Network Tab Page, select *Network – Property*. You can change the name set in the Comment Field of the Network Property Dialog Box.

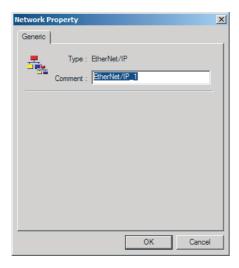

7-2-2 Tag Data Link Setting Procedure

This section describes the procedure to set tag data links (i.e., connection information). For data links between Controllers, the connection information is set only in the originator, i.e., the node that receives data.

- Create the network configuration.
 - (1) Register all EtherNet/IP Unit for which to create connections in the EtherNet/IP Network Configuration Pane. (Refer to 7-2-3 Registering Devices.)
 - * If a system has already been installed, connect online to the EtherNet/IP network and upload the network configuration. (Refer to 7-2-10 Uploading Tag Data Link Parameters.)
- Create the tag and tag set connections.
 - (1) Create tags and tag sets for all registered devices (EtherNet/IP Units). (Refer to 7-2-4 Creating Tags and Tag Sets.)
 - (2) Create a connection for the originator device (i.e., the registered device that receives data as input data). (Refer to 7-2-5 Connection Settings.)
- Download the tag data link parameters. (Refer to 7-2-9 Downloading Tag Data Link Parameters.)
- Make sure that the tag data links are operating normally by using the indicators for the EtherNet/IP Unit (refer to 13-3 Connection Status Codes and Error Processing) and the Network Configurator monitor functions. (Refer to 13-1 Checking Status with the Network Configurator.)
- Make sure that the output tag data is updated in the input tags by using the Sysmac Studio's Watch Tab Page.


Note Refer to the Sysmac Studio Version 1 Operation Manual (Cat. No. W504) for the procedure.

7-2-3 Registering Devices

Register all of the devices required in the equipment (such as EtherNet/IP Units performing tag data links) in the network configuration.

1 Register the devices that will participate in the tag data links by dragging the devices from the Hardware List and dropping them in the Network Configuration Pane on the right. (To drag and drop an icon, click and hold the left mouse button over the icon, move the icon to the destination, and release the mouse button.)

You can also select a device in the Hardware List and press the **Enter** Key to register it. The icon of the device is displayed in the Network Configuration Pane, as shown in the following diagram.

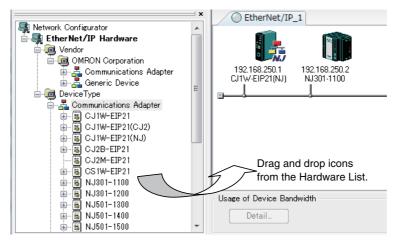

The device names and major CIP revisions (Rev \square) are displayed in the hardware list.

For EtherNet/IP Units, device names and major CIP revisions are as shown in the following table.

Name in Hardware List	CIP revision	Unit version
CJ1W-EIP21(NJ)	Rev. 2	Ver. 2.1
	Rev. 3	Ver. 3.0



Precautions for Correct Use

Make sure that you select the devices with the same device names and the same major CIP revisions as the devices that you use in actual operation. The following will occur if any device names or CIP revisions are different when you attempt to download tag data link parameters on the Network Configurator.


- If a device name is different, an error message "Specified device can not be accessed, or wrong device type." will be displayed and the download will fail.
- If a revision is different, "Wrong unit revision." will be displayed and the download will fail.

The above also applies when uploading or comparing tag data link parameters. In any of the above cases, refer to 7-2-17 Changing Devices and change the device.

Right-click the registered device's icon to display the pop-up menu, and select Change **UNKNOWN Address.**



- Set the IP address to match the node address (IP address) actually used in the device and click
- Repeat steps 1 to 3, and register all of the devices that participate in the tag data links.

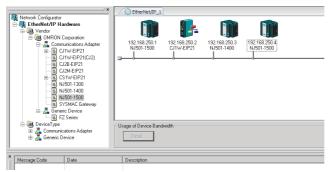

Relationship Between Major CIP Revisions of Registered Device and **Device Used in Actual Operation**

Whether or not downloading, uploading, and comparison are supported depends on the combination of major CIP revisions of the registered device and the device that you use in the actual operation. The relationships are given in the following table.

Major CIP revision of	Major CIP revision of the device used in actual operation	
the registered device	2	3 or later
2	Supported	Supported
3	Not supported	Supported

7-2-4 Creating Tags and Tag Sets

You must create the tag sets and set member tags required to create connections for a registered EtherNet/IP Unit. You can set the network variables used in control programs for tags. This section first describes the basic procedure to create tags and tag sets (1, below). Then it explains how to import variables with a Network Publish attribute from the Sysmac Studio to the Network Configurator (2, below).


Then it explains how to effectively use network variables for tags.

- (1) Creating Tags and Tag Sets with the Network Configurator's Device Parameter Editing Function
- (2) Importing Variables with a Network Publish Attribute Created in the Sysmac Studio to the Network Configurator


(1) Creating Tags and Tag Sets with the Network Configurator's Device Parameter Editing Function

Creating a Tag Set

Double-click the icon of the device for which to create a tag set to display the Edit Device Parameters Dialog Box. Right-click the icon to display the pop-up menu, and select *Parameter – Edit*.

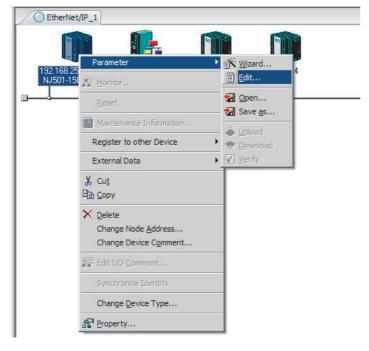

Click the Tag Sets Tab at the top of the Edit Device Parameters Dialog Box. There are two kinds of tag sets: input (consume) and output (produce).

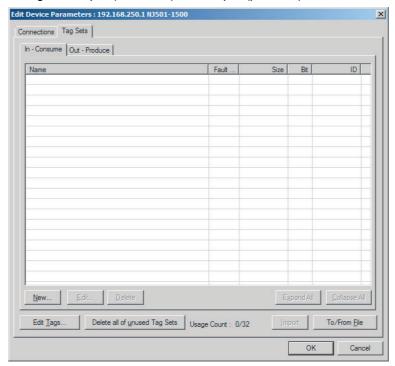


Creating and Adding Tags

3 Click the **Edit Tags** Button.

The Edit Tags Dialog Box is displayed.

Register the input (consume) tags and output (produce) tags separately.

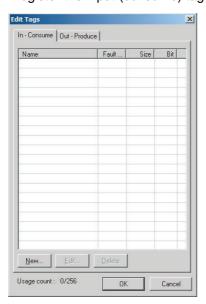

4 Click the In - Consume Tab, and then click the New Button. The Edit Tag Dialog Box is displayed.



5 Enter the variable name directly into the *Name* Box. (Example: *Var_In_a*)



Additional Information

- You can use the following characters in tag names. 0 to 9, A to Z, a to z, single-byte kana, _
 (underbar), and multi-byte characters (e.g., Japanese)
- You cannot use the following characters in tag names. ! " # \$ & '() * + , . / : ; < = > ? @ [] ^ ' spaces or text strings that start with numerals (0 to 9)
- The maximum length of a tag name is 255 bytes.
- Specify array and structure variables as shown below.
 - Specifying array elements: array [2][3] (or array [2,3]) and array [2][3][4] (or array [2,3,4])
 - Specifying structure members: Struct.member (Separate the member name with a period.)




Precautions for Correct Use

Specify the variable names for tags.

To specify an I/O memory address for a tag, do not specify the I/O memory address for the tag directly. Instead, create a variable, set an AT specification of the I/O memory address on the Sysmac Studio, and then specify the variable with the AT specification for the tag. If you enter I/O memory addresses for tag names on the Network Configurator, as shown below, the tags are directly assigned to the I/O memory addresses in the CPU Unit, and not to the variables. Always specify variable names for tags.

- 1) Variable names that contain only single-byte numerals from 0000 to 6143
- 2) Variable names with the following single-byte letters (uppercase or lowercase) followed by single-byte numerals
 - H (H000 to H511)
 - W (w000 to w511)
 - D (D00000 to D32767)
 - E0_ to E18_ (E0_00000 to E0_32767, to E18_00000 to E18_32767)

You can check the memory address or variable to which a tag is assigned with the icons in the Edit Tags Dialog Box.

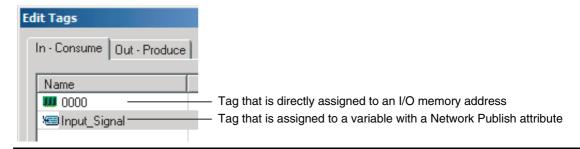

Input the size of the tag in bytes in the Size Field. Input the tag size so that it is the same as the data type size of the variable. Select the Use Bit Data Check Box and change the bit size to 1 to use BOOL variables.




Precautions for Correct Use

Tag sizes can be set to odd numbers of bytes for any EtherNet/IP Unit that was manufactured in October 2012 or later. However, the following precaution must be observed.

- Memory in the CPU Unit is used in 2-byte increments. Therefore, specify a tag with the desired odd number of bytes on the Network Configurator and then define a variable with a data size that is one byte larger on the Sysmac Studio and specify it for the tag.
- Click the **Regist** Button to register the tag. If an I/O memory address is specified for a tag name, the Edit Tag Dialog Box is displayed with the next consecutive address as the tag name for the next tag. After you have registered all of the tags, click the Close Button.
- Click the Out Produce Tab, and then click the New Button. The Edit Tag Dialog Box is displayed. Input the output tag in the same way. Use the Fault Action setting of the output (produce) tag to specify whether to clear the output data or continue to send it when a major fault occurs in the CPU Unit.

The Fault Action setting is not required for input (consume) tag sets.

- Retain output for major fault: Hold (default) Output data maintains its previous status even after a major fault occurs.
- Clear output at major fault: Clear Output data is cleared to 0 when a major fault occurs.

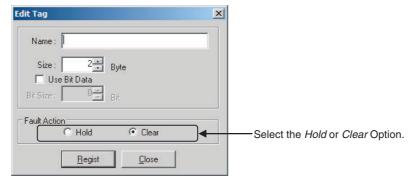



Precautions for Correct Use

Connections are cut off if any of the following errors occurs in the CPU Unit that is the originator while tag data links are active.

- Major fault level Controller error
- Partial fault level Controller error



2Byte



Precautions for Correct Use

<u>E</u>dit

4/256

<u>D</u>elete


ΠK

Cancel

₩ Var_In_d

Make the following settings to refresh all of the tag data in the same tag set at the same time.


- Use the Sysmac Studio to specify the same refreshing task for all of the variables that are assigned to tags in the tag set.
- Do not place tag variables that have AT specifications in I/O memory and tag variables that do not have AT specifications in the same tag set.
- At this point, a confirmation dialog box is displayed to check whether the registered tag names are used as the tag set names. A tag set can contain up to eight tags, but tag sets are registered with one tag per tag set if the tag names are registered as tag set names. In this case, click the **Yes** Button.




If the **No** Button is clicked, you can add more tags to the tag set. Refer to step 18 for details on how to register new tags first and add more tags to the tag set later.

Changing and Registering Tag Sets

The following dialog box is displayed when the tags in the Edit Tags Dialog Box are registered directly as tag sets.

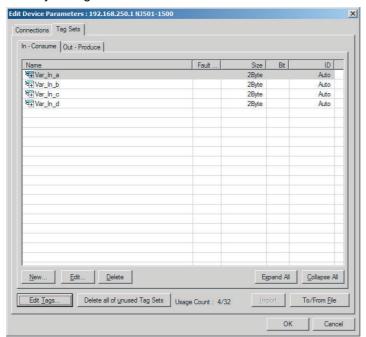

If an input tag is already registered in an input tag set, and you want to change its registration to a different input tag set, it is necessary to delete the tag from the tag set in which it was originally registered. Open the Edit Device Parameters Dialog Box, select the tag set containing the tag that you want to delete on the Tag Sets Tab Page, and click the Delete Button in the Edit Tags Dialog Box. (If there are other tags registered in that tag set, it is possible to delete just one tag by selecting the tag that you want to delete in the Edit Tag Set Dialog Box and clicking the Button.)

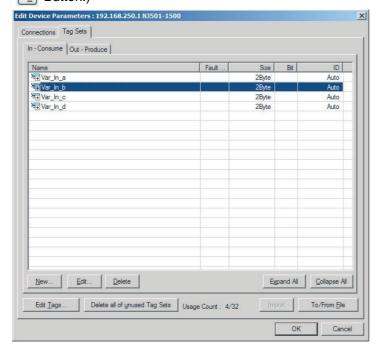


A confirmation message is displayed.



If the **No** Button is clicked, only the tag set is deleted. Click the **No** Button.

13 To edit a registered tag set and add tags, either double-click the tag set, or select the tag set and click the Edit Button. The Edit Tag Set Dialog Box is displayed.

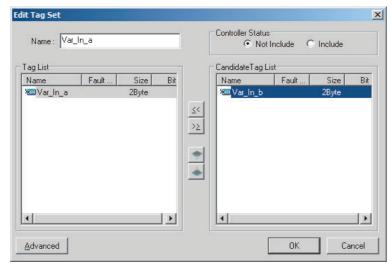


The Tag List on the left side of the dialog box shows the tags that are already registered, and the Candidate Tag List on the right side of the dialog box shows the other tags that are not registered yet. To add a tag, select it in the Candidate Tag List and click the [3] Button.

14 To include the Controller status in the tag set, select the *Include* Option at the upper-right corner of the dialog box.



- **15** To confirm a change, click the **OK** Button in the Edit Tag Set Dialog Box.
- 16 Click the OK Button in the Edit Device Parameters Dialog Box.


If you want to just add new tags and register the tag set, first register the tags with steps 1 to 9. In this example, input tags Var In e, Var In f are newly added.

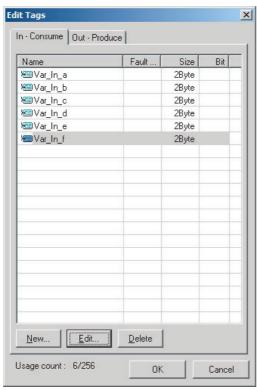


- 18 After you register all of the required tags, click the **OK** Button at the bottom of the Edit Tags Dialog Box.
- 19 At this point, a confirmation dialog box is displayed to check whether the registered tag names are used as the tag set names. Tags are just added in this case, so click the No Button. Just the tags are registered. The tags are not registered as tag sets.



20 To register the newly added tags in a tag set, either double-click the desired tag set, or select the tag set and click the Edit Button.

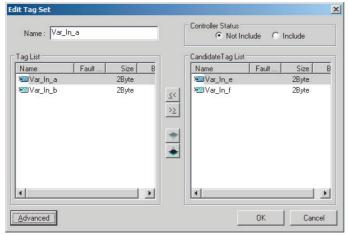

The Tag List on the left side of the dialog box shows the tags that are already registered, and the Candidate Tag List on the right side of the dialog box shows the other tags that are not registered yet.

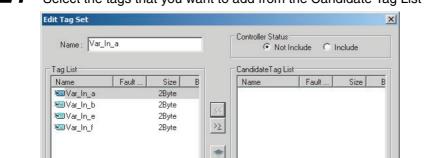

21 Select the tags that you want to add from the Candidate Tag List and click the 🔣 Button.

You can register up to eight tags in a tag set. (If you include the Controller status in the tag set, you can register up to only seven tags, and two bytes are added to the size.)

Cancel

Data is sent and received in the order it is displayed in the tag list. To change the order of a tag, select the tag and click the Up and Down Buttons ().

- **22** To confirm the changes, click the **OK** Button at the bottom of the Edit Tag Set Dialog Box.
- **23** Click the **OK** Button in the Edit Device Parameters Dialog Box.


Advanced

(2) Importing Variables with a Network Publish Attribute Created on the Sysmac Studio to the Network Configurator

You can create network variables in the Sysmac Studio and import these variables to the Network Configurator to assign them to tags and tag sets. Use the following procedure.

Creating Global Variables on the Sysmac Studio

1 Create a global variable with the Global Variable Editor of the Sysmac Studio and select *Input* or *Output* for the Network Publish attribute of the variable. Save the project when you are finished.

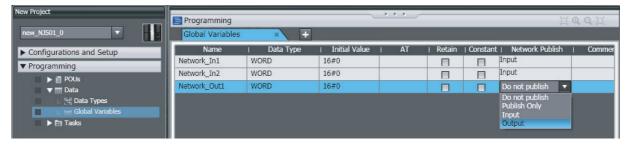

2 Select Export Global Variables – Network Configurator... from the Tools Menu.

Any global variables with *Input* or *Output* set for the Network Publish attribute are imported from the csv file for the import procedure described below (*Importing to the Network Configurator*).

Importing to the Network Configurator



Precautions for Correct Use

Variables with a Network Publish attribute that have variable names that are the same as the I/O memory address notation, such as "0000" and "H0000" are not exported to CSV files.

- 1) Variable names that contain only single-byte numerals (Example: 001)
- 2) Variable names with the following single-byte letters (uppercase or lowercase) followed by single-byte numerals


• H (Example: H30) • W (Example: w30) • D (Example: D100)

• E0_ to E18_ (Example: EA_100)

Double-click the icon of the device registered in the Network Configurator for which you want to import the variable with a Network Publish attribute to display the Edit Device Parameters Dialog


Right-click the icon to display the pop-up menu, and select *Device - Parameter - Edit*.

Click the Tag Sets Tab at the top of the Edit Device Parameters Dialog Box. Select Import from File from the To/From File Button.

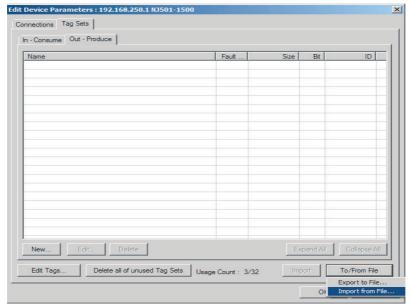


A confirmation dialog box is displayed that asks you how you want to import the variables as shown below.


· To import all variables with a Network Publish attribute, click the Yes Button. To import only some of these variables, click the No Button.



After you import the variables to the tags, click the **Yes** Button to automatically create tag sets, or click the **No** Button to set up tag sets manually.



The variables will be imported as shown below on the Tag Sets Tab Page. Each variable will be imported into a different tag set and the device parameters will be automatically edited. (The variable name will be used for the tag set name.)

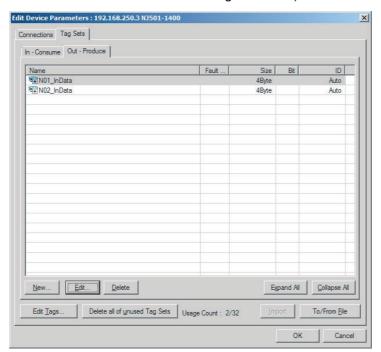

To place more than one input variable (input tag) imported from the Sysmac Studio into one tag set, you must delete the input tags that were registered. Select the tag set containing the variables you want to put into a tag set, then click the **Delete** Button. A confirmation dialog box is displayed to confirm that you want to delete the selected tag set and the tags contained in that tag set. You only want to delete the tag set, so click the **No** Button.



Click the New Button to create a new tag set. To place more than one tag in an existing tag set, double-click the tag set, or select it and click the Edit Button. The Edit Tag Set Dialog Box is displayed. Imported tags that are not registered in another tag set are displayed in the Candidate Tag List on the right. Click the Button to add tags individually.



- You can change tag set names in this dialog box. To confirm a change, click the Regist Button in the Edit Tag Set Dialog Box.
- Perform steps 1 to 3 for all the devices to import variables and to create tag sets.

7-2-5 **Connection Settings**

After you create the tag sets, click the **Connections** Tab at the top of the Edit Device Parameters Dialog Box, and set the following connection information.

- The target devices with which connections are opened
- The connection type (multi-cast or unicast)
- The length of the packet intervals (RPI)
- · Connection name (optional)

Make the connections settings in the originator only. The connections settings are not necessary in the target device.




Precautions for Correct Use

Make the connections settings after you create tag sets for all of the devices involved in tag data links.


Connection Settings (Connections Tab Page)

- Registering Devices in the Register Device List
 - Double-click the icon of the device for which to make originator settings in the Network Configuration Pane of the Network Configurator. The Edit Device Parameters Dialog Box is displayed. Right-click the icon to display the pop-up menu, and select **Parameter Edit**.
 - 2 Click the **Connections** Tab in the Edit Device Parameters Dialog Box. All of the devices registered in the network (except the local node) are displayed.

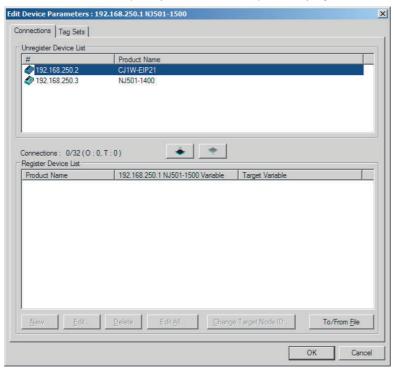


7-33

In the Unregister Device List, click the target device that requires connection settings so its color changes to gray, and click the Button. The selected target device is displayed in the Register Device List, as shown in the following diagram.

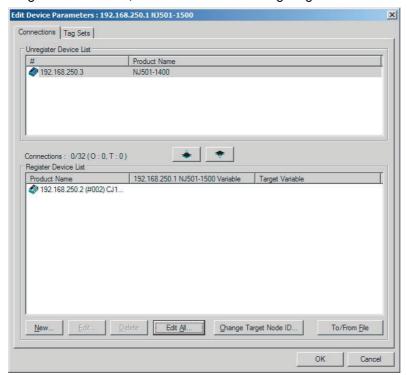

Target node IDs are assigned to the devices that are registered in the Register Device List.

The target node ID serves as the bit array position for the following variables in the originator Controller: Target Node PLC Operating Flags, Target Node PLC Error Flags, Target Node Error Information, Registered Target Node Table, and Normal Target Node Table. By default, the target ID is automatically set to the rightmost 8 bits of the IP address. In the example above, the target device's IP address is 192.168.250.2, so the device number is #002. If a target node ID is duplicated and you want to change the device number, click the Change Target Node ID Button and change the target ID.

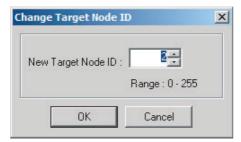


Editing Settings for Individual Connections

You can edit each connection separately.


Note Refer to the following section for information on how to perform batch editing in a table format.

Click the Connections Tab and then click the New Button. The following Edit Connection Dialog Box is displayed according to the type of device that is selected.

Using Built-in EtherNet/IP Ports as Targets (for Input Only)

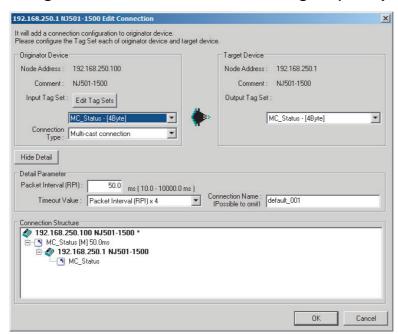

Using Other EtherNet/IP Devices as Targets (for Settings Other Than Input Only)

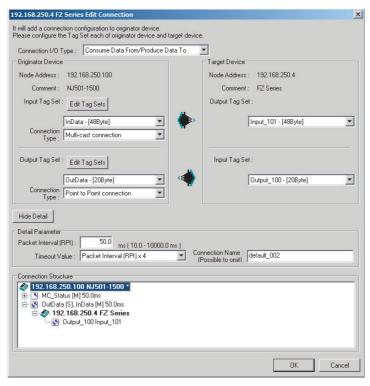

The settings are as follows:


Setting		Description
Connection I/O Type	Select Input Only (tag type) to use tag data links with a CS1W-EIP21, CJ1W-EIP21, CJ2B-EIP21, CJ2M-EIP21, CJ1W-EIP21(CJ2), CJ1W-EIP21(NJ), NX701, NJ501-□□□□, NJ301-□□□□, or NJ101. When you create tag data links for other devices, select the connection I/O type specified in that device's EDS file. Use the Input Only (ID type) setting when another company's node is the originator and does not support connection settings with a Tag type setting.	
Connection Type	Select whether the data is sent in multi-cast or unicast (point-to-point) format. The default setting is multi-cast.	
	Multi-cast connection:	Select when the same data is shared by multiple nodes. This setting is usually used.
	Point-to-Point connection:	Select when the same data is not shared by multiple nodes. In a unicast transmission, other nodes are not burdened with an unnecessary load.
		of Operation for details on using multi-cast and d counting the number of connections.
The Connection Structure Area at	nd the following items are not d	lisplayed if the Hide Detail Button is clicked.
Packet Interval (RPI)	Set the data update cycle (i.e., the packet interval) of each connection between the originator and target.	
		ween 0.5 and 10,000 ms in 0.5-ms increments en 10 and 10,000 ms in 1-ms increments).
	The default setting is 50 ms (i	i.e., data is updated once every 50 ms).
Timeout Value	Set the time until a connection timeout is detected. The timeout value is set as a multiple of the packet interval (RPI) and can be set to 4, 8, 16, 32, 64, 128, 256, or 512 times the packet interval. The default setting is 4 times the packet interval (RPI).	
Connection Name	Set a name for the connection. (32 single-byte characters max.)	

2 After you make all of the settings, click the **OK** Button.

Editing Settings for All Connections

You can edit the connection settings between the originator and all of the target devices selected in the Register Device List together in a table.

Click the Connections Tab, and then click the Edit All Button. The following Edit All Connections Dialog Box is displayed.

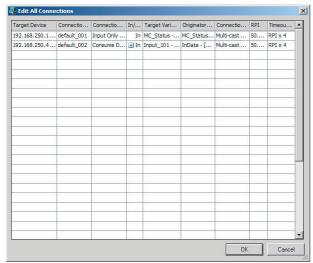

The settings are as follows:


Setting		Description
Target Device	Select the target device.	
Connection Name	Any name can be given to the connection (32 single-byte characters max.). If this field is left blank, a default name is assigned. The connection name is used as a comment.	
Connection I/O Type	Select InputOnly (tag type) to use tag data links with a CS1W-EIP21, CJ1W-EIP21, CJ2B-EIP21, CJ2M-EIP21, CJ1W-EIP21(CJ2), CJ1W-EIP21(NJ), NX701, NJ501-□□□□, NJ301-□□□□, or NJ101. When you create tag data links for other devices, select the connection I/O type specified in that device's EDS file. Use the Input Only (ID type) setting when another company's node is the originator and does not support connection settings with a Tag type setting.	
In/Out	nection.	natically displayed based on the selected con-
	Input Only: Just In is display	<u> </u>
Target Variable	Select the target node's tag	_
	In: Select the target's outp	, ,
	Out: Select the target's input (consume) tag set.	
Originator Variable	Select the originator node's tag set to assign it.	
	In: Select the originator's in	
	Out: Select the originator's	
Connection Type	Select whether the data is sent in multi-cast or unicast (point-to-point) form. The default setting is multi-cast.	
	Multi-cast connection:	Select when the same data is shared by multiple nodes. This setting is usually used.
	Point-to-point connection:	Select when the same data is not shared by multiple nodes. In a unicast connection, other nodes are not burdened with an unnecessary load.
		w of Operation for details on using multi-cast and and counting the number of connections.
RPI	Set the packet interval (RPI) of each connection between the originator and target. You can set an RPI between 0.5 and 10,000 ms in 0.5-ms increments. The default setting is 50 ms (i.e., data is updated once every 50 ms).	
Timeout Value	Set the time until a connection timeout is detected. The timeout value is set as a multiple of the packet interval (RPI) and can be set to 4, 8, 16, 32, 64, 128, 256, or 512 times the packet interval. The default setting is 4 times the packet interval (RPI).	

2 After you make all of the settings, click the **OK** Button.


7-37

Confirming the Connections Settings

An overview of the connections that were set in the Register Device List is displayed in the Connections Tab Page.

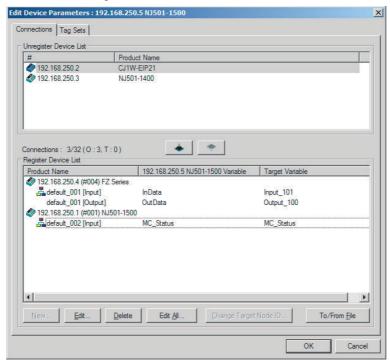

Click the **OK** Button. The following kind of diagram is displayed.

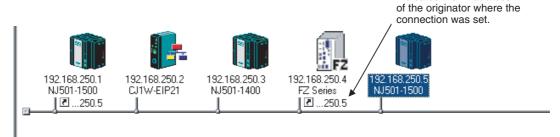

Repeat the connections setting procedure until all of the connections are set.



Precautions for Correct Use

After you have made all of the settings, always click the OK Button before you close the Edit Device Parameters Dialog Box. If the Cancel Button is clicked and the dialog box is closed, the new settings are discarded.

If the tag set's size is changed in either the originator or target after the connection was set, the size will not match the other node and a parameter data mismatch will occur. In this case, if you change the connection settings, be sure to check the connections. (Refer to 7-2-16 Checking Connections.)

Indicates the IP address


Automatically Setting Connections (Network – Auto Connection)

You can use automatic detection of the tag set names that are set for devices to automatically set connections between input and output tag sets with the same name (or the same names excluding specified ellipses). Connections are automatically set under the following conditions.

Output tag set names for connection setting	Except for specified ellipses, the output tag set name must be the same as the input tag set name. Ellipses can be set for the beginning or end of tag set names.
Input tag set names for connection settings	Except for specified ellipses, the input tag set name must be the same as the output tag set name. Ellipses can be set for the beginning or end of tag set names.
Connection type	The connection type must be Input Only. Multi-cast or single-cast connections can be specified for a connection.
RPI	The default setting is used.
Timeout	The default setting is used.


Example 1: Automatic Connections with the Same Tag Set Names

The following connections are automatically set with the same tag set name (*A_Signal*) if there is an output (produce) tag set named *A_Signal* at node A and input (consume) tag sets named *A_Signal* at nodes B and C.

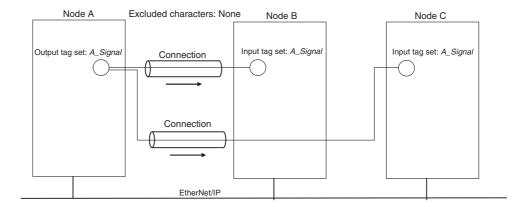


Example 2: Automatic Connections with the Ellipses

The following connections are automatically set with the same tag set name (*Signal*) if there is an output (produce) tag set named *O_Signal* at node A and input (consume) tag sets named *I_Signal* at nodes B and C, and "O_" and "I_" are set as forward ellipses.

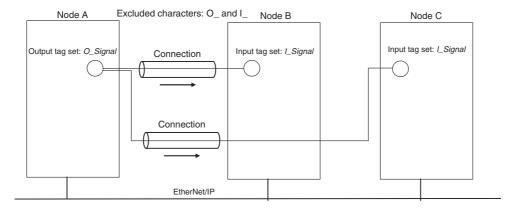


- Set the same tag set names for the output and input tag sets for the connection. The tag set names can also include forward and backward ellipses.
- 2 Select Auto Connection Configuration from the Network Menu. The connections will be set automatically. A dialog box will appear to set forward and backward ellipses for both output and input tag sets as soon as automatic connection setting processing has begun.

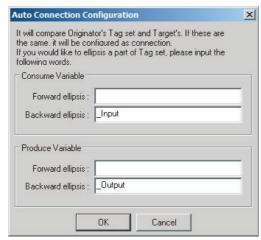


Input the ellipses and click the **OK** Button. Processing for automatic setting is started.

If there are tag sets that meet the conditions for automatic connection setting, they are displayed.

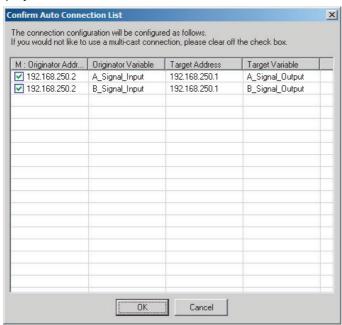

Click the **OK** Button. Processing for automatic setting is started.

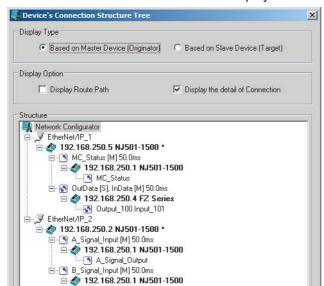

4 A device connection structure tree is displayed when processing is completed.


5 Use the device connection structure tree as required to change the RPI and timeout settings.

Close

Device Connection Structure Tree

- B_Signal_Output

Connection settings can be displayed on the network configuration. Select *View Device's Connection Structure Tree* from the Network Menu.

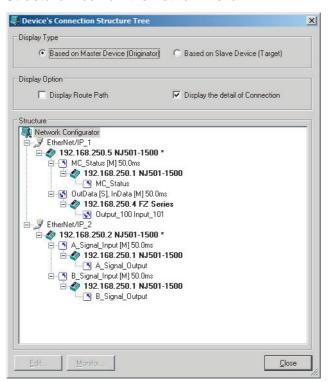

- You can use the *Display the detail of Connection* Check Box to switch between device-level and connection-level displays of tag data link communications.
- An asterisk is displayed after the device name of the originator set for the connection.

• The Edit Device Parameters Dialog Box is displayed if you select a connection and click the Edit Button. You can edit the connections in this dialog box.

7-2-6 **Creating Connections Using the Wizard**

You can use the Network Configurator's Wizard to easily create connections between OMRON PLCs following the instructions provided by the Wizard.


Note The Wizard can be used only with the following OMRON EtherNet/IP devices.

Device name	Remarks
CJ1W-EIP21(NJ)	CJ1W-EIP21 mounted to NJ-series CPU Unit
CJ1W-EIP21	CJ1W-EIP21 mounted to CJ1 CPU Unit
CJ1W-EIP21(CJ2)	CJ1W-EIP21 mounted to CJ2 CPU Unit
CJ2B-EIP21	Built-in EtherNet/IP port in CJ2H CPU Unit
CJ2M-EIP21	Built-in EtherNet/IP port in CJ2M CPU Unit
CS1W-EIP21	CJ1W-EIP21 mounted to CS1 CPU Unit
NJ101 NJ301-□□□□ NJ501-□□□□	Built-in EtherNet/IP port on the NJ-series CPU Unit
NX701	Built-in EtherNet/IP port on the NX-series CPU Unit


Use the following procedure to create connections (i.e., data links) with the Wizard.

- Set tags and tag sets for all devices before starting the Wizard. Refer to 7-2-4 Creating Tags and Tag Sets for the setting procedure.
- 2 For tag data links between OMRON PLCs, a connection is created in the PLC (i.e., the originator device) that receives data as input data.

First, select the registered device for which you want to create a connection in the Network Configuration Window of the Network Configurator, and then select Device - Parameters - Wizard from the menus.

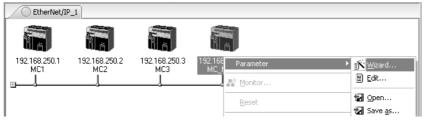


The following dialog box will be displayed before the Wizard starts.



Click the Yes Button to delete the connections that have been set with OMRON PLCs before starting the Wizard.

3 Create the connection following the instructions that are given by the Wizard after the Wizard starts. (See the following figure.)

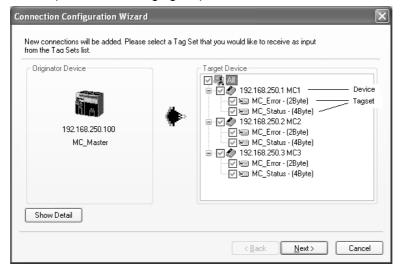

4 A list of tag sets is displayed on the right side of the Wizard Dialog Box with target devices that support receiving input data.

Select the tag sets that you want to receive at the originator device.

The following tables describes the meanings of the icons and check marks displayed in the tag set list.

lcon	Display position	Status
V	All	All output tag sets for all devices are selected.
_	Device	All output tag sets for the applicable device are selected.
	Tag set	The applicable output tag sets are selected. These are the tag sets that will be set in the connection.
V	All	All or some output tag sets for some devices are selected.
_	Device	Some output tag sets for applicable devices are selected.
Γ	All	All output tag sets for all devices are not selected.
_	Device	All output tag sets for applicable devices are not selected.
	Tag set	The applicable output tag sets are not selected. The connections for this tag set will be deleted.
	Device	No applicable tag sets.


Note Tag sets that are used in connections that are already set are not displayed.

The following display will appear when you click the Show Detail Button.



The specified values for detailed parameters will be displayed. Change the values as required. The connection name cannot be set. They are automatically created using the following rule. default_N (where N is a 3-digit number (001, 002, etc.) starting from 1)

Click the Next Button to switch to the table in the following Wizard Dialog Box. Follow the instructions to select and input from the list box the input tag set of the originator device that receives the output tag set of the target device.

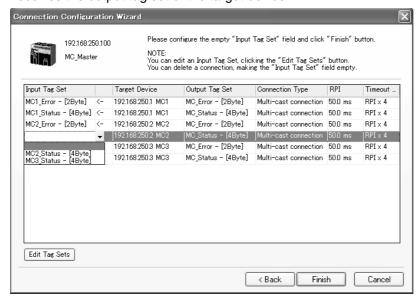


- The blank area in the Input Tag Set Column is the connection that you are creating.
- The rows in which there are input tag sets are connections that are already set.
- To prevent duplicate settings, input tag sets that have been used are not displayed in the list box for input tag sets.
- If there is no applicable input tag set, you can edit a tag set or create a new one by using the Edit Tag Sets Button and Edit Tag Button.
- **6** Once the input tag set settings have been completed, click the **Finish** Button. You can check the set connection by selecting Network - View Devices Connection Structure Tree from the menus.
 - The Wizard can be ended even if the input tag set includes a blank row. In that case, a connection is not created for the blank row.
 - You can delete a connection by deleting the input tag sets that were previously set.

7-2-7 Creating Connections by Device Dragging and Dropping

You can create a connection to the originator by dragging a target device and dropping it at the originator device. Network Configurator version 3.10 or higher is required to drag and drop devices to make connections.

Drag the target device at 192.168.250.1 and drop it at the originator device at Example: 192.168.250.100.

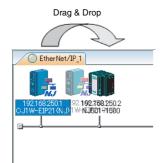




Additional Information

The EtherNet/IP originator device (i.e., a device in which connections can be set) must be one of the following OMRON EtherNet/IP devices.

Device name	Remarks
CJ1W-EIP21(NJ)	CJ1W-EIP21 mounted to NJ-series CPU Unit
CJ1W-EIP21	CJ1W-EIP21 mounted to CJ1 CPU Unit
CJ1W-EIP21(CJ2)	CJ1W-EIP21 mounted to CJ2 CPU Unit
CJ2B-EIP21	Built-in EtherNet/IP port in CJ2H CPU Unit
CJ2M-EIP21	Built-in EtherNet/IP port in CJ2M CPU Unit
CS1W-EIP21	CJ1W-EIP21 mounted to CS1 CPU Unit
NJ101	Built-in EtherNet/IP port in the NJ-series CPU Unit
NJ301-□□□□	
NJ501-□□□□	
NX701	Built-in EtherNet/IP port on the NX-series CPU Unit

Use the following procedure to create connections (i.e., data links) by dragging and dropping devices.


- **1** Set the tags and tag sets for the target device that will be dragged.
 - (1) Refer to 7-2-4 Creating Tags and Tag Sets for information on creating the settings if the target is one of the OMRON EtherNet/IP devices given above.
 - (2) If the target is another EtherNet/IP device, refer to the manual of that device and perform settings as required.
- A dialog box as in the following figure for connection allocation will be displayed when you drag the target device and drop it at the OMRON EtherNet/IP device.
 - (1) Using One of the Above OMRON EtherNet/IP Devices As Target

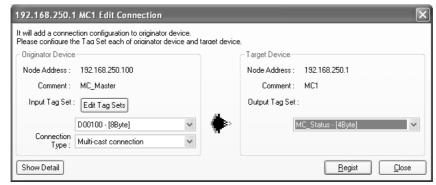

Select the output tag set from Target Device Area on the right side of the Edit Connection Dialog Box, and then select the input tag set to receive the output tag set in the Originator Device Area on the left.

• If there is no applicable input tag set at the originator, you can create a new one by using the **Edit Tag Sets** Button and **Edit Tag** Button.


(2) Using Other EtherNet/IP Devices as Target

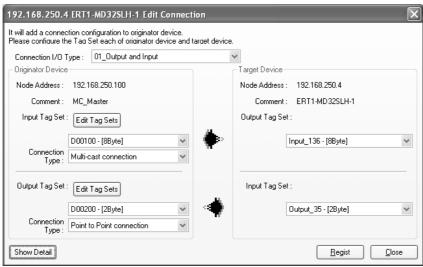

The connection I/O type list box in the upper part of the Connection Settings Dialog Box displays the connection I/O types that can be selected. Select the connection I/O type according to your application.

- The connection I/O types that can be selected depend on the target device.
- Items that can be selected will depend on the connection I/O type that is selected.
- · Select the output, input, or both output and input tag sets at the target and specify the corresponding input, output, or both input and output tag sets at the originator.
- If there is no applicable tag set at the originator, you can create a new one by using the Edit Tag Sets Button and Edit Tag Button.

The following display will appear when you click the Show Detail Button.

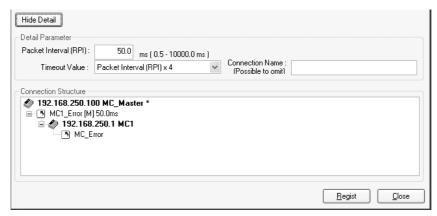

The specified values for detailed parameters will be displayed. Change the values as required. Connection names are automatically created using the following rule.

default_N (where N is a 3-digit number (001, 002, etc.) starting from 1)



Additional Information

The following dialog box will be displayed if a target device that does not have I/O data is dropped.



Before dropping again, refer to the manual of the applicable device and create the I/O data (i.e., output tag sets) required to create a connection.

3 After you have set all of the connection, click the **Regist** Button to create the connection. When creating the connection has been completed, the input tag set and output tag set will be blank. Next, you can continue to create connections by selecting the connection I/O type and setting a tag set.

Connecting the Network Configurator to the Network 7-2-8

This section describes how to Connect the Network Configurator online.

Connecting through Ethernet




Precautions for Correct Use

The first time you connect via Ethernet with Windows XP (SP2 or higher), Windows Vista, or Windows 7, you much change the Windows firewall settings. For the procedure, refer to A-4 Precautions for Using the Network Configurator on Windows XP, Windows Vista, or Windows 7.


Connect to the EtherNet/IP Unit's Ethernet port via the Ethernet network.

- Select Option Select Interface Ethernet I/F.
- Select Network Connect. If there are multiple Ethernet interfaces on the computer, the Select Connect Network Port Dialog Box is displayed. Select the interface to connect, and press the OK Button.


The following dialog box is displayed.

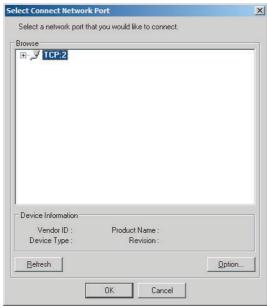


Click the OK Button. Select the network to connect.

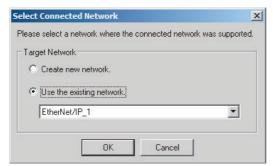


The Network Configurator will connect to the EtherNet/IP network. If the Network Configurator goes online normally, "Online" is displayed in the status bar at the bottom of the window. The network connection icon is displayed in blue on the Network Tab Page in which the Network Configurator is connected.

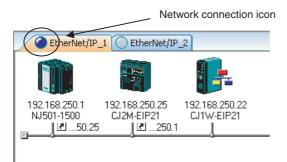


Select **Network** – **Change Connect Network** to switch the connected network.

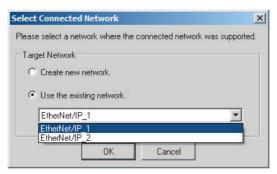

The following dialog box is displayed.

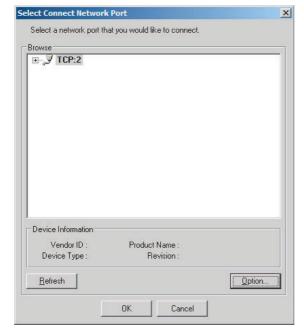


Click the **OK** Button. Select the network to connect to.

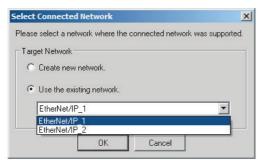


Connections through NJ-series CPU Unit's USB Port

Use the following procedure to connect to the EtherNet/IP Unit via the USB port on the CPU Unit.

- Select the communications interface. Select Option - Select Interface - NJ Series USB Port.
- Select TCP:2 and then click the OK Button.



Select the network to connect.

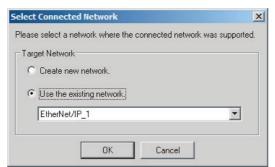

The Network Configurator will connect to the EtherNet/IP network. If the Network Configurator goes online normally, "On-line" is displayed in the status bar at the bottom of the window.



7-2-9 Downloading Tag Data Link Parameters

To make tag data links, you must download tag data link parameters, such as tag set settings and connection settings, to all devices in the EtherNet/IP network. When the download operation is executed, the tag data link parameters are transferred to the EtherNet/IP Units that require the settings.

The following procedure shows how to download the tag data link parameters. Refer to *7-2-8 Connecting the Network Configurator to the Network* for information on how to Connect the Network Configurator online.



Precautions for Correct Use


- If the node addresses (IP addresses) are not set correctly, you may connect to the wrong Controller and set incorrect device parameters. Download data only after you confirm that you are connected to the correct Controller.
- If incorrect tag data link parameters are set, it may cause equipment to operate unpredictably. Even when the correct tag data link parameters are set, make sure that there will be no effect on equipment before you transfer the data.
- When network variables are used in tag settings, a connection error will result if the variables
 are not also set in the CPU Unit. Before downloading the tag data link parameters, check to
 confirm that the network variables are set in the CPU Unit. Check whether the network variable, tag, and connection settings are correct. On the Connection and Tag Status Tab Pages
 described in 13-1-1 The Network Configurator's Device Monitor Function.
- If a communications error occurs, the output status depends on the specifications of the
 device being used. When a communications error occurs for a device that is used along with
 output devices, check the operating specifications and implement safety countermeasures.
- The communications port for the EtherNet/IP Unit is automatically restarted after the parameters are downloaded. This restart is required to enable the tag set and connection information.
 Before you download the parameters, check to confirm that problems will not occur with the equipment when the port is restarted.
- Make sure that the major CIP revision of the device registered with the Network Configurator is
 the same as the major CIP revision of the EtherNet/IP Unit that you use. If major CIP revisions
 are not the same, the parameters may not be downloaded. To determine whether downloading
 is possible, refer to 7-2-3 Registering Devices.
- Do not disconnect the Ethernet cable or reset or turn OFF the power to the EtherNet/IP Unit during the parameter download.
- Tag data links (data exchange) between relevant nodes is stopped during a download. Before
 you download data in RUN mode, make sure that it will not affect the controlled system. Also
 implement interlocks on data processing in ladder programming that uses tag data links when
 the tag data links are stopped or a tag data link error occurs.
- For EtherNet/IP Units with revision 2 or later, the CPU Unit can download tag data link parameters in RUN mode. (They can also be downloaded in PROGRAM mode.) Tag data links (data exchange) between relevant nodes is stopped during a download. Before you download data in RUN mode, make sure that it will not affect the controlled system. Also implement interlocks on data processing in ladder programming that uses tag data links when the tag data links are stopped or a tag data link error occurs.
- For EtherNet/IP Units with revision 1, you can download tag data link parameters only when the CPU Unit is in PROGRAM mode.
- Even for Units with revision 2 or later, all CPU Units must be in PROGRAM mode to download the parameters if any Units with revision 1 are included in the network.

- Connect the Network Configurator online.
- There are two ways to download the parameters.

Downloading to All Devices in the Network


Select Network - Download.

The following dialog box is displayed.




Downloading Individually to Particular Devices


Select the icon of the EtherNet/IP Unit to which you want to download. To select multiple nodes, hold down the Shift Key or the Ctrl Key while you click the icons. (In the following example, 2 nodes are selected: 192.168.250.1 and 192.168.250.2.) Right-click the icon to display the popup menu, and select *Parameter – Download*.

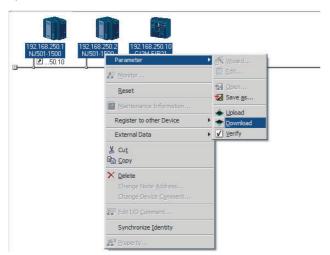

The following dialog box is displayed.




3 Click the Yes Button to download the tag data link parameters to the EtherNet/ IP Unit. The following dialog box is displayed if any of the CPU Units is not in PROGRAM mode.

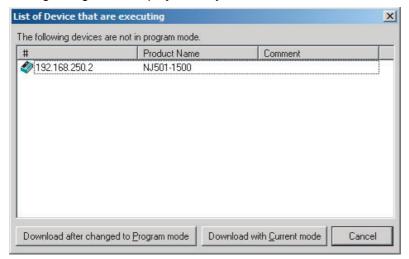


If the **Download after changed to Program mode** Button is clicked, all CPU Units are changed to PROGRAM mode and the parameters are downloaded. Confirm safety for all controlled equipment before you change the CPU Units to PROGRAM mode. You can restore the operating modes after the parameters are downloaded.

You can click the **Download with Current mode** Button to download the parameters even when one or more CPU Units is in RUN mode. The **Download with Current mode** Button is disabled if the EtherNet/IP Unit does not support this function (e.g., revision 1 of CJ1W-EIP21 or CS1W-EIP21).

During the download, the following progress monitor is displayed to show the progress of the download.

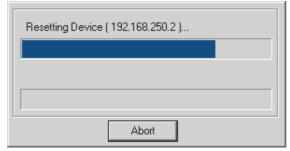

If the operating mode of one or more CPU Units was changed to download the parameters, you can return the CPU Units to the previous operating modes. If the **No** Button is clicked, the CPU Units remain in PROGRAM mode.



4 The following dialog box is displayed to show that the download was completed.



7-2-10 **Uploading Tag Data Link Parameters**

You can upload tag data link parameters (such as the tag set settings and connection settings) from EtherNet/IP Units in the EtherNet/IP network. The following procedure shows how to upload the parameters. For details on how to connect to the network from the Network Configurator, refer to 7-2-8 Connecting the Network Configurator to the Network.



Precautions for Correct Use


Make sure that the major CIP revision of the device registered with the Network Configurator is the same as the major CIP revision of the EtherNet/IP Unit that you use. If major CIP revisions are not the same, the parameters may not be uploaded. To determine whether uploading is possible, refer to 7-2-3 Registering Devices.

There are two ways to upload the parameters.

Uploading from All Devices in the Network

Connect the Network Configurator online, and then select *Upload* from the Network Menu.

The following dialog box is displayed.

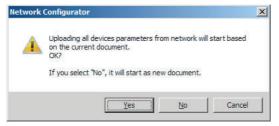

Clicking the Yes Button:

The tag data link parameters in the current project are uploaded.

Clicking the No Button:

You open a new project to upload the tag data link parameters. The current project is closed.

Clicking the Cancel Button:

The upload operation is cancelled. The upload is not performed.

If you click the **Yes** Button in step 2, the following dialog box is displayed.



Clicking the Yes Button:

Parameters are uploaded only from the devices registered in the Network Configuration Pane. Parameters are not uploaded from devices that are not registered in the Network Configuration Pane.

Clicking the No Button:

Performing a Batch Upload over the Network

Parameters are uploaded from all devices on the network. The current Network Configuration Information will be lost.


The following dialog box will be displayed. Select the devices for which to upload parameters and click the **OK** Button.



Clicking the Cancel Button:

The upload operation is cancelled. The upload is not performed.

4 If you click the **No** Button in step 2, the following dialog box is displayed. Select the devices for which to upload parameters and click the **OK** Button.

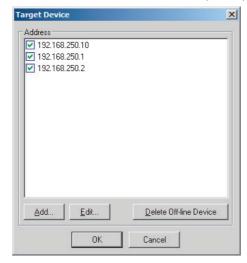

Uploading Individually from Particular Devices

Connect the Network Configurator online and select the icon of the EtherNet/IP Unit from which you want to upload the parameters. To select multiple nodes, hold down the Shift Key or the Ctrl Key while you click the icons. (In the following example, 2 nodes are selected: 192.168.250.1 and 192.168.250.2.)

Right-click the icon to display the pop-up menu, and select *Parameter – Upload*.




The following dialog box is displayed.




Click the Yes Button or the No Button.

During the upload, the following progress monitor is displayed to show the progress of the upload.

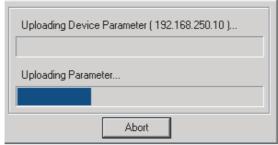

The following dialog box is displayed to show that the upload was completed.



7-2-11 Verifying the Tag Data Links

Tag data link parameters (such as the tag set settings and connection settings) can be compared with the parameters of the EtherNet/IP Units in the EtherNet/IP network. The following procedure shows how to compare the parameters. For details on how to connect to the network from the Network Configurator, refer to 7-2-8 Connecting the Network Configurator to the Network.



Precautions for Correct Use


Make sure that the major CIP revision of the device registered with the Network Configurator is the same as the major CIP revision of the EtherNet/IP Unit CPU Unit that you use. If the major CIP revisions are not the same, the parameters may not be compared. To determine whether comparison is possible, refer to 7-2-3 Registering Devices.

Verifying the Network Configuration

You can use the following procedure to compare the list of registered devices in the Network Configuration Pane with the devices connected on the EtherNet/IP network, and check the IP addresses and device types. This function does not verify device parameters.

- **1** Connect the Network Configurator online.
 - Select **Network Verify Structure**.

 The following progress monitor is displayed to show the progress as data is read from the network and compared.




3 The results of the comparison between the network configuration file and data from the network are displayed as shown below.

Differences Not Found in the Comparison



Differences Found in the Comparison

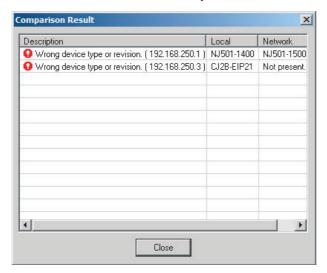

Differences Found in the Device Type




Click the **OK** Button or the **Close** Button.

Verifying the Device Parameters

Use the following procedure to compare the device parameters for the devices selected in the Network Configuration Pane with those of the devices connected on the EtherNet/IP network. The IP addresses, device types, and device parameters are compared.

- Connect the Network Configurator online.
- Click the icon of the EtherNet/IP Unit to verify. To select multiple nodes, hold down the Shift Key or the Ctrl Key while you click the icons. (In the following example, 2 nodes are selected: 192.168.250.1 and 192.168.250.2.)

Right-click the icon to display the pop-up menu and select *Parameter – Verify*.

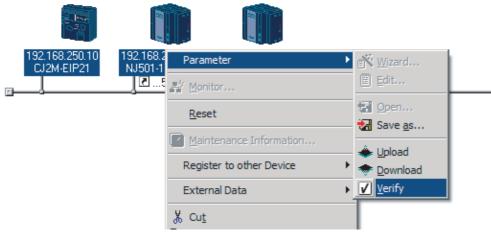

The following dialog box is displayed.




Click the Yes Button or the No Button.

4 The following dialog box is displayed.


Differences Not Found in the Comparison



Differences Found in the Comparison

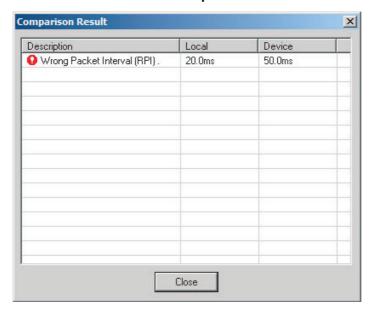


Differences Found in the Device Type



Click the **OK** Button or the **Close** Button.

5 If multiple nodes have been selected and compared, the following message is displayed. Click the **Yes** Button.

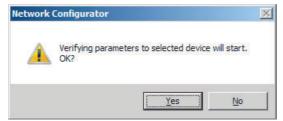

The comparison results are displayed in order of the selected nodes.

7-2-12 Starting and Stopping Tag Data Links

Automatically Starting Tag Data Links

Tag data links are automatically started immediately after the data link parameters are downloaded from the Network Configurator. (They are automatically started after the CPU Unit's power is turned ON or the Unit is restarted.)

Starting and Stopping Tag Data Links for the Entire Network

You can start and stop tag data links for the entire network from the user program or from the Network Configurator.



Precautions for Correct Use

Use the same method (i.e., either the user program or the Network Configurator) to both start and stop tag data links. For example, if you use the *_TDLStopCmd (Tag Data Link Stop Bit) device variable for the CJ-series Unit to stop tag data links, you cannot start them from the Network Configurator.

Using Commands in the User Program

You can change the corresponding elements in the following the device variables for the CJ-series Unit to TRUE in the user program to start and stop tag data links for individual devices. (Refer to Section 3 Assigning Device Variables for CJ-series Units.)

- *_TDLStartCmd (Tag Data Link Start Bit)
- *_TDLStopCm (Tag Data Link Stop Bit)



Additional Information

- Change the Tag Data Link Start Bit to TRUE, while the Tag Data Link Communications Stop Bit is FALSE. If the Tag Data Link Stop Bit is TRUE, the tag data links do not start even if the Tag Data Link Start Bit is changed to TRUE. Furthermore, if the Tag Data Link Start Bit and the Tag Data Link Stop Bit are both TRUE, then an error occurs, the Multiple Switches ON Error device variable for the CJ-series Unit changes to TRUE, and the event is recorded in the event log.
- After you start the tag data links, do not force the Tag Data Link Start Bit to change to FALSE from the user program or from the Sysmac Studio. It will change to FALSE automatically.


Using the Network Configurator

You can select **I/O Connection** – **Start or I/O Connection** – **Stop** from the Network Menu to start and stop tag data links for individual devices.

Starting and Stopping Tag Data Links for Individual Devices

Using the Network Configurator

You can start and stop tag data links for individual devices using the Connection Tab Page in the Monitor Device Dialog Box. This applies only to tag data links for which the device is the originator. Select *Monitor* from the Device Menu to access the Monitor Device Dialog Box.

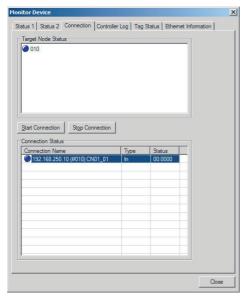

Start Connection Button:

Starts all connections for which the device is the originator.


Stop Connection Button:

Stops all connections for which the device is the originator.


7-2-13 Clearing the Device Parameters

You can clear the tag data link parameters that are saved in the EtherNet/IP Unit on the EtherNet/IP network to return them to their default settings. The following procedure shows how to clear the tag data link parameters. For details on how to connect to the network from the Network Configurator, refer to 7-2-8 Connecting the Network Configurator to the Network.

- Connect the Network Configurator online.
- 2 Select the icon of the EtherNet/IP Unit from which you want to clear the device parameters. In the following example, 2 nodes are selected: 192.168.250.1 and 192.168.250.2. To select multiple nodes, press and hold the **Shift** Key while you select additional icons.

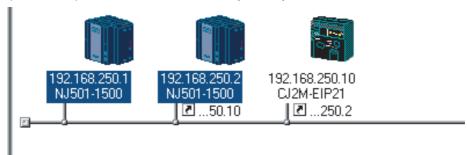

3 Select *Device - Reset*. You can also right-click the icon and select *Reset* from the popup menu.

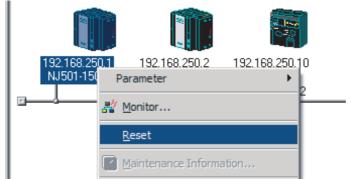

4 The following dialog box is displayed.



Yes Button:

The following dialog box is displayed.



Select the Initialize tag data link configuration, and then emulate cycling power Option and then click the OK Button.



Precautions for Correct Use

The Controller is not restarted. Only the EtherNet/IP Unit is restarted.


No Button:

The device parameters are not cleared or reset.


7-2-14 Saving the Network Configuration File

You can save device parameters set in the Network Configurator or device parameters uploaded from the network in a network configuration file.

Select File - Save As. The following dialog box is displayed.

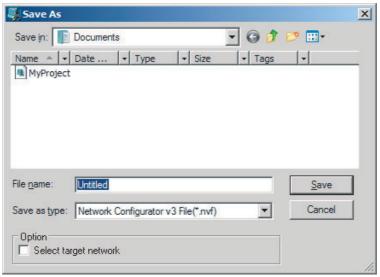


Untitled.nvf is displayed as the default file name.

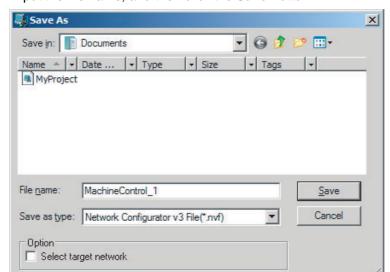


2 Input the file name, and then click the **Save** Button.

This completes the network configuration file save operation.

- When the network configuration is changed later, you can overwrite the existing network configuration file if you select *File Save* or click the Button.
- 4 You can select the *Select target network* Check Box in the Option Area to save a network configuration file with only the required networks.

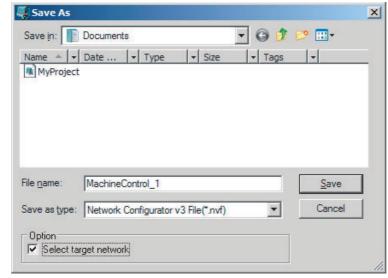


Select the check boxes of the networks to save and click the **OK** Button.

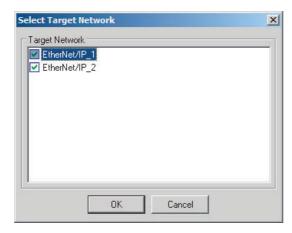

Reading a Network Configuration File 7-2-15


You can read a previously saved network configuration file into the Network Configurator.

Select File - Open or click the E Button. The following dialog box is displayed.

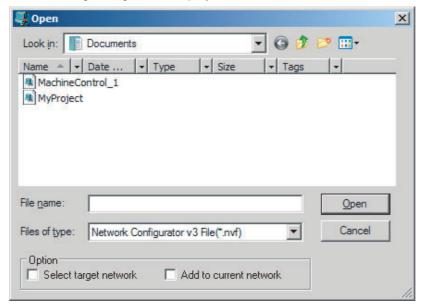



If the network configuration file that you want to read is not displayed, change to another folder.

If you select the network configuration file that you want to read, that file name is displayed in the File name Field.

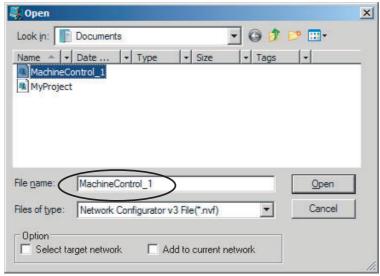

Click the **Open** Button to read the network configuration file.



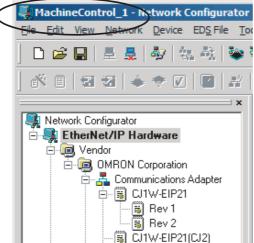

5 Select any of the options as necessary. The options are listed below.

Setting	Description
Select target network	Allows you to select specific networks from the network configuration and open them.
Add to current document	Allows you to add the networks from the network configuration file that is currently open to the current configuration file.




Additional Information

The save format will depend on the Network Configurator version. You can import configuration files (*.ncf) created with the Network Configurator for EtherNet/IP (version 2 or lower) if you select *External Data – Import* from the File Menu.


7-2-16 Checking Connections

You can check the consistency of connection parameters for network configuration files with device parameters that were set with the Network Configurator or device parameters uploaded from the network.


1 Select *Check Connection* from the Network Menu. The following dialog box is displayed if parameters are normal.



The following dialog box is displayed if there are parameter errors. Check the displayed details and review the settings.

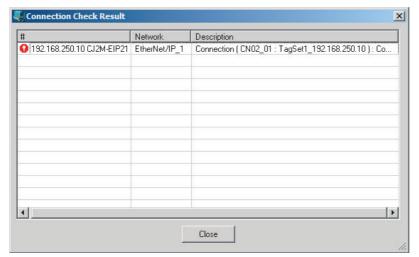

If an inconsistency is found, open the originator's Edit Device Parameter Dialog Box and click the Connection Tab. The inconsistent connection in the Register Device List is displayed with a 📇 icon (instead of the normal 🚣 icon). To change the connection setting and select a different target variable, select the connection as shown below and click the Edit Button.

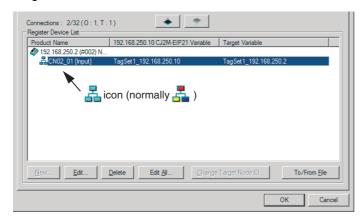

7-2-17 Changing Devices

You can change devices that are registered in a network configuration with the Network Configurator. Select **Change Device** from the Device Menu to display a list of the possible devices to change to. Select the desired device. You can change a device only when there is complete or upward compatibility with the device.

Device Changes

Model after ch	ange	CS1W -EIP21	CJ1W- EIP21	CS1W -EIP21	CJ1W- EIP21	CJ1W- EIP21 (CJ2)	CJ2B- EIP21	CJ1W- EIP21 (NJ)	CJ2M	CS1W -EIP21	CJ1W- EIP21	CJ1W- EIP21 (CJ2)	CJ2B- EIP21	CJ1W- EIP21 (NJ)	NJ501-[NJ301-[NJ101-[
Model before change	Rev	1	1	2	2	2	2	2	2	3	3	3	3	3	1	2
CS1W-EIP21	1		Yes	Yes	Yes	Yes	Yes	Yes	*3	Yes	Yes	Yes	Yes	Yes	*4	*4
CJ1W-EIP21	1	Yes		Yes	Yes	Yes	Yes	Yes	*3	Yes	Yes	Yes	Yes	Yes	*4	*4
CS1W-EIP21	2	No	No		Yes	Yes	Yes	*5	*3	Yes	Yes	Yes	Yes	*5	*4 *5	*4 *5
CJ1W-EIP21	2	No	No	Yes		Yes	Yes	*5	*3	Yes	Yes	Yes	Yes	*5	*4 *5	*4 *5
CJ1W- EIP21(CJ2)	2	No	No	*1	*1		Yes	*5	*3	*1	*1	Yes	Yes	*5	*4 *5	*4 *5
CJ2B-EIP21	2	No	No	*1	*1	Yes		*5	*3	*1	*1	Yes	Yes	*5	*4 *5	*4 *5
CJ1W- EIP21(NJ)	2	No	No	*1 *2	*1 *2	*2	*2		*2 *6	*1 *2	*1 *2	*2	*2	Yes	*4	*4
CJ2M	2	No	No	*1	*1	Yes	Yes	*5		*1	*1	Yes	Yes	*5	*4 *5	*4 *5
CS1W-EIP21	3	No	No	Yes	Yes	Yes	Yes	*5	*3		Yes	Yes	Yes	*5	*4 *5	*4 *5
CJ1W-EIP21	3	No	No	Yes	Yes	Yes	Yes	*5	*3	Yes		Yes	Yes	*5	*4 *5	*4 *5
CJ1W- EIP21(CJ2)	3	No	No	*1	*1	Yes	Yes	*5	*3	*1	*1		Yes	*5	*4 *5	*4 *5
CJ2B-EIP21	3	No	No	*1	*1	Yes	Yes	*5	*3	*1	*1	Yes		*5	*4 *5	*4 *5
CJ1W- EIP21(NJ)	3	No	No	*1 *2	*1 *2	*2	*2	Yes	*2 *6	*1 *2	*1 *2	*2	*2		*4	*4
NJ501-□□□□	1	No	No	*1 *2	*1 *2	*2	*2	Yes	*2 *6	*1 *2	*1 *2	*2	*2	Yes		Yes
NJ101-	2	No	No	*1 *2	*1 *2	*2	*2	Yes	*2 *6	*1 *2	*1 *2	*2	*2	Yes	Yes	

Yes: Can be changed.


No: Cannot be changed.

- *1 Cannot be changed if a network variable is specified as a tag.
- *2 Cannot be changed if the maximum size of a tag name or tag set name (size after conversion into UTF-8) exceeds 48 bytes.
- *3 Cannot be changed if the following items exceed the permissible settings of the device after the change: Number of I/O connections, number of tags, number of tag sets, and size of one tag set.
- *4 Cannot be changed in any of the following cases:
 - The number of I/O connections, number of tags, number of tag sets, or size of one tag set exceeds the permissible settings for the device after the change.
 - RPI exceeds the permissible settings or is set in 0.5-ms increments (such as 10.5 ms).
- *5 Cannot be changed if the physical addresses are allocated to one of the tags and the tag size is an odd number of bytes.
- *6 Cannot be changed if any of tags, tag sets, and refreshing sizes exceeds the permissible settings.

 (A refreshing size refers to a total size of multiple tag sets that a single node exchanges. There are limits to the permissible refresh size settings.)

7-2-18 Displaying Device Status

Device status is displayed using the following icons in Maintenance Mode. To enter Maintenance Mode, select *Large Icons – Maintenance Mode* from the View Menu.

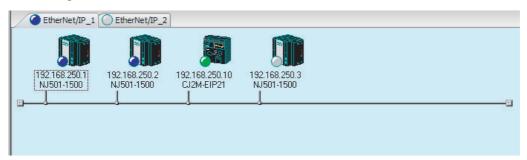

Icon	Status
0	Offline
(white)	
(gray)	Default (including no Controller Configurations and Setup)
(green)	Idle (including when CPU Unit of Controller is in PROGRAM mode)
(blue)	Normal communications state (including when Controller is in RUN mode)
(yellow)	Warning status (including when there is a partial fault or non-fatal error)
(red)	Alarm status (including when there is a major fault or fatal error in the Controller)

7-3 Ladder Programming for Tag Data Links

7-3-1 Ladder Programming for Tag Data Links

If data in the ladder program is linked by tag data links, add conditions 1 to 3 in the ladder program for that data. If you want to use target PLC information in the input conditions, add conditions 4 and 5.


- Conditions to enable the NJ-series EtherNet/IP Unit's tag data links:
 - (1) The following error bits in the Unit Error Occurred (*_UnitErr) are FALSE.
 - (2) Also, the Online variable (*_ETNOnlineSta) is TRUE.
- Conditions showing that connections are established with the target device, and tag data links are operating:
 - (3) The element corresponding to the target node address in the Normal Target Node Table variable (*_EstbTargetSta) [0] to [63] is TRUE.
- Condition for the Target Node PLC Operating Flags (operating or stopped)
 (*_TargetPLCMdSta) (valid for OMRON Controllers only):
 - (4) The Target PLC Operating Mode of the target node is TRUE.
- Condition for the Target PLC Error Information of the target node (valid for OMRON Controllers only):
 - (5) The corresponding element in the Target Node PLC Error Flags (*_TargetPLCErrSta) is FALSE.

When you want to use the Target Node PLC Error Flags, the Controller status must be included in the tag sets for both the originator and target. Include the Controller status by using the Network Configurator to select the Include Options in the Edit Tag Set Dialog Boxes.


Programming Example to Detect Normal Operation

The following programming can be used to confirm that normal communications are being performed for each target node. If the Controller status is included in the tag data, the status of the Controller can also be detected.

Programming Example 1 to Detect Normal Operation

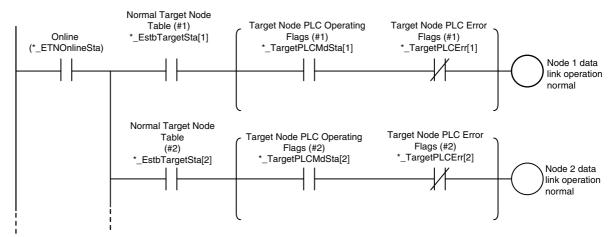

Programming Example 2 to Detect Normal Operation

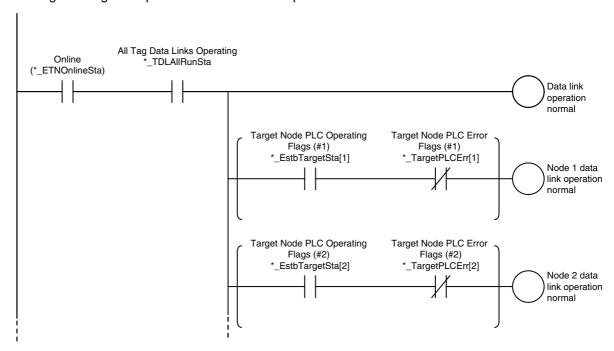


Programming Example to Detect Errors

The following programming can be used to check for tag data link errors for each target node. This programming is used to detect errors only after the data links for all nodes have started normally.


```
Online
                   Normal Target Node Table (#1)
(*_ETNOnlineSta)
                         *_EstbTargetSta[1]
                                                                              Node 1 error output
                           Normal Target
                          Node Table (#1)
                                                   Node 1
                         *_EstbTargetSta[1]
                                                 error output
                           Normal Target
                         Node Table (#2)
*_EstbTargetSta[2]
                                                                              Node 2 error output
                           Normal Target
                          Node Table (#2)
                                                   Node 2
                         *_EstbTargetSta[2]
                                                 error output
```

Data Processing Programming Example

• The following type of programming can be used to process data only when the data links are operating normally.

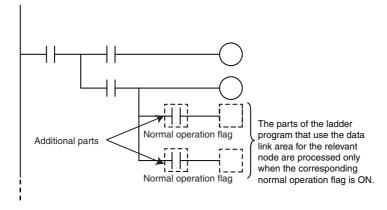

• You can use MC - MCR instructions and JMP instructions to process data only when the data links are operating normally as shown below.

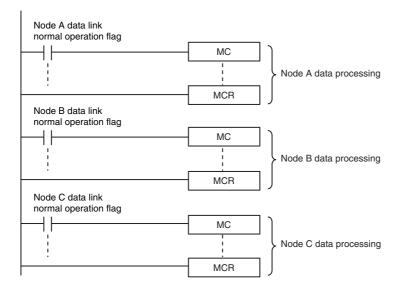



Precautions for Correct Use

Even if an error occurs in communications with a target device, the input data from the target device will remain stored in words allocated in memory to the local node. To prevent malfunctions, write the user program so that no input processing is performed when the following Unit Error Occurred (*_UnitErr) are TRUE.

7-3-2 Status Flags Related to Tag Data Links

The status of the tag data links is reflected in the following device variables for the CJ-series Unit.

Variable name	Description
*_TargetPLCMdSta [0] to [63] (Target Node PLC Operating Flags) * Corresponds to the operating information in the Controller status.	This variable shows the operating status of the target PLCs that are connected with the EtherNet/IP Unit as the originator. The information in this area is valid only when the corresponding Normal Target Node Table is TRUE. If the corresponding Normal Target Node Table is FALSE, the Target Node PLC Operating Flags indicates the previous operating status.
	Array[x] is TRUE: The target PLC with a node address of x is in operating status. Array[x] is FALSE: Other than the above.
*_TargetPLCErrSta [0] to [63] (Target Node PLC Error Flags) * Corresponds to the Controller Error Information in the Controller status.	This variable indicates that the connection for the Registered Target Node Table was not established or that an error occurred in the target PLC. The information in this area is valid only when the corresponding element in the Registered Target Node Table is TRUE. Array[x] is TRUE: The Registered Target Node Table for a node address of x is TRUE, and the Normal Target Node Table is FALSE or the Target Node PLC Error Flags is TRUE. Array[x] is FALSE: When the Registered Target Node Table for a node address of x is FALSE, or when the Registered Target Node Table is TRUE and the Normal Target Node Error Information is TRUE.
	This is when the Controller Error Information is FALSE.
*_EstbTargetSta [0] to [63] (Normal Target Node Table) * This status is not included in the Controller sta-	This variable gives a list of nodes that have normally established EtherNet/IP connections. Array[x] is TRUE: The connection to the node with a node
tus.	address of x is established normally. Array[x] is FALSE: A connection is not established or an error has occurred.

Tag Data Links with Models Other 7-4 than NJ-Series CPU Units

The performance of tag data links depends on the CPU Unit and EtherNet/IP Unit model as shown below. When you use tag data links between the EtherNet/IP Unit and another EtherNet/IP Unit or CPU Unit, use tag data link settings that match the Unit with the lower communications performance.

Differences in Tag Data Link Performance Specifications

		004W 51504	CJ2M-	NJ-series CPU Unit			
	Item	CS1W-EIP21, CJ1W-EIP21, or	Unit v	ersion	No-series of o offic		
		CJ2H-CPU6□-EIP	2.0	2.1 or later	Ver. 1.02 or earlier	Ver. 1.03 or later	
Tags	Total size of all tags	184,832 words	640 words		9,600 word	s	
	Maximum size of 1 tag	722 words (721 words when the tag set includes the Controller status)	20 words (19 words when the tag set includes the Controller sta- tus)	640 words (639 words when the tag set includes the Controller sta- tus)	300 words when the ta includes the ler status)	ag set	
	Number of registra- ble tags	256	32		256* ¹		
Tag sets	Maximum size of 1 tag set	722 words (721 words when the tag set includes the Controller status)	20 words (19 words when the tag set includes the Controller sta- tus)	640 words (639 words when the tag set includes the Controller sta- tus)	300 words when the ta includes the ler status)	ag set	
	Number of tags per tag set	8 (7 tags/tag set when the tag set includes the Controller status) Note Input and output variables cannot be combined.					
	Number of registra- ble tag sets			32			
Connections	Number of connections	256	32		32		
	Maximum data size	252 words or 722	20 words	640 words		(Refer to 7-	
per connection		words*2 (Refer to 7- 1-7 Concurrency of Tag Data Link Data for information on the conditions to maintain concur- rency in the data for one connection.)	(Data concurrency is maintained within each connection.)		1-7 Concurrency of Tag Data Link Data for information on the conditions to maintain concurrency in the data for one connec- tion.)		
Packet intervals (RPIs)		0.5 to 10,000 ms in 0.5-ms increments	1 to 10,000 ms in 0.5-ms increments		10 to 10,000 ms in 1- ms incre- ments	1 to 10,000 ms in 1- ms incre- ments	
Allowed communications bandwidth per Unit (pps)		6000 to 12,000 pps*3, *4	3,000 pps* ³		1,000 pps* ³	3,000 pps* ³	

^{*1} The maximum number of tags is given for the following conditions.

- · All tag sets contain eight tags.
- The maximum number of tag sets (32) is registered.

- *2 To use a data size of 505 to 1,444 bytes, the system must support a large forward open (an optional CIP specification). The SYSMAC CS/CJ-series Units support a large forward open, but before you connect to nodes of other companies, confirm that those devices also support it.
- *3 Here, pps means "packets per second" and indicates the number of packets that can be processed in one second.
- *4 For the Units with unit version 2.1 or earlier, this is 6,000 pps.

Specifying Tags

You can specify where to assign a tag either with a variable or with a I/O memory address. However, some CPU Units may not support both of these methods. Communications with the devices are possible regardless of whether the remote node tags are set using I/O memory addresses or network variables.

The supported tag specification methods for each CPU Unit are listed in the table below.

Yes: Supported, No: Not supported

CPU U	CPU Unit		Network variable	I/O memory address	
	EtherNet/IP Unit	Network Configurator	name specification	specification	
NJ-series CPU Unit		NJ101, NJ301-1100, NJ301- 1200, NJ501-1300, NJ501- 1400, or NJ501-1500	Yes	Yes*	
	CJ1W-EIP21	CJ1W-EIP21 (NJ)	Yes	Yes*	
CJ2H-CPU6□-EIP		CJ2B-EIP21	Yes	Yes	
	CJ1W-EIP21	CJ1W-EIP21(CJ2)	Yes	Yes	
CJ2H-CPU6□	CJ1W-EIP21	CJ1W-EIP21(CJ2)	No	Yes	
CJ2M-CPU3□		CJ2M-EIP21	Yes	Yes	
	CJ1W-EIP21	CJ1W-EIP21(CJ2)	Yes	Yes	
CJ2M-CPU1□	CJ1W-EIP21	CJ1W-EIP21(CJ2)	No	Yes	
CJ1 CPU Unit	CJ1W-EIP21	CJ1W-EIP21	No	Yes	
CS1 CPU Unit	CS1W-EIP21	CS1W-EIP21	No	Yes	

^{*} To specify an I/O memory address for a tag, do not specify the I/O memory address for the tag directly. Instead, create a variable, set an AT specification of the I/O memory address on the Sysmac Studio, and then specify the variable with the AT specification for the tag.

QuickConnect 7-5

QuickConnect is used for robots, tool changers, and similar application devices to support requests for rapid devices changes, such as for tools, during network operation. When the EtherNet/IP Unit is used as the originator, it supports QuickConnect.

By using the EtherNet/IP Unit as the originator, connections can be opened and closed for individual target nodes. This is achieved by executing services of the Connection Configuration object of the EtherNet/IP Unit. Refer to 8-3-6 Connection Configuration Object (Class ID: F3 Hex) for object specifications.



Version Information

QuickConnect is supported for EtherNet/IP Units manufactured in or after July 2015 provided that they are used as the originators.



Precautions for Correct Use

To build the applications described above, the target nodes must also support QuickConnect.



Message Communications


8-1	Overvi	iew of the CIP Message Communications Service	8-2
U 1	8-1-1	Overview of the CIP Message Communications Service	
	8-1-2	Message Communications Service Specifications	
8-2	Using	CIP Message Communications	8-3
	8-2-1	Overview	8-3
	8-2-2	CIP Communications Instructions	8-4
	8-2-3	Using CIP Communications Instructions	8-5
	8-2-4	Route Path	8-6
	8-2-5	Preparing Derivative Data Types to Use CIP Communications	
		Instructions	8-11
	8-2-6	Sample Programming for CIP Connectionless (UCMM) Message Communications	8-13
	8-2-7	Sample Programming for CIP Connection (Class 3) Message	
		Communications	8-19
	8-2-8	Operation Timing	8-26
	8-2-9	Response Codes	
8-3	CIP Ob	pjects Sent to the EtherNet/IP Unit	8-31
	8-3-1	CIP Objects Sent to the EtherNet/IP Unit	8-31
	8-3-2	Identity Object (Class ID: 01 Hex)	8-31
	8-3-3	TCP/IP Interface Object (Class ID: F5 hex)	8-33
	8-3-4	Ethernet Link Object (Class ID: F6 Hex)	
	8-3-5	Controller Object (Class ID: C4 Hex)	
	8-3-6	Connection Configuration Object (Class ID: F3 Hex)	
		, , ,	

8-1 **Overview of the CIP Message Communications Service**

Overview of the CIP Message Communications Service 8-1-1

CIP commands can be sent to devices on the EtherNet/IP network whenever they are required. You execute CIP_SEND instructions in a program in the NJ-series CPU Unit to send CIP commands, such as those to read and write data and to receive the responses.

You can use CIP messages from the client to read and write memory in the Controller with the server without adding any special programming to the user program of the Controller with the server.

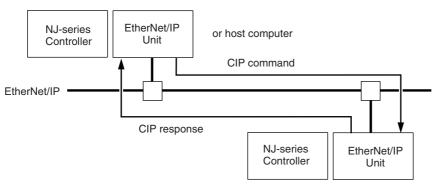


Message Communications Service Specifications 8-1-2

Iten	ı	Specification	
Message type		Either of the following can be selected.	
		CIP UCMM connectionless messages	
		CIP class 3 connection messages	
Execution method		CIPSend (Send Explicit Message Class 3) instruction or CIPUCMM (Read Variable UCMM Explicit) instruction	
Data contents		Sending required CIP commands and receiving responses	
Communications para	meters	Message type, timeout value, and root path specification	
Maximum length per connection	Non-connection type (UCMM)	502 bytes	
	Connection type	502 bytes for Forward_Open	
	(class 3)	1,994 bytes for Large_Forward_Open	

8-2 Using CIP Message Communications

8-2-1 Overview

CIP communications instructions can be executed in the user program in the NJ-series CPU Unit to read and write variables in a NJ-series CPU Unit or a CJ2 CPU Unit on the EtherNet/IP network, and send specified CIP commands.

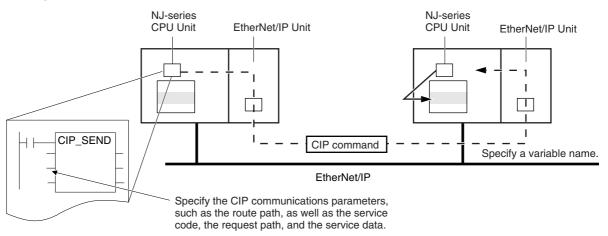

CIP Communications Instructions 8-2-2

The following CIP communications instructions are available. For details on CIP communications instructions, refer to the NJ/NX-series Instructions Reference Manual (Cat. No. W502).

Instruction	Name	Description	Communica- tions method
CIPUCMMRead	Read Variable UCMM Explicit	Reads the value of a variable with a Network Publish attribute from the specified remote Controller on the CIP network and stores the value in a variable at the local Controller.	CIP UCMM connectionless messages
CIPUCMMWrite	Write Variable UCMM Explicit	Writes the value of a variable at the local controller to a variable with a Network Publish attribute at the specified remote Controller on the CIP network.	
CIPUCMMSend	Send Explicit Message UCMM	Sends a specified CIP command to the specified remote Controller on the CIP network. Refer to 8-2-9 Response Codes and 8-3 CIP Objects Sent to the EtherNet/IP Unit for information on the service codes and response codes that are used with the NJ/NX-series CPU Units.	
CIPOpen	Open CIP Class 3 Connection (Large_Forward _Open)	Opens a CIP class 3 connection (Large_Forward_Open) with the specified remote node.	CIP class 3 connection message
CIPOpenWithD ataSize	Open CIP Class 3 Connection with Specified Data Size	Opens a CIP class 3 connection with the specified remote node that allows class 3 explicit messages of the specified data length or shorter to be sent and received.	
CIPRead	Read Variable Class 3 Explicit	Reads the value of a variable with a Network Publish attribute from the specified remote Controller on the CIP network and stores the value in a variable at the local Controller.	
CIPWrite	Write Variable Class 3 Explicit	Writes the value of a variable at the local controller to a variable with a Network Publish attribute at the specified remote Controller on the CIP network.	
CIPSend	Send Explicit Message Class 3	Sends a specified class-3 CIP command to the specified remote Controller on the CIP network. Refer to 8-2-9 Response Codes and 8-3 CIP Objects Sent to the EtherNet/IP Unit for information on the service codes and response codes that are used with the NJ/NX-series CPU Units.	
CIPClose	Close CIP Class 3 Connection	This instruction closes the CIP class 3 connection that is specified by the handle.	



Version Information


A CPU Unit with unit version 1.06 or later and Sysmac Studio version 1.07 or higher are required to use the CIPOpenWithDataSize instruction.

8-2-3 Using CIP Communications Instructions

CIP message communications include the following processes. If CIP class 3 connections are used, the open and close processes are required before and after the data is sent and received.

Process	Description	Instruction
Open process (only for CIP class 3 connec- tions)*1	Execute this process before you use a CIP message. Open processing is continued until a CIP class 3 connection is established.	CIPOpen CIPOpenWithDataSize
Sending and receiving variable data*2	This process is used to read and write data for specified variables with the Network Publish attributes.	CIPUCMMRead CIPUCMMWrite CIPRead CIPWrite
Sending CIP commands	You can set the required CIP command.	CIPUCMMSend CIPSend
Close process (only for CIP class 3 connec- tions)	This process closes the connection.	CIPClose

- *1 There can be up to 32 handles at the same time from opening connections. Even if a connection is broken for a timeout, the handle is not released. Execute the CIPClose instruction.
- *2 Addresses in memory for CJ-series Units (e.g., D0000) cannot be specified directly. To access memory for CJ-series Units, access a variable with an AT specification.

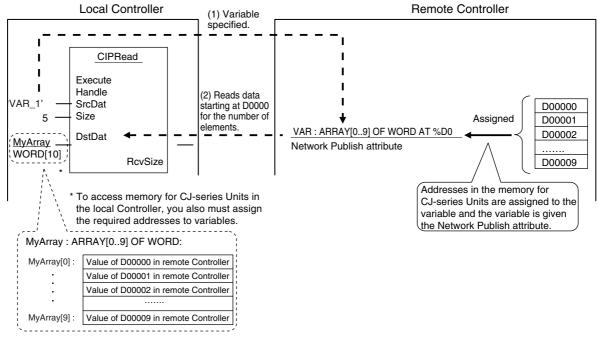



Precautions for Correct Use

You can execute a maximum of 32 CIP communications instructions at the same time. This includes all CIP communications instructions. Use exclusive control in the user program so that no more than 32 socket service instructions are executed at the same time.

8-2-4 **Route Path**

The route path indicates the path from the local CPU Unit to the remote Controller on the network. Routing is performed for CIP communications instructions based on route paths.


Route Path Notation

The EPATH data type is used to give route paths. The basic format is shown below.

Network_type_number \Remote_address

The network type number and the remote address are determined as shown in the following table according to whether the route type is (1) a Unit on the CPU Rack or (2) a communications port on a Communications Unit.

Route	Network type number (hexadecimal)	Remote address (hexadecimal)
Output to Unit on CPU Rack	#01 (backplane port)	Remote Unit address (Refer to Additional Information below.)
Output from communications port on Communications Unit	#02 (EtherNet/IP Unit)	IP address

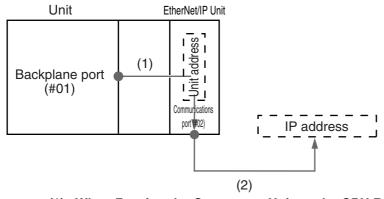

(1) When Routing the Output to a Unit on the CPU Rack

Output the command to the backplane port as a network with the CPU Rack. Specify the Unit address as the address of the remote Unit.

(2) When Routing the Output to a Communications Port on a Communications Unit

Output the command to an EtherNet/IP port. Specify the IP address as the address of the remote node.



Additional Information

Unit Addresses

A Unit address is used to discriminate between several devices connected to a single node on a network.

Set the unit address as shown below.

• CPU Unit: 00 hex, 01 hex


 CPU Bus Units (EtherNet/IP Units): Unit number + 10 hex

Route Path Notation Examples

The notation of the route path is different for communications on the built-in EtherNet/IP port and for communication on an EtherNet/IP Unit. This section provides examples of route paths.

Communicating with an EtherNet/IP Unit

Example: Communicating from the EtherNet/IP Unit mounted to CPU Unit 1 to CPU Unit 2 via the EtherNet/IP Unit mounted to CPU Unit 2

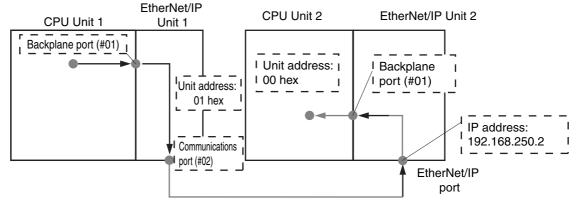

(1) CPU Unit 1 to EtherNet/IP Unit 1

- Network type number: "01" (Output the command via internal backplane port.)
- Remote address: "#01" (unit address of EtherNet/IP Unit)

(2) EtherNet/IP Unit 1 to EtherNet/IP Unit 2

- Network type number: "02" (Output the command via EtherNet/IP port.)
- Remote address: Specify the remote IP address.


(3) EtherNet/IP Unit 2 to CPU Unit 2

- Network type number: "01" (Output the command via internal backplane port.)
- Remote address: "#00" (unit address of CPU Unit)

Route path: $\01\401\02\192.168.250.2\01\400$ (1) (2) (3)

Communicating with a Built-in EtherNet/IP Port

Example: Communicating from the EtherNet/ IP Unit mounted to CPU Unit 1 to CPU Unit 2 via the Built-in EtherNet/ IP port on CPU Unit 2

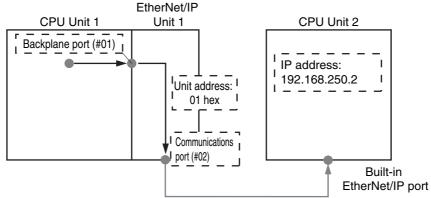

(1) CPU Unit 1 to EtherNet/IP Unit 1

- Network type number: "01" (Output the command via internal backplane port.)
- Remote address: "#01" (unit address of EtherNet/IP Unit)


(2) EtherNet/IP Unit 1 to CPU Unit 2 (built-in EtherNet/IP port)

- Network type number: "02" (Output the command via EtherNet/IP port.)
- Remote address: Specify the remote IP address.

Route path:\01\#01\02\192.168.250.2

Access via a Relay Node

Example: Communicating from CPU Unit 1 to CPU Unit 3 via CPU Unit 2

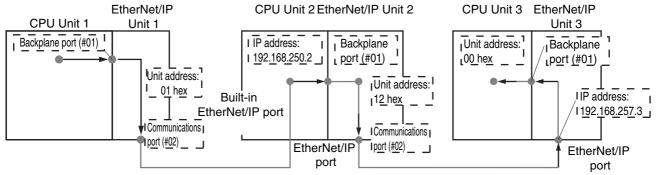

(1) CPU Unit 1 to EtherNet/IP Unit 1

- Network type number: "01" (Output the command via internal backplane port.)
- Remote address: "#01" (unit address of EtherNet/IP Unit)

(2) EtherNet/IP Unit 1 to CPU Unit 2 (built-in EtherNet/IP port)

- Network type number: "02" (Output the command via EtherNet/IP port.)
- · Remote address: Specify the remote IP address.

(3) CPU Unit 2 to EtherNet/IP Unit 2

- Network type number: "01" (Output the command via internal backplane port.)
- Remote address: "#12" (Unit address of EtherNet/IP Unit (Unit number: 2+10 hex = 12 hex))

(4) EtherNet/IP Unit 2 to EtherNet/IP Unit 3

- Network type number: "02" (Output the command via EtherNet/IP port.)
- · Remote address: Specify the remote IP address.


(5) EtherNet/IP Unit 3 to CPU Unit 3

- Network type number: "01" (Output the command via internal backplane port.)
- · Remote address: "#00" (unit address of CPU Unit)

\01\#01\02\192.168.250.2\01\#12\02\192.168.257.3\01\#00 Route path: (3)(1) (2)(4)(5)

Communicating between EtherNet/IP Units

Example: Communicating via EtherNet/IP Units Mounted to CPU Unit 1 and CPU Unit 2

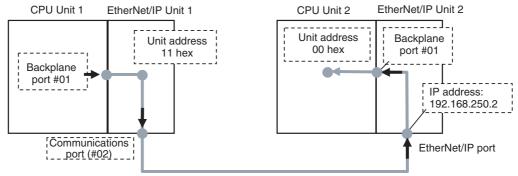

(1) CPU Unit 1 to EtherNet/IP Unit 1

- Network type number: "#01" (Output the command via internal backplane port.)
- Remote address: "#11" (Unit address of EtherNet/IP Unit (Unit number: 1+10 hex))

(2) EtherNet/IP Unit 1 to EtherNet/IP Unit 2

- Network type number: "#02" (Output the command via EtherNet/IP port.)
- Remote address: Specify the remote IP address.

(3) EtherNet/IP Unit 2 to CPU Unit 2

- Network type number: "#01" (Output the command via internal backplane port.)
- Remote address: "#00" (unit address of CPU Unit)

Route path :
$$\frac{\frac{1}{11}02\underline{192.168.250.2}01\underline{00}}{(1)}$$
 (2) (3)

- (1) Unit address of Local EtherNet/IP Unit (Unit number: 1+10 hex)
- (2) IP address of remote EtherNet/IP Unit
- (3) Unit address of remote CPU Unit




Version Information

You can use the CJ1W-EIP21 EtherNet/IP Unit mounted to an NJ-series Controller with a CPU Unit with unit version 1.01 or later and Sysmac Studio version 1.02 or higher.

Request Path (IOI)

In the CIP world, each device is modeled as a collection of objects. An Object abstractly represents the specific configuration elements of a device.

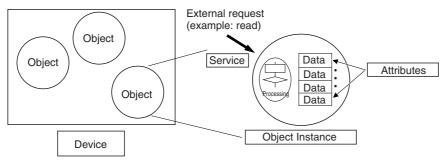


In the CIP Common Specification, "Object," "Class," "Instance," "Attribute," and "Service" are defined as follows: (Source: CIP Common Specification)

Term	Definition	
Object	An abstract representation of a particular component within a device.	
Class	A set of objects that all represent the same kind of system component.	
Instance	A specific and real (physical) occurrence of an object.	
Attribute	A description of an externally visible characteristic or feature of an object.	
Service	A request from an external object (e.g., to read data).	

You use the Class ID, Instance ID, and Attribute ID to access an object.

You specify these three IDs to designate an object in a device. When you make a request from an external device for a service, you must specify the Class ID, Instance ID, and Attribute ID. (The Instance ID and Attribute ID are not required for some services.)

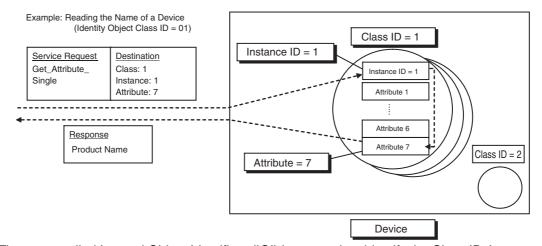

These are called Internal Object Identifiers (IOI) because they identify the Class ID, Instance ID, and Attribute ID within the device. Refer to 8-3 CIP Objects Sent to the EtherNet/IP Unit for the class ID, instance ID, attribute ID, and service code for each object.

8-2-5 Preparing Derivative Data Types to Use CIP Communications Instructions

To use CIP communications instructions, you must prepare derivative data type variables to input communications parameter settings in advance. Refer to the *NJ-series CPU Unit Software User's Manual* (Cat. No. W501) for the specifications and setting procedures for the variables that are described in this section.


Providing the Structure Variables to Input Request Paths

A CIP communications instruction combines all of the objects in a request path into a single structure variable.

Creating Structure Variables


To input a value into the structure variable of a CIP communications instruction, you must create a user-defined variable with the same configuration in advance.

Example: Creating a Variable to Input Data to the CIPSend Instruction Array Variable Rq+Path

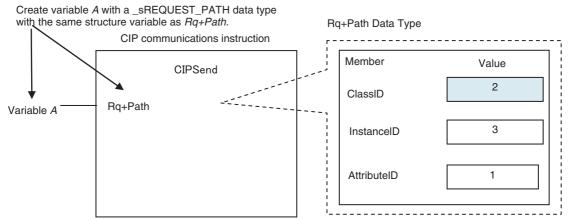

To create a variable in a variable table, select the pre-registered CIP communications instruction data type _sREQUEST_PATH. This is a structure variable with the same configuration as Rq+Path.


Example:



Select the same data type as Rq+Path for the data type of variable A.

Inputting the Values for Each Structure Variable Member

Input the following values into the communications parameters that were registered as members of the structure variable.

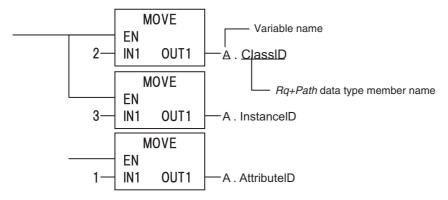


Preparing Array Variables to Input and Output Service Data and Response Data

CIP communications instructions send and receive data that is stored in array variables.

Creating Array Variables


To input a value into the array variable of a CIP communications instruction, you must create a variable with the same configuration as the array variable in advance.


Example: Creating a Variable to Input Data to the CIPSend Instruction Array Variables

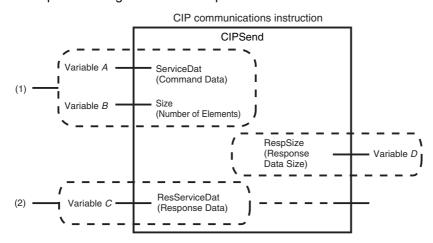


(1) Input the service data to send.

The data to send is stored in array variable A. If only certain elements are specified in array variable A, specify the number of elements in variable B.



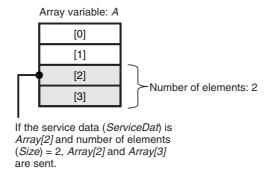

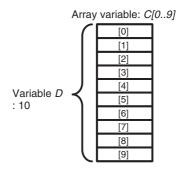


Use the following procedure to create a variable in the variable table.

Select the Array Check Box.

2 Specify the element first number, the element last number, and the data type.

Example: UINT Array

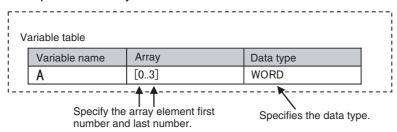

CIP Communications Instructions That Use Array Variables


Instruction	Structure variable name			
ilistraction	Input variable	In-out variable	Output variable	
CIPRead			DstDat (Read Data)	
CIPWrite	SrcDat (Write Data)			
CIPSend	ServiceDat (Command Data)	RespServiceDat (Response Data)		

8-2-6 Sample Programming for CIP Connectionless (UCMM) Message Communications

This sample uses CIP UCMM messages to write a variable, read a variable, and send a message. The Controllers are connected to an EtherNet/IP network. The IP address of the remote node is 192.168.250.2. The following procedure is used.


- The CIPUCMMWrite instruction is used to write the value of a variable at a remote node. The variable name at the remote node is *WritingDat* and the contents of the *WriteDat* is written to it. *WritingDat* must be defined as a global variable at the remote node and the Network Publish attribute must be set.
- The CIPUCMMRead instruction is used to read the value of a variable at a remote node. The value of the variable *OriginalDat* at the other node is read and the read value is stored in the *ReadDat* variable. *OriginalDat* must be defined as a global variable at the remote node and the Network Publish attribute must be set.
- The CIPUCMMSend instruction is used to send an explicit message to a remote node. The contents of the message is to read identity information (product name). The class ID, instance ID, attribute ID, and service code are as follows. The response data is stored in the RespDat variable.


Item	Value
Class ID	1
Instance ID	1
Attribute ID	7
Service code	16#0E

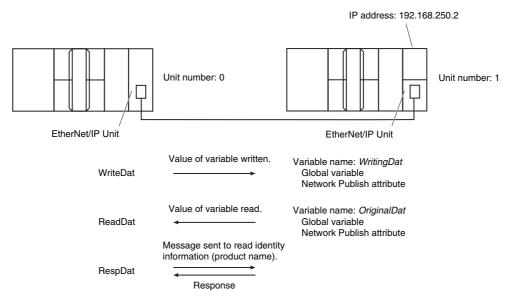


LD

Variable	Data type	Initial value	Comment
OperatingEnd	BOOL	False	Processing finished.
Trigger	BOOL	False	Execution condition
Operating	BOOL	False	Processing
WriteDat	INT	1234	Source data
ReadDat	INT	0	Read data
RoutePathDat	string[256]	01\#10\02\192.168.250.2\01\#00	Route path
ReqPath	_sREQUEST_	(ClassID:=0, InstanceID:=0,	Request path
	PATH	isAttributeID:=False, AttributeID:=0)	
RespDat	ARRAY[010] OF	[11(16#0)]	Response data
	BYTE		
Dummy	BYTE	16#0	Dummy
RS_instance	RS		
CIPUCMMWrite_instance	CIPUCMMWrite		
CIPUCMMRead_instance	CIPUCMMRead		
CIPUCMMSend_instance	CIPUCMMSend		

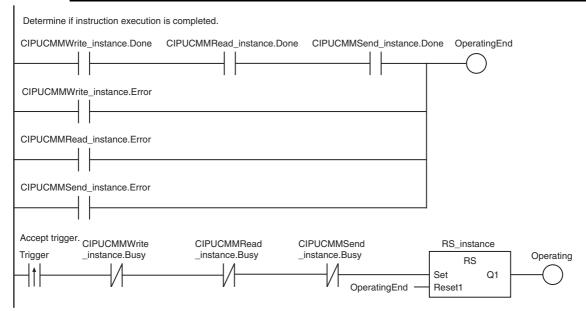

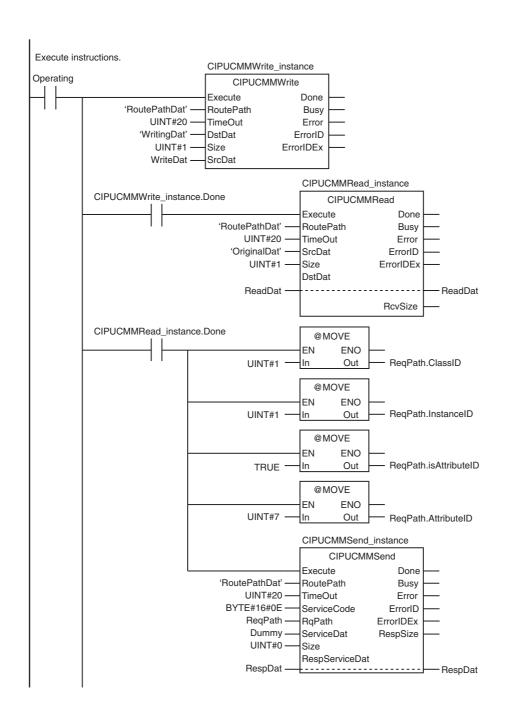

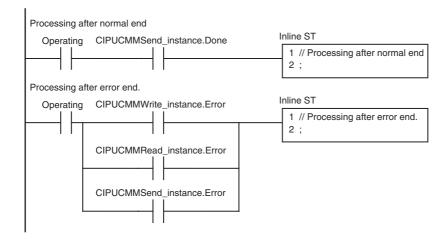

ST

Internal Variables	Variable	Data type	Initial value	Comment
	Trigger	BOOL	False	Execution condition
	DoUCMMTrigger	BOOL	False	Processing
	Stage	INT	0	Status change
	WriteDat	INT	1234	Write data
	ReadDat	INT	0	Read data
	ReqPath	_sREQUEST_	(ClassID:=0, InstanceID:=0,	Request path
		PATH	isAttributeID:=False, AttributeID:=0)	
	RoutePathDat	string[256]	01\#10\02\192.168.250.2\01\#00	Route path
	RespDat	ARRAY[010] OF BYTE	[11(16#0)]	Response data
	Dummy	BYTE	16#0	Dummy
	CIPUCMMWrite_instance	CIPUCMMWrite		
	CIPUCMMRead_instance	CIPUCMMRead		
	CIPUCMMSend_instance	CIPUCMMSend		

External Variables	Variable	Data type	Constant	Comment
	J 01_ETNOnlineSta	BOOL	▽	Online

```
// Start sequence when Trigger changes to TRUE.
IF ((Trigger=TRUE) AND (DoUCMMTrigger=FALSE) AND (J 01_ETNOnlineSta=TRUE))
THEN
                          :=TRUE;
  DoUCMMTrigger
  Stage
                          :=INT#1;
   CIPUCMMWrite instance(
      Execute
                                                 // Initialize instance.
                          :=FALSE,
      SrcDat
                          :=WriteDat);
                                                 // Dummy
  CIPUCMMRead_instance(
                                                 // Initialize instance.
      Execute
                          :=FALSE,
                                                 // Dummy
      DstDat
                                                 // Dummy
                          :=ReadDat);
  CIPUCMMSend_instance(
      Execute
                          :=FALSE,
                                                 // Initialize instance.
      ServiceDat
                          := Dummy,
                                                 // Dummy
      RespServiceDat
                          :=RespDat);
                                                 // Dummy
END_IF;
IF (DoUCMMTrigger=TRUE) THEN
  CASE Stage OF
   1:
                                                 // Request writing value of variable.
      CIPUCMMWrite_instance(
         Execute
                          :=TRUE,
         RoutePath
                          :='RoutePathDat',
                                                 // Route path
                          :=UINT#20,
         TimeOut
                                                 // Timeout value
         DstDat
                          :='WritingDat',
                                                 // Source variable name
         Size
                                                 // Number of elements to write
                          :=UINT#1,
         SrcDat
                          :=WriteDat);
                                                 // Write data
      IF (CIPUCMMWrite_instance.Done=TRUE) THEN
```

// Normal end

:=INT#2;

ELSIF (CIPUCMMWrite_instance.Error=TRUE) THEN

Stage

```
Stage
                          :=INT#10;
                                                 // Error end
      END_IF;
  2:
                                                 // Request reading value of variable.
      CIPUCMMRead_instance(
         Execute
                          :=TRUE,
         RoutePath
                          :='RoutePathDat',
                                                 // Route path
         TimeOut
                          :=UINT#20,
                                                 // Timeout value
         SrcDat
                          :='OriginalDat',
                                                 // Source variable name
                                                 // Number of elements to read
         Size
                          :=UINT#1,
         DstDat
                          :=ReadDat);
                                                 // Read data
      IF (CIPUCMMRead instance.Done=TRUE) THEN
         Stage
                          :=INT#3:
                                                 // Normal end
      ELSIF (CIPUCMMRead_instance.Error=TRUE) THEN
                          :=INT#40;
                                                 // Error end
      END_IF;
  3:
                                                 // Send message
      RegPath.ClassID:=UINT#01;
      ReqPath.InstanceID:=UINT#01;
      ReqPath.isAttributeID:=TRUE;
      ReqPath.AttributeID:=UINT#07;
      CIPUCMMSend_instance(
         Execute
                          :=TRUE,
         RoutePath
                          :='RoutePathDat',
                                                 // Route path
         TimeOut
                          :=UINT#20,
                                                 // Timeout time
         ServiceCode
                          :=BYTE#16#0E,
                                                 // Service code
         RqPath
                          :=ReqPath,
                                                 // Request path
         ServiceDat
                          := Dummy,
                                                 // Service data
                          :=UINT#0,
                                                 // Number of elements
         Size
         RespServiceDat :=RespDat);
                                                 // Response data
      IF (CIPUCMMSend_instance.Done=TRUE) THEN
         Stage
                          :=INT#0:
                                                 // Normal end
      ELSIF (CIPUCMMSend_instance.Error=TRUE) THEN
         Stage
                          :=INT#30;
                                                 // Error end
      END IF;
  0:
                                                 // Processing after normal end
      DoUCMMTrigger:=FALSE;
      Trigger
                       :=FALSE:
  ELSE
                                                 // Processing after error end
      DoUCMMTrigger:=FALSE;
                       :=FALSE;
      Trigger
  END CASE;
END_IF;
```


8-2-7 Sample Programming for CIP Connection (Class 3) Message Communications

This sample uses CIP class 3 messages to write a variable, read a variable, and send a message. The Controllers are connected to an EtherNet/IP network. The IP address of the remote node is 192.168.250.2. The following procedure is used.

- 1 The CIPOpen instruction is used to open a class 3 connection. The timeout time is 2 s.
- The CIPWrite instruction is used to write the value of a variable at a remote node. The variable name at the remote node is *WritingDat* and the contents of the *WriteDat* is written to it. *WritingDat* must be defined as a global variable at the remote node and the Network Publish attribute must be set.
- The CIPRead instruction is used to read the value of a variable at a remote node. The value of the variable *OriginalDat* at the other node is read and the read value is stored in the *ReadDat* variable. *OriginalDat* must be defined as a global variable at the remote node and the Network Publish attribute must be set.
- 4 The CIPSend instruction is used to send an explicit message to a remote node. The contents of the message is to read identity information (product name). The class ID, instance ID, attribute ID, and service code are as follows: The response data is stored in the RespDat variable.


Item	Value
Class ID	1
Instance ID	1
Attribute ID	7
Service code	16#0E


5 The CIPClose instruction is used to close the class 3 connection.

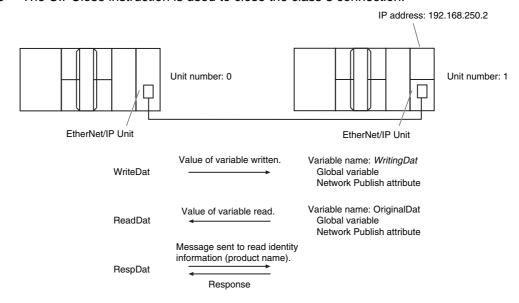


LD

Variable	Data type	Initial value	Comment
OperatingEnd	BOOL	False	Processing finished.
Trigger	BOOL	False	Execution condition
Operating	BOOL	False	Processing
WriteDat	INT	1234	Source data
ReadDat	INT	0	Read data
RoutePathDat	string[256]	01\#10\02\192.168.250.1\01\#00	Route path
ReqPath	_sREQUEST_ PATH	(ClassID:=0, InstanceID:=0, isAt-tributeID:=False, AttributeID:=0)	Request path
RespDat	ARRAY[010] OF BYTE	[11(16#0)]	Response data
Dummy	BYTE	16#0	Dummy
RS_instance	RS		
CIPOpen_instance	CIPOpen		
CIPWrite_instance	CIPWrite		
CIPRead_instance	CIPRead		
CIPSend_instance	CIPSend		
CIPClose_instance	CIPClose		

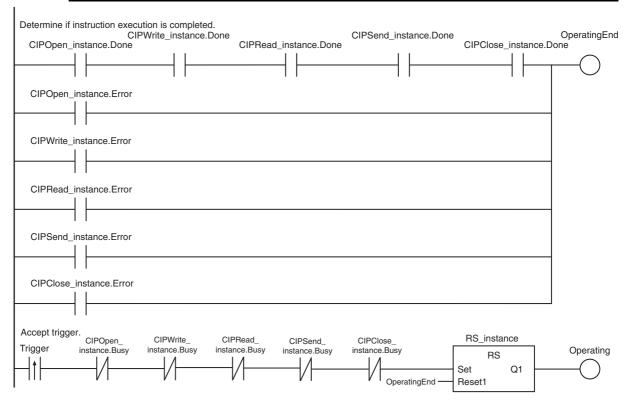

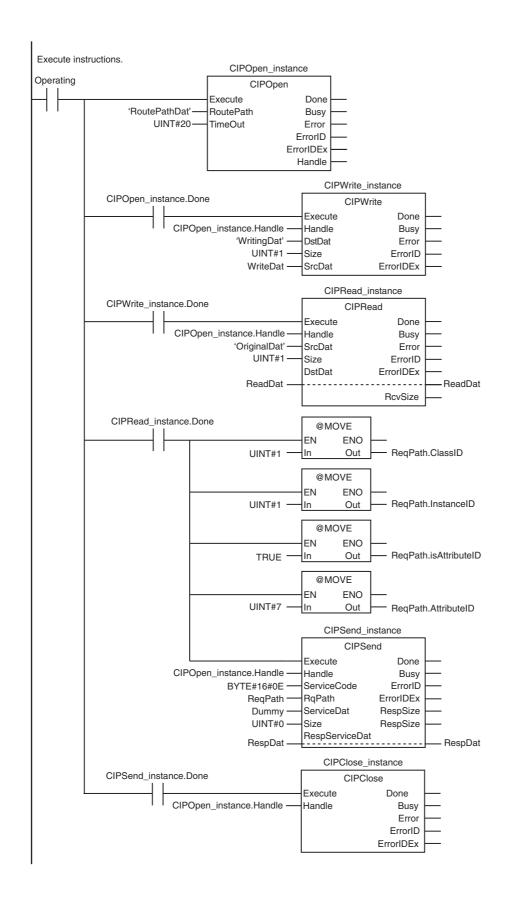

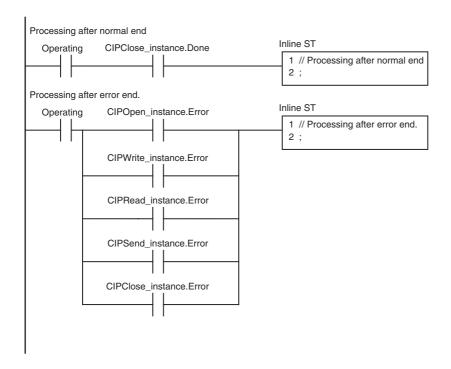

ST

Internal Variables	Variable	Data type	Initial value	Comment
	Trigger	BOOL	False	Execution condition
	DoCIPTrigger	BOOL	False	Processing
	Stage	INT	0	Status change
	WriteDat	INT	1234	Write data
	ReadDat	INT	0	Read data
	RoutePathDat	string[256]	01\#10\02\192.168.250.1\01\#00	Route path
	ReqPath	_sREQUEST_	(ClassID:=0, InstanceID:=0,	Request path
		PATH	isAttributeID:=False, AttributeID:=0)	
	RespDat	ARRAY[010] OF BYTE	[11(16#0)]	Response data
	Dummy	BYTE	16#0	Dummy
	CIPOpen_instance	CIPOpen		
	CIPWrite_instance	CIPWrite		
	CIPRead_instance	CIPRead		
	CIPSend_instance	CIPSend		
	CIPClose_instance	CIPClose		

External Variables	Variable	Data type	Constant	Comment
	J01_ETNOnlineSta	BOOL	>	Online

```
// Start sequence when Trigger changes to TRUE.
IF ((Trigger=TRUE) AND (DoCIPTrigger=FALSE) AND (J01_ETNOnlineSta=TRUE))THEN
  DoCIPTrigger:=TRUE;
  Stage
                    :=INT#1;
  CIPOpen_instance(Execute:=FALSE);
                                                  // Initialize instance.
  CIPWrite_instance(
                                                  // Initialize instance.
      Execute
                    :=FALSE,
      SrcDat
                    :=WriteDat);
                                                  // Dummy
                                                  // Initialize instance.
  CIPRead_instance(
      Execute
                    :=FALSE,
                                                  // Dummy
      DstDat
                    :=ReadDat);
                                                  // Dummy
  CIPSend_instance(
                    :=FALSE,
                                                  // Initialize instance.
      Execute
                                                  // Dummy
      ServiceDat
                   := Dummy,
      RespServiceDat :=RespDat);
                                                  // Dummy
```

// Initialize instance.

CIPClose_instance(Execute:=FALSE);

END_IF;


```
IF (DoCIPTrigger=TRUE) THEN
  CASE Stage OF
  1:
                                                  // Open CIP class 3 connection.
      CIPOpen_instance(
         Execute
                  :=TRUE,
         TimeOut :=UINT#20,
                                                  // Timeout time: 2.0 s
         RoutePath :='RoutePathDat');
                                                  // Route path
      IF (CIPOpen_instance.Done=TRUE) THEN
         Stage
                    :=INT#2;
                                                  // Normal end
      ELSIF (CIPOpen_instance.Error=TRUE) THEN
         Stage
                    :=INT#10:
                                                  // Error end
      END_IF;
                                                  // Request writing value of variable.
  2:
      CIPWrite instance(
         Execute
                   :=TRUE,
                                                  // Handle
         Handle
                   :=CIPOpen_instance.Handle,
         DstDat
                   :='WritingDat',
                                                  // Source variable name
         Size
                   :=UINT#1,
                                                  // Number of elements to write
                   :=WriteDat);
                                                  // Write data
         SrcDat
      IF (CIPWrite_instance.Done=TRUE) THEN
         Stage
                    :=INT#3;
                                                  // Normal end
      ELSIF (CIPWrite_instance.Error=TRUE) THEN
                    :=INT#20;
                                                  // Error end
         Stage
      END_IF;
  3:
                                                  // Request reading value of variable.
      CIPRead_instance(
         Execute
                   :=TRUE.
         Handle
                   :=CIPOpen_instance.Handle,
                                                  // Handle
         SrcDat
                   :='OriginalDat',
                                                  // Source variable name
         Size
                   :=UINT#1,
                                                  // Number of elements to read
         DstDat
                   :=ReadDat);
                                                  // Read data
      IF (CIPRead instance.Done=TRUE) THEN
                    :=INT#4;
                                                  // Normal end
         Stage
      ELSIF (CIPRead_instance.Error=TRUE) THEN
                                                  // Error end
         Stage
                    :=INT#30;
      END IF;
```

```
4:
                                                 // Send message
      ReqPath.ClassID :=UINT#01;
      ReqPath.InstanceID :=UINT#01;
      ReqPath.isAttributeID:=TRUE;
      ReqPath.AttributeID :=UINT#07;
      CIPSend_instance(
         Execute
                   :=TRUE,
         Handle
                   :=CIPOpen_instance.Handle,
                                                 // Handle
         ServiceCode:=BYTE#16#0E,
                                                 // Service code
         RqPath
                   :=ReqPath,
                                                 // Request path
         ServiceDat :=Dummy,
                                                 // Service data
         Size
                   :=UINT#0,
                                                 // Number of elements
         RespServiceDat:=RespDat);
                                                 // Response data
      IF (CIPSend_instance.Done=TRUE) THEN
         Stage
                   :=INT#5;
                                                 // Normal end
      ELSIF (CIPSend_instance.Error=TRUE) THEN
                   :=INT#40;
                                                 // Error end
         Stage
      END_IF;
  5:
                                                 // Request closing CIP class 3 connection.
      CIPClose_instance(
         Execute
                   :=TRUE,
         Handle
                   :=CIPOpen_instance.Handle);
                                                // Handle
      IF (CIPClose_instance.Done=TRUE) THEN
                   :=INT#0;
         Stage
      ELSIF (CIPClose_instance.Error=TRUE) THEN
         Stage
                   :=INT#50;
      END_IF;
  0:
                                                 // Processing after normal end
      DoCIPTrigger:=FALSE;
      Trigger
                   :=FALSE;
  ELSE
                                                 // Processing after error end
      DoCIPTrigger :=FALSE;
      Trigger
                   :=FALSE;
  END_CASE;
END_IF;
```

8-2-8 Operation Timing

Output Variable Operation and Timing

You can monitor the values of the output variables to determine the status throughout instruction execution. The following timing chart shows the operation of the output variables.

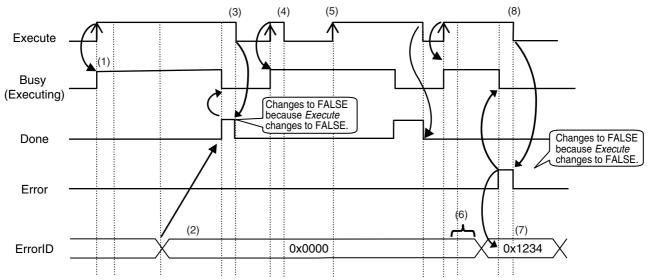


- **1** When *Execute* changes to TRUE, the instruction is executed and *Busy* changes to TRUE.
- **2** After the results of instruction execution are stored in the output variables, *Done* changes to TRUE and *Busy* changes to FALSE.
- **3** When *Execute* changes to FALSE, *Done* returns to FALSE.
- 4 When Execute changes to TRUE again, Busy changes to TRUE.
- **5** Execute is ignored if it changes to TRUE during instruction executed (i.e., when Busy is TRUE).
- **6** If an error occurs, several retries are attempted internally. The error code in the *ErrorID* is not updated during the retries.
- When a communications error occurs, *Error* changes to TRUE and the *ErrorID* is stored. Also, *Busy* and *Done* change to FALSE.
- **8** When *Execute* changes to FALSE, *Error* changes to FALSE.



Precautions for Correct Use

If *Execute* changes back to FALSE before *Done* changes to TRUE, *Done* stays TRUE for only one task period. (Example 1)

If you want to see if *Done* is TRUE at any time, make sure to keep *Execute* TRUE until you confirm that *Done* is TRUE. If *Execute* is TRUE until *Done* changes to TRUE, *Done* stays TRUE until *Execute* changes to FALSE. (Example 2)

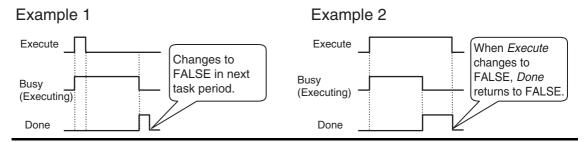


8-2-9 Response Codes

This section describes the response codes stored in the output variable *ErrorIDEx* if an error occurs during the execution of a CIP message communications instruction.

General Status Codes

As response codes, general codes are stored in the *ErrorIDEx* output variable (DWORD data) after execution of a CIP communications instruction is completed. If an additional code is added, the additional code is also stored.



General sta- tus code (hex)	Status name	Description of status
00	Success	Service was successfully performed by the object specified.
01	Connection failure	A connection related to service failed along the connection path.
02	Resource unavailable	Resources needed for the object to perform the requested service were unavailable.
03	Invalid parameter value	See Status Code 20 hex.
04	Path segment error	The path segment identifier or the segment syntax was not understood by the processing node. Path processing stops when a path segment error occurs.
05	Path destination unknown	The path is referencing an object class, instance, or structure element that is not known or is not contained in the processing node. Path processing stops when a Path Destination Unknown Error occurs.
06	Partial transfer	Only part of the expected data was transferred.
07	Connection lost	The message connection was lost.

General sta- tus code (hex)	Status name	Description of status
08	Service not supported	The requested service was not supported or was not defined for this object class/instance.
09	Invalid attribute value	Invalid attribute data was detected.
0A	Attribute list error	An attribute in the Get_Attribute_List or Set_Attribute_List response has a non-zero status.
0B	Already in requested mode/state	The object is already in the mode/state being requested by the service.
0C	Object state conflict	The object cannot perform the requested service in its current mode/state.
0D	Object already exists	The requested instance of object to be created already exists.
0E	Attribute not settable	A request to modify a non-modifiable attribute was received.
0F	Privilege violation	A permission/privilege check failed.
10	Device state conflict	The device's current mode/state prohibits the execution of the requested service.
11	Reply data too large	The data to be transmitted in the response buffer is larger than the allocated response buffer.
12	Fragmentation of a primitive value	The service specified an operation that is going to fragment a primitive data value, i.e. half a REAL data type.
13	Not enough data	The requested service did not supply enough data to perform the specified operation.
14	Attribute not supported	The attribute specified in the request is not supported.
15	Too much data	The service supplied more data than was expected.
16	Object does not exist	An object that does not exist was specified for the requested service.
17	Service fragmentation sequence not in progress	The fragmentation sequence for this service is not currently active for this data.
18	No stored attribute data	The attribute data of this object was not saved prior to the requested service.
19	Store operation failure	The attribute data of this object was not saved due to a failure during the attempt.
1A	Routing failure (request packet too large)	The service request packet was too large for transmission on a network in the path to the destination. The routing device was forced to abort the service.
1B	Routing failure (response packet too large)	The service response packet was too large for transmission on a network in the path from the destination. The routing device was forced to abort the service.
1C	Missing attribute list entry data	The service did not supply an attribute in a list of attributes that was needed by the service to perform the requested behavior.
1D	Invalid attribute value list	The service is returning the list of attributes supplied with status information for those attributes that were invalid.
1E	Embedded service error	An embedded service resulted in an error.
1F	Vendor specific error	A vendor-specific error occurred. The Additional Code Field of the error response defines the error. This is a gen- eral error code that is used only for errors that do not cor- respond to any of the error codes in this table and are not in an object class definition.
20	Invalid parameter	A parameter for the requested service is invalid. This code is used when a parameter does not meet the requirements of the specification and/or the requirements defined in an application object specification.

General sta- tus code (hex)	Status name	Description of status
21	Write-once value or medium already written	An attempt was made to write to a write-once medium (e.g. WORM drive or PROM) that was previously written or cannot be changed.
22	Invalid Reply Received	An invalid reply was received. (For example, the reply service code does not match the request service code, or the reply message is shorter than the minimum expected reply size.) This status code is used for other causes of invalid replies.
23 and 24		Reserved by CIP for future extensions.
25	Key Failure in path	The key segment that was included as the first segment in the path does not match the destination module. The object specific status must indicate which part of the key check failed.
26	Path Size Invalid	The size of the path that was sent with the service request is either too large or too small for the request to be routed to an object.
27	Unexpected attribute in list	An attempt was made to set an attribute that is not able to be set at this time.
28	Invalid Member ID	The member ID specified in the request does not exist in the specified class, instance, and attribute.
29	Member not settable	A request to modify a non-modifiable member was received.
2A	Group 2 only server general failure	This error code is reported only by group 2 only servers with 4K or less of code space and only in place of Service not supported, Attribute not supported, or Attribute not settable.
2B to CF		Reserved by CIP for future extensions.
D0 to FF	Reserved for Object Class and service errors	This range of error codes is to be used to indicate object class-specific errors. This code range is used only when none of the error codes in this table accurately reflect the error that occurred. The additional code field is used to describe the general error code in more detail.

• Examples of Additional Status When General Status Is 01 Hex

(Status of Connection Manager Object)

General Sta- tus (hex)	Additional Status (hex)	Description	
01	0100	Connection in use or duplicate forward open.	
01	0103	Transport class and trigger combination not supported.	
01	0106	Ownership conflict.	
01	0107	Connection not found at target application.	
01	0108	Invalid connection type. There is a problem with either the connection type or priority of the connection.	
01	0109	Invalid connection size.	
01	0100	Device not configured.	
01	0111	RPI not supported. May also indicate problem with connection time-out multiplier, or production inhibit time.	
01	0113	Connection Manager cannot support any more connections.	
01	0114	Either the vendor ID or the product code in the key segment does not match the device.	
01	0115	Device type in the key segment does not match the device.	

General Sta- tus (hex)	Additional Status (hex)	Description		
01	0116	Major or minor revision information in the key segment does not match the device.		
01	0117	Invalid connection point.		
01	0118	Invalid configuration format.		
01	0119	Connection request failed because there is no controlling connection currently open.		
01	011A	Target application cannot support any more connections.		
01	011B	RPI is smaller than the production inhibit time.		
01	0203	Connection cannot be closed because the connection has timed out.		
01	0204	Unconnected_Send service timed out while waiting for a response.		
01	0205	Parameter error in Unconnected_Send service.		
01	0206	Message too large for unconnected message service.		
01	0207	Unconnected acknowledgement without reply.		
01	0301	No buffer memory available.		
01	0302	Network bandwidth not available for data.		
01	0303	No tag filters available.		
01	0304	Not configured to send real-time data.		
01	0311	Port that was specified in port segment is not available.		
01	0312	Link address that was specified in port segment is not available.		
01	0315	Invalid segment type or segment value in path.		
01	0316	Path and connection were not equal when closing the connection.		
01	0317	Either the segment is not present or the encoded value in the network segment is invalid.		
01	0318	Link address to self is invalid.		
01	0319	Resources on secondary are unavailable.		
01	031A	Connection is already established.		
01	031B	Direct connection is already established.		
01	031C	Others		
01	031D	Redundant connection mismatch.		
01	031E	There are no more reception resources available on the sending module.		
01	031F	No connection resources exist for the target path.		
01	0320 to 07FF	Vendor specific.		

8-3 CIP Objects Sent to the EtherNet/IP Unit

8-3-1 CIP Objects Sent to the EtherNet/IP Unit

The following CIP objects can be sent to an EtherNet/IP Unit.

Object name	Reference	
Identity object	Reads ID information from the CPU Unit.	page 8-31
	Resets the EtherNet/IP Unit.	
TCP/IP interface object	Writes and reads TCP/IP settings.	page 8-33
Ethernet link object	Reads Ethernet settings.	page 8-35
	Reads Ethernet status.	
Controller object	Gets the Controller status.	page 8-39
	Changes the operating mode of the Controller.	
Connection Configuration object	Opens or closes connections to a specified target node.	page 8-40

8-3-2 Identity Object (Class ID: 01 Hex)

This object reads the ID information of the CPU Unit and resets the EtherNet/IP Unit.

Class ID

Specify 01 hex.

Instance ID

Specify 00 or 01 hex.

Attribute ID

The attribute ID specifies the information to read.

Class Attribute ID

The class attribute ID specifies the attribute of the entire object.

				Read data		
Attribute ID	Parameter name	Description	Attribute	Data type	Value	
01 hex	Revision	Revision of the object	Read	UINT	0001 hex	
02 hex	Max Instance	The maximum instance number	Read	UINT	0001 hex	

Instance Attribute ID

The instance attribute ID specifies the attribute of the instance.

	Parameter name			Read data		
Attribute ID		Description	Attribute	Data type	Value	
01 hex	Vendor ID	Vendor ID	Read	UINT	002F hex	
02 hex	Device Type	Device type	Read	UINT	000C hex	
03 hex	Product Code	Product code	Read	UINT	0668 hex	
04 hex	Revision	Device revision	Read	Struct		
	Max Instance	Major revision	Read	USINT	Refer to (1) Major CIP Revision	
	Revision	Minor revision	Read	USINT	and Minor CIP Revision	

				Read data		
Attribute ID	Parameter name	Description	Attribute	Data type	Value	
05 hex	Status	Status of the EtherNet/IP Unit	Read	WORD	Refer to (2) Status Details of the EtherNet/IP Unit	
06 hex	Serial Number	Serial number	Read	UINT	Set value	
07 hex	Product Name	Product name	Read	STRING	Set value	

(1) Major CIP Revision and Minor CIP Revision

The major and minor CIP revisions of the Unit are stored as given in the following table. Refer to CIP Revision on page 34 for the actual CIP revisions of the Unit.

Unit CIP revision	Device revision				
Offit CIP Tevision	Major revision	Minor revision			
Rev. 2.04	02 hex	04 hex			
Rev. 3.10	03 hex	0A hex			

(2) Status Details of the EtherNet/IP Unit

Bit	Name		Description				
0	Owned		Indicates when the EtherNet/IP Unit has an open connection as the target of a tag data link.				
1	Reserved	Always	s FALS	SE.			
2	Configured	Tag da	ata link	settin	gs exi	st.	
3	Reserved	Always	s FALS	SE.			
4 to 7	Extended Device Status	Indicates the status of the EtherNet/IP Unit.					
		b7	b6	b 5	b4		
		0	1	0	1	There is a major fault.	
		0	0	1	0	A timeout occurred in one or more target connections.	
		0	0	1	1	Indicates that there are no tag data link settings.	
		0	1	1	0	Indicates that one or more connections are performing communications normally.	
		0	1	1	1	Other than the above.	
		 TCP/IP Advanced Setting Error DNS Server Connection Error Tag Data Link Setting Error Tag Data Link Error Tag Data Link Connection Failed FTP Server Settings Error NTP Client Setting Error SNMP Settings Error NTP Server Connection Error Tag Resolution Error 					
9	Minor Unrecoverable Fault	TRUE • Iden			lowing	error occurs.	
10	Major Recoverable Fault	IP ABOOBasi	TRUE when any of the following errors occurs. IP Address Duplication Error BOOTP Server Error Basic Ethernet Setting Error TCP/IP Basic Setting Error				
11	Major Unrecoverable Fault	TRUE • Con	TRUE when any of the following errors occurs. Communications Controller Error MAC Address Error				

Bit	Name	Description	
12 to 15	Reserved	Always FALSE.	

Service Codes

Specify the service to execute with the service code.

Service	Parameter name	Description	Supported services		
code	Parameter mame	Description	Classes	Instances	
01 hex	Get_Attribute_All	Reads the values of the attributes.	Supported.	Supported.	
0E hex	Get_Attribute_Single	Reads the value of the specified attribute.	Supported.	Supported.	
05 hex	Reset	Resets the EtherNet/IP Unit. This parameter is used to reset the EtherNet/IP Unit when you change the IP address or other parameter settings and want to apply them. Input one of the following values for the ServiceDat input variable to the CIPSend instruction to specify the reset method.		Supported.	
		00 hex: Restart the EtherNet/IP Unit.			
		01 hex: Clear the tag data link settings and restart.			

Request Paths (IOIs) to Specify Objects

When you specify an object, specify the request path (IOI) for each service code as given below.

	Service code	Class ID	Instance ID	Attribute ID
01 hex	Get_Attribute_All	01 hex	Specifying a service for a class: 00 hex	Not required.
0E hex	Get_Attribute_Single		Specifying a service for an instance: Always 01 hex	Reading a class attribute: 01 or 02 hex Reading an instance attribute: 01 to 07 hex
05 hex	Reset		Always 01 hex	Not required.

8-3-3 TCP/IP Interface Object (Class ID: F5 hex)

This object is used to read and write settings such as the IP address, subnet mask, and default gateway.

Class ID

Specify F5 hex.

Instance ID

Specify 00 or 01 hex.

Attribute ID

The attribute ID specifies the information to read.

Class Attribute ID

The class attribute ID specifies the attribute of the entire object.

				Read data		
Attribute ID	Parameter name	Description	Attribute	Data	Value	
				type	Value	
01 hex	Revision	Revision of the object	Read	UINT	0001 hex	
02 hex	Max Instance	The maximum instance number	Read	UINT	0001 hex	

Instance Attribute ID

The instance attribute ID specifies the attribute of the instance.

				Read/write data	
Attribute ID	Parameter name	Description	Attribute	Data type	Value
01 hex	Interface Configuration Status	Indicates the IP address settings status of the EtherNet/IP Unit.	Read	DWORD	Bits 0 to 3: Interface Configuration Status
					0 = IP address is not set. (This includes when BOOTP is starting.)
					1 = IP address is set.
					Bits 4 to 31: Reserved (always FALSE).
02 hex	Configuration Capability	Indicates a Controller Configurations and Setup that can be set to	Read	DWORD	Bit 0: BOOTP Client: Always TRUE.
		the EtherNet/IP Unit.			Bit 1: DNS Client: Always TRUE.
					Bit 2: DHCP Client: Always FALSE.
					Bit 3: DHCP-DNS Update: Always FALSE.
					Bit 4: Configuration Settable: Always TRUE.
					Bits 5 to 31: Reserved (always FALSE).
03 hex	Configuration Control	Sets the method used to set the	Write	DWORD	Bit 0: Static IP address.
		IP address when the EtherNet/IP Unit starts.			Bit 1: Set by BOOTP.
04 hex	Physical Link Object	The path to the link object in the physical layer.	Read	Struct	
	Path size	The path size (WORD size).		UINT	0002 hex
	Path	The path to the link object in the physical layer (static).		EPATH	20 F6 24 01 hex
05 hex	Interface Configuration	The EtherNet/IP Unit settings.	Write	Struct	
	IP Address	IP address.		UDINT	Set value
	Network Mask	Subnet mask.		UDINT	Set value
	Gateway Address	The default gateway.		UDINT	Set value
	Nama Server	The primary name server.		UDINT	Set value
	Nama Server2	The secondary name server .		UDINT	Set value
	Domain Name	The domain name.		STRING	Set value
06 hex	Host Name	The host name (reserved).	Write	STRING	Always 0000 hex.

Service Codes

Specify the service to execute with the service code.

Service	Parameter name	Description	Supported services		
code	Parameter name	Description	Classes	Instances	
01 hex	Get_Attribute_All	Reads the values of the attributes.	Sup- ported.	No sup- ported.	
0E hex	Get_Attribute_Single	Reads the value of the specified attribute.	Sup- ported.	Sup- ported.	
10 hex	Set_Attribute_Single	Writes a value to the specified attribute. The EtherNet/IP Unit restarts automatically after the value is written to the attribute. When the restart process is not completed and the next Set_Attribute_Single is executed, the general status "0C hex" (Object State Conflict) is returned.	No sup- ported.	Sup- ported.	

Request Paths (IOIs) to Specify Objects

When you specify an object, specify the request path (IOI) for each service code as given below.

	Service code	Class ID	Instance ID	Attribute ID
01 hex	Get_Attribute_All	F5 hex	Specifying a service for a class: 00 hex	Not required.
0E hex	Get_Attribute_Single		Specifying a service for an instance: 01	Reading a class attribute: 01 or 02
10 hex	Set_Attribute_Single		hex	hex
				Reading and writing an instance attribute: 01 to 06 hex

8-3-4 Ethernet Link Object (Class ID: F6 Hex)

This object is used to set and read Ethernet communications and read Ethernet communications status information.

Class ID

Specify F6 hex.

Instance ID

Specify 00 or 01 hex.

Attribute ID

The attribute ID specifies the information to read.

Class Attribute ID

The class attribute ID specifies the attribute of the entire object.

Attribute ID			Attribute	Read data		
	Parameter name	Description		Data type	Value	
01 hex	Revision	Revision of the object	Read	UINT	0002 hex	
02 hex	Max Instance	The maximum instance number	Read	UINT	0001 hex	

Instance Attribute ID

The instance attribute ID specifies the attribute of the instance.

					Read/write data		
Attribute ID	Parameter name	Description	Attribute	Data type	Value		
01 hex	Interface Speed	Gives the baud rate for the Ether-Net/IP Unit.	Read	UDINT	Reads the current value.		
02 hex	Interface Flags	Gives the status of the Ether- Net/IP Unit.	Read	DWORD	Refer to (1) Interface Flag Details, below.		
03 hex	Physical Address	Gives the MAC address of the EtherNet/IP Unit.	Read	ARRAY [05] OF USINT	Reads the current value of the MAC address.		

					Read/write data
Attribute ID	Parameter name	Description	Attribute	Data type	Value
04 hex	Interface Counters	The path to the link object in the physical layer	Read	Struct	
	In Octets	The number of octets received through the interface.		UDINT	Reads the current value.
		This includes unnecessary multi- cast packets and discarded pack- ets counted by <i>InDiscards</i> .			
	In Unicast Packets	The number of unicast packets received through the interface. This does not include discarded packets counted by <i>InDiscards</i> .		UDINT	Reads the current value.
	In NonUnicast Packets	The number of packets besides unicast packets received through the interface. This includes unnecessary multicast packets, but does not include discarded packets counted by <i>InDiscards</i> .		UDINT	Reads the current value.
	In Discards	The number of discarded incoming packets received through the interface.		UDINT	Reads the current value.
	In Errors	The number of incoming packets that had errors. This is not included in <i>InDiscards</i> .		UDINT	Reads the current value.
	In Unknown Protos	The number of incoming packets that were of an unknown protocol.		UDINT	Reads the current value.
	Out Octets	The number of octets sent through the interface.		UDINT	Reads the current value.
	Out Unicast Packets	The number of unicast packets sent through the interface.		UDINT	Reads the current value.
	Out NonUnicast Packets	The number of packets besides unicast packets sent through the interface.	Read	UDINT	Reads the current value.
	Out Discards	The number of discarded sent packets.		UDINT	Reads the current value.
	Out Errors	The number of sent packets that had errors.		UDINT	Reads the current value.

				Read/write data		
Attribute ID	Parameter name	Description	Attribute	Data type	Value	
05 hex	Media Counters	Media counters for the Ether- Net/IP Unit.	Read	Struct		
	Alignment Errors	Number of frames received that were not octets in length.		UDINT	Reads the current value.	
	FCS Errors	Number of frames received that did not pass the FCS check.		UDINT	Reads the current value.	
	Single Collisions	Number of frames sent successfully with only one collision.		UDINT	Reads the current value.	
	Multiple Collisions	Number of frames sent successfully with two or more collisions.	-	UDINT	Reads the current value.	
	SQE Test Errors	Number of times a SQE test error message was generated.		UDINT	Reads the current value.	
	Deferred Transmissions	The number of frames for which the first attempt to send was delayed because the media was busy.		UDINT	Reads the current value.	
	Late Collisions	The number of collisions detected in packets that were sent after 512 bit times.		UDINT	Reads the current value.	
	Excessive Collisions	The number of frames that failed to be sent because of excessive collisions.		UDINT	Reads the current value.	
	MAC Transmit Errors	The number of frames that failed to be sent due to an internal MAC sublayer transmission error.		UDINT	Reads the current value.	
	Carrier Sense Errors	The number of times the carrier sense condition was lost or the number of times an assertion did not occur when an attempt was made to send the frame.		UDINT	Reads the current value.	
	Frame Too Long	The number of frames received that exceeded the maximum allowed frame size.		UDINT	Reads the current value.	
	MAC Receive Errors	The number of frames that could not be received through the interface due to an internal MAC sublayer reception error.		UDINT	Reads the current value.	
06 hex	Interface Control	Counter for the EtherNet/IP Unit.	Write	Struct		
	Software Switches	Auto Nego for Ethernet communications that specifies full duplex.		WORD	Refer to (2) Software Switch Details, below.	
	Forced Interface Speed	Gives the set value of the Ethernet baud rate.		UINT	Reads the set value.	

(1) Interface Flag Details

Bit	Name	Description			
0	LinkStatus	FALSE: The link is down.			
		TRUE: The link is up.			
1	Half/FullDuplex	FALSE: Half duplex			
		TRUE: Full duplex			
2 to 4	Negotiation Status	00 hex: Auto-negotiation is in progress.			
		01 hex: Auto-negotiation and speed detection failed.			
		02 hex: Auto-negotiation failed, but speed detection succeeded.			
		03 hex: Speed and duplex mode negotiation succeeded.			
		04 hex: Auto-negotiation was not attempted.			
5	Manual Setting Requires Speed	Always FALSE: Changes can be applied automatically.			
6	Local Hardware Fault	Always FALSE			
7 to 31	Reserved	Always FALSE			

(2) Software Switch Details

Bit	Name	Description
0	Auto-negotiate	FALSE: Auto-negotiation is disabled (communications setup is always set to 10 Mbps).
		TRUE: Auto-negotiation is enabled (communications setup is automatically set to 100 or 10 Mbps).
1	ForcedDuplex Mode	FALSE: Half duplex
		TRUE: Full duplex
		* When auto-negotiation is enabled (bit 0 is TRUE), this should always be FALSE.
2 to 16	Reserved	Always FALSE

Service Codes

Specify the service to execute with the service code.

Service	Parameter name	Description	Supported services		
code	ratailletei Ilaille	Description	Classes	Instances	
0E hex	Get_Attribute_Single	Reads the value of the specified attribute.	Supported.	Supported.	
10 hex	Set_Attribute_Single	Writes a value to the specified attribute.	Supported.	Supported.	
4C hex	Get_and_Clear	Specify Attribute4 or Attribute5 to reset the value of the attribute to 0.	Not sup-	Supported.	
			ported.		

• Request Paths (IOIs) to Specify Objects

When you specify an object, specify the request path (IOI) for each service code as given below.

	Service code	Class ID	Instance ID	Attribute ID
0E hex	Get_Attribute_Single	F6 hex	Specifying a service for a class: 00 hex	Not required.
10 hex	Set_Attribute_Single		Specifying a service for an instance: Always 01 hex	Reading a class attribute: 01 or 02 hex
				Reading and writing an instance attribute: 01 to 06 hex
4C hex	Get_and_Clear			Specify an attribute to reset its value
				to 0: 01 to 05 hex

8-3-5 Controller Object (Class ID: C4 Hex)

This object is used to get the status of the Controller or to change the operating mode of the Controller.

Class ID

Specify C4 hex.

Instance ID

Specify 00 hex.

Class Attribute ID

The class attribute ID specifies the attribute (value) of the entire object.

				Read/write data		
Attribute ID	Parameter name	Description	Attribute	Data type	Value	
01 hex	Revision	Revision of the object	Read	UINT	Always 0002 hex.	
02 hex	Max Instance	The maximum instance number	Read	UINT	Always 0001 hex	
64 hex	PLC Mode	This can be used to read and modify the Controller operating	Write	UINT	Specify this when you want to write to an attribute.	
		mode.			0000 hex: PROGRAM mode	
					0004 hex: RUN mode	
65 hex	PLC Error Status	Indicates when there is a Control- ler error. Changes to TRUE when a fatal or non-fatal error occurs.	Read	UINT	0000 hex: There is no Controller error.	
		a latal of non-latal error occurs.			0001 hex: There is a Controller error.	
66 hex	PLC Model	Indicates the model of the Controller. The length is always 2 bytes for the size + 20 bytes for the name. Unused area is padded with spaces.	Read	STRING		

Instance Attribute ID

None

Service Codes

Specify the service to execute with the service code.

Service	Parameter name	Description	Supported services	
code		Description	Classes	Instances
0E hex	Get_Attribute_Single	Reads the value of the specified attribute.	Supported.	No supported.
10 hex	Set_Attribute_Single	Writes a value to the specified attribute.	Supported.	No supported.

Request Paths (IOIs) to Specify Objects

When you specify an object, specify the request path (IOI) for each service code as given below.

Service code		Class ID	Instance ID	Attribute ID
0E hex 10 hex	Get_Attribute_Single Set_Attribute_Single	C4 hex	00 hex	Specifies the attribute of the class to read or write: 01 hex, 02 hex, or 64 to 66 hex

Connection Configuration Object (Class ID: F3 Hex) 8-3-6

This object is used to open and close connections to individual nodes.

• Class ID

Specify F3 hex.

Instance ID

Specify 00 hex.

Attribute ID

Class Attribute ID

None.

Instance Attribute ID

None.

Service Codes

Specify the service to execute with the service code.

Service code	Parameter name	Description	Supported services	
Sel vice code	raiailletei liaille	Description	Classes	Instances
64 hex	Open_Connections_ByNode	Opens all connections to the specified target node.	Supported.	Not supported.
65 hex	Close_Connections_ByNode	Closes all connections to the specified target node.	Supported.	Not supported.

Request Paths (IOIs) to Specify Objects

When you specify an object, specify the request path (IOI) for each service code as given below.

	Service code	Class ID	Instance ID	Attribute ID
64 hex	Open_Connections_ByNode	F3 hex	00 hex	
65 hex	Close_Connections_ByNode			

• Formats of Service Data and Response Data

Open_Connections_ByNode: 64 Hex

· Service Data

Offset	Parameter name	Data type	Description
+0	Target Node ID	UINT	Set the ID of the specified target node.
+1			Setting range: 0 to FF hex
+2	Connection Estab- lish Error Open Continuation Dis- able Flag	USINT	Specify whether to continue connection open processing until a connection is successfully established after establishing a connection fails. 0: OFF (continue). 1: ON (do not continue).
+3	Reserved	USINT	Reserved.
+4	Connection Estab-	UDINT	Specify the connection establish timeout time per connection. The unit
+5	lish Timeout Time per Connection		is milliseconds.
+6	per connection		Range: 0 to FFFFFFF hex *1
+7			Default: 5,000
			If you set more than one connection, do not exceed the following range.
			Number of connections × This set value ≤ 5,000

^{*1} The default is used in operation if the specified value is not between 20 and 5,000.

Response Data

Offset	Parameter name	Data type	Description
+0	Connection Open	UINT	• 0 hex
+1	Status		All connections with the target node were established normally.
			• 1 hex
			One or more of the connections to the target node could not be established. However, the connections may still be established by re-execution *1 of connection open processing.
			• 2 hex
			One or more of the connections to the target node could not be estab-
			lished. Error processing *2 is required to establish all of the connections.

^{*1} If the Connection Establish Error Open Continuation Disable Flag is set to OFF, connection open processing is performed again automatically. If this flag is ON, you must execute this service again.

Close_Connections_ByNode: 65 Hex

Service Data

Offset	Parameter name	Data type	Description
+0	Target Node ID	UINT	Set the ID of the specified target node.
+1			Setting range: 0 to FF hex
+2	Reserved	USINT	Reserved
+3	Reserved	USINT	Reserved
+4	Connection Close	UDINT	Specify the connection close timeout time per connection.
+5	Timeout Time per Connection		The unit is milliseconds.
+6	Connection		Range: 0 to FFFFFF hex *1
+7			Default: 5,000
			If you set more than one connection, do not exceed the following range.
			Number of connections × This set value ≤ 5,000

^{*1} The default is used in operation if the specified value is not between 20 and 5,000.


^{*2} For details on error processing, refer to 13-3 Connection Status Codes and Error Processing.

Response Data

None.

Process Flow

The process flow of the Open Connections by Node (Open_Connections_ByNode) service is given below.

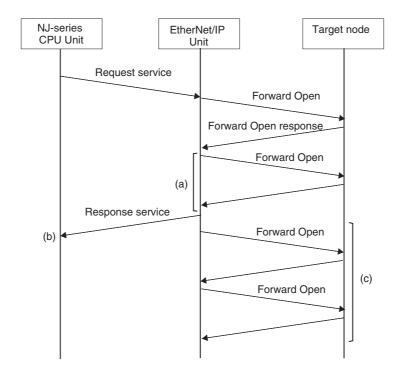

- (a) If more than one connection is set for the specified target node, connection open processing with Forward_Open are repeated for each connection.
- (b) The response service is returned at the following times.
 - When responses have been received for Forward_Open for all connections
 - · When a response is not received for a Forward_Open within the time set for the Connection Establish Timeout Time per Connection
- (c) If opening a connection for (a) fails and the Connection Establish Error Open Continuation Disable Flag is OFF, connection open processing is repeated until the connection is established. If the flag is ON, nothing is done.




FTP Server

9-1	Overvi	ew and Specifications	9-2			
	9-1-1	Overview	9-2			
	9-1-2	Specifications	9-2			
9-2	FTP Se	erver Function Details	9-3			
	9-2-1	Supported Files	9-3			
	9-2-2	Connecting to the FTP Server	9-3			
9-3	Using t	the FTP Server Function	9-5			
	9-3-1	Procedure	9-5			
	9-3-2	List of Settings Required for the FTP Server Function	9-5			
9-4	FTP Se	erver Application Example	9-6			
9-5	Using I	Using FTP Commands				
	9-5-1	Table of Commands	9-7			
	9-5-2	Using the Commands	9-8			
9-6	FTP Se	erver Status	9-13			
	9-6-1	FTP Status	9-13			
9-7	Using :	SD Memory Card Operations	9-14			
	9-7-1	SD Memory Card Types	9-14			
	9-7-2	File Types	9-15			
	9-7-3	Initializing SD Memory Cards	9-15			
	9-7-4	Format of Variable Data	9-16			
9-8	FTP Fil	le Transfer Time	9-17			
9-9	Applica	ation Example from a Host Computer	9-18			

Overview and Specifications

9-1-1 **Overview**

The EtherNet/IP Unit contains an FTP (file transfer protocol) server. You can therefore send FTP commands from an FTP client software application on a computer on an Ethernet network to upload and download large files on the SD Memory Card.

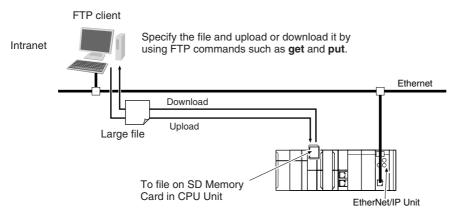

9-1-2 **Specifications**

Item	Specification
Executable commands	open: Connects the specified host FTP server.
	user: Specifies the user name for the remote FTP server.
	ls: Displays file names in the remote host.
	dir: Displays file names and details in the remote host.
	rename: Changes a file name.
	mkdir: Creates a new directory in the working directory in the remote host.
	rmdir: Deletes a directory from the working directory in the remote host.
	cd: Changes the work directory in the remote host to the specified directory.
	pwd: Displays the work directory on the remote host.
	type: Specifies the data type of transferred files.
	get: Transfers the specified remote file to the local host.
	mget: Transfers the specified multiple remote files to the local host.
	put: Transfers the specified local file to the remote host.
	mput: Transfers the specified multiple local files to the remote host.
	delete: Deletes the specified file from the remote host.
	mdelete: Deletes the specified multiple files from the remote host.
	close: Disconnects the FTP server.
	bye: Closes the FTP client.
	quit: Closes the FTP client.
Protection	Login name (up to 12 characters)
	Password (up to 8 characters)
Protocol used	FTP (port number: 20/TCP, 21/TCP)
Number of connections	1

9-2 FTP Server Function Details

9-2-1 Supported Files

The file system in the Controller that can be accessed by the EtherNet/IP Unit includes files in any SD Memory Card mounted in the CPU Unit. The directory tree is shown below.

/: root

MEMCARD: SD

A connection is initially made to the root directory.



Additional Information

- The date of the MEMCARD directory displayed for **Is**, **dir**, or **mkdir** commands in the root directory is the date of the file system volume label.
- The login date is displayed for MEMCARD if a volume label has not been created.

9-2-2 Connecting to the FTP Server

The login name and password set in the Unit settings for the CPU Bus Unit will be used to connect.



Additional Information

When a general-purpose FTP application is used, you can use a graphical user interface similar to Explorer to transfer and read files.

Login Name and Password Setting

The FTP login name and password are not set by default. Use the EtherNet/IP Unit Settings to set any login name and password.

Login Messages

Status	Message
Normal connection	220 xxx.xx.xx yyyyyyyyy FTP server (FTP Version z.zz) ready. xxx.xx.xx.xx: IP address of EtherNet/IP Unit yyyyyyyyy: EtherNet/IP Unit model number (example: CJ1W-EIP21) z.zz: Firmware version of the EtherNet/IP Unit
FTP server busy	221 FTP server busy, Goodbye.

Setting Restrictions

The following restrictions apply to login names and passwords.

- Only single-byte alphanumeric characters can be used in the login name and password. The login name and password are case sensitive.
- A login name consists of up to 12 characters.
- A password consists of up to 8 characters.
- Always set a password when you set a new login name. The login name will not be valid unless a password is set for it.
- The login name is invalid if the login name is not set or characters other than single-byte alphanumeric characters are used.

FTP File Transfer Mode

FTP has two file transfer modes: ASCII mode and binary mode. Before you start to transfer files, use the **type** command (specifies the data type of transferred files) to select the required mode.

- To transfer a file in binary format: Select binary mode.
- To transfer a file in ASCII format: Select ASCII mode.

Multiple Accesses to the Same File

Files accessed with the FTP server may be simultaneously accessed from multiple sources with communications commands from other FTP servers or programming instructions. Exclusive control is required to prevent multiple accesses. This is to prevent reading and writing the same file at the same time. The CPU Unit automatically performs exclusive control as shown below only when the following combinations of instructions are used. In other cases, use file operation instructions (Change File Name, Copy File, etc.) or communications commands and perform exclusive control.

Exclusive Control When Accessing the Same File on the SD Memory Card

	First access	Instru	Instruction		ons command
Later access		Read	Write	Read	Write
Instruction Read		Exclusive control is automatically implemented and the read instruction results in an error (first-comefirst-serve).		(Exclusive control is not required.)	Implement exclusive control.
	Write	Exclusive control is automatically implemented and the write instruction results in an error (first come first serve)		Implement exclusive control.	
Communica- tions command	Read	(Exclusive control is not required.)	Implement exclusive control.	(Exclusive control is not required.)	
	Write	Implement exclus	ive control.	•	

9-3 Using the FTP Server Function

9-3-1 Procedure

- Make the basic settings.Refer to 1-5-1 Basic Operation for basic operations.
- **2** Set up the FTP server on the Sysmac Studio. (Refer to 5-4 FTP Settings Display.)
- 3 Select EtherNet/IP Unit Settings under Configuration Controller Setup on the Sysmac Studio. Make the following settings on the FTP Settings Display.
 - FTP server
 - Port number
 - · Login name
 - Password
- $m{4}$ Place the CPU Unit online and transfer the settings to the Controller.
- 5 Insert the SD Memory Card into the CPU Unit.
- **6** Connect to the EtherNet/IP Unit from an FTP client.
- Input the FTP login name and password that you set in the EtherNet/IP Unit Settings to log in to the EtherNet/IP Unit.
- **8** After you are logged in, you can use the ftp commands, such as cd (Change Directory) and get (Obtain File) for the MEMCARD1 directory in the SD Memory Card in the Controller.
- **9** Close the connection.

9-3-2 List of Settings Required for the FTP Server Function

Make the following settings for the unit setup when the FTP server function is used.

EtherNet/IP Unit Settings Tab Page on Sysmac Studio	Setting	Setting conditions	Reference
FTP	FTP server	Required	page 5-6
	Port No.	Optional*	
		Note Required when changing the default value of 21.	
	Login name	Required*	
	Password	Required*	

^{*} Settings are not required if the FTP server is not used.



Additional Information

Make the settings in the FTP Settings Dialog Box if the FTP server is used. Refer to 5-4 FTP Settings Display for information on the FTP Settings Dialog Box.

FTP Server Application Example

An example application of the FTP server when the login name is "user1" and the password is "password" is shown below.



Additional Information

When a general-purpose FTP application is used, you can use a graphical user interface similar to Explorer to transfer and read files.

Step


- Make sure that an SD Memory Card is inserted in the CPU Unit and turn ON the power supply to the Controller.
- Connect to the FTP server from a computer on the Ethernet by entering the text that is underlined in the following diagram.

IP address of the EtherNet/IP Unit

```
D:\tmp> ftp 192.168.250.2
Connected to 192.168.250.2
                                                                               Results
220 192.168.250.2 CJ1W-EIP21 FTP server(FTP Version 1.11) ready.
User(192.168.250.2:(none)): user1 <
                                                                               Login name
331 Password required for user1.
Password:
230 User user1 logged in.
ftp>
```

Enter FTP commands (underlined in the following diagram) to read and write files. The following directory tree is used in this example.

```
/ (root directory)
    MEMCARD
        ABC (subdirectory)
            DEF.BIN(file)
```

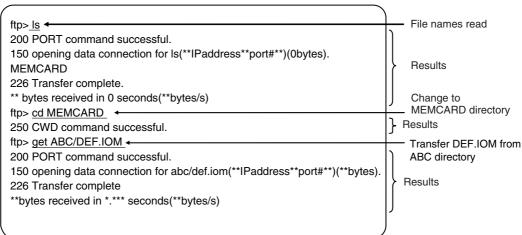

9-5 Using FTP Commands

This section describes the FTP commands which the host computer (FTP client) can send to the FTP server of the EtherNet/IP Unit. The descriptions should also apply to most workstations, but slight differences may arise. Refer to your workstation's operation manuals for details.

9-5-1 Table of Commands

The FTP commands which can be sent to the EtherNet/IP Unit are listed in the following table.

Command	Description
open	Connects the specified host FTP server.
user	Specifies the user name for the remote FTP server.
ls	Displays file names in the remote host.
dir	Displays file names and details in the remote host.
rename	Changes a file name.
mkdir	Creates a new directory in the working directory in the remote host.
rmdir	Deletes a directory from the working directory in the remote host.
cd	Changes the work directory in the remote host to the specified directory.
pwd	Displays the work directory on the remote host.
type	Specifies the data type of transferred files.
get	Transfers the specified remote file to the local host.
mget	Transfers the specified multiple remote files to the local host.
put	Transfers the specified local file to the remote host.
mput	Transfers the specified multiple local files to the remote host.
delete	Deletes the specified file from the remote host.
mdelete	Deletes the specified multiple files from the remote host.
close	Disconnects the FTP server.
bye	Closes the FTP client.
quit	Closes the FTP client.

- Note 1 "Remote host" refers to the EtherNet/IP Unit.
 - 2 A "remote file" is a file on the SD Memory Card in the CPU Unit.
 - 3 "Local host" refers to the host computer (FTP client).
 - 4 "Local file" refers to a file on the host computer (FTP client).

Using the Commands 9-5-2

open

Format

open [IP_address or host_name_of_FTP_server]

Function

Connects the FTP server. Normally when the FTP client is booted, the FTP server IP address is specified to execute this command automatically.

user

Format

user [user_name]

Function

• Specifies the user name. Specify the FTP login name set in the EtherNet/IP Unit system setup.

Is

Format

Is [-I] [remote_file_name [local_file_name]]

Function

- Displays the names of files on the remote host (on the SD Memory Card).
- Set the switch [-I] to display not only the file names but the creation dates and sizes as well. If the switch is not set, only the file names are displayed.
- Specify a file on the SD Memory Card for the remote file name.
- If a local file name is specified, the file information is stored in the specified file.

dir

Format

dir [remote_file_name [local_file_name]]

Function

- · Displays the names, creation dates, and sizes of files on the remote host (on the SD Memory Card).
- It displays the same information as command [Is -I].
- Specify a file on the SD Memory Card for the remote file name.
- If a local file name is specified, the file information is stored in the specified file.

rename

Format

rename current_file_name new_file_name

Function

- Changes the specified current file name to the specified new file name.
- If the new file name is already used on the remote host (on the SD Memory Card), the existing file is overwritten by the file for which the name was changed.
- **rename** can be used only to change the file name. It cannot be used to move the file to a different directory.

mkdir

Format

mkdir directory_name

Function

- Creates a directory of the specified name at the remote host (on the SD Memory Card).
- An error will occur if a file or directory of the same name already exists in the working directory.

rmdir

Format

rmdir directory_name

Function

- Deletes the directory with the specified name from the remote host (from the SD Memory Card).
- The directory must be empty to delete it.
- An error will occur if the specified directory does not exist or is not empty.

pwd

Format

pwd

Function

• Displays the work directory on the remote host.

cd

Format

cd [directory_name]

Function

· Changes the remote host work directory to the specified remote directory.

- Files on the SD Memory Card are stored in the MEMCARD directory under the root directory (/).
- The root directory (/) is the directory that is used when you log onto the EtherNet/IP Unit. The MEMCARD directory does not exist if an SD Memory Card is not inserted in the CPU Unit or if the SD Memory Card power indicator on the CPU Unit is not lit.

type

Format

type data_type

Function

- Specifies the file data type.
- The following data types are supported: ascii: Files are transferred as ASCII data. binary (image): Files are transferred as binary data. The CPU Unit handles binary files. Use the type command to specify binary transfers before you upload or download files. File contents cannot be guaranteed if transferred as ASCII data.
- The default file type is ASCII.

get

Format

get file_name [receive_file_name]

Function

- Transfers the specified remote file from the SD Memory Card to the local host.
- A receive file name can be used to specify the name of the file in the local host.

mget

Format

mget file name

Function

 You can include wildcards (*) in the file name to transfer multiple remote files from the SD Memory Card to the local host.

put

Format

put file_name [destination_file_name]

Function

- Transfers the specified local file to the remote host (to the SD Memory Card).
- You can specify the destination file name to specify the name the file is stored under on the SD Memory Card.
- Any existing file with the same name in the remote host (on the SD Memory Card) is overwritten by the contents of the transferred file.

• If an error occurs during file transfer, the file being transferred is deleted and the transmission of that file ends in an error.

mput

Format

mput file_name

Function

- You can include wildcards (*) in the file name to transfer multiple local files to the remote host (to the SD Memory Card).
- Any existing file with the same name in the remote host (on the SD Memory Card) is overwritten by the contents of the transferred file.
- If an error occurs during file transfer, the file being transferred is deleted and the transmission of that file ends in an error. However, *mput* execution continues and the remaining files are transferred.

delete

Format

delete file_name

Function

Deletes the specified remote file (on the SD Memory Card).

mdelete

Format

mdelete file name

Function

• You can include wildcards (*) in the file name to delete multiple remote files from the SD Memory Card.

close

Format

close

Function

• Disconnects the FTP server of the EtherNet/IP Unit.

bye

Format

bye

Function

• Ends the FTP sessions.

quit

Format

quit

Function

• Ends the FTP sessions.

9-6 FTP Server Status

9-6-1 FTP Status

You can use the following device variable for the CJ-series Unit to see whether the FTP server is operating.

	Device variable name for CJ- series Unit	Data type	R/W	Meaning	Description
*_(CommSta2	WORD	R	Communications Sta-	Bit 00: FTP Status
				tus 2	Bit 14: Link Status
	*_FTPSta	BOOL	R	FTP Status	TRUE: FTP server is operating. (The FTP client is connected.)
					FALSE: FTP server is not connected. (The FTP client is waiting for a connection.)



Precautions for Correct Use

File operations for files on the SD Memory Card are performed during FTP communications. Do not remove the SD Memory Card or turn OFF power to the Controller while FTP is being used.



Additional Information


When using File Memory Instruction from the program in the CPU Unit, program exclusive control using the FTP Status variable so that the same data is not manipulated simultaneously by more than one instruction.

Using SD Memory Card Operations

The EtherNet/IP Unit can be used to upload and download the following data between the SD Memory Card and the FTP server.

· Variables files (binary format)

The following three methods are used by the CPU Unit to store and read data on the SD Memory Card.

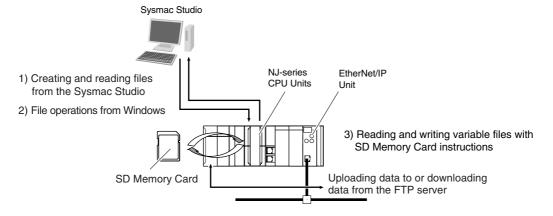

9-7-1 **SD Memory Card Types**

Use the SD or SDHC Memory Card that is specified below. Operation may not be dependable if another SD or SDHC Memory Card is used.

Model number	Card type	Capacity [GB]	Format	Number of overwrites	Weight
HMC-SD291	SD	2	FAT16	100,000 writes	2 g max.
HMC-SD491	SDHC	4	FAT32		

9-7-2 File Types

File Names

Files are distinguished by assigning file names and extensions. The following characters can be used in file names and extensions: File names are not case sensitive. (Lowercase characters are converted to uppercase characters.)

A to Z, a to z, 0 to 9, and the following symbols: % ' - @ ! '() ~ # & ^ [] { };

The following characters cannot be used in files names and extensions:

Blanks, multi-bytes characters, and the following symbols: / ? * " : <> = +, . etc.

The maximum file name length is eight characters for the name and three characters for the extension. The first period (.) in a file name is taken as the delimiter between the file name and extension. Extensions are determined by the file type.

Directory

You can create up to five levels of directories to store files on the SD Memory Card (count the root directory as one level). A maximum of 65 characters can be used in a directory name.

File Names Handled by CPU Unit

The files described in the following table can be read or written by the CPU Unit.

File type	File names	Extension	Contents	Description
Variables file (binary format)	Refer to 9-7-2 File Types.	.bin	Specified variables	This variables file contains the values of specified variables (which include arrays and structures) in binary format (.bin).

Refer to the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501) for details.

9-7-3 Initializing SD Memory Cards


- 1 Insert the SD Memory Card into the CPU Unit.
- 2 Use the Sysmac Studio to initialize the SD Memory Card.

Format of Variable Data 9-7-4

Binary Format

The IOM format is a data format used for binary data specified by the ladder instructions, FileReadVar (Read Variables File) and FileWriteVar (Save Variables File), in the CPU Unit. You can also read and save arrays and structures. Data is created as shown below when the data of variable Var_A is placed in an attached file in binary format.

SD Memory Card





Additional Information

- When you handle a binary file on the NJ-series CPU Unit, always specify the binary data type with the type command before you read or write the file via FTP. (Refer to 9-5-2 Using the Commands.)
- For details on how to use ladder diagram instructions to process files, refer to the NJ/NXseries Instructions Reference Manual (Cat. No. W502).

9-8 FTP File Transfer Time

File transfers using FTP can require 30 or 40 minutes depending on the capacity of the file. Approximate file transfer time are provided in the following table for reference. All times are in seconds unless otherwise specified.

Example: Transfer Times in RUN Mode with a Task Period of 1 ms

Process type	Transfer size	Transfer time
put transfer length	1K	2.0
(bytes)	5K	10.1
	10K	19.6
	40K	79.7
get transfer length	1K	10.3
(bytes)	5K	51.4
	10K	107.0
	40K	409.7

(Unit: s)

Application Example from a Host Computer

The following procedure provides an example of FTP operations from a host computer. In this example, the following assumptions are made.

- The IP address of the EtherNet/IP Unit is registered in the hosts as host name [ni].
- The FTP login name is "LogIn".
- · Manufacturing results is stored in the SD Memory Card in the CPU Unit in a file that is named RESULT.BIN.
- A processing instructions data file called PLAN.BIN already exists on the workstation.

In the following procedure, the manufacturing results file (RESULT.BIN) in the SD Memory Card in the CPU Unit is transferred to a workstation, and then a manufacturing instructions file (PLAN.BIN) on the workstation is transferred to the SD Memory Card in the CPU Unit. Underlined text is keyed in from the FTP client. The workstation prompt is indicated as \$ and the cursor is indicated as **II**.

Start the FTP application and connect to the EtherNet/IP Unit.

```
$ ftp nj
                                                                                        FTP started.
connected to ni
220 **IPaddress** NJ501-1300 FTP server(FTP**version**)ready
Name(nj:root):
```

Enter the login name.

```
Name(nj:root):LogIn -
                                                                                           Enter the login name.
331 Password required for LogIn.
Password:
                                                                                           Enter the password.
230 LogIn logged in.
ftp> ■
```

Make sure the Memory Card is correctly inserted. The MEMCARD directory is displayed if there is an SD Memory Card in the CPU Unit.

```
Make sure the Memory
200 PORT command successful.
                                                                                        Card is inserted.
150 opening data connection for ls(**IPaddress**port#**)(0 bytes).
MEMCARD
226 Transfer complete.
15 bytes received in 0 seconds(**bytes/s)
```

Change to the MEMCARD directory.

```
ftp> cd MEMCARD
                                                                                 Change the directory.
250 CWD command successful.
ftp> ■
```

Change data type to binary.

```
ftp> type binary
                                                                                            Set binary data type.
200 Type set to I.
ftp> ■
```

6 Read the file RESULT.BIN and transfer it to the workstation.

```
ftp> get RESULT.BIN  
200 PORT command successful.
150 opening data connection for result.bin (**IPaddress**port#**) (**bytes).
226 Transfer complete.
** bytes received in *.*** seconds (**bytes/s)
ftp> ■
```

7 Write the file PLAN.BIN to the Memory Card.

```
ftp> put PLAN.BIN ←
200 PORT command successful.
150 opening data connection for plan.bin (**IPaddress**port#**) .
226 Transfer complete.
** bytes received in *.** seconds (**bytes/s)
ftp>■
```

8 End the FTP session.

```
ftp> bye ← 221 Goodbye. $ ■
```



Automatic Clock Adjustment


10-1	Automa	atic Clock Adjustment	10-2
	10-1-1	Overview	10-2
	10-1-2	Specifications	10-2
10-2	Proced	ure to Use the Automatic Clock Adjustment Function	10-3
	10-2-1	Procedure	10-3
	10-2-2	Settings Required for Automatic Clock Adjustment	10-3
	10-2-3	Updating the Clock Information	10-4

10-1 Automatic Clock Adjustment

10-1-1 Overview

With the EtherNet/IP Unit, clock information is read from the SNTP server at the specified time or when the Clock Information Adjustment Switch variable is changed to TRUE. The internal clock time in the CPU Unit of the EtherNet/IP Unit is updated with the read time.

Note The SNTP (Network Time Protocol) server is used to control the time on the LAN.

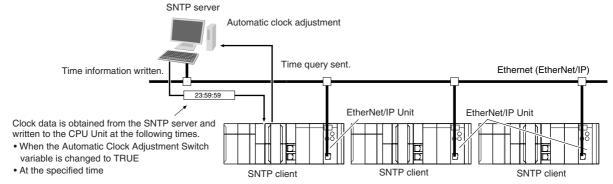

Note In accordance with SNTP protocol specifications, automatic adjustment will not be possible from February 7, 2036. This function will no longer operate in the EtherNet/IP Unit from February 7, 2036 (an error message will not be displayed).

10-1-2 Specifications

Item	Specification		
Protocol	SNTP		
Port No.	123 (UDP)		
	However, you can change the port number in the EtherNet/IP Unit Settings on the Sysmac Studio.		
Access to SNTP server	Writes the clock information from the SNTP server to the local CPU Unit.	Obtains the clock information from the NTP server set up on the Network, and applies the information obtained to the local CPU Unit.	
SNTP Operation Timing	 Clock information is automatically updated at the following times if the SNTP function is used. When the Adjust Clock Bit variable is changed to TRUE At the specified time 		

10-2 Procedure to Use the Automatic Clock Adjustment Function

10-2-1 Procedure

- Make the basic settings.
 Refer to 1-5 EtherNet/IP Communications Procedures for the flow of basic operations.
- **2** Make the following settings in the Special Unit Setup in the Controller Configurations and Setup of the Sysmac Studio. Set the following on the SNTP Settings Display.
 - SNTP server settings (required)
 - Specified time to access the SNTP server
- **3** To manually adjust the clock information, change the Adjust Clock Bit (*_AdjTmCmd) variable to TRUE.
- 4 Select **Synchronization** from the Controller Menu. The EtherNet/IP Unit settings are transferred to the CPU Unit.

10-2-2 Settings Required for Automatic Clock Adjustment

The following EtherNet/IP Unit Settings are made from the Sysmac Studio to use automatic clock adjustment.

Tab page		Setting	Setting conditions	Reference
SNTP	SNTP server clock information Port No.		Required.	page 5-7
			Specified by user. Note Required to change from the default value of 123.	
	Server specifying method		Required.	
	IP address		One of these must be set, depending on the Server	1
		Host name	specification type setting.	
	Time Timeout time Time difference adjustment		Required.	
			Specified by user. Note Required to change from the default value of 10 seconds.	
			Specified by user. Note Required to change from the default value of +0:0.	



Additional Information

Make the settings in the SNTP Settings Dialog Box if automatic clock adjustment is used. Refer to 5-5 SNTP Settings Display for information on the SNTP Settings Dialog Box.

10-2-3 Updating the Clock Information

When you change the following device variable for the CJ-series Unit to TRUE, the EtherNet/ IP Unit obtains the clock data from the SNTP server on the network, and applies it to the local CPU Unit. After applying the data, the variable automatically returns to FALSE.

• *_AdjTmCmd (Adjust Clock Bit)




SNMP Agent

11-1 SNMP	Agent 11	-2
11-1-1	Overview	-2
11-1-2	Specifications	-3
11-1-3	SNMP Messages	-3
11-1-4	MIB Specifications	-4
11-2 Proced	dure to Use the SNMP Agent11-1	19
11-2-1	Procedures	19
11-2-2	Settings Required for the SNMP Agent	19

11-1 SNMP Agent


The SNMP (simple network management protocol) is a network management protocol. You can use the SNMP to manage any network that consists of devices that support SNMP. The server that manages the network is called the SNMP manager. The managed network devices are called SNMP agents.

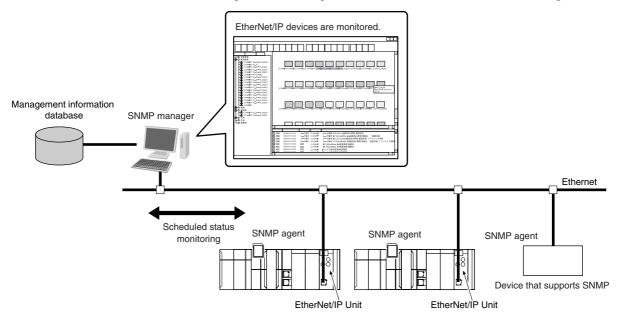

11-1-1 Overview

SNMP Agent


The EtherNet/IP Unit has its own management information called the MIB (management information base). This information can be provided to the SNMP manager. The SNMP manager is software that gathers and processes information about devices on the SNMP network and provides that information to the network administrator. You can use the SNMP manager to monitor the EtherNet/IP Unit.

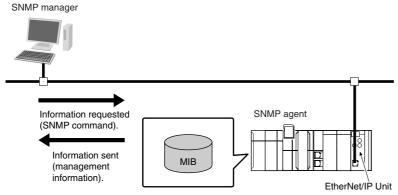

The SNMP manager has a SNMP command to request MIB information. The EtherNet/IP Unit SNMP agent function supports SNMPv1 (RFC1157) and SNMPv2C (RFC1901). Use the SNMPv1 or SNMPv2C protocol to manage the EtherNet/IP Unit with the SNMP manager. You can also use both the SNMPv1 and SNMPv2C protocols together at the same time.

SNMP Traps

When a failure or some other specific problem occurs, a status report called a trap is sent. This enables monitoring changes in status even if the SNMP manager does not monitor the EtherNet/IP Unit periodically. However, traps use UDP. Therefore, you cannot check to see if the SNMP manager receives traps from the EtherNet/IP port. Thus, depending on the network status, some traps may not reach the SNMP manager.

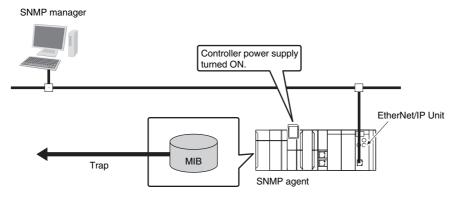


11-1-2 Specifications

Item	Specification
Protocol	SNMP
Agent	SNMPv1, SNMPv2c
MIB	MIB-II
Port No.	SNMP agent: 161 (UDP)
	SNMP trap: 162 (UDP)
	These can be changed in the EtherNet/IP Unit Settings from the Sysmac Studio.
Timing of SNMP trap opera-	Status reports are sent to the SNMP manager at the following times.
tion	When the Controller is turned ON
	When links are established
	When an SNMP agent fails to be authorized
Supported MIB commands	GetRequest/GetNextRequest

11-1-3 SNMP Messages

The structure of SNMP messages is as follows:

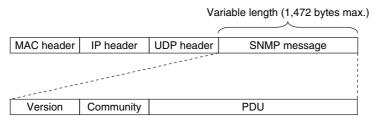

Item	Set value
Version	This value gives the SNMP version.
	SNMPv1: 0
	SNMpv2c: 1
Community	Community name for verification
PDU	This depends on the PDU type.

11-3

11-1-4 MIB Specifications

This section describes the specifications of the MIB that is supported by the EtherNet/IP Unit.

MIB System Diagram

The EtherNet/IP Unit MIB consists of the following tree structure.

```
L iso (1)
      L org (3)
              L <sub>dod (6)</sub>
                    Linternet (1)
                           L mgmt (2)
                                   L mib-2 (1)
                                          -system (1)
                                                               Unit information
                                          interface (2)
                                                               Interface information
                                               ip(4)
                                                                IP information
                                                                ICMP information
                                               icmp(5)
                                              tcp(6)
                                                                TCP information
                                              udp(7)
                                                                UDP information
                                               snmp(11)
                                                                SNMP information
```

MIB Groups

	MIB gro	Stored information		
Standard MIB	system group		The MIB for information related to the device.	
	interfaces group		The MIB for information related to the inter-	
			face.	
	<i>ip</i> group	ip	The MIB for IP information.	
		ipAddrTable	The MIB for addressing table information	
			related to IP addresses.	
		ipRouteTable	The MIB for information related to IP routing	
			tables.	
		ipNetToMediaTable	The MIB for information related to IP address	
			conversion tables.	
		ipForward	The MIB for information related to IP forward-	
			ing tables.	
	icmp group		The MIB for ICMP information.	
	tcp group	tcp	The MIB for TCP information.	
	<i>udp</i> group	udp	The MIB for UDP information.	
	snmp group snmp		The MIB for SNMP information.	

Detailed Descriptions of MIB Objects

• System Group

Subtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
sysDescr	(1) RO	Sup-	"OMRON Corporation" + Unit
	Device information (including hardware, OS,	ported.	model
	software names, and versions)		
	ASCII characters only.		
sysObjectID	(2) RO	Sup-	1.3.6.1.4.1.16838.1.1025.2
	Vendor OID.	ported.	
	Tells where this device information was		
	assigned in the private MIB.		
sysUpTime	(3) RO	Sup-	According to the standard.
	The time elapsed since the system was started (unit: 1/100 s).	ported.	
sysContact	(4) RW	Sup-	Set by the user.
	How to contact the administrator and information on the administrator.	ported.	
sysName	(5) RW	Sup-	Unit name
	The name for management. Sets the full domain name of the device.	ported.	
sysLocation	(6) RW	Sup-	Set by the user.
	The physical location of the device.	ported.	
sysServices	(7) RO	Sup-	64
	The value of the provided service.	ported.	

• Interfaces Group

	Subtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
ifNu	mber	(1) RO	Sup-	1
		The number of network interfaces.	ported.	
	ifTable	(2) NA		
		Interface entity table		
	ifEntry	(1) NA		
		Row data for interface information The index is <i>ifIndex</i> .		
	ifIndex	(1) RO	Sup-	1
		A number used to identify the interface.	ported.	
	ifDescr	(2) RO	Sup-	10/100M Fast Ether-
		Information related to the interface (includes manufacturer name, product name, and hardware interface version).	ported.	net Port
	ifType	(3) RO	Sup-	ethernet-csmacd(6)
		The type of interface classified according to the physical/link layer protocol directly under the network layer of the protocol stack.	ported.	

Subtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
ifMtu	(4) RO MTU value The maximum size (in octets) of datagrams that can be sent and received through this interface.	Sup- ported.	1500
ifSpeed	(5) RO Estimated bandwidth If a stable, accurate value cannot be obtained for the bandwidth, a nominal value is set instead.	Sup- ported.	10000000
ifPhysAddress	(6) RO MAC address The physical address under the network layer of the interface.	Sup- ported.	The MAC address of the EtherNet/IP port.
ifAdminStatus	(7) RW The preferred status of the interface. You cannot send normal packets in the testing state. up(1) down(2) testing(3)	Sup- ported.	According to the standard.
ifOperStatus	(8) RO The current status of the interface. You cannot send normal packets in the testing state. up(1) down(2) testing(3)	Sup- ported.	According to the standard.
ifLastChange	(9) RO The sysUpTime (in 0.01seconds) at the last change in ifOperStatus for this interface.	Sup- ported.	According to the standard.
ifInOctets	(10) RO The number of octets received through this interface. This includes framing characters.	Sup- ported.	According to the standard.
ifInUcastPkts	(11) RO The number of unicast packets reported to a higher level protocol.	Sup- ported.	According to the standard.
ifInNUcastPkts	(12) RO The number of non-unicast packets (broadcast or multicast packets) reported to a higher level protocol.	Sup- ported.	According to the standard.
ifInDiscards	(13) RO The number of packets that had no errors but could not be passed to a higher level protocol (i.e., the number of packets received but discarded due to a buffer overflow).	Sup- ported.	According to the standard.
ifInErrors	(14) RO The number of packets discarded because they contained errors.	Sup- ported.	According to the standard.
ifInUnknown Protos	(15) RO The number of packets received, but discarded because they were of an illegal or unsupported protocol. For example, Ethernet packets did not have IP set for the field that identifies their higher level protocol.	Sup- ported.	According to the standard.

5	Subtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
	ifOutOctets	(16) RO The number of octets of packets sent through this interface. This includes framing characters.	Sup- ported.	According to the standard.
	ifOutUcast Pkts	(17) RO The number of unicast packets sent by higher level protocols. This includes discarded packets and unsent packets.	Sup- ported.	According to the standard.
	ifOutNUcast Pkts	(18) RO The number of non-unicast packets sent by higher level protocols. This includes discarded packets and unsent packets.	Sup- ported.	According to the standard.
	ifOutDiscards	(19) RO The number of packets that had no errors but were discarded in the sending process (due to a send buffer overflow, etc.).	Sup- ported.	According to the standard.
	ifOutErrors	(20) RO The number of packets that could not be sent because of an error.	Sup- ported.	According to the standard.
	ifOutQLen	(21) RO The size of the send packet queue (i.e., the number of packets).	Sup- ported.	Always 0.
	ifSpecific	(22) RO The object ID that represents a reference to the media-specific MIB for the interface. For example, for Ethernet, set the object ID of the MIB that defines Ethernet. If there is no information, set { 0.0 }.	Sup- ported.	0.0

• Ip Group: Ip

Subtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
ipForwarding	(1) RW Indicates if the device operates as a gateway. IP gateways can transfer datagrams, but IP hosts can perform only source routing. Some nodes take only one of these values. Therefore, if you attempt to change this object from the SNMP Manager, a badValue error is returned.	Sup- ported.	Not-forwarding (2)
	Forwarding (1) Not-forwarding (2)		
IpDefaultTTL	(2) RW The default value set for the IP header TTL if no TTL value was given by the transport layer protocol.	Sup- ported.	64
IpInReceives	(3) RO The number of all IP datagrams that reached the interface, including errors.	Sup- ported.	According to the standard.
IpInHdrErrors	(4) RO The number of received datagrams that were discarded because of an IP header error (checksum error, version number error, format error, TTL error, IP option error, etc.).	Sup- ported.	According to the standard.
IpInAddrErrors	(5) RO The number of packets that were discarded because the destination address in the IP header was not valid.	Sup- ported.	According to the standard.
ipForwDatagrams	(6) RO The number of IP datagrams that were transferred to their final destination. If this node does not operate as an IP gateway, this is the number of datagrams that were successfully transferred through source routing.	Sup- ported.	According to the standard.
ipInUnknownProtos	(7) RO The number of IP datagrams that were received but discarded because they were of an unsupported or unrecognized protocol.	Sup- ported.	According to the standard.
ipInDiscards	(8) RO The number of IP datagrams that could have continued to be processed without any problems, but were discarded (for example, because of insufficient buffer space).	Sup- ported.	According to the standard.
ipInDelivers	(9) RO The number of datagrams delivered to an IP user protocol (any higher level protocol, including ICMP).	Sup- ported.	According to the standard.
ipOutRequests	(10) RO The number of times a send request was made for an IP datagram by a local IP user protocol (any higher level protocol, including ICMP). This counter does not include <i>ipForwDatagrams</i> .	Sup- ported.	According to the standard.
ipOutDiscards	(11) RO The number of IP datagrams that could have been sent without any problems, but were discarded (for example, because of insufficient buffer space).	Sup- ported.	According to the standard.

Subtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
ipOutNoRoutes	(12) RO The number of IP datagrams that were discarded because there was no transmission path. This counter includes datagrams that attempted to be sent through <i>ipForwDatagrams</i> , but were discarded because they were set with no-route. This value indicates the number of datagrams that could not be transferred because the default gateway was down.	Sup- ported.	According to the standard.
ipReasmTimeout	(13) RO The maximum number of seconds to wait to receive all IP datagrams for reassembly if a fragmented IP datagram is received.	Sup- ported.	60 s
ipReasmReqds	(14) RO The number of IP datagrams received that require reassembly. There is a flag in the IP header that indicates if the datagram is fragmented. You can use that flag to identify fragments.	Sup- ported.	According to the standard.
ipReasmOKs	(15) RO The number of IP datagrams received that were successfully reassembled.	Sup- ported.	According to the standard.
ipReasmFails	(16) RO The number of IP datagrams received that were not successfully reassembled.	Sup- ported.	According to the standard.
ipFragOKs	(17) RO The number of IP datagrams that were successfully fragmented.	Sup- ported.	According to the standard.
ipFragFails	(18) RO The number of IP datagrams that were not successfully fragmented. (For example, because the Don't Fragment flag was set for the IP datagram.)	Sup- ported.	According to the standard.
ipFragCreates	(19) RO The number of IP datagrams created as a result of fragmentation.	Sup- ported.	According to the standard.
ipAddrTable	(20) NA An address information table for IP addresses.		

	Subtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
	ipAddrEntry	(1) NA		
		Row data of address information for IP addresses. The index is <i>ipAdEntAddr</i> .		
	ipAdEntAddr	(1) RO	Sup-	According to the
		The IP address.	ported.	standard.
	ipAdEntIfIndex	(2) RO	Sup-	According to the
		The index value of the interface that this entry applies to. This is the same value as <i>ifIndex</i> .	ported.	standard.
	ipAdEntNet	(3) RO	Sup-	According to the
	Mask	The subnet mask for the IP address of this entry.	ported.	standard.
	ipAdEntB-	(4) RO	Sup-	According to the
	castAddr	The value of the least significant bit of the address when an IP broadcast is sent. An address represented by all 1 bits is used for broadcasting as an Internet standard. In that case, this value is always 1.	ported.	standard.
	ipAdEn-	(5) RO	Sup-	According to the
	tReasmMax- Size	The maximum IP packet size that can be reassembled from IP fragmented input IP datagrams received through the interface.	ported.	standard.
ipRo	outeTable	(21) NA		
		The IP routing table for this entity.		
	ipRouteEntry	(1) NA		
		Route information for a specific destination. The index is <i>ipRouteDest</i> .		
	ipRouteDest	(1) RW	Sup-	According to the
		The destination IP address for this route. A value of 0.0.0.0 for this entry indicates the default route.	ported.	standard.
	ipRoutelfIndex	(2) RW	Sup-	According to the
		The ID number of the interface required to send to the next destination host in this route. This ID number is the same number as <i>ifIndex</i> , which is used to identify the interface.	ported.	standard.

Subtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
ipRouteMetric1	(3) RW The primary routing metric for this route. This value is determined based on the protocol specified in <i>ipRouteProto</i> . Set to –1 if you do not want to use this metric (this is also the same for <i>ipRouteMetric</i> 2 through 4).	Sup- ported.	According to the standard.
ipRouteMetric2	(4) RW The alternative routing metric for this route.	Sup- ported.	According to the standard.
ipRouteMetric3	(5) RW The alternative routing metric for this route.	Sup- ported.	According to the standard.
ipRouteMetric4	(6) RW The alternative routing metric for this route.	Sup- ported.	According to the standard.
ipRouteNext Hop	(7) RW The IP address of the next hop in this route (for routes connected by a broadcast or media, this is the agent address or address of that interface).	Sup- ported.	According to the standard.
ipRouteType	(8) RW The type of route. Other (1): Not any of the following types. Invalid (2): An invalid route. Direct (3): A direct connection. Indirect (4): An indirect connection (not connected to LOCAL).	Sup- ported.	According to the standard.
ipRouteProto	(9) RO This is the routing mechanism used to determine routes. Some values correspond to gateway routing protocols, but be aware that the host may not support those protocols. Other (1): Other than the following items. Local (2): A route set on the local machine. Netmgmt (3): A route set by network management. Icmp (4): A route set by an ICMP redirect or some other ICMP function. Egp (5): EGP The following are gateway protocols: Ggp (6): GGP Hello (7): HELLO Rip (8): RIP is-is (9) es-is (10) ciscolgrp (11) bbnSpflgp (12) ospf (13): OSPF bgp (14)	Sup- ported.	According to the standard.
ipRouteAge	(10) RW The elapsed time since this route was updated (in seconds).	Sup- ported.	According to the standard.

Su	ubtree name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
	ipRouteMask	(11) RW The subnet mask value in relation to <i>ipRouteDest</i> . On systems that do not support a custom subnet mask value, this value is based on the address class of the <i>ipRouteDest</i> field. If <i>ipRouteDest</i> is 0.0.0.0, this value is also 0.0.0.0.	Sup- ported.	According to the standard.
	ipRouteMetric5	(12) RW The alternative routing metric.	Sup- ported.	According to the standard.
	ipRouteInfo	(13) RO The MIB object ID for the routing protocol used by this route. If not defined, set to {0.0}.	Sup- ported.	0.0
ipNetTo	MediaTable	(22) NA The IP address conversion table used to map IP addresses to physical addresses.		
lqN	NetToMediaEntry	(1) NA Row data for the conversion table. The indices are ipNetToMedialfIndex and ipNetToMediaNetAddress.		
	ipNetToMedi- alfIndex	(1) RW The interface ID number for this entry. The value of <i>ifIndex</i> is used for this value.	Sup- ported.	According to the standard.
	ipNetToMedi- aPhysAddress	(2) RW The media-dependent physical address.	Sup- ported.	According to the standard.
	ipNetToMedi- aNetAddress	(3) RW The IP address that corresponds to the media-dependent physical address.	Sup- ported.	According to the standard.
	ipNetToMedi- aType	(4) RW The address conversion method. Other (1): A method other than the following items. Invalid (2): An invalid value. Dynamic (3): Dynamic conversion. Static (4): Static conversion.	Sup- ported.	According to the standard.
ipRoutingDiscards		(23) RO The number of routing entries that were valid but discarded. For example, if there was not enough buffer space because of other routing entries.	Sup- ported.	According to the standard.

• Ip Group: Icmp

Name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
icmplnMsgs	(1) RO	Sup-	According to the
. •	The total number of received ICMP messages. This includes messages counted by <i>icmpInErrors</i> .	ported.	standard.
icmpInErrors	(2) RO	Sup-	According to the
	The number of received ICMP message errors. (Checksum errors, frame length errors, etc.)	ported.	standard.
icmpInDestUnreachs	(3) RO	Sup-	According to the
	The number of <i>Destination Unreachable</i> messages received.	ported.	standard.
icmpInTimeExcds	(4) RO	Sup-	According to the
	The number of <i>Time Exceed</i> messages received.	ported.	standard.
icmpInParmProbs	(5) RO	Sup-	According to the
	The number of <i>Parameter Problem</i> messages received.	ported.	standard.
icmpInSrcQuenchs	(6) RO	Sup-	According to the
	The number of <i>Source Quench</i> messages received.	ported.	standard.
icmpInRedirects	(7) RO	Sup-	According to the
	The number of <i>Redirect</i> messages received.	ported.	standard.
icmpInEchos	(8) RO	Sup-	According to the
	The number of <i>Echo (request)</i> messages received.	ported.	standard.
icmpInEchoReps	(9) RO	Sup-	According to the
	The number of <i>Echo Reply</i> messages received.	ported.	standard.
icmpInTimestamps	(10) RO	Sup-	According to the
	The number of <i>Timestamp</i> messages received.	ported.	standard.
icmpInTimestampReps	(11) RO	Sup-	According to the
	The number of <i>Timestamp Reply</i> messages received.	ported.	standard.
icmpInAddrMasks	(12) RO	Sup-	According to the
	The number of <i>Address Mask Request</i> messages received.	ported.	standard.
icmpInAddrMaskReps	(13) RO	Sup-	According to the
	The number of <i>Address Mask Reply</i> messages received.	ported.	standard.
icmpOutMsgs	(14) RO	Sup-	According to the
	The total number of ICMP messages sent. This includes messages counted by <i>icmpOutErrors</i> .	ported.	standard.
icmpOutErrors	(15) RO	Sup-	According to the
	The number of ICMP messages that could not be sent because of an error.	ported.	standard.
icmpOutDestUnreachs	(16) RO	Sup-	According to the
	The number of <i>Destination Unreachable</i> messages sent.	ported.	standard.
icmpOutTimeExcds	(17) RO	Sup-	According to the
	The number of <i>Time Exceed</i> messages sent.	ported.	standard.
icmpOutParmProbs	(18) RO	Sup-	According to the
	The number of <i>Parameter Problem</i> messages sent.	ported.	standard.
icmpOutSrcQuenchs	(19) RO	Sup-	According to the
	The number of Source Quench messages sent.	ported.	standard.

Name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
icmpOutRedirects	(20) RO	Sup- ported.	According to the standard.
	The number of Redirect messages sent.		
icmpOutEchos	(21) RO	Sup- ported.	According to the standard.
	The number of <i>Echo (request)</i> messages sent.		
icmpOutEchoReps	(22) RO	Sup- ported.	According to the standard.
	The number of <i>Echo Reply</i> messages sent.		
icmpOutTimestamps	(23) RO	Sup- ported.	According to the standard.
	The number of <i>Timestamp</i> messages sent.		
icmpOutTimestampReps	(24) RO	Sup- ported.	According to the standard.
	The number of <i>Timestamp Reply</i> messages sent.		
icmpOutAddrMasks	(25) RO	Sup- ported.	According to the standard.
	The number of Address Mask Request messages		
	sent.		
icmpOutAddrMaskReps	(26) RO	Sup- ported.	According to the standard.
	The number of <i>Address Mask Reply</i> messages sent.		

• Ip Group: Tcp

Name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
tcpRtoAlgorithm	(1) RO	Sup-	According to the
	The algorithm used to determine the timeout value for resending.	ported.	standard.
	Other (1): Other than the following items.		
	Constant (2): A constant RTO value.		
	Rsre (3): The algorithm specified by the MIL-STD-1778 standard.		
	Vanj (4): The Van Jacobson algorithm.		
cpRtoMin	(2) RO	Sup-	According to the
	The minimum resend timeout value (in 0.01 s). This value depends on the algorithm used to determine the resend timeout value.	ported.	standard.
tcpRtoMax	(3) RO	Sup-	According to the
	The maximum resend timeout value (in 0.01 s). This value depends on the algorithm used to determine the resend timeout value.	ported.	standard.
tcpMaxConn	(4) RO	Sup-	According to the
	The total number of supported TCP connections. If the maximum number of connections is dynamic, this value is –1.	ported.	standard.
cpActiveOpens	(5) RO	Sup-	According to the
	The number of times the TCP connection changed from the CLOSE state directly to the SYN-SENT state. (Active connection establishment.)	ported.	standard.
tcpPassiveOpens	(6) RO	Sup-	According to the
	The number of times the TCP connection changed from the LISTEN state directly to the SYN-RCVD state. (Passive connection establishment.)	ported.	standard.
tcpAttemptFails	(7) RO	Sup-	According to the
	The total number of times the TCP connection changed from the SYN-SENT or SYN-RCVD state directly to the CLOSE state and from the SYN-RCVD state directly to the LISTEN state.	ported.	standard.
tcpEstabResets	(8) RO	Sup-	According to the
	The number of times the TCP connection changed from the ESTABLISHED or the CLOSE-WAIT state directly to the CLOSE state.	ported.	standard.
tcpCurrEstab	(9) RO	Sup-	According to the
	The total number of TCP connections currently in the ESTABLISHED or the CLOSE-WAIT state.	ported.	standard.
tcpInSegs	(10) RO	Sup-	According to the
	The total number of received segments. This includes the number of error segments.	ported.	standard.
tcpOutSegs	(11) RO	Sup-	According to the
	The total number of sent segments. This includes the number of segments for the current connection, but does not include the number of segments for resent data only.	ported.	standard.
tcpRetransSegs	(12) RO	Sup-	According to the
iopi iotianocogo			

	Name	Standard [(identifier) attribute]	Sup- port	Implementation specifications
tcpCo	nnTable	(13) NA		According to the
·		The information table specific to the TCP connection.		standard.
t	cpConnEntry	(1) NA		According to the
		Entry information related to a specific TCP connection. This value is deleted if the connection changes to the CLOSE state. The indices are tcp-ConnLocalAddress, tcpConnLocalPort, tcpConnRemAddress, and tcpConnRemPort.		standard.
	tcpConnState	(1) RW	Sup-	According to the
		The status of the TCP connection.	ported.	standard.
		closed(1)		
		listen(2)		
		synSent(3)		
		synReceived(4)		
		established(5)		
		finWait1(6)		
		finWait2(7)		
		closeWait(8)		
		lastAck(9)		
		closing(10)		
		timeWait(11)		
	tcpConnLoca-	(2) RO	Sup-	According to the
	IAddress	The local IP address of this TCP connection. A	ported.	standard.
		value of 0.0.0.0 is used for connections in the LIS-	•	
		TEN state that accept connections from any IP		
		interface related to the node.		
	tcpConnLocal-	(3) RO	Sup-	According to the
	Port	The local port number for this TCP connection.	ported.	standard.
	tcpConnRe-	(4) RO	Sup-	According to the
	mAddress	The remote IP address for this TCP connection.	ported.	standard.
	tcpConnRem-	(5) RO	Sup-	According to the
	Port	The remote port number for this TCP connection.	ported.	standard.
tcpInE	Errs	(14) RO	Sup-	According to the
		The total number of error segments received (TCP checksum errors, etc.).	ported.	standard.
tcpOu	tRsts	(15) RO	Sup-	According to the
		The number of segments sent with the RST flag (the number of times the TCP connection was reset).	ported.	standard.

• Ip Group: Udp

Name		Standard [(identifier) attribute]	Sup- port	Implementation specifications
udpl	nDatagrams	(1) RO	Sup-	According to the stan-
		The total number of UDP datagrams (i.e., the number of packets) sent to the UDP user.	ported.	dard.
udpl	NoPorts	(2) RO	Sup-	According to the stan-
		The number of UDP datagrams that were received but did not start an application at the destination port.	ported.	dard.
udpl	nErrors	(3) RO	Sup-	According to the stan-
		The number of UDP datagrams that were not sent	ported.	dard.
		to a higher level protocol for a reason other than udpNoPorts.		
udpOutDatagrams		(4) RO	Sup-	According to the stan-
		The total number of sent UDP datagrams.	ported.	dard.
udp	Table	(5) NA		According to the stan-
		The information table for the UDP listener.		dard.
	udpEntry	(1) NA		According to the stan-
		An entry related to a specific UDP listener. The		dard.
		indices are udpLocalAddress and udpLocalPort.		
	udpLocal	(1) RO	Sup-	According to the stan-
	Address	The IP address of this UDP listener. A value of	ported.	dard.
		0.0.0.0 is used for UDP listeners that accept data-		
	11 15	grams from any IP interface related to the node.		A P 1 1 1
	udpLocalPort	(2) RO	Sup-	According to the stan-
		The local port number for this UDP listener.	ported.	dard.

• Ip Group: Snmp

Name			Standard [(identi- fier) attribute]
snmpInPkts	(1) RO The total number of SNMP messages received.	Sup- ported.	According to the standard.
snmpOutPkts	(2) RO The total number of SNMP messages sent.	Sup- ported.	According to the standard.
snmpInBadVersions	(3) RO The total number of messages received of an unsupported version.	Sup- ported.	According to the standard.
snmpInBadCommunity- Names	(4) RO The total number of messages received from an unregistered community.	Sup- ported.	According to the standard.
snmpInBadCommunity- Uses	(5) RO The total number of messages received that specify an operation that is not allowed by that community.	Sup- ported.	According to the standard.
snmplnASNParseErrs	(6) RO The total number of messages received that resulted in an ASN.1 error or BER error during decoding.	Sup- ported.	According to the standard.
snmpInTooBigs	(8) RO The total number of PDUs received with an error status of <i>tooBig</i> .	Sup- ported.	According to the standard.
snmpInNoSuchNames	(9) RO The total number of PDUs received with an error status of noSuchName.	Sup- ported.	According to the standard.

	Name		Standard [(identi- fier) attribute]
snmpInBadValues	(10) RO The total number of PDUs received with an error status of <i>badValue</i> .	Sup- ported.	According to the standard.
snmpInReadOnlys	(11) RO The total number of PDUs received with an error status of <i>readOnly</i> .	Sup- ported.	According to the standard.
snmpInGenErrs	(12) RO The total number of PDUs received with an error status of <i>genErr</i> .	Sup- ported.	According to the standard.
snmpInTotalReqVars	(13) RO The total number of MIB objects read normally after receiving GetRequest or GetNextRequest.	Sup- ported.	According to the standard.
snmpInTotalSetVars	(14) RO The total number of MIB objects updated normally after receiving SetRequest.	Sup- ported.	According to the standard.
snmpInGetRequests	(15) RO The total number of <i>GetRequest</i> PDUs received.	Sup- ported.	According to the standard.
snmpInGetNexts	(16) RO The total number of <i>GetNextRequest</i> PDUs received.	Sup- ported.	According to the standard.
snmpInSetRequests	(17) RO The total number of SetRequest PDUs received.	Sup- ported.	According to the standard.
snmpInGetResponses	(18) RO The total number of <i>GetResponse</i> PDUs received.	Sup- ported.	According to the standard.
snmplnTraps	(19) RO The total number of trap PDUs received.	Sup- ported.	According to the standard.
snmpOutTooBigs	(20) RO The total number of PDUs sent with an error status of <i>tooBig</i> .	Sup- ported.	According to the standard.
snmpOutNoSuchNames	(21) RO The total number of PDUs sent with an error status of <i>noSuchName</i> .	Sup- ported.	According to the standard.
snmpOutBadValues	(22) RO The total number of PDUs sent with an error status of badValue.	Sup- ported.	According to the standard.
snmpOutGenErrs	(24) RO The total number of PDUs sent with an error status of <i>genErr</i> .	Sup- ported.	According to the standard.
snmpOutGetRequests	(25) RO The total number of <i>GetRequest</i> PDUs sent.	Sup- ported.	According to the standard.
snmpOutGetNexts	(26) RO The total number of <i>GetNextRequest</i> PDUs sent.	Sup- ported.	According to the standard.
snmpOutSetRequests	(27) RO The total number of SetRequest PDUs sent.	Sup- ported.	According to the standard.
snmpOutGetResponses	(28) RO The total number of <i>GetResponse</i> PDUs sent.	Sup- ported.	According to the standard.
snmpOutTraps	(29) RO The total number of trap PDUs sent.	Sup- ported.	According to the standard.
snmpEnableAuthen Traps	(30) RW Determines if the agent generates verification failed traps. Enabled (1) Disabled (2)	Sup- ported.	According to the standard.

11-2 Procedure to Use the SNMP Agent

11-2-1 Procedures

- Make the basic settings.
 Refer to 1-5 EtherNet/IP Communications Procedures for the flow of basic operations.
- **2** Make the following settings in the Special Unit Setup in the Controller Configurations and Setup of the Sysmac Studio and then set the following on the SNMP Settings Display or SNMP Trap Settings Display.
 - SNMP Service
 - · Recognition 1
 - Recognition 2
- 3 Select *Transfer to Controller* from the Controller Menu and click the **Yes** Button. The Ether-Net/IP Unit settings are transferred to the CPU Unit.

11-2-2 Settings Required for the SNMP Agent

The following EtherNet/IP Unit settings are made from the Sysmac Studio to use the SNMP agent.

Tab page		Setting	Setting conditions	Reference
SNMP Settings	SNMP service		Required.	page 5-9
Port N		Э.	Specified by user.	
			Note Required to change from the default value of 161.	
	Addres	s, location	Specified by user.	
	Send a	recognition trap	Specified by user.	
			Select this check box to send a recognition trap if there is access from an SNMP manager that is not specified (Access other than Recognition 1 and 2).	
	Recogi 2	nition 1 and Recognition	Specified by user. Make these settings to permit access by only	page 5-10
		IP address	certain SNMP managers.	
		Host name		
		Community name		
SNMP Trap Set-	SNMP	trap	Required.	page 5-11
tings	Port No	О.	Specified by user.	
			Note Required to change from the default value of 162.	
	Trap 1	and trap 2		page 5-12
		IP address	Required.	
		Host name	Set an IP address or a host name as the SNMP trap destination.	
		Community name	Specified by user.	
		Version	Required.	
			Set the version of the SNMP manager.	



Additional Information

Make the settings in the SNMP Settings Dialog Box and SNMP Trap Dialog Box if the SNMP

Refer to 5-6 SNMP Settings Display for information on the SNMP Settings Dialog Box. Refer to 5-7 SNMP Trap Settings Display for information on the SNMP Trap Dialog Box.



Communications Performance and Communications Load

12-1 C	Commu	nications System	12-2
1:	2-1-1	Tag Data Link Communications Method	12-2
1:	2-1-2	Calculating the Number of Connections	12-5
1:	2-1-3	Packet Interval (RPI) Accuracy	12-6
12-2 A	Adjustii	ng the Communications Load	12-7
1:	2-2-1	Checking Bandwidth Usage for Tag Data Links	12-8
1:	2-2-2	Tag Data Link Bandwidth Usage and RPI	12-9
1:	2-2-3	Adjusting Device Bandwidth Usage	12-10
1:	2-2-4	Changing the RPI	12-11
1	2-2-5	RPI Setting Examples	12-17
12-3 l/	/O Res	ponse Time in Tag Data Links1	2-22
1:	2-3-1	Timing of Data Transmissions	12-22
1:	2-3-2	EtherNet/IP Unit Data Processing Time	12-23
1:	2-3-3	Effect of Tag Data Links on Task Periods	12-25
1:	2-3-4	Maximum Tag Data Link I/O Response Time	12-26
12-4 N	/lessag	e Service Transmission Delay1	2-28

12-1 Communications System

Tag Data Link Communications Method 12-1-1

Requested Packet Interval (RPI) Settings

In tag data links for the EtherNet/IP Unit, the data transmission period is set for each connection as the RPI.

The target device will send data (i.e., output tags) once each RPI, regardless of the number of nodes.

Also, the heartbeat frame is sent from the originator to the target for each connection. The target uses the heartbeat to check to see if errors have occurred in the connection with the originator. The data transmission period of the heartbeat frame depends on the RPI settings.

Heartbeat Frame Transmission Period

- If packet interval < 100 ms, the heartbeat frame transmission period is 100 ms.
- If packet interval ≥ 100 ms, the heartbeat frame transmission period is the same as the RPI.

Example:


In this example, 2 tag data link connections are set for node 2 (the originator) and node 1 (the tar-

The RPI for output data 1 is set to 10 ms.

The RPI for output data 2 is set to 15 ms.

In this case, output data 1 is sent from node 1 to node 2 every 10 ms, and output data 2 is sent from node 1 to node 2 every 15 ms, as shown in the following diagram.

Also, data is sent from node 2 (the originator) to node 1 (the target) with a heartbeat of 100 ms for connection 1 and a heartbeat of 100 ms for connection 2.

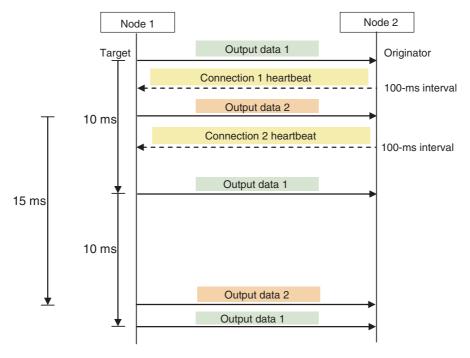

Requested Packet Interval (RPI) and Bandwidth Usage

The weighted number of packets transferred each second is called the bandwidth usage. "N" in this section represents a weighing factor according to the packet data size.

The bandwidth usage is calculated from the RPI, heartbeat, and the factor of N as follows for each connection:

Bandwidth used in a connection = $(1,000 \div RPI \text{ (ms)} \times N) + (1,000 \div Heartbeat transmission period (ms))$

N = Tag data link's allowable bandwidth ÷ (Tag data link's allowable bandwidth + Coefficient × Data size per connection)

Unit version	Allowed tag data link com- munications bandwidth	Coefficient	N
2.1 or earlier	6,000	0	1
3.0	12,000	-4.155	1 to 2

Use the following equation to calculate the total bandwidth used by each Unit (refers to as an Ether-Net/IP Unit in the following examples).

Total bandwidth used by Unit = Total bandwidth used by originator connections + Total bandwidth used by target connections

Note Connections set as target connections must also be added to the total bandwidth used by target connections.

Make the connection settings so that the Unit's total bandwidth used does not exceed its upper value.


Unit version	Total bandwidth used
2.1 or earlier	6,000
3.0	12,000

Example

Node 1 has both originator and target connections, and sends 512 bytes of data at an RPI of 200 ms and 10 bytes of data at an RPI of 2 ms, and receives 256 bytes of data at an RPI of 500 ms.

Node 2 has originator connections only, and receives 512 bytes of data at an RPI of 200 ms, 10 bytes of data at an RPI of 2 ms, and 20 bytes of data at an RPI of 5 ms.

Node 3 has target connections only, and sends 20 bytes of data at an RPI of 5 ms, and 256 bytes of data at an RPI of 500 ms.

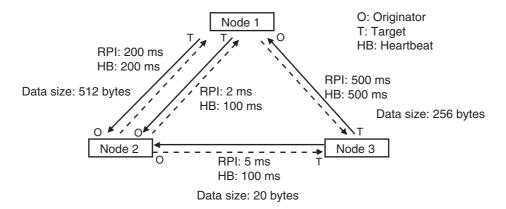

Each node's total bandwidth used is calculated as follows:

Communication using Units with Unit version 2.1 or earlier

- · Total bandwidth used for node 1 Unit
 - $= 1,000 / 200 \text{ ms} \times 1 + 1,000 / 2 \text{ ms} \times 1 + 1,000 / 500 \text{ ms} \times 1 \text{ (for data)}$
 - + 1,000 / 200 ms + 1,000 / 100 ms + 1,000 / 500 ms (for heartbeat)
 - = 524
- Total bandwidth used for node 2 Unit
 - = $1,000 / 200 \text{ ms} \times 1 + 1,000 / 2 \text{ ms} \times 1 + 1,000 / 5 \text{ ms} \times 1 \text{ (for data)}$
 - + 1,000 / 200 ms + 1,000 / 100 ms + 1,000 / 100 ms (for heartbeat)
- · Total bandwidth used for node 3 Unit
 - $= 1,000 / 5 \text{ ms} \times 1 + 1,000 / 500 \text{ ms} \times 1 \text{ (for data)}$
 - + 1,000 / 100 ms + 1,000 / 500 ms (for heartbeat)

All of the Units are within the upper value of the total bandwidth used of 6,000 pps, so they can transfer data.

Communication using Units with Unit version 3.0

Data size (bytes)	Factor N
10	12,000 / (12,000 - 4.155 × 10) = 1.003
20	12,000 / (12,000 - 4.155 × 20) = 1.007
256	12,000 / (12,000 - 4.155 × 256) = 1.097
512	12,000 / (12,000 - 4.155 × 512) = 1.215

- Total bandwidth used for node 1 Unit
 - $= 1,000 / 200 \text{ ms} \times 1.215 + 1,000 / 2 \text{ ms} \times 1.003 + 1,000 / 500 \text{ ms} \times 1.097 \text{ (for data)}$
 - + 1,000 / 200 ms + 1,000 / 100 ms + 1,000 / 500 ms (for heartbeat)
 - = 527
- · Total bandwidth used for node 2 Unit
 - $= 1,000 / 200 \text{ ms} \times 1.215 + 1,000 / 2 \text{ ms} \times 1.003 + 1,000 / 5 \text{ ms} \times 1.007 \text{ (for data)}$
 - + 1,000 / 200 ms + 1,000 / 100 ms + 1,000 / 100 ms (for heartbeat)
 - = 734
- Total bandwidth used for node 3 Unit
 - $= 1,000 / 5 \text{ ms} \times 1.007 + 1,000 / 500 \text{ ms} \times 1.097 \text{ (for data)}$
 - + 1,000 / 100 ms + 1,000 / 500 ms (for heartbeat)

All of the Units are within the tag data link's allowable bandwidth of 12,000 pps, so they can transfer data.

12-1-2 Calculating the Number of Connections

The maximum number of connections for the EtherNet/IP Unit is 256.

The number of connections must be set to 256 or less combining both connections that the Unit opens as the originator and connections that are opened from an originator with the Unit as the target.


Example:

Node 1 opens two connections as the target with node 2 and one connection as the originator with node 3. Therefore, the total is three connections.

Node 2 opens two connections as the originator with node 1 and one connection as the originator with node 3. Therefore, the total is three connections.

Node 3 opens one connection as the target with node 1 and one connection as the target with node 2. Therefore, the total is two connections.

In either case, the connections can be opened because the maximum number of connections for the EtherNet/IP Unit is 256 max.

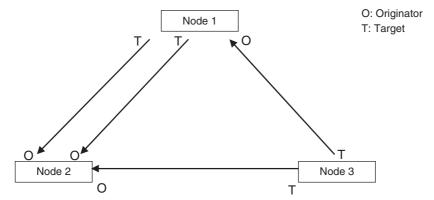


Also, if multicast is set, one packet will be sent, but the number of connections will be consumed.

Example:

Node 3 sends one multicast packet to node 1 and node 2. Node 3 opens one connection as the target with node 1 and one connection as the target with node 2.


Caution is required because the number of connections consumed is the same as for unicast connections even when multicast connections are set.

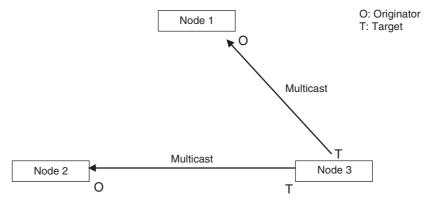

12-1-3 Packet Interval (RPI) Accuracy

The send processing delay occurs in the EtherNet/IP Unit when data packets are sent once each packet interval (RPI). This delay varies with the RPI error shown in the following graph, so the send processing delay time is the maximum value for each RPI.

Packet interval (RPI)	RPI error (±) (%)
0.5 to 1,000 ms	15 – (RPI [ms]/100)
1,000 to 10,000 ms	5% of the RPI

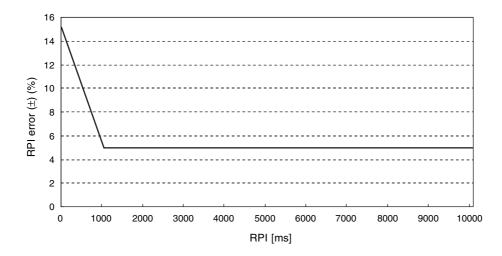

12-2 Adjusting the Communications Load

In an Ethernet network using an Ethernet switch, the network bandwidth is not shared by all of the nodes; independent transmission paths are established between individual nodes through the Ethernet switch.

A dedicated communications buffer is established in the Ethernet switch for communications between the nodes and full-duplex communications (simultaneous transmission and reception) are performed asynchronously with other transmission paths. The communications load in other transmission paths does not affect communications, so packet collisions do not occur and stable, high-speed communications can be performed.

The Ethernet switch functions shown in the following table determine the performance of tag data links.

Item	Description
Buffer capacity	This is the amount of data that can be buffered when packets accumulate at the Ethernet switch.
Multicast filtering	This function transfers multicast packets to specific nodes only.
QoS function	This function performs priority control on packet transfers.

The following table shows the setting ranges of the tag data link settings that can be made for an Ether-Net/IP Unit.

Item	Description	Settings
Network bandwidth	Physical Ethernet baud rate	100 Mbps or 10 Mbps
Allowed tag data link communications bandwidth	Maximum number of tag data link packets that can be processed in 1 second (pps: packets per second)	6,000 to 1,2000 pps
Connection resources	Number of connections that can be established	256 max.
Packet interval (RPI: Requested Packet Interval)	Refresh period for tag data	0.5 to 10,000 ms in 0.5-ms increments

When the tag data link settings exceed the capabilities of the Ethernet switch being used, increase the packet interval (RPI) value. Particularly when using an Ethernet switch that does not support multicast filtering, the settings must be made considering that multicast packets will be sent even to nodes without connection settings.



Additional Information


If the Network Configurator is used to set the connection type in the connection settings to a multicast connection, multicast packets will be used. If the connection type is set to a point-to-point connection, multicast packets are not used.

In addition, if the required tag data link performance cannot be achieved with the Ethernet switch's capabilities, re-evaluate the overall network configuration and correct it by taking steps such as selecting a different Ethernet switch or splitting the network.

The following sections show how to check the device bandwidth being used by the tag data links in the designed network, and how to set the appropriate values.

Checking Bandwidth Usage for Tag Data Links 12-2-1

The Network Configurator can display the bandwidth actually used for tag data links at each Ether-Net/IP Unit, based on the connections set in the network configuration. The device bandwidth used by tag data links can be checked by clicking the Detail Button in the Usage of Device Bandwidth Area at the bottom of the Network Configuration Window.

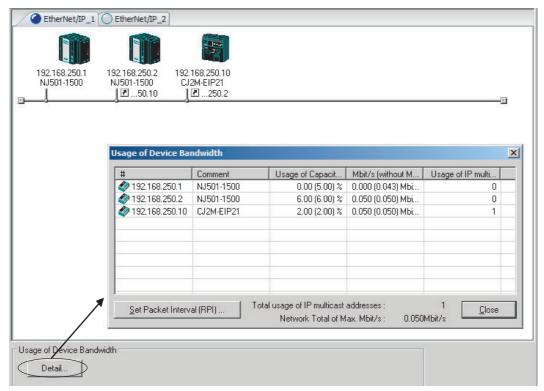

Item	Description
#	The IP address of the device.
Comment	A description of the device. The comment is displayed below the device icon. The model number of the device is displayed by default.
Usage of Capacity (without Multicast Filter)	The percentage of the allowable communications bandwidth used for tag data links for the device is displayed. Bandwidth used \div Allowable tag data link bandwidth
	The values outside parentheses are for when multicast filtering is used.
	The values inside parentheses are for when multicast filtering is not used.
Mbit/s (without Multicast Filter)	The bandwidth used for communications by the device of the 100-Mbps network bandwidth is shown.
	The values outside parentheses are for when multicast filtering is used.
	The values inside parentheses are for when multicast filtering is not used.
Usage of IP Multicast Addresses	The number of multicast IP addresses actually used for communications by the device is shown.
Total usage of IP multicast addresses	The number of multicast IP addresses used in the entire network is shown. This value is used to estimate the number of multicast filters for switching.
Network Total of Max. Mbit/s	The total network bandwidth used for tag data link communications in the entire network is shown. Tag data links will not operate normally if 100 Mbps is exceeded for the network bandwidth.

Checking the Usage of Capacity and Network Bandwidth for Tag Data Links

The percentage of the allowable communications bandwidth for tag data links for each EtherNet/IP Unit is displayed as the *Usage of Capacity* and the bandwidth used for tag data link communications in the entire network is displayed as the *Mbit/s*. The usage of capacity and used network bandwidth that are displayed in parentheses are for an Ethernet switch that does not use multicast filtering. In this case, multicast packets will be sent to even the nodes without connection settings, so the displayed values will include these packets as well. These values can be adjusted according to instructions in *12-2-4 Changing the RPI*.

Checking the Total Number of Multicast IP Addresses in the Network

When using an Ethernet switch that provides multicast filtering, there must be enough multicast filters for the network being used. The number of multicast IP address used in the entire network that is displayed by the Network Configurator is based on connection settings. Make sure that the number of multicast IP addresses used in the entire network does not exceed the number of multicast filters supported by the Ethernet switch. If necessary, change to an Ethernet switch with enough multicast filters, or adjust the usage of capacity and network bandwidth for tag data links (*Mbit/s*) values given for an Ethernet switch without multicast filtering (i.e., the values in parentheses). These values can be adjusted according to instructions in *12-2-4 Changing the RPI*.

Checking the Total Maximum Network Bandwidth

The Network Configurator displays the total maximum bandwidth that can be used for the entire network. This value indicates the maximum bandwidth that can be used on the transmission paths when Ethernet switches are cascaded. If the value exceeds the bandwidth of a cascade connection in the actual network (e.g., 100 Mbps), the maximum bandwidth for part of the communications path may be exceeded, depending on how the network is wired. This may prevent the tag data links from operating correctly. If this occurs, either calculate the bandwidth usage for each communications path and be sure that the maximum bandwidth is not exceeded for any cascade connection, or adjust the bandwidth for all cascade connections so that the total maximum network bandwidth is not exceeded. Adjust the bandwidth according to instructions in 12-2-4 Changing the RPI.

12-2-2 Tag Data Link Bandwidth Usage and RPI

The usage of capacity without multicast filtering can be adjusted against the tag data link's allowable bandwidth by using the packet interval (RPI) setting. If the RPI is made shorter, the usage of capacity will increase. If the RPI is made longer, the usage of capacity will decrease.

The RPI can be set in any one of the following ways.

- · Setting the same interval for all connections
- · Setting a particular device's connection
- Setting a particular connection

When the same RPI is set for all connections, the usage of capacity will basically increase proportionally as the RPI is made shorter.

Example: If the RPI is set to 50 ms for all connections and the usage of capacity is 40%, the usage of capacity may increase to 80% when the RPI is reduced to 25 ms for all connections.



Precautions for Correct Use

Performing message communications or other network operations from the Network Configurator (such as monitoring or other operations that place a load on the network) or from the user application when the tag data link bandwidth usage of capacity is between 80% and 100% can temporarily create an excessive load on the network and result in timeouts. If timeouts occur, increase one or all of the RPI settings and reduce the usage of capacity.

12-2-3 Adjusting Device Bandwidth Usage

Ethernet Switches without Multicast Filtering (100-Mbps Ethernet Switches)

- Is the network bandwidth without multicast filtering usage under 100 Mbps for each node? If any node exceeds 100 Mbps, change the connections settings, such as the RPI.
- Is the usage of capacity without multicast filtering under 100% for each node? If any node exceeds 100 Mbps, change the connections settings, such as the RPI.
- Is the total network bandwidth usage under 100 Mbps? If the total bandwidth usage exceeds 100 Mbps, the bandwidth of part of the transmission path (e.g., an Ethernet switch or media converter) may be exceeded as the result of how the network was wired (e.g., cascade connections of Ethernet switches), causing a tag data link to operate abnormally. Check the bandwidth of the transmission path for all cascade connections. If the bandwidth is exceeded, rewire the network or increase the bandwidth between Ethernet switches (e.g., to 1 Gbps). If these countermeasures are not possible, change the connection settings, e.g., the RPI settings, and adjust the bandwidth for all cascade connections until the total network bandwidth is not exceeded.

Ethernet Switches with Multicast Filtering (100-Mbit/s Ethernet Switches)


- Is the network bandwidth usage under 100 Mbps for each node? If any node exceeds 100 Mbps, change the connections settings, such as the RPI.
- Is the usage of capacity under 100% for each node? If any node exceeds 100%, change the connections settings, such as the RPI.
- Is the total network bandwidth usage under 100 Mbps? If the total bandwidth usage exceeds 100 Mbps, the bandwidth of part of the transmission path (e.g., an Ethernet switch or media converter) may be exceeded as the result of how the network was wired (e.g., cascade connections of Ethernet switches), causing a tag data link to operate abnormally. Check the bandwidth of the transmission path for all cascade connections. If the bandwidth is exceeded, rewire the network or increase the bandwidth between Ethernet switches (e.g., to 1 Gbps). If these countermeasures are not possible, change the connection settings, e.g., the RPI settings, and adjust the bandwidth for all cascade connections until the total network bandwidth is not exceeded.
- Is the network bandwidth usage without multicast filtering under 100 Mbps for each node or the usage of capacity without multicast filtering under 100% for each node? If any node exceeds 100 Mbps or 100%, check whether the multicast filtering on the Ethernet switch is functioning correctly. If the number of multicast filters on the Ethernet switch is less than the total usage of IP multicast addresses, bandwidth overloads may occur in some paths and prevent tag data links from operating correctly depending on the network connection (e.g., cascade connections of Ethernet switches). Calculate the number of multicast filters required by each Ethernet switch on the network and make sure that the number does not exceed the number of Ethernet switch multicast filters. If the number of Ethernet switch multicast filters is not sufficient, use switches with enough multicast filters or revise connection settings, such as the RPI settings.

12-2-4 Changing the RPI


You can check the usage of capacity offline without multicast filtering against the tag data link's allowable bandwidth by following the procedures in 12-2-1 Checking Bandwidth Usage for Tag Data Links. The usage of capacity without multicast filtering can be adjusted against the tag data link's allowable bandwidth by changing the packet interval (RPI).

If the required communications performance cannot be achieved by changing the settings, re-evaluate the network starting with the network configuration.

- Make the required settings in the Network Configurator's Network Configuration Window.
- Click the **Detail** Button in the Usage of Device Bandwidth Area at the bottom of the Network Configuration Window.

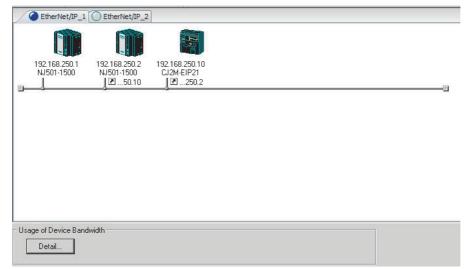

The Usage of Device Bandwidth Dialog Box will be displayed.

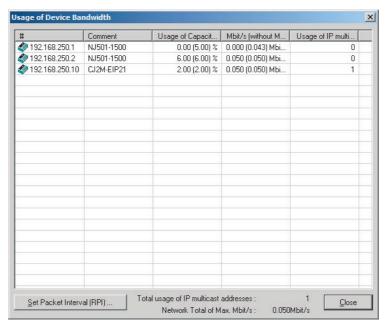

The *Usage of Capacity* (without multicast filter) column will show the percentage of the allowed tag data link bandwidth being used, and the *Mbit/s* (without multicast filter) column will show the network bandwidth being used.

The usage of capacity without multicast filtering can be adjusted against the tag data link's allowable bandwidth by changing the associated devices' packet interval (RPI) settings.


The RPI settings can be changed with the following three methods.

Method 1:


Change All Connections to the Same RPI

The usage of capacity without a multicast filter can be adjusted for all devices by changing the packet intervals (RPI) settings for all of the device's connections to the same RPI at the same

(1) Click the Set Packet Interval (RPI) Button at the bottom of the Usage of Device Bandwidth Dialog Box.



(2) The Set Packet Interval (RPI) Dialog Box will be displayed. Input a new RPI value, and click the OK Button.

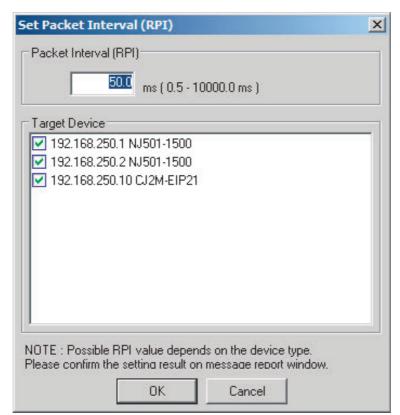


Method 2:


Change a Particular Device's Packet Interval (RPI) Setting:

The usage of capacity without multicast filtering can be adjusted for only a particular device against the tag data link's allowable bandwidth by changing the packet intervals (RPI) settings for all of the device's connections together. In this case, the usage of capacity will also change for the target devices of the connection for which the packet interval is changed.

(1) Click the Set Packet Interval (RPI) Button at the bottom of the Usage of Device Bandwidth Dialog Box.



(2) The Set Packet Interval (RPI) Dialog Box will be displayed. In the *Target Device* Area, deselect the target devices that are not being adjusted by removing the check marks.

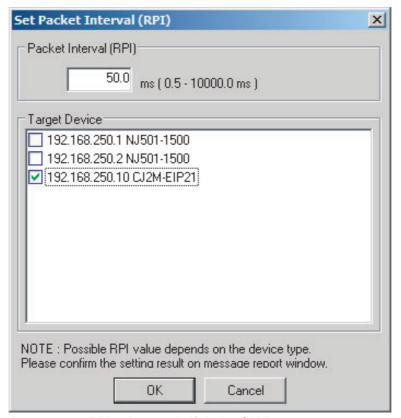


(3) Input a new RPI value, and click the OK Button.

Method 3:


Changing a Particular Connection's Packet Interval (RPI) Setting:

The usage of capacity without multicast filtering can be adjusted against the tag data link's allowable bandwidth by individually changing the packet interval (RPI) for a particular connection. In this case, the usage of capacity will also change for target device of the connection for which the packet interval is changed.


- (1) Click the Close Button at the bottom of the Usage of Device Bandwidth Dialog Box.
- (2) Double-click the device that is set as the originator of the desired connection. The Edit Device Parameters Dialog Box will be displayed.

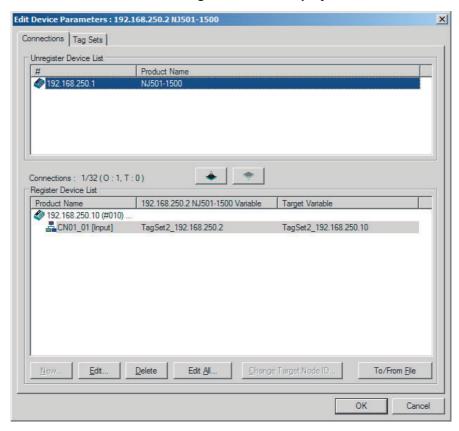

(3) In the Register Device List, select the connection for which you want to change the RPI, and click the Edit Button.

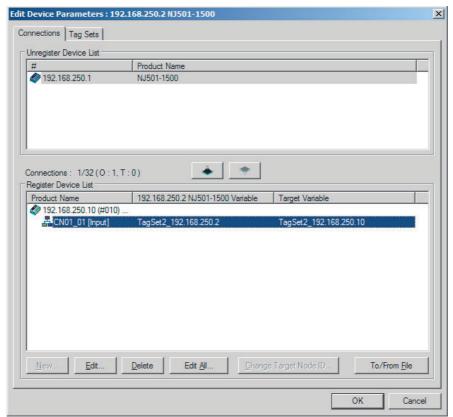

(4) The device's Edit Connection Dialog Box will be displayed. Input a new packet interval (RPI) value, and click the OK Button.

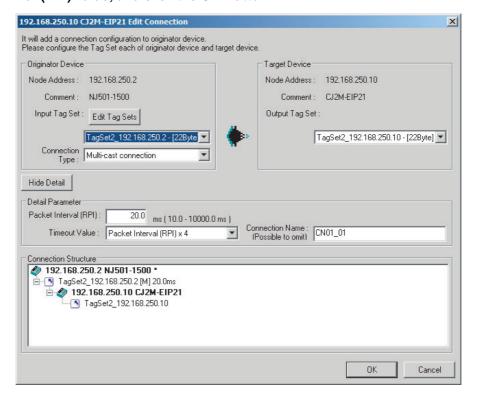


- 4 If the usage of capacity cannot be adjusted to the desired level when the setting described above has been performed, reconsider the network configuration considering the following points. Refer to 12-2-3 Adjusting Device Bandwidth Usage.
 - Reduce the number of nodes and number of connections.
 - · Split the network.
- **5** Check the bandwidth usage again. If you have changed the connection settings, click the Detail Button in the Usage of Device Bandwidth Area at the bottom of the Network Configuration Window and check bandwidth usage according to the instructions in 12-2-1 Checking Bandwidth Usage for Tag Data Links. It is particularly important to check the usage of capacity when an individual connection's RPI setting was changed without using the Set Packet Interval (RPI) Button.
- 6 Run user tests to verify that there are no problems with the new settings.

12-2-5 RPI Setting Examples

The following examples explain how to calculate the packet intervals (RPIs) in the following network configuration.

Conditions

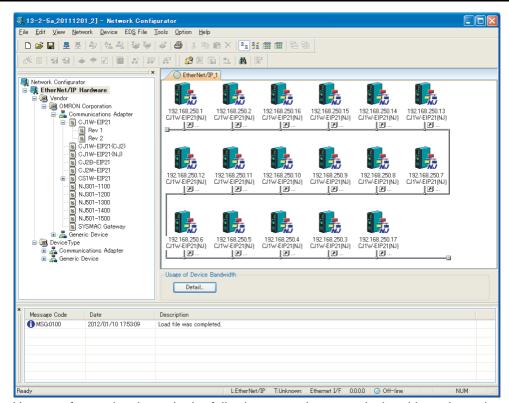


Usages of capacity shown in the following examples are calculated based on when the Units with unit version 2.1 or earlier are used.

• Connections:


Example: Twenty CJ1W-EIP21 Units are connected to the network.

Each device has one 100-word tag for transmission and nineteen 100-word tags for reception, so that the Units exchange data mutually. By default, the packet intervals (RPIs) are set to 10 ms for all of the connections. The devices' IP addresses range from 192.168.250.1 to 192.168.250.20.

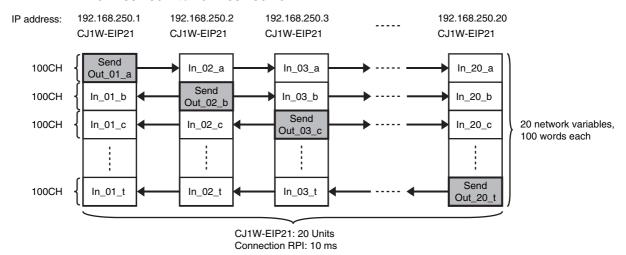

Checking the Device Bandwidth Usage

When the Detail Button is clicked in the Usage of Device Bandwidth Area, it is apparent that the percentage of the allowed tag data link bandwidth being used by each device's tag data link (Usage of Capacity) is 33.67%, as shown in the following dialog box.

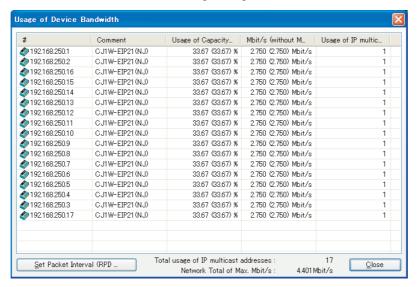


Changing Settings


Method 1: Same Packet Interval Setting for All Connections

The percentage of the allowed tag data link bandwidth being used (Usage of Capacity) was 33.67% with the RPI set to 10 ms for all of the connections, so the RPI will be set to 4 ms, with a target of 80% or less of the allowable bandwidth.

Click the Set Packet Interval (RPI) Button at the bottom of the Usage of Device Bandwidth Dialog Box to display the Set Packet Interval (RPI) Dialog Box. Input 4 ms as the new RPI value, then click the OK Button.

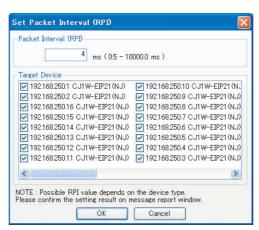


If the packet interval for all connections has been set to the same setting, the dialog box will show that the usage of capacity for the tag data link's allowable communications bandwidth is 76.17% and the fastest set value is 4 ms.

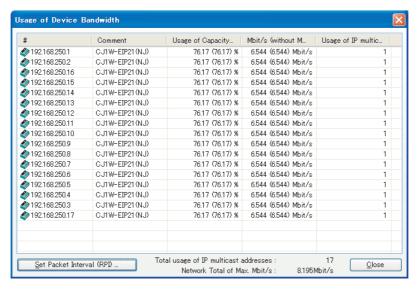

Method 2: Changing the Packet Interval (RPI) of Only Specific Devices


In this example, we want faster tag data links for devices 192.168.250.1 and 192.168.250.10 only. To do this, click the **Set Packet Interval (RPI)** Button at the bottom of the Usage of Device Bandwidth Dialog Box. The Set Packet Interval (RPI) Dialog Box is displayed.

In the Target Device Area, clear the selections of all devices other than 192.168.250.1 and 192.168.250.10. Input 4 ms as the new RPI value, then click the **OK** Button.

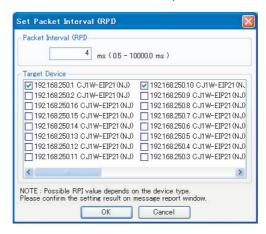

The percentage of the allowed tag data link bandwidth being used (Usage of Capacity) increases to 77.83% for devices 192.168.250.1 and 192.168.250.10, which indicates that the RPI is set to a higher speed for these devices' connections.


The Usage of Capacity values also indicate that the Usage of Capacity has increased (from 33.64% to 37.83%) for all of the other devices, which connect with devices 192.168.250.1 and 192.168.250.10.

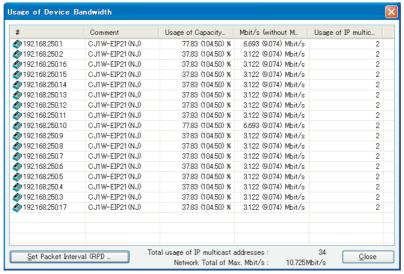


In this case, if there is no multicast filter, the value becomes 104.50%. If there is no multicast filter for an Ethernet switch, communications errors may occur depending on the communications load of the EtherNet/IP Unit.

Method 3: Changing the Packet Intervals (RPIs) of Only Specific Connections


In this example, we want a faster tag data links for just a particular connection of device 192.168.250.1. Double-click device 192.168.250.1 in the Network Configuration Window.

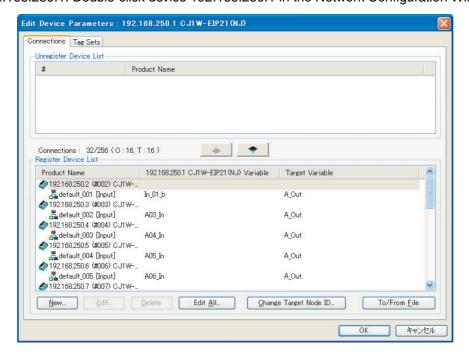

Information about the connection with device 192.168.250.10 is registered in the Register Device List. Double-click this connection to edit the settings.

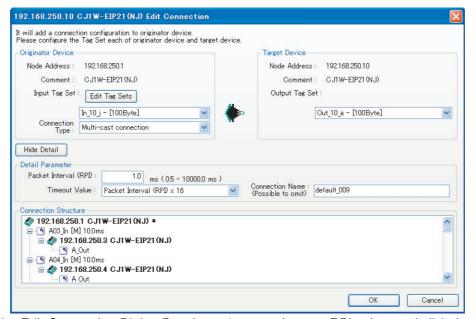

In the Edit Connection Dialog Box, input 1 ms as the new RPI value, and click the **OK** Button. The tag data link bandwidth used by device 192.168.250.1 (Usage of Capacity) increases to 48.67%, which indicates that a RPI is set to a higher speed for this device.

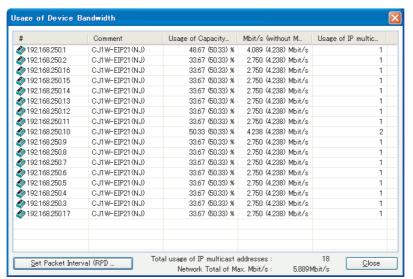

In this case, the tag data link bandwidth that is used by device 192.168.250.10 (Usage of Capacity) also increases (from 33.67% to 50.33%).

12-3 I/O Response Time in Tag Data Links




Additional Information

This section provides information on the EtherNet/IP Unit. The data processing times for the built-in EtherNet/IP ports on the NJ501-DDD, NJ301-DDD, or NJ101-DDD NJ-series CPU Units, CJ2HCPU6□- EIP CPU Units, and CJ2M-CPU3□ CPU Units are different. For details, refer to 7-4 Tag Data Links with Models Other than NJ-Series CPU Units.

12-3-1 **Timing of Data Transmissions**

The following diagram shows the timing of tag data link transfers between the EtherNet/IP Unit and the CPU Unit. Data is transferred during I/O refresh processing for the task that is set as the refreshing task.

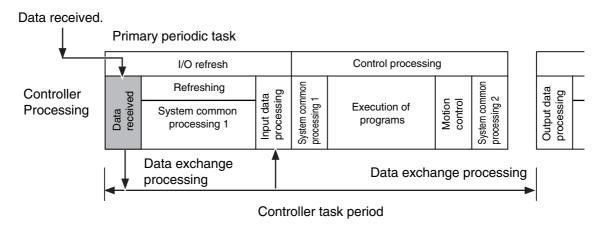

You can set either of the following types of tasks as the refreshing task.

- Primary periodic task The primary periodic task has the highest execution priority. It executes processes with high speed and high precision.
- Periodic tasks Periodic tasks are executed during the time between executions of the primary periodic task.

You do not need to specify a refreshing task for tags that use an AT specification. Data is transferred for these tags during the primary periodic task. The task during which to perform tag data link processing is specified for each tag. Set the refreshing task on the Sysmac Studio for each variable you want to set as a tag. Refer to the Sysmac Studio Version 1 Operation Manual (Cat. No. W504) for details on setting refreshing tasks.

12-3-2 EtherNet/IP Unit Data Processing Time

This section describes the data processing time required to transfer data between the EtherNet/IP Unit and the CPU Unit.

Data Processing Time Overview

The time required for data processing consists of the following four elements.

1. Variable Access Time

First, calculate the time required to transfer tag data (or the time required to access variables). This calculation is performed for each task. Therefore, if the same refreshing task is set for multiple tag sets, calculate the total time required for all tags in the tag sets.

Use the following equation to calculate the variable access time.

Variable access time [μ s] = Total size of variables [bytes] \times a + Number of variables \times b + Number of accesses \times c + d

Number of accesses: Number of tag sets a to d: Constant values as given below

CPU Unit model	Refreshing direction	Constant value [µs]			
CPO Offic filoder	neliesillig direction	а	b	С	d
NJ501-□□□□	CPU Unit to EtherNet/IP Unit	0.005	1.51 ^{*1}	1.41	6.68
	EtherNet/IP Unit to CPU Unit	0.009	2.95 ^{*2}		
NJ301-□□□	CPU Unit to EtherNet/IP Unit	0.008	1.91 ^{*3}	2.15	7.52
	EtherNet/IP Unit to CPU Unit	0.010	3.52 ^{*4}		
NJ101-	CPU Unit to EtherNet/IP Unit	0.013	4.41	3.83	10.29
	EtherNet/IP Unit to CPU Unit	0.016	5.48		

^{*1} The value is 1.58 for a CPU Unit with unit version 1.02 or earlier.

2. Number of Data Transfers

Tag data is transferred as a part of task processing.

If the time required to process the data transfer is greater than the "variable access time" *2, the data cannot be sent entirely in one task period and is sent separately instead.

Number of data transfers = ("Time required to send the data entirely" *1 ÷ "Variable access time" *2) + 1^{*3}

^{*2} The value is 3.18 for a CPU Unit with unit version 1.02 or earlier.

^{*3} The value is 2.14 for a CPU Unit with unit version 1.02 or earlier.

^{*4} The value is 4.08 for a CPU Unit with unit version 1.02 or earlier.

^{*1} This is the variable access time as calculated in step 1 above.

^{*2} The "variable access time" refers to the maximum processing time for accessing variables. Set the time for each task on the Task Setup Display, which is displayed by selecting *Configurations and Setup – Task Setup* in the Sysmac Studio.

^{*3} Delay in Data Transfer between the CPU Unit and an EtherNet/IP Unit



Precautions for Correct Use

The maximum number of words that can be transferred through the EtherNet/IP Unit is 9,600 words for tag data links. If the number of tag data link words exceeds the number of words that can be exchanged with the CPU Unit at one time, the data is divided and transferred in multiple data exchanges.

3. I/O Refreshing Time

You must calculate the processing time for I/O refreshing between the EtherNet/IP Unit and the CPU Unit. (I/O refreshing is when the data is actually transferred.)

The following two elements are relevant.

· Number of Fragments

Even if the data size of the tag data links is equal to or less than the maximum link data size that can be sent and received for each EtherNet/IP Unit (369,664 bytes), the data transfer between the CPU Unit and the EtherNet/IP Unit must be fragmented if the data transfer size that can be processed by the CPU Unit in one transfer is exceeded. The maximum data transfer sizes are given below.

Data Transfer Sizes for Each Data Transfer with the CPU Unit

Output/send data: Approx. 14,810 bytes max. Input/receive data: Approx. 14,810 bytes max.

I/O Refresh Processing Time

The actual I/O refresh processing time depends on the following conditions.

(Number of nodes × 1 ms) + I/O refresh time* + 1 task period

*1.I/O Refreshing Time Guidelines

Total link data size I/O refresh processing type	20 bytes	1,444 bytes	2,888 bytes	8,664 bytes	12,864 bytes or more
Input refreshing	0.3 ms	0.5 ms	0.7 ms	1.6 ms	2.1 ms
Output refreshing	0.1 ms	0.3 ms	0.6 ms	1.2 ms	2.3 ms

4. Actual Time Required for Data Transfer

The actual time that is required for data transfer is calculated as follows based on the values found for (2) and (3) above.

Task period × (Number of data transfers (2) + Number of fragments (3) − 1) + I/O refresh processing time (3)

Data Processing Time Calculation Example

Here we provide an example of how to perform the tag data link calculations described earlier for the following tag data transfers.

• CPU Unit with Tag Data Links:

NJ501-□□□□

• Connection Direction

The local EtherNet/IP Unit is set as the originator node.

Refreshing task

Primary periodic task

Task period: 500 μs (variable access time: 3%)

Setting Tag Sets

Tag set	Refreshing task	Number of variables	Total size of variables
Tag set A	Primary periodic task	8	600 bytes
Tag set B	Primary periodic task	4	200 bytes
Tag set C	Primary periodic task	10	1,000 bytes

Calculate the variable access time as shown below.

$$[(8 + 4 + 10) \text{ variables} \times 1.51 \text{ } \mu\text{s}] + [(600 + 200 + 1,000) \text{ bytes} \times 0.005 \text{ } \mu\text{s}] + 3 \times 1.41 \text{ } \mu\text{s} + 6.68 \text{ } \mu\text{s} = 53.13 \text{ } \mu\text{s}$$

2 Calculate the number of data transfers.

Time required for the data transfer: "Variable access time" in step $1 = 53.13 \,\mu s$

Variable access time set for the task: 500 μ s \times 0.03 = 15 μ s

Number of data transfers: 53.13 μ s ÷ 15 μ s + 1 = 4.54 times

Thus, approximately 5 data transfers are required.

3 Calculate the I/O refresh processing time.

1 unit
$$\times$$
 1 ms + 0.5 ms + 0.5 ms = 2 ms (2,000 μ s)

4 Calculate the actual time required for the data transfer.

 $500 \mu s \times (5 \text{ times} + 1 - 1) + 2,000 \mu s = 4,500 \mu s$

12-3-3 Effect of Tag Data Links on Task Periods

The tag data is transferred during task processing. Therefore, if you need to complete transfer processing for task data within one task period, adjust the variable access time and task period settings in the Task Setup to change the task period.

1 Calculate the time required for the data transfer and set the result as the "variable access time". Refer to 1. Variable Access Time for the formula to calculate the variable access time.


Note If the same refreshing task is set for multiple tag sets, the total of all tag values in the tag sets is used.

2 Set the variable access time in the Task Setup to a value equal to or greater than the value calculated in step 1 above.

Adjust the task period time after adding in the time calculated in step 1. Use the Sysmac Studio to set the variable access time and task period settings. For details, refer to the *NJ/NX-series CPU Unit Software User's Manual* (Cat. No. W501).

12-3-4 Maximum Tag Data Link I/O Response Time

You can find the maximum I/O response time from the total of (1) to (6) in the following figure.

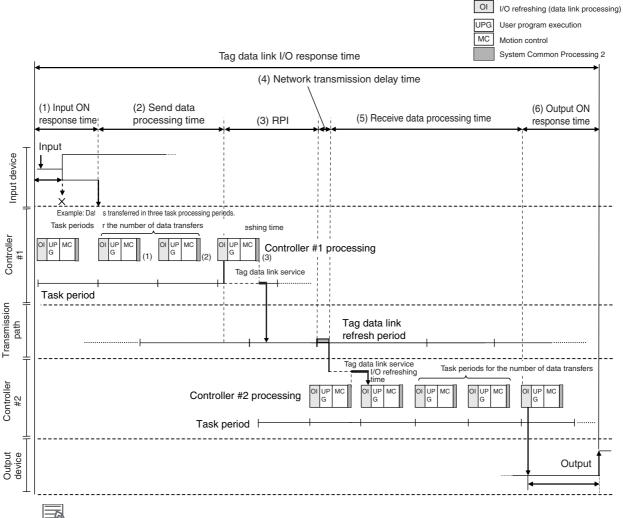

- **Additional Information**
- With unit version 1.03 or later, processing for tag data links is executed in the tag data link ser-
- With unit version 1.01 to 1.02, processing for tag data links is executed in the system services. If a tag data link timeout occurs, reconsider the execution time for system services.

(1) Input ON Response Time

This is the delay time for the external input device from when the input occurs until the switch actually changes to ON and the time until the input data is stored in the memory area of the CPU Unit. Refer to the input delay of each device for the input switch delay time. Also, one task period is required until the data is stored in the memory area of the CPU Unit. Therefore, the input ON response time is obtained as shown below.

Input ON response time = Input device delay time + Task period

(2) Send Data Processing Time

This is the time until the variables in the CPU Unit are transferred to the EtherNet/IP Unit. Data is transferred during task processing. Therefore, the time required for send data processing is the same as the task period. If the data that is transferred is larger than the amount of data that can be sent during a single task (as set in the variable access time for the task), the data is transferred over multiple task periods. Therefore, add (task period \times the number of transfers) to the time required. For details on how to determine the time required to send data, refer to 12-3-2 EtherNet/IP Unit Data Processing Time.

(3) Packet Interval (RPI)

This is the communications refresh period set for each connection using the Network Configurator.

(4) Network Transmission Delay Time

The transmission delay on an Ethernet line is 50 µs or less. This delay time can be ignored.

(5) Receive Data Processing Time

This is the time required to transfer data received on the EtherNet/IP Unit to a variable in the CPU Unit. Data is received during task processing. Therefore, the time required for receive data processing is the same as the task period. If the data that is transferred is larger than the amount of data that can be received during a single task (as set in the variable access time for the task), the data is transferred over multiple task periods. Therefore, add (task period × the number of transfers) to the time required. For details on how to determine the time required to receive data, refer to 12-3-2 EtherNet/IP Unit Data Processing Time. Data is transferred once in each task period. Therefore, if data transfer has ended in the task period in which data is received, the start of transmission for received data will be delayed by one Controller task period.



Additional Information

The total amount of data transferred increases if there are connections with multiple nodes, and the data that is transferred may exceed the amount that can be processed in a single transfer. In this case, the number of data transfers increases.

(6) Output ON Response Time

This is the delay time for the external output device from when the Controller specified turning ON the output until the output is actually turned ON.

Output ON response time = Output device delay time + Task period




Additional Information

The I/O response time may be longer due to noise, or other events.

Message Service Transmission Delay

This section describes the delay time that occurs in CIP communications instruction (CIPWrite) service processing.

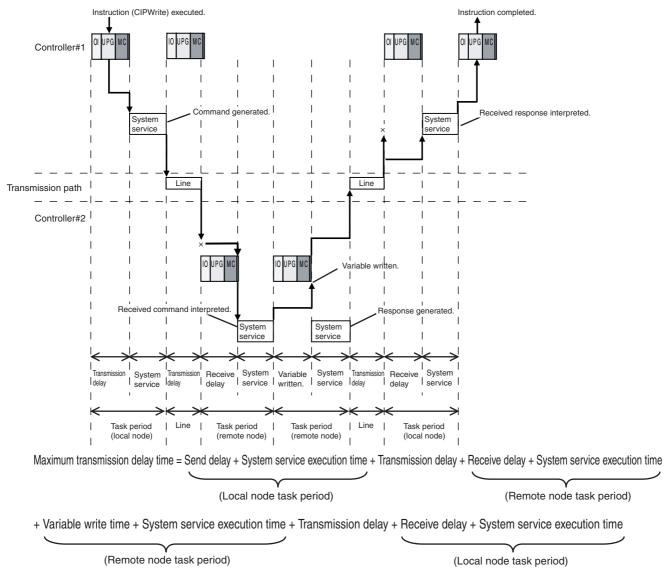

Processes that cause a delay time are processed in the task periods at each node as shown in the above diagram. Line-based delays are as follows:

Transmission Delay

The transmission delay on an Ethernet line is 50 µs or less. This delay time can be ignored.



Additional Information

- · Depending on the actual operating environment, the transmission time may be longer than the one calculated with the equations given here. The following factors can cause longer transmission times: other traffic on the network, window sizes of network nodes, other traffic at the EtherNet/IP Unit itself (e.g., simultaneous tag data link communications), and the system configuration.
- CIP communications processing is executed as a system service. If a timeout occurs for a CIP communications instruction, reconsider the execution time for system services.



Troubleshooting


This section describes the items to check when errors occur in the EtherNet/IP Function Module. It includes error diagnosis and countermeasures for error indications, and error diagnosis and countermeasures for operating conditions.

13-1 C	hecki	ng Status with the Network Configurator	. 13-2
1:	3-1-1	The Network Configurator's Device Monitor Function	. 13-2
13-2 U	lsing t	the LED Indicators and Display for Troubleshooting	13-10
1:	3-2-1	Errors Occurring at the EtherNet/IP Unit	13-10
13-3 C	onne	ction Status Codes and Error Processing	13-20
		og	
	3-4-1	Error Log Data	
1:	3-4-2	Error Log Error Codes	13-27
13-5 E	vent L	Logs	13-31
1;	3-5-1	Overview of the Event Logs	13-31
13	3-5-2	Error Table	13-32
13	3-5-3	Error Descriptions	13-35
13-6 T	rouble	eshooting	13-48
1:	3-6-1	CPU Unit's ERR Lit or Flashing	13-48
1:	3-6-2	General Ethernet Problems	13-48
13	3-6-3	Tag Data Links Fail to Start*	13-49
1:	3-6-4	Tag Data Link Problems	13-50
1:	3-6-5	Message Timeout Problems	13-51
13-7 C	leanir	ng and Maintenance	13-52
1:	3-7-1	Cleaning	13-52
1:	3-7-2	Inspection	13-52
13-8 P	recau	tions on Equipment Replacement	13-54
1:	3-8-1	Precautions When Replacing the EtherNet/IP Unit	13-54
1:	3-8-2	Settings Required after Unit Replacement	13-54
13	3-8-3	EtherNet/IP Unit Replacement Procedure	13-55
13-9 R	Replac	ing Target Nodes during Communications	13-56
13	3-9-1	Overview of Target Node Replacement Work	13-56
1:	3-9-2	Target Node Replacement Procedure	13-57

13-1 Checking Status with the Network Configurator

The Network Configurator's Device Monitor Function 13-1-1

Connect the Network Configurator online, select the device to be checked, right-click to display the popup menu, and select Monitor.

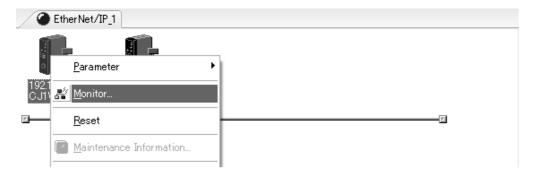

The Monitor Device Dialog Box will be displayed.




Additional Information

If a communications error occurs during monitoring, the dialog box will continue to show the last information that was collected. To start monitoring again, close the Monitor Device Dialog Box, and then open the dialog box again.


Status 1 Tab Page

The *Status 1* Tab Page shows the status that you can monitor with device variables for the CJ-series Unit (i.e., Unit Status 1, Unit Status 2, Communications Status 1, Communications Status 2, and Communications Status 3). The given status is TRUE if the check box for it is selected. In addition, the *Target Node Status* Area shows the connection status of the target nodes that are connected to the EtherNet/IP Unit as the tag data link originator. If all tag data link connections to the node are established and normal, this information is displayed in blue. However, if any connection is broken, this information is displayed in red.

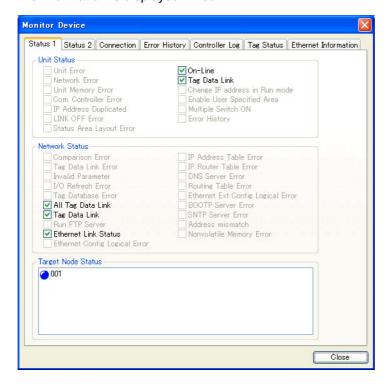

Status 2 Tab Page

The Target Controller Status Area on the Status 2 Tab Page shows the Target Node PLC Operating Flags and Target Node PLC Error Flags from the Normal Target Node Table of the target table information that you can monitor with the device variables for the CJ-series Unit for status for the nodes for which the EtherNet/IP Unit is set as the originator of the tag data links. The node is displayed in blue if the connection is normal, or red if there is an error. The Connected Status of FINS/TCP Connections Area shows the status of FINS/TCP connections. The check box is selected if the corresponding connection is established. The Connected Status of FINS/TCP Connections Field shows the status of FINS/TCP connections. There will be a check mark in the box when the corresponding connection is established (connected).

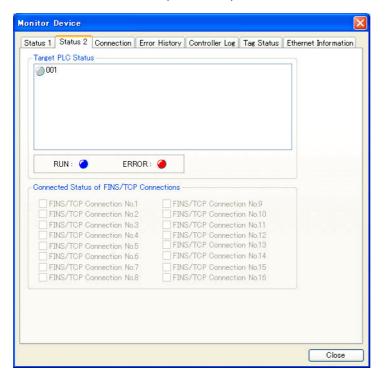




Additional Information

The target Controller status can be used when the Controller status is selected for all the target sets for both originator and target connections. If it is not selected, it is grayed out on the display.

Connection Tab Page


Information about the target nodes that act as the originator is displayed. If all tag data link connections to the node are established and normal, this information is displayed in blue. However, if any connection is broken the information is displayed in red. However, this information is displayed in gray if the connection to a node is stopped. In addition, the *Connection Status* Area shows the current status each connection that is set as the originator. This information can be used to identify the cause of tag data link errors. For details on the connection status, refer to *13-3 Connection Status Codes and Error Processing*.

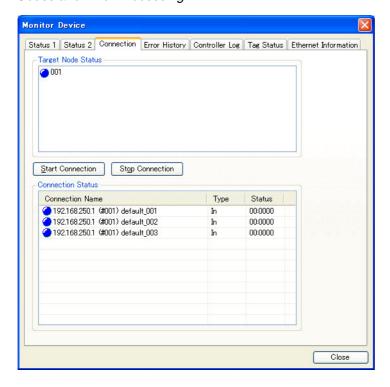

• Error History Tab Page

The Error History Tab Page displays the error log stored in the EtherNet/IP Unit. Errors that occurred in the past are recorded, and can be saved in a computer file as required.


In some cases, error records are cleared when the power is turned OFF, and in other cases the records are retained. For details on the error log, refer to 13-4 Error Log.

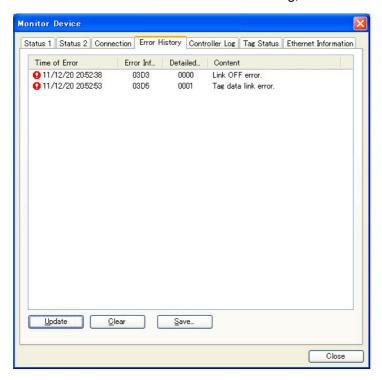

Controller Log Tab Page

This tab page displays the Controller event log that is stored in the CPU Unit of the Controller where the EtherNet/IP is connected. The error log shows errors that have occurred. It can be saved in a file in the computer.

Refer to the operation manual of the CPU Unit for details on error information.

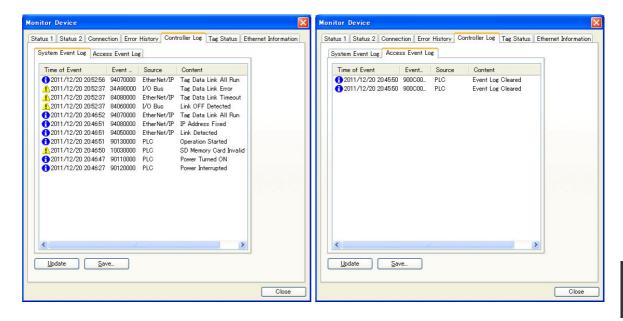

Tag Status Tab Page

This tab page shows if the tag settings for each tag for tag data links are set so that data can be exchanged with the CPU Unit. The following status is displayed to show the status of the settings.

Normal resolution completed: Normal data exchange is possible.

Resolving: The variables with tags are being resolved. When the resolution is

completed normally, a connection will be established and the data

exchange will start.

Size does not match error: Different sizes are set for the network variables and the tag settings.

A connection will not be established for a tag for which this error

occurs.

No tag: A network variable is not set in the variable table in the CPU Unit for

the specified tag setting. A connection will not be established for a


tag for which this error occurs.

Controller I/F error: There is a problem in the bus interface with the CPU Unit. Determine

the cause based on the indicators and the error log.


Attribute error: Writing is not possible for Read Only and Constant attributes.

If the status is not "Normal resolution completed," check the tag data link settings or the network variable settings in the variable table in the NJ-series CPU Unit.

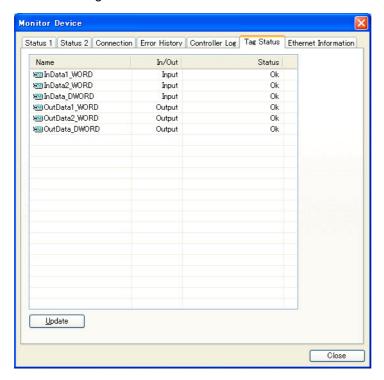

• Ethernet Information Tab Page

This tab page displays the communications status at the communications driver level of the Ether-Net/IP Unit. The error counter information can be used to confirm whether communications problems have occurred. The tag data link information can be used to confirm characteristics such as the bandwidth usage (pps).

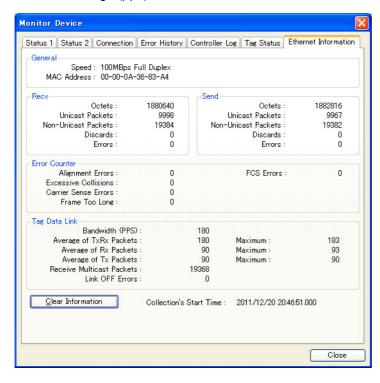

13-2 Using the LED Indicators and Display for Troubleshooting

13-2-1 Errors Occurring at the EtherNet/IP Unit

	Indicato	or				Error log	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	(hex)	Countermeasure
Errors F	Related to	CPU Unit D	ata Exchange				
Flash- ing red	Not lit	H1	Duplicate unit number	The same unit number is set on another Unit.	Operation stops.		Set the unit numbers correctly and restart the EtherNet/IP Unit.
Flash- ing red	Not lit	H2	CPU Unit faulty		Operation stops.		Replace the CPU Unit if the error recurs when the CPU Unit is restarted.
Lit red	Not lit	H3	EtherNet/IP Unit faulty		Operation stops.		Replace the Ether- Net/IP Unit if the error recurs when the Unit is restarted.
Flash- ing red	Not lit	H4	Node address setting error	The node address set on the switches is invalid (00 or FF.)	Operation stops.		Set the node address correctly and restart the EtherNet/IP Unit.
Flash- ing red	Not lit	H6	CPU Unit faulty		Records the error in the error log (time/date all zeroes). Operation stops.	000F	Replace the CPU Unit if the error recurs when the CPU Unit is restarted.
Flash- ing red	Not lit	H7	I/O table not registered	The CPU Unit's I/O table is not registered.	Operation stops.	0006	Create the I/O table.
Flash- ing red		H8	Restoring simple backup data failed.	Restoring simple backup data failed for some reason.	All settings for the Ether- Net/IP Unit or built-in port will be cleared except for the following errors: File missing, memory not mounted, or inconsistent models.		If the problem persists even when you repeat the simple backup procedure, replace the SD Memory Card, the Ether-Net/IP Unit, or, if the problem is with the built-in port, the CPU Unit.
Flashing red		H9	I/O bus error	An error occurred while exchanging data with the CPU Unit.	If the Unit is the originator of the tag data link connection, it stops communications. Communications will continue for target connection. If the Unit is the target of the tag data link connection and the Controller status is included in the communications data, the corresponding element in the Target Node PLC Error Flags will change to TRUE.	000E	Check and correct the CPU Unit's oper- ating environment.

^{*} The 7-segment display alternates between the node address and error code.

	Indicato	r				Error log	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	(hex)	Countermeasure
Errors R	elated to	CPU Unit D	ata Exchange				
Flash- ing red		НА	CPU Unit mem- ory error	A parity error occurred during an operation such as reading the routing tables.	Records the error in the error log. If the routing tables were being read, the routing tables are treated as missing.	0012	Register the routing tables in the CPU Unit again and restart the CPU Unit. Replace the CPU Unit if the error recurs.
				A memory error has occurred for the tag database in the CPU Unit	If a variable (tag name) is specified in the tag data link or Unit Status Area, refreshing the user-specified status area is stopped and tag data links will operate as follows: Tag data link communications will be stopped for originator connections. Communications will continue for target connection. If the Unit is the target of the tag data link connection and the Controller status is included in the communications data, the corresponding element in the Target Node PLC Error Flags will change to TRUE. Note Recovery is possible from this error. If recovery is achieved, the tag data links will be restarted to return to normal status.	0017	Download the tag data to the CPU Unit again. Replace the CPU Unit if the error recurs.
Flash- ing red	Not lit	Hb	CPU Unit event servicing timeout	A timeout occurred during an operation such as reading the routing tables to the CPU Unit.	Operation stops.	0011	Replace the Ether- Net/IP Unit or the CPU Unit if the error recurs when the Unit is restarted.
Flash- ing red		HC	Routing table error	There is a logic error in the routing table settings.	The Unit continues operating without the routing tables.	021A	Create the routing tables again.

^{*} The 7-segment display alternates between the node address and error code.

	Indicato	r				Error log	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	(hex)	Countermeasure
Errors R	elated to	CPU Unit D	ata Exchange				
Flash- ing red		HE	CPU Unit service monitoring error	Servicing from the CPU Unit was not completed within the fixed interval. The monitoring time is normally 11 s.	If the Unit is the originator of the tag data link connection, it stops communications. Communications will continue for target connection. If the Unit is the target of the tag data link connection and the Controller status is included in the communications data, the corresponding element in the Target Node PLC Error Flags will change to TRUE.	0002	Check and correct the CPU Unit's oper- ating environment.
					Note Recovery is possible for this error. When operation is restored, tag data link startup processing will be performed and operations will return to normal.		
Flashing red		HF	CPU Unit watch- dog timer error	An error occurred in the CPU Unit.	If the Unit is the originator of the tag data link connection, it stops communications. Communications will continue for target connection. If the Unit is the target of the tag data link connection and the Controller status is included in the communications data, the Target Node PLC Error Flags will change to TRUE.	0001	Replace the CPU Unit.

^{*} The 7-segment display alternates between the node address and error code.

	Indicato	r				Error log	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	(hex)	Countermeasure
Errors R	elated to	CPU Unit D	ata Exchange				
Flash- ing red		H	CPU Unit Fatal Error	A fatal error occurred in the CPU Unit.	If the Unit is the originator of the tag data link connection, it stops communications. Communications will continue for target connection. If the Unit is the target of the tag data link connection and the Controller status is included in the communications data, the corresponding element in the Target Node PLC Error Flags will change to TRUE. The tag data link's send data will be cleared to 0 in accordance with the Output OFF settings, and data transfer will continue with that data.	0015	Eliminate the cause of the error in the CPU Unit. The tag data link will restart automatically when the cause of the error is eliminated.
Errors R	elated to	the Softwar	re Switches				
		C6	Multiple Switches ON	Two or more soft- ware switches were ON simultaneously, or a second software switch was turned ON before a prior opera- tion was completed.	The error code will be displayed on the 7-segment display for 30 seconds. The error display will be cleared the next time that a settings operation is completed normally. *_MultiSwOnErr (Multiple Switches ON Error) will change to TRUE.		Execute software switch operations one at a time.
		d5	Verification Error (target non-exis- tent)	The target registered in the device parameters does not exist.	The Unit will periodically attempt to reconnect to the target. *_TDLOpnErr (Verification Error), *_UnitErr (Unit Error Occurred), and *_NetErr (Network Error Occurred) will change to TRUE.		Check the following items: Is the registered node's power supply ON? Is the cable connected? Is the cable damaged or loose? Is there excessive noise?

^{*} The 7-segment display alternates between the node address and error code.

	Indicato	r				Error log	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	(hex)	Countermeasure
Errors R	lelated to	the Tag Dat	a Links				
		d6	Connection Failed	The connection could not be established because device parameters (such as the variable name and size) did not match in the originator and target, or connection resources are insufficient.	The Unit will periodically attempt to reconnect to the target. *_TDLOpnErr (Verification Error), *_UnitErr (Unit Error Occurred), and *_NetErr (Network Error Occurred) will change to TRUE.	03D4	Correct the device parameter settings, and download the device parameters again from the Network Configurator.
		d9	Tag Data Link Error	A timeout occurred in the tag data link. (Tag data was not received from the target within the specified timeout time.)	The Unit will periodically attempt to reconnect to the target where the error occurred. *_TDLErr (Tag Data Link Error), *_UnitErr (Unit Error Occurred), and *_NetErr (Network Error Occurred) will change to TRUE.	03D5	Check the following items: Is the registered node's power supply ON? Is the cable connected? Is the cable damaged or loose? Is there excessive noise?

^{*} The 7-segment display alternates between the node address and error code.

	Indicato	r				F	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	Error log (hex)	Countermeasure
Errors R	elated to	Memory Ac	cess				
Flashing red		E9	Memory Access Error	An error occurred in the Unit's non-volatile memory itself. This error will occur in the following cases. 1. An error occurred while writing the error log. 2. An error occurred while writing the device parameters. Note This error does not indicate checksum errors detected when reading data.	Case 1: The error record remains in RAM only. Subsequent writes to non-volatile memory are all ignored. Other than that, normal operation continues. (Error records continue to be written to RAM.) Case 2: Tag data links and message communications will continue operating. *_UnitErr (Unit Error Occurred), *_UnitMemErr (Unit Memory Error), and *_MemErr (Nonvolatile Memory Error) will change to TRUE.	0602	Download the Unit Setup from the tab pages of the Edit Parameters Dialog Box of the Sysmac Studio and download the device parameters from the Network Configurator. If the error recurs, replace the EtherNet/IP Unit or the CPU Unit.
Flashing red		E8	Device Parameters Error	The I/O Area set in the device parameters does not exist in the CPU Unit. A checksum error or logic error was detected in the parameters. The Unit was mounted to a different PLC (e.g., from NJ to CJ2) after the Unit settings were made.	There is an error in the parameter settings stored in the Unit's non-volatile memory. (An error can occur when power is interrupted while data is being written to non-volatile memory.) *_UnitErr (Unit Error Occurred) and *_CommParamErr (Invalid Communications Parameter) will change to TRUE.	021A	Download the Unit Setup from the tab pages of the Edit Parameters Dialog Box of the Sysmac Studio and download the device parameters from the Network Configurator. If the error recurs, replace the EtherNet/IP Unit or the CPU Unit.

^{*} The 7-segment display alternates between the node address and error code.

	Indicato	or				Error log	Gountarmagaura
MS	NS	7-seg- ment*	Error	Cause	Unit operation	(hex)	Countermeasure
Errors R	elated to	Memory Ad	cess				
Flash- ing red		EA	IP Advanced Settings Error		There is an error in the parameter settings stored in the Unit's non-volatile memory. (An error can occur when power is interrupted while data is being written to non-volatile memory.)	03D1	Identify the error log data, correct the set- tings, and then down- load the Unit Setup from the tab pages of the Edit Parameters Dialog Box of the Sysmac Studio.
					The Unit Error Occurred Flag (n+10, bit 00) and Invalid Communications Parameter Flag (n+12, bit 04) will go ON.		
Flash- ing red		F2	Ethernet Basic Settings Error			03D0	Download the settings from the TCP/IP or Ethernet Tab Pages of the Edit Parameters Dialog Box of the Sysmac Studio or download the TCP/IP settings from the Network Configurator.
		E1	Ethernet Link Not Detected	The link with the Ethernet switch could not be detected. Note This error will not occur when data links are not set.	The Unit will be offline and unable to communicate. Errors will be returned to all communications requests. Data exchanges (refreshing) will continue with the CPU Unit. *_UnitErr (Unit Error Occurred), *_NetErr (Network Error Occurred), and *_LkOffErr (Link OFF Error) will change to TRUE. *_LkSta (Link Status) will change to FALSE.	03D3	Check the following items: Is the cable connected? Is the cable damaged or loose? Is there excessive noise?

	Indicator					F	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	Error log (hex)	Countermeasure
Errors F	elated to	Memory Ad	cess				
		E3	Server Connection Error	An error occurred in communications with the DNS server.	*_DNSSvrErr (DNS Server Error) will change to TRUE.	03C4 Details: 00xx	Perform one of the following: Correct the DNS server settings. Check the communications path (EtherNet/IP Unit, cable connections, hubs, routers, and servers) and correct any problems.
Errors F	elated to	the Networ	k				
		E3	Server Connection Error	An error occurred with the BOOTP server. 1. There was no response from the BOOTP server. 2. The BOOTP server attempted to set an invalid IP address in the EtherNet/IP Unit.	Case 1: The Unit will continue sending requests to the BOOTP server until there is a response. In the meantime, the Unit will be offline and unable to communicate. Errors will be returned to all communications requests. Data exchanges (refreshing) will continue with the CPU Unit. Case 2: The Unit will operate with the default IP address (192.168.250.1.node_address). *_UnitErr (Unit Error Occurred), *_NetErr (Network Error Occurred), and *_BootpSvrErr (BOOTP Server Error) will change to TRUE.	03C4 Details: 06xx	Perform one of the following: Correct the BOOTP server settings. Check the communications path (EtherNet/IP Unit, cable connections, hubs, routers, and servers) and correct any problems.

^{*} The 7-segment display alternates between the node address and error code.

	Indicato	r				Error log	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	(hex)	Countermeasure
Errors R	elated to	the Networ	k				
		E3	Server Connection Error	An error occurred in communications with the STNP server.	*_SNTPSvrErr (SNTP Server Error) will change to TRUE.	03C4 Details: 03xx	Perform one of the following: Correct the SNTP server settings. Check the communications path (EtherNet/IP Unit, cable connections, hubs, routers, and servers) and correct any problems.
				An error occurred in transmission to the SNMP trap.		03C4 Details: 07xx	Perform one of the following: Correct the SNMP trap settings. Check the communications path (EtherNet/IP Unit, cable connections, hubs, routers, and servers) and correct any problems.
	Lit red	FO	IP Address Duplication	The IP address of the EtherNet/IP Unit is the same as the IP address set for another node.	The Unit will be offline and unable to communicate. Errors will be returned to all communications requests. Data exchanges (refreshing) will continue with the CPU Unit. "_UnitErr (Unit Error Occurred), *_NetErr (Network Error Occurred), and *_IPAdrDupErr (IP Address Duplication Error) will change to TRUE.	0211	Check the IP addresses set on other nodes. Restart the EtherNet/IP Unit after correcting the IP address settings to eliminate duplications.

^{*} The 7-segment display alternates between the node address and error code.

	Indicato	r				Error log	
MS	NS	7-seg- ment*	Error	Cause	Unit operation	(hex)	Countermeasure
Errors R	elated to	the Networ	k				
Flash- ing red		F3	Not lit	The target IP address conversion method is set to <i>Automatic generation</i> , but the last byte of the local IP address does not match the value set on the Node Address Setting Switch.	Operation will continue with the set IP address as the local IP address. *_AdrMismatchErr (Address Mismatch) will change to TRUE.		Check the IP address and the Node Address Setting Switch setting.
Flash- ing red	Not lit	F4	Communications Controller Error	An error occurred in the Communications Controller in the Eth- erNet/IP Unit.	The Unit will be offline and unable to communicate. Errors will be returned to all communications requests. Data exchanges (refreshing) will continue with the CPU Unit. "UnitErr (Unit Error Occurred), "NetErr (Network Error Occurred), and "LANHWER (Communications Controller Error) will change to TRUE.	020F	Replace the Ether- Net/IP Unit or the CPU Unit if the error recurs when the Unit is restarted.
Flash- ing red		C8	Node Address Setting Changed During Operation	The Node Address Setting Switch was changed during oper- ation.	Operation will continue. *_IPAdrChgErr (Operating IP Address Change) will change to TRUE.		Restart the Ether- Net/IP Unit after set- ting the correct node address.
	elated to		I = =	T	T=	T	
Lit red	Not lit		Special Unit Error	An error occurred in a Special I/O Unit or CPU Bus Unit.	Records the error in the error log. Operation stops.	0601	Restart the CPU Unit. Replace the Ether- Net/IP Unit or the CPU Unit if the error recurs.

^{*} The 7-segment display alternates between the node address and error code.

13-3 Connection Status Codes and Error **Processing**

This section explains how to identify and correct errors based on the tag data link's connection status. The connection status can be read using the Connection Tab Page of the Network Configurator's Monitor Device Window. For details, refer to 13-1 Checking Status with the Network Configurator.

The following table shows the possible originator/target configurations.

	Originator	Target
Configu- ration 1	CS1W-EIP21, CJ1W-EIP21, CJ2H-CPU□□-EIP, CJ2M-CPU3□, NJ501-□□□□, NJ301-□□□□, and NJ101-□□□□□	CS1W-EIP21, CJ1W-EIP21, CJ2H-CPU□□-EIP, CJ2M-CPU3□, NJ501-□□□□, NJ301-□□□□, and NJ101-□□□□□
Configu- ration 2	CS1W-EIP21, CJ1W-EIP21, CJ2H-CPU	Other company's device
Configu- ration 3	Other company's device	CS1W-EIP21, CJ1W-EIP21, CJ2H-CPU□□-EIP, CJ2M-CPU3□, NJ501-□□□□, NJ301-□□□□, and NJ101-□□□□□

The following table shows the likely causes of the errors causes for each configuration and connection status (code).

Connecti	ion status			Handling			
General Status (hex)	Additional Status (hex)	Source of error	Configuration 1	Configuration 2	Configuration 2		
00	0000	Normal status code: The connection has been opened and the tag data link is communicating normally.					
01	0100	Error code returned from target: Attempted to open multiple connections at the same connection.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer for details on preventing the error from occurring in the future.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer for details on pre- venting the error from occurring in the future.)		
01	0103	Error code returned from target: Attempted to open a connection with an unsupported transport class.	This error does not occur.	Confirm that the target sup- ports Class 1.	Confirm that the originator supports Class 1.		
01	0106	Duplicate consumers: Attempted to open multiple connections for single-consumer data.	If the tag data link is stopped or started, this error may occur according to the timing, but the system will recover automatically.	Depends on the target's specifications. (Contact the target device's manufacturer.)	If the tag data link is stopped or started, this error may occur according to the timing, but the system will recover automatically.		

Connecti	ion status		Handling			
General Status (hex)	Additional Status (hex)	Source of error	Configuration 1	Configuration 2	Configuration 2	
01	0107	Error code returned from target: Attempted to close a connection, but that connection was already closed.	This error does not occur.	This error does not occur.	This is not an error because the connection is already closed.	
01	0108	Error code returned from target: Attempted to open a connection with an unsupported connection type.	This error does not occur.	Check which connection types can be used by the target. (Contact the manufacturer.) Only multicast and point-topoint can be set.	Check which connection types can be used by the originator. (An error will occur if a connection other than multicast or point-to-point is set.)	
01	0109	Error code returned from target: The connection size settings are different in the originator and target.	Check the connection sizes set in the originator an target.			
01	0110	Error code returned from target: The target was unable to open the connection, because of its operating status, such as downloading settings.	Check whether the tag data link is stopped at the target. (Restart the tag data link communications with the software switch.)	Depends on the target's specifications. (Contact the target device's manufacturer.)	Check whether the tag data link is stopped at the originator. (Restart the tag data link com- munications with the soft- ware switch.)	
01	0111	Error code returned from target: The RPI was set to a value that exceeds the specifications.	This error does not occur.	Check the target's RPI setting specifications.	Set the origina- tor's RPI setting to 10 seconds or less.	
01	0113	Error code generated by originator or returned from target: Attempted to open more connections than allowed by the specifications (CJ2M-EIP21: 32, other CPU Units: 256).	Check the con- nection set- tings (number of connec- tions) at the originator and target.	Check the connection set- tings (number of connections) at the originator and target. Check the connection specifications for another company's devices.	Check the connection settings (number of connections) at the originator and target. Check the connection specifications for another company's devices.	
01	0114	Error code returned from target: The Vendor ID and Product Code did not match when opening connection.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.) Confirm that the target device's EDS file is correct.	Check the originator's connection settings.	

Connect	ion status			Handling		
General Status (hex)	Additional Status (hex)	Source of error	Configuration 1	Configuration 2	Configuration 2	
01	0115	Error code returned from target: The Product Type did not match when opening connection.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.) Confirm that the target device's EDS file is correct.	Check the originator's connection settings.	
01	0116	Error code returned from target: The Major/Minor Revisions did not match when opening connection.	Check the major and minor revisions set for the target device and connection. If necessary, obtain the EDS file and set it again.	Depends on the target's specifications. (Contact the target device's manufacturer.) Confirm that the target device's EDS file is correct.	Check the originator's connection settings.	
01	0117	Error code returned from target: The tag set specified in the connection's target variables does not exist.	Check whether the originator and target tag sets and tags are set correctly. Check the settings of the variables in the CPU Unit.	Depends on the target's specifications. (Contact the target device's manufacturer.)	Check the originator's connection settings. Check whether the target's tag sets and tags are set correctly. Check the settings of the variables in the CPU Unit.	
01	011A	Error code returned from originator: Connection could not be established because the buffer was full due to high traffic.	An unexpected network load may have been received. Use the Network Configurator Device Monitor or the Ethernet Tab Page to check the bandwidth usage, and correct the load. If there are places where broadcast storms occur, such as loop connections in the network connection format, then correct them.	An unexpected network load may have been received. Use the Network Configurator Device Monitor or the Ethernet Tab Page to check the bandwidth usage, and correct the load. If there are places where broadcast storms occur, such as loop connections in the network connection format, then correct them.	Follow the operating specifications for the originator. (Consult the originator manufacturer.)	

Connecti	ion status			Handling		
General Status (hex)	Additional Status (hex)	Source of error	Configuration 1	Configuration 2	Configuration 2	
01	011B	Error code returned from target: The RPI was set to a value that is below the specifications.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.)	Set the origina- tor's RPI setting to 0.5 ms or greater.	
01	0203	Error code returned from target: The connection timed out.	Tag data link communications from the target time out. Check the power supply and cable wiring of th devices in the communications path, including the target and switches. If performance has dropped due to heavy load, change the performance settings. For example, increase the timeout time or RF setting.			
01	0204	Error code returned from target: The connection-opening process timed out.	power supply and	sponse from the ta d cable wiring of the path, including the	ne devices in the	
01	0205	Error code returned from target: There was a parameter error in the frame used to open the connection.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	
01	0302	Error occurred at originator or error code returned from target: The tag data link's allowable bandwidth (pps) was exceeded.	Check the origi- nator and tar- get connection settings (num- ber of connec- tions and RPI).	Check the tar- get's connec- tion settings (number of con- nections and RPI).	Check the origi- nator and tar- get connection settings (num- ber of connec- tions and RPI).	
01	0311	Error code returned from target: There was a parameter error in the frame used to open the connection.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	
01	0312	Error code returned from target: There was a parameter error in the frame used to open the connection.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	
01	0315	Error code returned from target: There was a parameter error in the frame used to open the connection.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	
01	0316	Error code returned from target: There was a parameter error in the frame used to close the connection.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	

Connection status			Handling			
General Status (hex)	Additional Status (hex)	Source of error	Configuration 1	Configuration 2	Configuration 2	
01	031C	Error code generated in originator: Some other error occurred.	This error does not occur.	The originator generates this code when an unsupported response code is returned from the target in reply to a connection-opening request.	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	
08		Error code returned from target: There is no Forward Open or Large Forward Open service in the target device.	This error does not occur.	Depends on the target's specifications. (Contact the target device's manufacturer.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	
DO	0001	Error code generated in originator: The connection operation is stopped.	The connection was stopped because the Tag Data Link Stop Bit was changed to TRUE, or the settings data is being downloaded. Either change the Tag Data Link Start Bit to TRUE, or wait until the settings data has been downloaded. Includes Controller stop errors, Unit failure. To handle these errors, refer to 13-2-1 Errors Occurring at the EtherNet/IP Unit.	The meaning of this error code is defined by each vendor, so it depends on the target's specifications. (Contact the target device's manufacturer.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	
D0	0002	Error code generated in originator: The connection is being opened (opening processing in progress).	Wait until the opening processing is completed.	The meaning of this error code is defined by each vendor, so it depends on the target's specifications. (Contact the target device's manufacturer.)	Depends on the originator's specifications. (Contact the originator device's manu- facturer.)	

Connecti	on status			Handling	
General Status (hex)	Additional Status (hex)	Source of error	Configuration 1	Configuration 2	Configuration 2
Unique OMF	ON Error Cod	des			
01	0810	Error code returned from target: New data could not be obtained from the CPU Unit when opening connection. (The Unit will automatically retry, and attempt to open the connection again.)	This error may occur if the CPU Unit's task period was long when opening the connection or some problem in the PLC caused the PLC to stop. If the task period was too long, the problem will be resolved automatically. If the PLC has stopped, identify and correct the error. If the PLC system is stopped, identify the cause of the error from the CPU Unit error data.	The meaning of this error code is defined by each vendor, so it depends on the target's specifications. (Contact the target device's manufacturer.)	The meaning of this error code is defined by each vendor, so it depends on the originator's specifications. (Contact the originator device's manufacturer.)
01	0811	Error code generated in originator: New data could not be obtained from the CPU Unit when opening connection. (The Unit will automatically retry, and attempt to open the connection again.)	This error may occur if the CPU Unit's task period was long when opening the connection. If the task period was too long, the problem will be resolved automatically.	The meaning of this error code is defined by each vendor, so it depends on the target's specifications. (Contact the target device's manufacturer.)	The meaning of this error code is defined by each vendor, so it depends on the originator's specifications. (Contact the originator device's manu- facturer.)

13-4 Error Log

Errors detected by the EtherNet/IP Unit are stored in the error log along with the date and time of their occurrence. The error log can be read from the Network Configurator and cleared from the Sysmac Studio.

13-4-1 **Error Log Data**

Error Log Data Configuration

Error Descriptions

A short description of the error is given.

Detailed Error Code

The detailed error code provides further troubleshooting information on the error.

Refer to 13-4-2 Error Log Error Codes for the error descriptions and detailed error codes.

Clock Information

The year, month, day, hour, minutes, and sections that the error occurred are recorded.



Additional Information

The EtherNet/IP Unit reads and uses the clock information from the CPU Unit.

If the EtherNet/IP Unit cannot read the clock information from the CPU Unit, the clock time in the error log will be all zeros.

The correct time is not recorded if the internal clock is not set correctly. If such an error record is read, the clock information will be invalid.

Storage Location of Error Log Data

Error Log Data in RAM

When an error occurs, one record is stored in the error log table in RAM inside the EtherNet/IP Unit. Up to 64 records are recorded.

Error Log Data in Non-volatile Memory

When a high-priority error occurs, a record is stored both in the error log table in RAM and in the error log table in non-volatile memory in the EtherNet/IP Unit. The contents of the error log table in non-volatile memory is retained even if the power supply to the Controller is turned OFF or the Controller is reset. (When the Controller is reset, the error log table in the non-volatile memory is automatically loaded to the error log table in RAM.) One record is stored in the non-volatile memory for each error. Up to 32 records are stored. When the maximum number of records is exceeded, the oldest records are deleted and only the newest records are retained. (The maximum number of records is 64 for RAM and 32 for the non-volatile memory.)

Clearing Error Log Data

You can use the Controller event log functions of the Sysmac Studio to clear the error log data from the RAM or non-volatile memory in the EtherNet/IP Unit.

Refer to the *Sysmac Studio Version 1 Operation Manual* (Cat. No. W504) for the functions and operating procedures for the Controller event logs.

13-4-2 Error Log Error Codes

Error		Deta	nil code	Saved in
code (hex)	Error	First byte	Second byte	non-volatile memory
0001	CPU Unit watchdog timer error	00 hex	00 hex	Yes
0002	CPU Unit service monitoring error	Monitoring time (ms)		Yes
0006	Other CPU error	Bit D11: Unit not in Regist (Other bits are reserved for	Yes	
000E	I/O bus error	00 hex	00 hex	Yes
000F	CPU Unit initialization error	00 hex	00 hex	Yes
0011	Event timed out	MRC (main command)	SRC (subcommand)	Yes
0012	CPU Unit memory error	01 hex: Read error	03 hex: Routing tables	Yes
		02 hex: Write error	05 hex: CPU Bus Unit Area (CIO or DM)	
0015	CPU Unit fatal error	00 hex	00 hex	Yes
0017	Tag database error	00 hex	00 hex	Yes
0103	Resend count exceeded (send failed)	CIP Frame:		No
0105	Node address setting error (send failed)	FFFF		No
0107	Remote node not in network (send failed)			No
0108	No Unit with specified unit address (send failed)			No
010B	CPU Unit error (send failed)			No
010D	Destination address not in routing tables (send failed)			No
010E	Not registered in routing tables (send failed)			No
010F	Routing table error (send failed)			No
0110	Too many relay points (send failed)			No
0111	Command too long (send failed)			No
0112	Header error (send failed)			No
0117	Internal buffers full; packet discarded			No
0118	Illegal packet discarded			No
0119	Local node busy (send failed)			No
0120	Unexpected routing error			No
0122	Service not supported in current mode; packet discarded			No
0123	Internal send buffer full; packet discarded			No
0124	Maximum frame size exceeded; routing failed			No
0125	Response timeout; packet discarded			No
020F	Communications controller error	00 hex	01 hex	Yes
0211	IP address duplication	Port number (always 02)	Lower eight bits of IP address	Yes

Error		De	etail code	Saved in
code (hex)	Error	First byte	Second byte	non-volatile memory
021A	Logic error in setting table	00 hex	02 hex: Network parameters 03 hex: Routing tables 04 hex: Unit Setup 0E hex: Unit name 12 hex: Status area layout setting error	Yes
			13 hex: Status area layout setting verification error 15 hex: Installation in a PLC of another series (e.g., from NJ to CJ2) after setting the Unit.	
0300	Parameter error; packet discarded	CIP Frame: FFFF		No
0347	I/O refreshing error	00 hex	00 hex	Yes
03C0	FINS/TCP setting error	01 to 10 hex: Connection number	01: Automatically allo- cated FINS node address duplication	No
			02: Destination IP address error	
			03: Destination port number error	
03C1	Server settings error	00 hex: DNS 03 hex: SNTP 04 hex: FTP 06 hex: BOOTP 07 hex: SNMP 08 hex: SNMP Trap	01: IP address 02: Host name 03: Port number 04: Other parameter	No
		09 hex: FINS/UDP 0A hex: FINS/TCP		
03C2	FINS/TCP packet discarded	01 to 10 hex: Connection number	02 hex: Reopening because remote node closed	No
			03 hex: Reopening because of reception error	
			04 hex: Reopening because of transmission error	
			05 hex: Reopening because RST received from remote node	
			06 hex: Reopening because of no keep-alive response	
			07 hex: Illegal FINS/TCP procedure	
			08 hex: Insufficient mem- ory during server process- ing	
			09 hex: Insufficient memory during client processing	
			0A hex: Insufficient mem- ory during node switching	

Error		Detai	Detail code			
code (hex)	Error	First byte	Second byte	non-volatile memory		
03C3	FINS/UDP packet discarded	00 hex	01 to FE hex: Source node address	No		
03C4	Server connection error	00 hex: DNS 03 hex: SNTP 04 hex: FTP 06 hex: BOOTP 07 hex: SNMP 08 hex: SNMP Trap	01 hex: Specified host does not exist 02 hex: No such service at specified host 03 hex: Timeout 06 hex: Host name resolution error 07 hex: Transmission error 08 hex: Reception error 09 hex: Other error 0A hex: Obtaining IP address error	No		
03C6	Clock write error	0001: The clock time could not be updated because a error occurred in the CPU Unit. 0002: The clock time could not be updated because the CPU Unit or operating mode does not support this function.	Clear the error from the CPU Unit. Refer to Section 12 Communications Performance and Communications Load and check the application conditions.	No		
03D0	Ethernet basic setting error	01 hex: Ethernet setting error 02 hex: TCP/IP basic setting error	01 hex: Checksum error 11 hex: Inconsistent settings 12 hex: Specified baud rate is not supported. 01 hex: Checksum error 11 hex: Invalid IP address 12 hex: Invalid subnet mask 13 hex: Invalid default gateway address 14 hex: Invalid primary name server 15 hex: Invalid secondary name server 16 hex: Invalid domain name 17 hex: Invalid host name	Yes		

Error		Detai	Saved in	
code (hex)	Error	First byte	Second byte	non-volatile memory
03D1	Ethernet advanced setting error	02 hex: FINS setting error	01 hex: Checksum error 10 hex: Invalid IP router table 11 hex: Invalid FINS/UDP setting 12 hex: Invalid FINS/TCP setting 13 hex: Invalid FTP setting 14 hex: Invalid SNTP setting 15 hex: Invalid SNMP setting 16 hex: Invalid SNMP trap setting	Yes
03D2	Packet discarded.	01 hex	00 hex	No
03D3	Link OFF error	00 hex	00 hex	No
03D4	Verification error (Tag data link only) Note For details on identifying the cause of the verification error, refer to 13-3 Connection Status Codes and Error Processing. This error will not be stored when a target node is missing.	Connection instance number (1 to 255)	Lower eight bits of IP address	No
03D5	Tag data link error	00 hex	Lower eight bits of IP address	No
0601	CPU Bus Unit error	Variable	l	Yes
0602	CPU Bus Unit memory error	01: Read error 02: Write error	02 hex: Network parameter 06 hex: Error log 09 hex: Identity data 0E hex: Unit name 0F hex: Ethernet basic setting 10 hex: Ethernet advanced setting 11 hex: MAC address 12 hex: Status area layout setting 14 hex: Term Tag address resolution memory write error	Yes *


^{*} If a memory error occurs in the error log area of the non-volatile memory, the record will not be stored in the non-volatile memory.

13-5 Event Logs

13-5-1 Overview of the Event Logs

You use the same methods to manage all of the events that occur on the NJ-series Controller. (The events include errors and information.) You can use the Sysmac Studio or an HMI to confirm current Controller events and the logs of events that have occurred. These logs are called event logs. Controller errors that occur for this Unit are also reported as events in the NJ-series CPU Unit.

Refer to the *NJ/NX-series CPU Unit Software User's Manual* (Cat. No. W501) for details on the event logs in an NJ-series CPU Unit. Refer to the *NJ/NX-series Troubleshooting Manual* (Cat. No. W503) for details on Controller errors, confirmation methods, and corrections.

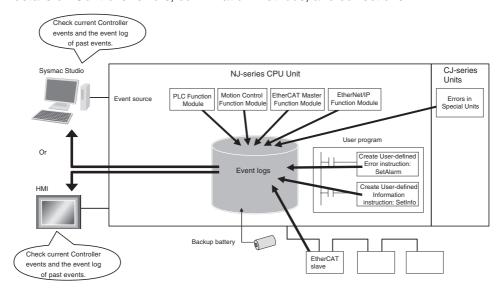

To use an HMI to check events, connect the HMI to the built-in EtherNet/IP port on the CPU Unit.

13-5-2 Error Table

The errors that may occur for this Unit are listed below.

The following abbreviations and symbols are used in the event level column.

Abbreviation	Name
Maj	Major fault level
Prt	Partial fault level
Min	Minor fault level
Obs	Observation
Info	Information

Symbol	Meaning
S	Event levels that are defined by the system.
U	Event levels that can be changed by the user.*

^{*} This symbol appears only for events for which the user can change the event level.

A version in parentheses in the Event code column is the unit version of the CPU Unit when the event was added.

Refer to the NJ/NX-series Troubleshooting Manual (Cat. No. W503) for all of the event codes that may occur in an NJ-series Controller.

Event and	From t marrie	Maanina	A	Level					D-f
Event code	Event name	Meaning	Assumed cause	Maj	Prt	Min	Obs	Info	Reference
047A0000 hex	Unit Memory Error (Device Error)	An error occurred when writing to the error history or device parameters in non-volatile memory in the EtherNet/IP Unit.	There is a source of noise nearby. Non-volatile memory failure			S			page 13-36
047B0000 hex	Non-volatile Memory Error	An error occurred in non-volatile memory.	There is a source of noise nearby. Non-volatile memory failure			S			page 13-37
047C 0000 hex	Communica- tions Control- ler Error	An error occurred in the communications controller.	Noise Communications Controller hardware error			S			page 13-37
14840000 hex	Invalid Communications Parameter	An error was found in the validation check of the parameters for tag data links that are saved in non-volatile memory.	 The power was interrupted during a download. A communications error occurred during a download. Non-volatile memory failure 			S			page 13-38
14850000 hex	Tag Data- base Error	A tag database error occurred in the CPU Unit when using variables for tag data links, sta- tus layout, etc.	 The power was interrupted during a download. A communications error occurred during a download. 			S			page 13-38
34A80000 hex	Verification Error	The information registered for a target node in the tag data link parameters is different from the actual node information.	 The specified target does not exist. Variable names do not match. The connection size is incorrect. Insufficient connection resources 			S			page 13-39

Event code	Event name	Meaning	Veerimed period	Level					Reference
			Assumed cause	Maj	Prt	Min	Obs	Info	neierence
34A90000 hex	Tag Data Link Error	There were two or more errors in a connection as an originator. The following are excluded.	 The power supply to the target node is OFF. Communications with the target node stop. The Ethernet cable for Ether-Net/IP is disconnected. The Ethernet cable for Ether-Net/IP is disconnected. 			S			page 13-40
34AA 0000 hex	Tag Refresh Error	An unsupported data area or address range is specified for the tag data links.	Noise An unsupported data area or address range was specified for the tag data links.			S			page 13-40
34AB0000 hex	Basic Ether- net Setting Error	There is an illegal TCP/IP setting.	 The power was interrupted during a download. A communications error occurred during a download. 			S			page 13-41
34AC 0000 hex	IP Address Table Error	The IP address table information is incorrect.	 The power was interrupted during a download. A communications error occurred during a download. 			S			page 13-41
34AD 0000 hex	IP Router Table Error	The IP router table information is incorrect.	 The power was interrupted during a download. A communications error occurred during a download. 			S			page 13-42
34AE0000 hex	Routing Table Error	The routing table information is incorrect.	 The power was interrupted during a download. A communications error occurred during a download. 			S			page 13-42
34AF0000 hex	Ethernet Advanced Setting Error	There is an illegal FINS setting.	 The power was interrupted during a download. A communications error occurred during a download. 			S			page 13-43
34B00000 hex	Address Mismatch	The host ID of the local IP address is inconsistent with the FINS node address. Or, the last segment of the local IP address is inconsistent with the setting on the node address switches.	The IP address conversion method is set to automatic generation, but the host ID of the local IP address is inconsistent with the FINS node address or the last segment of the local IP address is inconsistent with the setting on the node address switch.			S			page 13-43
381C0000 hex	Status Area Layout Set- ting Error	An error occurred in the layout setting of the EtherNet/IP Unit.	There is an error in the layout settings of the EtherNet/IP Unit.			S			page 13-44
54AE0000 hex	Multiple Switches ON Error	More than one soft- ware switch changed to TRUE at the same time.	More than one software switch changed to TRUE at the same time. Or, another software switch changed to TRUE before processing was completed for a previous software switch.			S	U		page 13-44
84E00000 hex	IP Address Duplication Error	The same IP address is used more than once.	The IP address of the Ether- Net/IP port is also used as the IP address of another node.			S			page 13-45

Event code	Event name	Meaning	Assumed cause	Level					Reference	
Event code	Livent name Meaning		Assumed cause		Prt	Min	Obs	Info	ricicience	
84E10000 hex	BOOTP Server Error	Connection with the BOOTP server failed.	Server setting error (The acquired IP address is illegal.) Server is down. An error occurred in the communications path.			S			page 13-46	
54AF0000 hex	Access Detected Outside Range of Variable	Accessing a value that is out of range was detected for a tag variable that is used in a tag data link.	An out-of-range value was written by an EtherNet/IP tag data link for a variable with a specified range. A value that does not specify an enumerator was written by an EtherNet/IP tag data link for an enumeration variable.				S		page 13-46	
84E20000 hex	Link OFF Error	The Ethernet link status turned OFF.	 The Ethernet cable is disconnected. An Ethernet cable is disconnected or loose. The switching hub power supply is turned OFF. Baud rate mismatch. Noise 			U	S		page 13-47	

13-5-3 Error Descriptions

This section describes the information that is given for individual errors.

Controller Error Descriptions

The items that are used to describe individual errors (events) are described in the following copy of an error table.

Event name	Gives the name of the error.			Event code	Gives the code of	the error.				
Meaning	Gives a short desc	Gives a short description of the error.								
Source	Gives the source of the error.		Source details	Gives details on the source of the error.	Detection timing	Tells when the error is detected.				
Error attributes	Level	Tells the level of influence on control.*1	Recovery	Gives the recovery method.*2	Log category	Tells which log the error is saved in.*3				
Effects	User program	Tells what will hap- pen to execution of the user pro- gram.*4	Operation	Provides special ir from the error (eve	nformation on the opent).	eration that results				
System-defined	Variable		Data type	Pata type Name						
variables	Lists the variable names, data types, and meanings for system-defined variables that provide direct error notification, that are directly affected by the error, or that contain settings that cause the error.									
Cause and cor-	Assumed cause		Correction	prrection Prevention						
rection	Lists the possible	causes, corrections,	and preventive mea	sures for the error.						
Attached information	This is the attache	This is the attached information that is displayed by the Sysmac Studio or an HMI								
Precautions/ Remarks		Provides precautions, restrictions, and supplemental information. If the user can set the event level, the event levels that can be set, the recovery method, operational information, and other information are also provided.								

*1 One of the following:

Major fault: Major fault level Partial fault: Partial fault level Minor fault: Minor fault level

Observation Information

*2 One of the following:

Automatic recovery: Normal status is restored automatically when the cause of the error is removed.

Error reset: Normal status is restored when the error is reset after the cause of the error is removed.

Cycle the power supply: Normal status is restored when the power supply to the Controller is turned OFF and then back ON after the cause of the error is removed.

Controller reset: Normal status is restored when the Controller is reset after the cause of the error is removed.

Depends on cause: The recovery method depends on the cause of the error.

*3 One of the following:

System: System event log Access: Access event log

*4 One of the following:

Continues: Execution of the user program will continue.

Stops: Execution of the user program stops. Starts: Execution of the user program starts.

Event name	Unit Memory Error (Device Error)			Event code	047A0000 hex			
Meaning	An error occurred	when writing to the	error history or device	e parameters in non-	volatile memory in the	he EtherNet/IP Unit.		
Source	PLC Function Mod	dule	Source details	CJ-series Unit Detection At power ON, Controller reset, or Unit restart				
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System		
Effects	User program	Continues.	Operation	the type of error in	perations will be performed depending or in the non-volatile memory. (You can history in the EtherNet/IP Unit and the			
				02 hex (network pa	arameters): Tag data	a links stop.		
				06 hex (error histo non-volatile memo	ry): The error history ry.	y is not saved in		
				09 hex (identity info	ormation): EtherNet/	/IP communications		
				0E hex (Unit name	e): No affect on other	r communications.		
				OF hex (basic Ethernet settings): Communications are not possible. 10 hex (advanced Ethernet settings): The relevant function stops.				
				11 hex (MAC address): Ethernet communications stop.				
				12 hex (status area layout settings): Operation is performed using default layout settings.				
				14 hex (Tag addre	ss resolve memory v cations stops.	write error): Tag		
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause		Correction		Prevention			
correction	There is a source	of noise nearby.	dio. Then, if the er after cycling the po	ce parameters or s using the Net- or the Sysmac Stu- ror persists even ower supply or erNet/IP Unit, check				
	Non-volatile memo	ory failure	If the error occurs ing the actions des replace the EtherN		None			
Attached information	None							
Precautions/ Remarks	None							

Event name	Non-volatile Memory Error Event code			047B 0000 hex				
Meaning	An error occurred	d in non-volatile men	tile memory.					
Source	PLC Function Mo	odule	Source details	CJ-series Unit	Detection timing	Continuously		
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System		
Effects	User program	Continues.	Operation	when the power su	The Unit will stop if this error is detected in self-diag when the power supply is turned ON. Operation cont if the error occurs during operation.			
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause		Correction		Prevention			
correction	There is a source of noise nearby.		Remove any nea	Remove any nearby sources of noise.		 Use the Unit away from sources of noise. Implement noise countermea- sures. 		
	Non-volatile mem	nory failure	If the above cause does not apply, replace the Unit.		None			
Attached information	None							
Precautions/ Remarks	None							

Event name	Communications Controller Error			Event code	047C 0000 hex				
Meaning	An error occurred	An error occurred in the communications controller.							
Source	PLC Function Module				Detection timing	After link is established			
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System			
Effects	User program	Continues.	Operation	The EtherNet/IP Unit is offline. Communications are n possible. Error responses are returned to all communitions requests. Data refreshing with the CPU Unit conues.					
System-defined	Variable		Data type		Name				
variables	None								
Cause and	Assumed cause		Correction		Prevention				
correction	Noise		Cycle the power supply to the Controller. Implement noise countermeasures.		Use the Unit away from sources of noise. Implement noise countermeasures.				
	Communications Controller hardware error		If the error occurs even after performing the actions described above, replace the EtherNet/IP Unit.		None				
Attached information	None								
Precautions/ Remarks	None								

Event name	Invalid Communic	ations Parameter		Event code	1484 0000 hex			
Meaning	An error was foun	d in the validation ch	eck of the paramete	rs for tag data links t	that are saved in nor	n-volatile memory.		
Source	PLC Function Mo	dule	Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart		
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System		
Effects	User program	Continues.	Operation	Tag link function o	the EtherNet/IP Unit cannot be use			
System-defined	Variable		Data type		Name			
variables	None							
Cause and correction	Assumed cause		Correction		Prevention			
	The power was in download.	terrupted during a	Download the device parameters or connection settings from the Network Configurator or the Sysmac Studio again.		Make sure that the power supply is not interrupted during a download.			
	A communications ing a download.	s error occurred dur-	Check for ambient noise. If there is a noise source, remove it.		Use the Unit away from sources of noise. Implement noise countermeasures.			
	Non-volatile mem	ory failure	ing the actions des	If the error occurs even after performing the actions described above, replace the EtherNet/IP Unit.		None		
Attached information	None							
Precautions/ Remarks	None							
Event name	Tag Database Err	or		Event code	1485 0000 hex			
Meaning	, ,	ror occurred in the C	PU Unit when using			t. etc.		
Source	PLC Function Mod		Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart		
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System		
Effects	User program	Continues.	Operation	Tag data link funct used.	ion of the EtherNet/l	IP Unit cannot be		
System-defined	Variable		Data type		Name			
variables	None							
Cause and	Assumed cause		Correction		Prevention			
correction	The power was in download.	terrupted during a	Download the settings from the Sysmac Studio again.		Make sure that the power supply is not interrupted during a download.			
	A communications ing a download.	s error occurred dur-	Implement noise of there is excessive	countermeasures if noise.	Implement noise countermeasures.			
Attached information	None							
Precautions/ Remarks	None							

Event name	Verification Error			Event code	34A80000 hex		
Meaning	The information retion.	egistered for a targe	t node in the tag dat	a link parameters is o	different from the ac	ctual node informa-	
Source	PLC Function Module		Source details	CJ-series Unit	Detection timing	After link is established	
Error attributes	Level	Minor fault	Recovery	Automatic recovery	Log category	System	
Effects	User program	Continues.	Operation	Operation Reconnection process		essing is periodically repeated for the	
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause The specified target does not exist.		Correction	Correction			
correction			istered connection ON the power su cable if it is discool Implement noise	If the power supply for nodes with registered connections is not ON, turn ON the power supply. Correct the cable if it is disconnected or loose. Implement noise countermeasures if there is excessive noise.		ower supply for con- turned ON. Connect ly. Implement noise is if there is excessive	
	Variable names d	o not match.		Correct the data link parameters or		Make the settings so that the data link	
	The connection si	The connection size is incorrect.		change the connection nodes so that the data link parameters match the actual node information.		parameters match the actual node information.	
	Insufficient connection resources			Reduce the number of class-3 messages that are being used.		Reduce the number of data links and class-3 messages that are used.	
Attached information	None						
Precautions/ Remarks	Identify the target	node in the detailed	d information of the	error history.			

Event name	Tag Data Link Erro	or		Event code	34A90000 hex	
Meaning	Connections as	more errors in a cor a target outs due to a Link O			are excluded.	
Source	PLC Function Mod	lule	Source details	CJ-series Unit	Detection timing	After link is established
Error attributes	Level	Minor fault	Recovery	Automatic recovery	Log category	System
Effects	User program Continues.		Operation		link connection will s odically repeated for	•
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	The power supply is OFF.	to the target node	Check the status of and start it normal	•	Make sure that the normally.	target node starts
	Communications v stop.	vith the target node				
	The Ethernet cable for EtherNet/IP is disconnected. The Ethernet cable for EtherNet/IP is disconnected.		Reconnect the connector and make sure it is mated correctly. Replace the Ethernet cable.		Connect the connector securely.	
					None	
	Noise	Noise		Implement noise countermeasures if there is excessive noise.		ountermeasures if noise.
Attached information	None					
Precautions/ Remarks	None					
Event name	Tag Refresh Error			Event code	34AA 0000 hex	
Meaning	An unsupported da	ata area or address	range is specified fo	r the tag data links.		
Source	PLC Function Mod	lule	Source details	CJ-series Unit	Detection timing	Continuously
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System
Effects	User program	Continues.	Operation	Tag data link funct used.	ion of the EtherNet/I	P Unit cannot be
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	An unsupported data area or address range was specified for the tag data links.		Correct the tag data links so that the area types and address ranges are within the specified ranges.		Set the tag data links so that the area types and address ranges are within the specified ranges.	
Attached information	None					
Precautions/ Remarks	None					

Event name	Basic Ethernet Set	ting Error		Event code	34AB0000 hex	
Meaning	There is an illegal TCP/IP setting.					
Source	PLC Function Module		Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System
Effects	User program	Continues.	Operation Ethernet communications for the EtherNet/IP Unit possible.		Net/IP Unit are not	
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	The power was into download.	errupted during a	Download the settings from the Sysmac Studio again.		Make sure that the power supply is not interrupted during a download.	
	A communications error occurred during a download.		Implement noise countermeasures if there is excessive noise.			ountermeasures.
Attached information	None				•	
Precautions/ Remarks	None					

Event name	IP Address Table Error			Event code	34AC 0000 hex		
Meaning	The IP address tal	The IP address table information is incorrect.					
Source	PLC Function Module		Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart	
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System	
Effects	User program	Continues.	Operation Ethernet communic possible.		cations for the EtherNet/IP Unit are not		
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	The power was int download.	errupted during a	Download the settings from the Sysmac Studio again.		Make sure that the power supply is not interrupted during a download.		
	A communications error occurred during a download.		Implement noise countermeasures if there is excessive noise.		ountermeasures.		
Attached information	None						
Precautions/ Remarks	None						

Event name	IP Router Table Er	ror		Event code	34AD 0000 hex	
Meaning	The IP router table	information is incor	rect.			
Source	PLC Function Mod	lule	Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System
Effects	User program Continues.		Operation	Ethernet communi possible.	cations for the Ethe	Net/IP Unit are not
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	The power was int download.	errupted during a	Download the sett mac Studio again.	•	Make sure that the not interrupted du	
	A communications ing a download.	error occurred dur-	Implement noise of there is excessive	countermeasures if noise.	Implement noise of	countermeasures.
Attached information	None					
Precautions/ Remarks	None					
Event name	Routing Table Erro	r		Event code	34AE0000 hex	
Meaning	The routing table in	nformation is incorre	ct.			
Source	PLC Function Mod	lule	Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System
Effects	User program	Continues.	Operation	Ethernet communi possible.	cations for the Ethe	'Net/IP Unit are not
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	The power was interrupted during a download.		Download the sett mac Studio again.	•	Make sure that the power supply is not interrupted during a download.	
	A communications error occurred during a download.		Implement noise countermeasures if there is excessive noise.		Implement noise countermeasures.	
Attached information	None					
Precautions/ Remarks	None					

Event name	Ethernet Advanced Setting Error			Event code	34AF0000 hex		
Meaning	There is an illegal FINS setting.						
Source	PLC Function Module		Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart	
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System	
Effects	User program	Continues.	Operation	The relevant funct	ion stops.	·	
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	The power was interrupted during a download.		the detailed infor	e of the error from mation in the error et/IP Unit, and then gs.		ne power supply is uring a download.	
	A communications ing a download.	A communications error occurred during a download.		Implement noise countermeasures if there is excessive noise.		Implement noise countermeasures.	
Attached information	None		•				
Precautions/ Remarks	None						

Event name	Address Mismatch			Event code	34B00000 hex		
Meaning		The host ID of the local IP address is inconsistent with the FINS node address. Or, the last segment of the local IP address is inconsistent with the setting on the node address switches.					
Source	PLC Function Module		Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart	
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System	
Effects	User program	Continues.	Operation	FINS communicati	ons are not possibl	le.	
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	The IP address conversion method is set to automatic generation, but the host ID of the local IP address is inconsistent with the FINS node address or the last segment of the local IP address is inconsistent with the setting on the node address switch.		Set the IP address match.	s or node address to	None		
Attached information	None						
Precautions/ Remarks	None						

Event name	Status Area Layou	t Setting Error		Event code	381C0000 hex		
Meaning	An error occurred	in the layout setting	of the EtherNet/IP U	nit.	•		
Source	PLC Function Mod	lule	Source details	CJ-series Unit	Detection timing	At power ON, Controller reset, or Unit restart	
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System	
Effects	User program Continues.		Operation	Operation will be performed with the default layout s tings while this error exists. In the following case, how operation is performed with the user-set layout settine. • A non-existent area is specified.		ving case, however,	
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	There is an error ir of the EtherNet/IP	the layout settings Unit.	Correct the layout erNet/IP Unit.	settings of the Eth-	Check that there a layout settings of t Unit.		
Attached information	None	None					
Precautions/ Remarks	None						
Event name	Multiple Switches	ON Error	Event code 54AE 0000 hex				
Meaning	More than one sof	tware switch change	d to TRUE at the sa	me time.			
Source	PLC Function Mod	lule	Source details	CJ-series Unit	Detection timing	At software switch operation	
Error attributes	Level	Minor fault	Recovery	Automatic recovery	Log category	System	
Effects	User program	Continues.	Operation	Not affected.			
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction		Prevention		
correction	More than one software switch changed to TRUE at the same time. Or, another software switch changed to TRUE before processing was completed for a previous software switch.		Do not allow more than one software switch to be TRUE at the same time.		Do not allow more than one software switch to be TRUE at the same time.		
Attached information	None						
Precautions/ Remarks	You can change the dures are not requ		bservation level. If y	ou change the level	to the observation le	vel, recovery proce-	

Event name	IP Address Duplication Error			Event code	84E00000 hex		
Meaning	The same IP addr	ess is used more tha	an once.				
Source	PLC Function Module		Source details	CJ-series Unit	Detection timing	After determining IP addresses	
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System	
Effects	User program	Continues.	responses are retur		urned to all commun	unications are not possible. Error rned to all communications requests. h the PLC Function Module will con-	
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction	Correction			
correction	The IP address of the EtherNet/IP port is also used as the IP address of another node.		settings so that not used by mo • Remove the no	wer supply to the t the Controller. ddresses of other ect the IP address the same address is re than one node.	Perform allocation addresses of node are used for only o	es on the network	
Attached information	None						
Precautions/ Remarks	None						

Event name	BOOTP Server Er	ror		Event code	84E10000 hex	
Meaning		ne BOOTP server fai	led			
Source	PLC Function Mod		Source details	CJ-series Unit	Detection timing	After link is established
Error attributes	Level	Minor fault	Recovery	Error reset	Log category	System
Effects	User program Continues.		Operation	Departion Requests to the BOOTP server will continuous a response from the BOOTP server. During communications using BOOTP are not puresponses are returned to all communications. Data refreshing with the PLC Function Mitinue. The IP address of the EtherNet/IP specified by the BOOTP server was an illustron at the inspect of the inspec		uring that time, possible. Error ications requests. Module will con- P port that was illegal value. Oper-
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	Server setting erro address is illegal.)	or (The acquired IP	If an illegal value is Net/IP IP address rect it.			P addresses in the e are no illegal val-
	Server is down.		Check if the server at the remote connection is operating normally and set it to operate normally if it is not.		Check to make sure that the server at the remote connection is operating normally.	
	An error occurred in the communications path.		Check the communications path to the server and take corrective measures if there are any problems.		None	
Attached information	None					
Precautions/ Remarks	None					
Event name	Access Detected	Outside Range of Va	iable Event code 54AF0000 hex			
Meaning	Accessing a value	that is out of range	was detected for a ta	ag variable that is us	ed in a tag data link.	
Source	PLC Function Mod	dule	Source details	CJ-series Unit	Detection timing	When variable is written
Error attributes	Level	Observation	Recovery		Log category	System
Effects	User program	Continues.	Operation	Not affected.		
Indicators	EtherNet/IP NET I	RUN	EtherNet/IP NET E	ERR	EtherNet/IP LINK/	ACT
System-defined	Variable		Data type		Name	
variables	None					
Cause and	Assumed cause		Correction		Prevention	
correction	An out-of-range value was written by an EtherNet/IP tag data link for a variable with a specified range. A value that does not specify an enumerator was written by an EtherNet/IP tag data link for an enumeration variable.		Correct the value that is written to the variable with a specified range so that the value is in the range. Correct the value that is written to the enumeration variable so that the value specifies an enumerator.		Write values that are in range for variables with specified ranges. Write values that specify enumerators to enumeration variables.	
Attached information	None					
Precautions/ Remarks		s for out-of-range values				rmally.

Event name	Link OFF Error			Event code	84E20000 hex		
Meaning	The Ethernet link	The Ethernet link status turned OFF.					
Source	PLC Function Mod	lule	Source details	CJ-series Unit	Detection timing	After link is established	
Error attributes	Level	Observation	Recovery		Log category	System	
Effects	User program	Continues.	possible. Error resp		nit is offline. Communications are not ponses are returned to all communicata refreshing with the CPU Unit contin-		
System-defined	Variable		Data type		Name		
variables	None						
Cause and	Assumed cause		Correction	Correction			
correction	The Ethernet cable is disconnected.		Connect the Ethe	rnet cable.		net cable securely.	
	An Ethernet cable loose.	is disconnected or	Connect the Ethernet cable securely. If the cable is broken, replace it.		Check the cable to make sure that it is not disconnected.		
	The switching hub turned OFF.	power supply is	· ·	Turn ON the power supply to the switching hub. Replace the switching hub if it fails. Correct the settings so that the same baud rate is used as for the remote communications nodes.		Do not turn OFF the power supply to the switching hub. Set the same baud rate as for the remote communications nodes.	
	Baud rate mismate	ch.	baud rate is used				
	Noise			Implement noise countermeasures if there is excessive noise.		Implement noise countermeasures.	
Attached information	None		•				
Precautions/ Remarks		e event level to the r changed to "Automa		ou change the level t	o the minor fault leve	el, the Recovery col-	

13-6 Troubleshooting

13-6-1 CPU Unit's ERR Lit or Flashing

Use the following table to troubleshoot the system when the CPU Unit's ERR indicator is lit or flashing when the EtherNet/IP Unit is mounted.

An I/O verification error occurred.	Confirm that the Unit is connected properly.
	Compare the Unit Configuration with the actual configuration of Units and correct the Unit Configuration.
A CPU Bus Unit setting error occurred.	A Unit model in the Unit Configuration is different from the Unit model that is mounted in the Controller. Compare the Unit Configuration with the actual configuration of Units and correct the Unit Configuration.
A CPU Bus error occurred.	Confirm that the Unit is connected properly.
	Restart the Unit. Replace the Unit if it doesn't restart.
An I/O Bus error occurred.	Confirm that the Unit is connected properly.
	Restart the Unit. Replace the Unit if it doesn't restart.

For details, refer to the CPU Unit's Operation Manual.

13-6-2 General Ethernet Problems

The 100M and 10M Indicators on the Ether- Net/IP Unit are both OFF.	 Confirm that the cable being used has the correct ratings. Confirm that the cable is properly connected to the Ethernet switch, and the Ethernet switch's power supply is ON. (The 7-segment display will indicate error E1.)
	If the Ethernet switch's settings can be changed, confirm that the Ethernet link settings are the same as the settings for the EtherNet/IP Unit. (For details, refer to 2-4 Network Installation.)
The NS Indicator on the EtherNet/IP Unit is lit red.	Check whether the same IP address is set on another node. (The 7-segment display will indicate error F0.)

13-6-3 Tag Data Links Fail to Start*

* Use the following table to troubleshoot tag data links when the Tag Data Links Operating Information in Communications Status 1 does not change to TRUE.

The indicators on the EtherNet/IP Unit are all	Check whether power is being supplied to the Controller.
OFF.	Check whether the EtherNet/IP Unit is mounted in the CPU Rack correctly.
	 If a watchdog timer (WDT) error has occurred in the CPU Unit, follow the procedures described in the CPU Unit's Operation Manual to cor- rect the problem.
	All of the indicators for the EtherNet/IP Unit will be OFF if a CPU Bus Unit error has occurred. Check for a CPU Bus Unit error.
	Restart the Unit. Replace the Unit if it doesn't restart.
The MS indicator on the EtherNet/IP Unit is lit green, but the NS indicator remains OFF.	If the EtherNet/IP Unit's 7-segment display is displaying an error code, refer to the tables in 13-2 Using the LED Indicators and Display for Troubleshooting.
	Confirm that the cables are properly connected to the Ethernet switch and the power supply to the Ethernet switch is ON.
The MS indicator on the EtherNet/IP Unit is lit green, but the NS indicator continues to flash green.	If the EtherNet/IP Unit's 7-segment display is displaying an error code, refer to the tables in 13-2 Using the LED Indicators and Display for Troubleshooting.
	The NS indicator will continue to flash green if the tag data link settings have not been set in the Unit. Use the Network Configurator to set the tag data link settings in the Unit, and then restart the Unit.
The MS indicators is lit green on the EtherNet/IP Unit, but the NS indicator continues to flash red.	• Identify the error code shown on the 7-segment display based on the tables in 13-2 Using the LED Indicators and Display for Troubleshooting, and eliminate the cause of the error.

13-6-4 Tag Data Link Problems

Tag data is not concurrent.	Check the following items and correct the user program.
	• Data concurrency is maintained for each connection between the CPU Unit and the built-in EtherNet/IP port. To maintain data concurrency for tag data links, set a refreshing task for the network variables that are assigned to tags. Refer to 7-1-7 Concurrency of Tag Data Link Data for details.
	Refer to the product manuals for products from other manufacturers.
At startup, some of the receive data is FALSE when it should be TRUE.	 When received data is used in the ladder program, use the All Tag Data Links Operating Information in Communications Status 1, or the corre- sponding element of the Target Node PLC Operating Flags as a condi- tion. If the Target Node PLC Operating Flags is used, the Controller status must be included in tag sets of both the sending and receiving nodes.
	 If the Output OFF function (Output Inhibit) is enabled in the output (produce) tag settings, all of the output data will be OFF if a fatal error occurs in the CPU Unit. Check the status of the output (producer) PLC.
The tag data links start and stop communicating intermittently.	 Check whether the baud rate is set to 10 Mbps, or a 10M or 100M repeater hub is being used. The performance of the tag data links assumes that an Ethernet switch is used to achieve a 12000-pps*1 bandwidth for full-duplex, 100-Mbps auto-negotiation communications. Refer to 13-1 Checking Status with the Network Configurator for details on checking the error counters on the Monitor Device Window's Ethernet Information Tab Page. The error and discarded packet counters indicate problems such as noise in the communications path, the use of substandard cables, damaged cables/connectors, loose connectors, abnormally high communications load, or incorrect wiring (loops) in the
	 Ethernet switch wiring. Contact the Ethernet switch manufacturer to determine whether there are any problems with the transfer capacity of the Ethernet switches in the communications path. If Ethernet switches are arranged in a cascade connection, there may be a heavy load concentrated at a midlevel Ethernet switch. In the EtherNet/IP Unit itself, processing is performed with a higher priority than message communications, so specifications provide for a 12,000 pps bandwidth for other CPU Units in tag data link performance only.
	• Refer to 13-1 Checking Status with the Network Configurator for details on checking the connection status on the Monitor Device Window's Connection Tab Page. Eliminate any errors, which can be identified in the tables in 13-3 Connection Status Codes and Error Processing.

^{*1} For the Units with unit version 2.1 or earlier, this is 6,000 pps.

13-6-5 Message Timeout Problems

Timeout errors occur frequently in message services (CIP UCMM, CIP Class 3, or FINS).

- When there is a high load in the tag data link, and the CPU Unit's task period is relatively long or there are messages coming in from many nodes, the message service response time may be delayed and messages may be discarded occasionally.
- In this case, the communications load must be reduced by increasing (slowing) the tag data link's RPI, reducing the message load, or increasing the timeout value.
- The tag data link's bandwidth usage can be checked on the Monitor Device Window's Ethernet Information Tab Page. Refer to 13-1 Checking Status with the Network Configurator for details.
- The error log error codes that indicate discarded messages (insufficient memory) due to heavy communications loads are 0117, 0119, 0123, 0125, 03C2 (detail code □□08, □□09, or □□0A), 03C3, and 03D2. Refer to 13-1 Checking Status with the Network Configurator for details on reading the error codes on the Error History Tab Page.

13-7 Cleaning and Maintenance

This section describes daily maintenance and the cleaning and inspection methods.

13-7-1 Cleaning

Clean the EtherNet/IP Unit regularly as described below in order to keep it in optimal operating condi-

- Wipe the Unit daily with a dry, soft cloth.
- When a spot cannot be removed with a dry cloth, dampen the cloth with a neutral cleanser (2% solution), wring out the cloth, and wipe the Unit.
- A smudge may remain on the Unit from gum, vinyl, or tape that was left on for a long time. Remove the smudge when cleaning.



Precautions for Correct Use

Never use volatile solvents, such as paint thinner, benzene, or chemical wipes.

13-7-2 Inspection

Inspect the Unit regularly to keep it in its optimal operating condition.

In general, inspect the Unit once every 6 to 12 months. However, inspect it more frequently if the Unit is used at a high temperature or humidity or under dirty or dusty conditions.

Equipment Required for Inspections

Prepare the following equipment before inspecting the Unit.

Equipment Required Daily

- · Phillips screwdriver and flat-blade screwdriver
- · Voltage tester or digital voltmeter
- · Industrial alcohol and clean cotton cloth

Equipment Required Occasionally

- Synchronoscope
- Oscilloscope with pen recorder
- · Thermometer and hygrometer (humidity meter)

Daily Inspections

Check the items in the following table and correct any items that are below the standard. Improve the operating environment or adjust the EtherNet/IP Unit to correct the situation if any of the standards in the following table are not met.

Daily inspection	Inspection	Criteria	Inspection method
Environmental	Ambient and in-panel temperature	0 to 55°C	Thermometer
conditions	Ambient and in-panel humidity	10% to 90% (with no condensation or icing)	Hygrometer
	Dust and dirt accumulation	No dust or dirt	Visual
Installation condi-	Is the Unit installed securely?	No looseness	
tions	Make sure that Ethernet cable connectors are fully inserted and locked.	No looseness	Phillips screwdriver

13-8 Precautions on Equipment Replacement

If the EtherNet/IP Unit becomes faulty, it may affect the operation of the other nodes with which it communicates. Take immediate steps to recover operation as soon as possible.

We recommend that you keep a spare EtherNet/IP Unit available to restore network operation as quickly as possible.

13-8-1 Precautions When Replacing the EtherNet/IP Unit

Observe the following precautions when you replace the EtherNet/IP Unit.

- Turn OFF the power supply to the Controller before you replace the EtherNet/IP Unit.
- · Check the new Unit to make sure that there are no errors.
- When you return an EtherNet/IP Unit for repair, attach a sheet of paper detailing the problem and return the Unit to your OMRON representative.

If there is a faulty contact, try wiping the contact with a clean cotton cloth dampened with alcohol. Remove any lint before you mount the Unit.



Precautions for Correct Use

To prevent electric shock when replacing the EtherNet/IP Unit, always stop communications in the network and turn OFF the power supply to all of the nodes before removing the Unit.

13-8-2 Settings Required after Unit Replacement

After you replace the EtherNet/IP Unit, make sure that the wiring and the following settings are the same as before the Unit was replaced.

- Node Address and Unit Number Set the rotary switches on the front of the Unit to same value as the Unit that was replaced.
- Configuration Data (Parameter Settings) The configuration data is saved in non-volatile memory in the EtherNet/IP Unit. Therefore, you must either transfer the configuration data from the previous Unit to the computer or reset the configuration data. Use the applicable Support Software.
 - Unit Settings (e.g., Local IP Address) Use the Sysmac Studio to transfer the data or to set the data again. Refer to Section 5 Sysmac Studio Settings for the EtherNet/IP Unit.
 - Parameter Settings (e.g., Parameters for Tag Data Links) Use the Network Configurator to transfer the data or to set the data again. Refer to Section 7 Tag Data Link Functions.



Precautions for Correct Use

When you replace the CPU Unit, start operation only after you transfer the data that was used before the replacement. Use the Sysmac Studio. Unexpected accidents may occur depending on the relation between the user program and the status of variables with a Retain attribute.

13-8-3 EtherNet/IP Unit Replacement Procedure

- 1 Turn OFF the power supply to the Controller where the EtherNet/IP Unit to replace is mounted and to all external devices that are connected to the network.
- Remove the Ethernet cable from the EtherNet/IP Unit to replace and remove the EtherNet/IP Unit.
- 3 Set the following hardware switches to the same values as the previous EtherNet/IP Unit.
 - · Node address and unit number switches
- **4** Turn ON the power supply to the Controller where you replaced the EtherNet/IP Unit and to all of the external devices that are connected to the network.
- **5** Check the indicators and status indications on the EtherNet/IP Unit, and make sure that the system is operating correctly.

13-9 Replacing Target Nodes during **Communications**

You can replace a specified target node without stopping the entire communications system to replace a faulty target node or to perform maintenance.




Version Information

This feature is supported for EtherNet/IP Units manufactured in or after July 2015.

Overview of Target Node Replacement Work

A command is sent from a computer or CPU Unit to temporarily stop communications for the specified target node. After the node is replaced, another command is sent to restore communications.

In the rest of this section, the command used to stop communications with the target node is referred to as the disconnection command and the command to restore communications is referred to as the connection command.

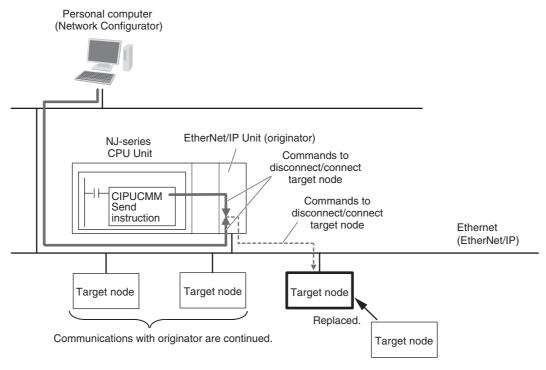



Precautions for Correct Use

- Remove the target node to replace only after you send a disconnection command to disconnect the node from the network. A Tag Data Link Error will occur if you remove the target node from the network before you send a disconnection command.
- · Set the new target node to the same IP address and connection settings as the target node that you are replacing. A Tag Data Link Error or Verification Error will occur if the settings are different.

The procedures to disconnect and connect a target node and the replacement procedure are given below.

13-9-2 Target Node Replacement Procedure

Use the following procedure to replace the target node.


- 1 Tell the originator to disconnect the target node to replace and confirm that the target node was disconnected.
- **2** Turn OFF the power supply to the target node to replace and remove the communications cable.
- 3 Connect the communications cable to the new target node and turn ON the power supply.
- **4** Tell the originator to connect the new target node and confirm that the target node was connected.

Specific methods for the above steps are provided below.

Sending Disconnection and Connection Commands

Use one of the following two methods to tell the originator to disconnect and connect the target node.

Method 1: Send a message from the Setup Parameters Dialog Box in the Network Configurator.

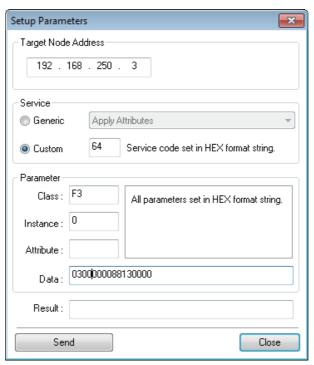

Method 2: Send a message by executing the CIPUCMMSend instruction

Send the following messages.

- Disconnection Command Execute the Close_Connections_ByNode service of the Connection Configuration object.
- Connection Command
 Execute the Open_Connections_ByNode service of the Connection Configuration object.

For details on the services, refer to 8-3-6 Connection Configuration Object (Class ID: F3 Hex).

Confirming Disconnection and Connection

There are the following two methods to confirm if the target node was disconnected or connected.

Method 1: Check the target node status on the Support Software.

Network Configurator

For details, refer to Connection Tab Page in 13-1-1 The Network Configurator's Device Monitor Function.

· Sysmac Studio

Refer to Connection Status Tab Page in A-2-5 Checking Communications Status with the Sysmac Studio and Troubleshooting.

Disconnections are displayed in gray and connections are displayed in blue.

Method 2: Check the Normal Target Node Table (EtherNet/IP Unit to CPU Unit) system-defined variable.

Refer to Section 3 Assigning Device Variables for CJ-series Units. The bit for the target node is OFF if the node is disconnected and ON if the node is connected.



Appendices

A-1		onal Comparison of EtherNet/IP Functionality on NJ-series nits and Other Series	A- 2
A-2		e Sysmac Studio to Set the Tag Data Links (EtherNet/IP	
	Conne	ctions)	A-3
	A-2-1	Overview of the Tag Data Links (EtherNet/IP Connections) Settings with the Sysmac Studio	
	A-2-2	Procedure to Make the EtherNet/IP Connection Settings with the Sysmac Studio	A-4
	A-2-3	EtherNet/IP Connection Settings	A-5
	A-2-4	Making the EtherNet/IP Connection Settings with the Sysmac Studio	A-10
	A-2-5	Checking Communications Status with the Sysmac Studio and Troubleshooting .	A-33
	A-2-6	Troubleshooting	A-38
A-3	EDS Fi	ile Management	A-43
	A-3-1	Installing EDS Files	
	A-3-2	Creating EDS Files	A-44
	A-3-3	Deleting EDS Files	A-45
	A-3-4	Saving EDS Files	
	A-3-5	Searching EDS Files	A-45
	A-3-6	Displaying EDS File Properties	A-46
	A-3-7	Creating EDS Index Files	
A-4	Precau	itions for Using the Network Configurator on Windows XP,	
	Windo	ws Vista, or Windows 7	A-47
	A-4-1	Changing Windows Firewall Settings	A-47
A-5	Variab	le Memory Allocation Methods	A-50
	A-5-1	Variable Memory Allocation Rules	A-50
	A-5-2	Important Case Examples	A-59
A-6	Precau	itions When Accessing External Outputs in CPU Units	A-63
		nces in Available Functions Depending on the CPU Unit (NJ or	
~ '			
	A-7-1	Functional Differences	
	A-7-2	Differences in Access Methods from the User Program	
Δ-8	Version	n Information	Δ-96

A-1 Functional Comparison of EtherNet/IP Functionality on NJseries CPU Units and Other Series

OK: Supported., ---: Not supported.

	EtherNet/IP Unit (built-in port on CJ2 CPU Unit)			Built-in Ether- Net/IP port on	CJ-series
Item	Unit ver- sion 1.0	Unit ver- sion 2.0	Unit ver- sion 2.1 or later	NJ-series CPU Unit	Ethernet Unit
Tag data link communications service	OK	OK	OK	OK	
CIP message communications service	OK	OK	OK	ОК	
Socket service				OK	OK
File transfer (FTP)		OK	OK	OK	OK
Mail send/receive					OK
Web functions					OK
Automatic adjustment of PLC/Controller's internal clock		OK	OK	OK	OK
Error history	OK	OK	OK	OK ^{*1}	OK
Response to PING command	OK	OK	OK	OK	OK
SNMP/SNMP trap		OK	OK	OK	
CIDR function for IP addresses		OK	OK	OK	
Online connection via EtherNet/IP using CX-One/Sysmac Studio		OK	OK		
Online connection via EtherNet/IP using Network Configurator	OK	OK	OK	OK	
Mounting in a Controller with an NJ- series CPU Unit			OK ^{*2}		

^{*1} This is equivalent to the event log of the built-in EtherNet/IP port of an NJ-series Controller.

^{*2} You cannot use the following functions if you connect to the CPU Unit through an EtherNet/IP Unit.

Going online with a CPU Unit from the Sysmac Studio. (However, you can go online from the Network Configurator.)

[•] Troubleshooting from an HMI

A-2 Use the Sysmac Studio to Set the Tag Data Links (EtherNet/IP Connections)

A-2-1 Overview of the Tag Data Links (EtherNet/IP Connections) Settings with the Sysmac Studio

You can use the Sysmac Studio to set the settings required for creating tag data links (EtherNet/IP connections)*1 between NJ-series Controllers.

*1 The tag data links and EtherNet/IP connections enable cyclic tag data exchanges on an EtherNet/IP network between Controllers or between Controllers and other devices. Here, "EtherNet/IP connection" refers to both the tag data links and the EtherNet/IP connections.




Version Information

Sysmac Studio version 1.10 or higher is required to use the Tag Data Link (EtherNet/IP Connection) Settings.

Acceptable System Configuration Conditions for Setting the EtherNet/IP Connection Settings on the Sysmac Studio

If an NJ-series Controller operates as the originator device, you can use the Sysmac Studio to set the originator device settings for the EtherNet/IP connections.

Similarly, if an NJ-series Controller operates as the target device, you can use the Sysmac Studio to set the tags and tag sets of the target device.

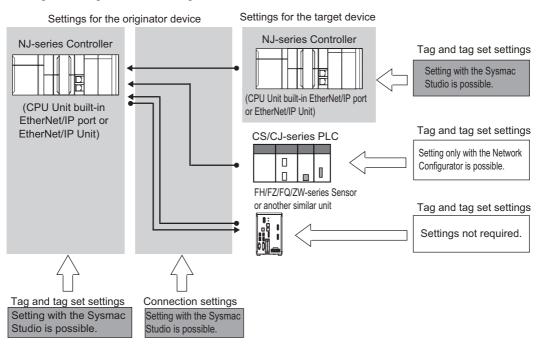

Use the Network Configurator if a CS/CJ-series PLC operates as the originator device.

Settings for the originator device

Settings for the target device

CS/CJ-series PLC

NJ-series Controller

Setting only with the Network Configurator is possible.

A-2-2 Procedure to Make the EtherNet/IP Connection Settings with the Sysmac Studio

1 Registering devices

Register devices with which the EtherNet/IP connections are established to the project.

Main Window

2 Creating network variables(*1)

... Refer to Registering the Network Variable for the Originator Device on page A-11. Global Variable Table on the Sysmac Studio

Setup Window

3 Registering tags and tag sets

... Refer to Registering the Tag and Tag Set on page A-13.

EtherNet/IP Connection Settings (Tag Set Display)

Register the network variables that are set in step 2 as tags and tag sets.

4 Setting Connections

... Refer to Setting Connections for the Originator Device on page A-16.

EtherNet/IP Connection Settings (Connections Display)

Specify devices (i.e., target devices and originator devices) and tag sets to communicate with using the EtherNet/IP connections.

5 Going online from the Sysmac Studio

... Refer to *Transferring the Connection Settings Data* on page A-28.

· Main Window

6 Downloading EtherNet/IP connection settings

Note Connections automatically start after the download.

... Refer to *Transferring the Connection Settings Data* on page A-28.

 Synchronization Window / Transfer to Controller Dialog Box

 EtherNet/IP Connection Settings

Checking operationStopping and starting connections

Refer to A-2-5 Checking Communications Status with the Sysmac Studio and Troubleshooting on page A-33. EtherNet/IP Connection Monitor Tab Page

^{*1} Variables with its Network Publish attribute set to *Output* or *Input* in the Global Variable Table are called network variables.

Select EtherNet/IP Connection

A-2-3 EtherNet/IP Connection Settings


This section describes the screen configuration for EtherNet/IP connection settings.

Screen Transitions in the EtherNet/IP Connection Settings


Connection Settings

menu.

Select EtherNet/IP Connection Settings from the Tools Menu.

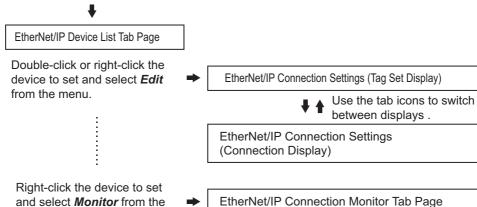

• Transferring connection settings to the Controller from the computer

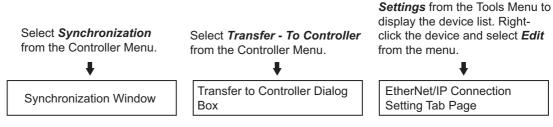




Precautions for Correct Use

Execute Transfer from the EtherNet/IP Connection Setting Tab Page to transfer only the connection settings.

Transferring part of a project with the Transfer to Controller Dialog Box or the Transfer from Controller Dialog Box is not possible. Therefore, only clearing the *Do not transfer the connection settings* Check Box will not transfer the connection settings if data in both the computer and the Controller are the same.

● EtherNet/IP Device List Tab Page (Refer to *Registering the Tag and Tag Set* on page A-13.)

The list indicates the devices to which EtherNet/IP connections can be set.

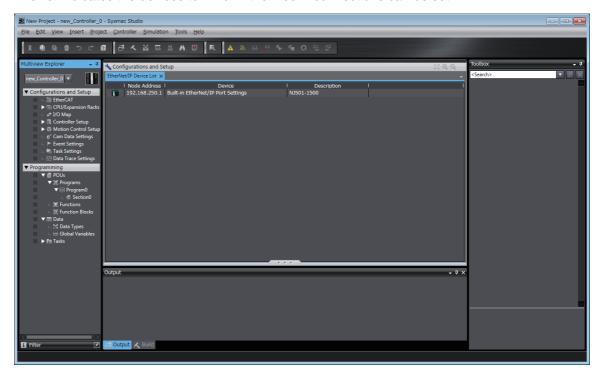


EtherNet/IP Connection Settings (Tag Set Display) (Refer to Registering the Tag and Tag Set on page A-13.)

Register tag sets required to create connections. Each tag set represents the data that is sent and received through a connection. You can register up to eight tags in one tag set.

The name and size of the tag must be the same as those of the network variable *1.

Set whether to include the Controller status information in tags for the tag sets. You can also set the data output operation at a fatal error occurrence for output tags.

*1 Variables with its Network Publish attribute set to *Output* or *Input* in the Global Variable Table are called network variables.

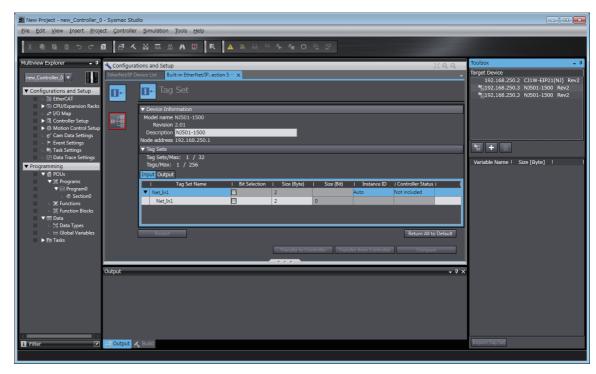

• EtherNet/IP Connection Settings (Connection Display) (Refer to Setting Connections for the Originator Device on page A-16.)

Specify the target devices and set their connections.

For each connection, set the following information: Connection Name, Connection I/O Type, I/O, target device tag set (target variable), originator device tag set (originator variable), Packet Interval (RPI), and Timeout Value.




Precautions for Correct Use

If you changed the IP address, model or revision of the target device after making the connection settings, perform the following.


With the Sysmac Studio version 1.11 or higher, change the connection settings entirely.

With the Sysmac Studio version 1.10 or lower, create the connections again.

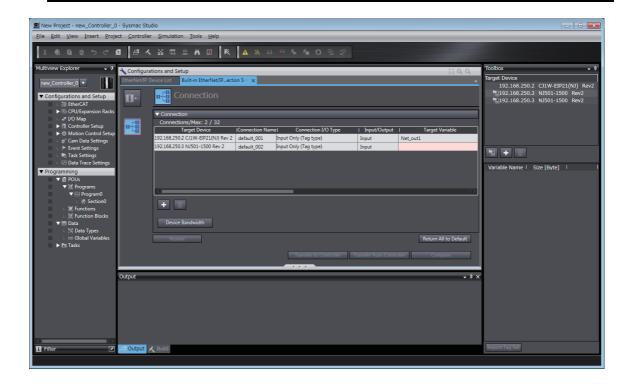

• EtherNet/IP Connection Monitor Tab Page (Refer to A-2-5 Checking Communications Status with the Sysmac Studio and Troubleshooting on page A-33.)

You can check the EtherNet/IP connection setting status offline and communications status online. When online, you can start and stop connections.

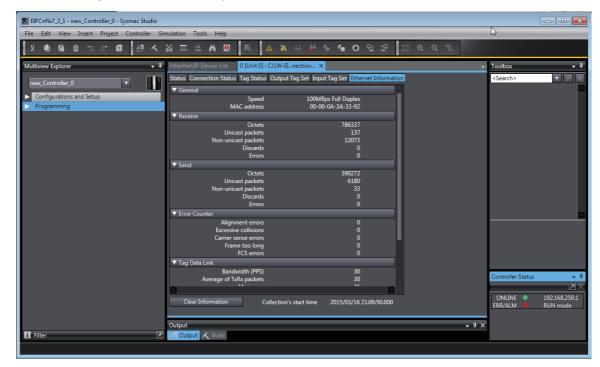


A-2-4 Making the EtherNet/IP Connection Settings with the Sysmac Studio

This section describes the procedure to make the EtherNet/IP connection settings with the Sysmac Studio.

Here, we take the following system configuration as an example to describe how to set the EtherNet/IP connection settings.

Example: System that connects the EtherNet/IP port on Controller 1 and the built-in EtherNet/IP port on Controller 2 via Ethernet

- Set the settings so that values in the network variable *Net_Out1* allocated for Controller 2 are sent to the network variable *Net_In1* allocated for Controller 1 at the set RPI of 50 ms cycle.
- This example assumes the programs for both Controllers 1 and 2 are registered in the same project.

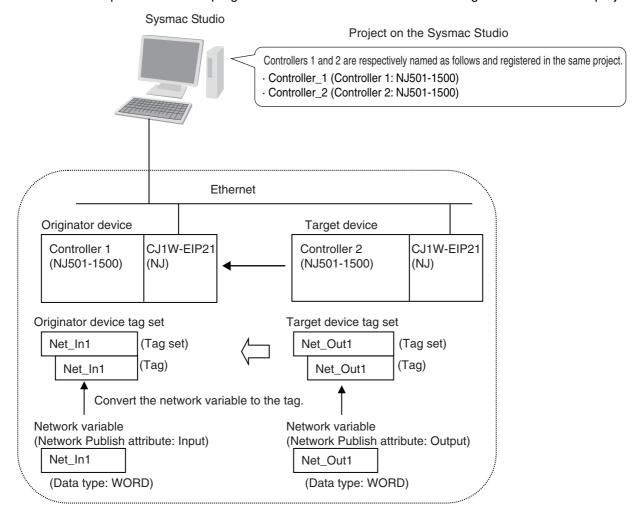


Follow the flow below to set the settings to Controllers 1 and 2 for which to establish EtherNet/IP connections.

The required settings for the originator device and the target device are shown below.

Settings for the originator device (Controller 1)

Settings for the target device (Controller 2)

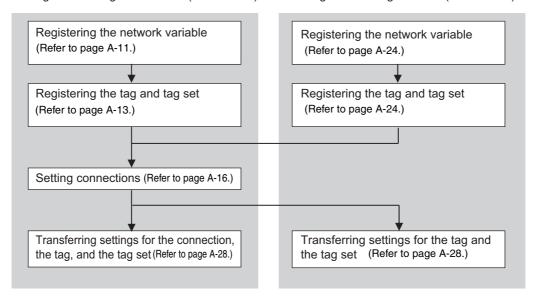

Registering the Network Variable for the Originator Device

Register the network variable that is sent and received using the EtherNet/IP connections.

Refer to the Sysmac Studio Version 1 Operation Manual (Cat. No. W504) for the operations for registering variables.

Assign the network variable to the tag used for the EtherNet/IP connection for Controller 1 (originator device).

This network variable receives data from Controller 2 (target device).

Set the Network Publish attribute to *Input* or *Output* in the Global Variable Table for the variable so that the variable serves as a network variable, i.e., the variable can be used for the Ether-Net/IP connections.

In this example, set the network variable for Controller 1 as shown below.



Variable name: Net_In1

Data type: WORD

Network Publish attribute: Input

Network Variables Used for the EtherNet/IP Connections

· Network variable name

You cannot specify an I/O memory address for a tag name in the EtherNet/IP connection settings. Thus, do not specify an I/O memory address for the network variable name that is to be assigned to a tag.


The following text strings are recognized as the I/O memory address names.

- (1) Variable names that contain only single-byte numerals from 0000 to 6143
- (2) Variable names with the following single-byte letters (uppercase or lowercase) followed by single-byte numerals
 - H (H000 to H511)
 - W (W000 to W511)
 - D (D00000 to D32767)
 - E0_ to E18_ (E0_00000 to E0_32767, to E18_00000 to E18_32767)

To specify an I/O memory address for a tag, do not specify the I/O memory address for the tag directly. Instead, create a variable, set an AT specification of the I/O memory address on the Sysmac Studio, and then specify the variable with the AT specification for the tag.

Size of variables

To use an EtherNet/IP Unit as an EtherNet/IP device, set an even number of bytes for the size of the network variable used for the EtherNet/IP connections regardless of an odd number of bytes for the tag size.



The CPU Unit memory is consumed in units of two bytes. To assign tags of odd numbers of bytes to network variables, specify even byte numbers (i.e., sizes of the tags + 1) to the network variables.

· Data concurrency

To maintain concurrency in the values of network variables that are assigned to tags, you must set refreshing tasks.

Refer to 7-1-7 Concurrency of Tag Data Link Data for details.

Registering the Tag and Tag Set

Register the required tag and tag set for the EtherNet/IP connections.

You can register tags and tag sets in the EtherNet/IP Connection Setting Tab Page.




Precautions for Correct Use

Make the following settings to refresh all of the tag data in the same tag set at the same time.

- Use the Sysmac Studio, in advance, to specify the same refreshing task for all of the variables that are assigned to tags in the tag set.
- Do not place tag variables that have AT specifications in I/O memory and tag variables that do not have AT specifications in the same tag set.
- Select EtherNet/IP Connection Settings from the Tools Menu.

The EtherNet/IP Device List Tab Page is displayed.


In this example, right click CJ1W-EIP21 (the EtherNet/IP originator device controller 1) and select Edit from the menu to open the EtherNet/IP Connection Setting Tab Page.

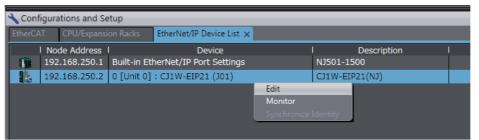

- Click the (Show Tag Set Display) icon in the EtherNet/IP Connection Setting Tab Page.
- Click the **Input** tab to switch to the Input Tab Page. Register the tag set and the tag.

Use one of the following methods to register the tag set and the tag.

- Independent registration : Manually registers network variables in the Controller as tags.
- · Batch registration : Registers all network variables in the Controller as tags at the same time.
- Register tags and tag sets independently.
 - (1) Right-click anywhere in the Input Tab Page of the EtherNet/IP Connection Setting Tab Page and select Create New Tag Set from the menu.
 - (2) Enter tag set name Net In1 directly into the list in the Input Tab Page.
 - (3) Right-click anywhere in the Input Tab Page and select Create New Tag from the menu.
 - (4) Enter tag name Net_In1.

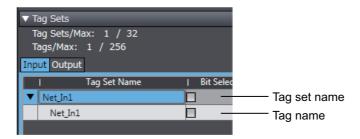



Precautions for Correct Use

Any name can be specified for the tag set if the name matches one of the registered network variable names in the Controller.

As you enter characters (or immediately after you press the Ctrl + Space Keys), the Sysmac Studio Entry Assistance provides a list of variable names registered in the Controller. Select the variable name from the list.



Additional Information

You can register up to 8 tags in a tag set.

Set as shown below to register multiple tags.

Example:

	Tag set name	
•	Network_Input_Value	(Tag set name)
	Net_In1	(Tag name)
	Net_In2	(Tag name)




Register all tags and tag sets at the same time.

(1) Right-click anywhere in the Input Tab Page of the EtherNet/IP Connection Setting Tab Page and select Register All Tag Sets to display the Tag Set Registration Setting Dialog Box.

This dialog box lists the following variables that are registered in the Global Variable Table.

- When registering all tag sets in the Input Tab Page: lists all variables that are published to the network as inputs.
- When registering all tag sets in the Output Tab Page: lists all variables that are published to the network as outputs.

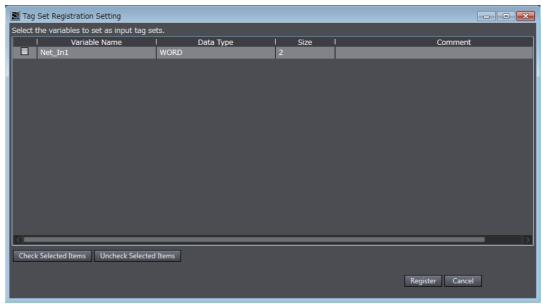


(2) Select the variable to register as a tag, and then click the Register Button.

(3) The automatically registered tag is added to the list in the EtherNet/IP Connection Setting Tab Page.

With automatic registration, the tag is registered under a tag set having the same name as the tag, i.e., a single tag is registered in a single tag set.



7 Set the following settings for the registered tag and tag set.



· Setting for Tag Sets

Name	Item
Tag Set Name	Enter the tag set name.
	You can change the names as required.
Size (Byte)	Gives the total size of the tag in bytes.
Instance ID	Gives the instance ID.
	• Auto
	• IN_{min}IN_{max}
	{min} represents the minimum number of Produced Assembly identification numbers recorded in the EDS files for the relevant devices.
	{max} represents the maximum number of Produced Assembly identification numbers recorded in the EDS files for the relevant devices.
Controller Status	Specify whether to include the Controller status in the tag set.

· Setting for Tags

Name	Item
Tag Name	Enter the tag name.
	Specify the tag name that matches one of the registered network variable names in the Controller.
Bit Selection	Specify whether to set the tag data size in bits.
	Selected: Set the size in bits.
	Not selected: Set the size in bytes.
Size (Byte)	Gives the size of the tag in bytes.
Size (Bit)	Gives the size of the tag in bits.
Output at Fatal Error	Specify whether to clear the output data or continue to send it when a major fault level Controller error occurs in the Controller.
	Retained
	Cleared

Setting Connections for the Originator Device

After the tag set registration, set the connection settings for transferring data using the EtherNet/IP connections.

Make the connection settings in the originator device (i.e., Controller 1 in this example) only.

Register the tag and tag set for Controller 2 (originator device) before setting the connection settings as described in this example.

Refer to *Registering the Tag and Tag Set for the Target Device* on page A-24 for the operations for registering tags and tag sets.




Precautions for Correct Use

Variable Name column.

If you change the IP address, model, or revision of the target device after making the connection settings, you must also change the target device settings that are included in the connection settings. For information on how to change the target device settings in the connection settings, refer to *Changing the Target Device Settings after Making Connection Settings*.

- Select EtherNet/IP Connection Settings from the Tools Menu to display the EtherNet/IP Device List Tab Page.
- 2 In this example, right click *CJ1W-EIP21* (the EtherNet/IP originator device controller 1) and select *Edit* from the menu to open the EtherNet/IP Connection Setting Tab Page.

The EtherNet/IP Connection Setting Tab Page is displayed.

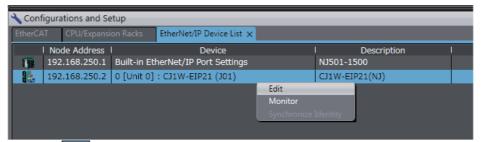


- 3 Click the (Show Connection Display) icon in the EtherNet/IP Connection Setting Tab Page.
- 4 Select CJ1W-EIP21(NJ) from Target Device in the Toolbox on the right of the tab page.

 This operation displays the target device tag set Net_Out1 that is set for Controller 2 in the

Drag the target device tag set Net_Out1 in the Variable Name column of the Toolbox to the connection list.

As you enter characters (or immediately after you press the Ctrl + Space Keys), a list of target device variables that can be set for the connection is provided. Select the value from the list.

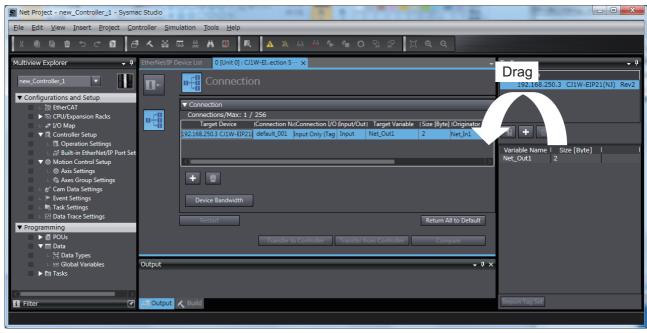

Specify Originator Variable and its Size [Byte] for the tag set Net_Out1 added in step 5. Here, specify Net_In1 for Originator Variable and 2 for its Size [Byte].

Change the other settings as required.

You can set the following items in the connection settings.

Name	Setting Methods
Target Device	Select the target device.
Connection Name	Any name can be given to the connection (32 single-byte characters max.).
Connection I/O Type	Input Only (Tag type) is selected if EtherNet/IP connections are used with a CS1W-EIP21, CJ1W-EIP21, CJ2B-EIP21, CJ2M-EIP21, CJ1W-EIP21(CJ2), CJ1W-EIP21(NJ), NX701- Only (Tag type) is selected if EtherNet/IP connections are used with a CS1W-EIP21, CJ1W-EIP21, CJ2M-EIP21, CJ2M-EIP2
	When you create EtherNet/IP connections for other target devices, select the connection I/O type specified in that device's EDS file.
	Use the Input Only (ID type) setting when another company's node is the originator and does not support connection settings with a Tag type setting.
Input/Output	The connection's input/output is automatically displayed based on the selected connection.
	Input Only: Just Input is displayed.
Target Variable	Select the target node's tag set to assign it.
	• Input is specified for Input/Output: Select the target's output (produce) tag set.
	• Output is specified for Input/Output: Select the target's input (consume) tag set.
Size [Byte]	The data sizes of the target variables are displayed.

Name	Setting Methods
Originator Variable	Select the originator node's tag set to assign it.
	• Input is specified for Input/Output: Select the originator's input (consume) tag set.
	Output is specified for Input/Output: Select the originator's output (produce) tag set.
Size [Byte]	Enter the data sizes of the originator variables.
Connection Type	Select whether the data is sent in multi-cast or unicast (point-to-point) form. The default setting is multi-cast.
	Multi-cast connection: Select when the same data is shared by multi- ple nodes. This setting is usually used.
	Point-to-point connection: Select when the same data is not shared by multiple nodes.
	In a unicast transmission, other nodes are not burdened with an unnecessary load.
	Note Refer to 7-1-4 Overview of Operation for details on using multicast and unicast connections, and counting the number of connections.
RPI [ms]	Set the data update cycle (i.e., the packet interval) of each connection between the originator and target.
	The default setting is 50 ms (i.e., data is updated once every 50 ms).
Timeout Value	Set the time until a connection timeout is detected.
	The timeout value is set as a multiple of the packet interval (RPI) and can be set to 4, 8, 16, 32, 64, 128, 256, or 512 times the packet interval.
	The default setting is RPI x 4.
	The timeout value must be at least 10 ms.



The Toolbox displays the target devices if the devices are registered in the same Sysmac Studio project as where the originator devices are registered.

You can use one of the following methods to add unregistered devices in the same Sysmac Studio project as where the originator devices are registered to the Target Device List.

- Importing devices that are registered in another project
 You can import NJ-series Controllers registered in another project data and add them to the Device List.
- Registering devices using user-specified settings
 You can manually add target devices to the device list.




Additional Information


You can add target devices to the Device List by installing EDS files that include connection information for the devices in the Sysmac Studio and register the devices to the project.

Refer to Adding EDS Files on page A-21 for details.

- 8 Import devices that are registered in another project.
 - (1) Click the [12] (Import a device from another project) Button in the Toolbox on the right of the EtherNet/IP Connection Setting Tab Page.

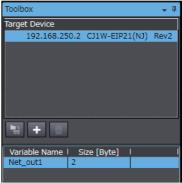


(2) The Import from Another Project Dialog Box is displayed. Click the Project Button, select a project to import and click the Open Button.

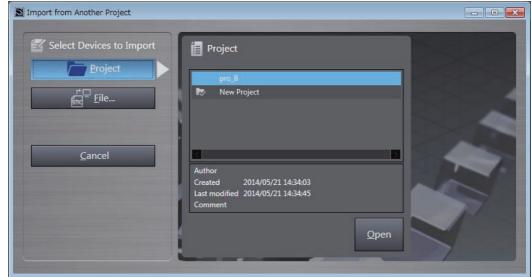

(3) The list of EtherNet/IP devices registered in the selected project will be displayed. Select the target devices to import, and click the Import Button.

Note Only the project for which the EtherNet/IP connection settings are set will be displayed. The imported EtherNet/IP devices are added to the Target Device List in the Toolbox.

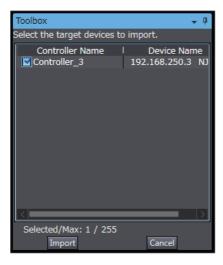

- **9** Register devices as required.
 - (1) Click the + Button under the Target Device List in the Toolbox.

The Add Target Device Pane is displayed.

(2) Enter relevant items for the target devices to add.



Menu	Description
Node address	Enter the target device IP address.
Model name	Select the target device model.
Revision	Select the revision of the target device.

(3) Here, set the following items for Controller 3 and click the Add Button.

The target device is added to the Target Device List in the Toolbox.

Node address: 192.168.250.3 Model name: NJ501-1500

Revision: 2


(4) You can click the Import Tag Set Button to import the tag sets that are set in the Network Configurator to the target devices.

Select *Export to File* from the **To/From File** Button in the Tag Sets Tab Page of the Edit Device Parameters Dialog Box to generate CSV files to import.


Adding EDS Files

Note The Modular EDS device is supported by the Sysmac Studio version 1.11 or higher.

1 Right-click anywhere in the Target Device List in the Toolbox of the EtherNet/IP Connection Setting Tab Page and select *Display EDS Library* from the menu.

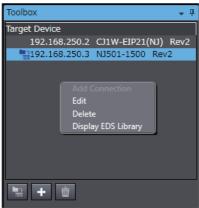

The EDS Library Dialog Box is displayed. Click the Install Button.

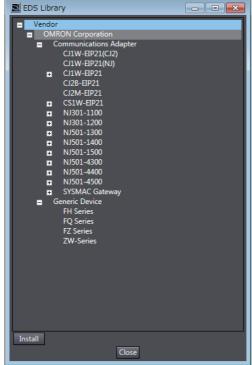

- 3 Select the EDS file to add, and then click the **Open** Button. The EDS file is added.
- The EtherNet/IP device with the EDS file installed is added to the EDS Library.

 Devices listed in the EDS Library are used as a candidate device list when adding devices to the Target Device List in the Toolbox of the EtherNet/IP Connection Setting Tab Page.

• Changing the Target Device Settings after Making Connection Settings

If you change the IP address, model, or revision of the target device after making the connection settings, you must also change the target device settings that are included in the connection settings. You can change the target device settings entirely.




Precautions for Correct Use


When you use the Sysmac Studio version 1.10 or lower, create the connections again if you changed the target device after configuring the connection settings.

Changing the IP Addresses for All Target Devices

1 Right-click one of the connection lines and select *Change Node Address* from the menu.

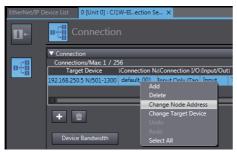


2 The Node Address Change Dialog Box is displayed. Enter a new IP address in New IP address.



- **3** To apply the same change to other connections, select the *Apply the change to other connections* Check Box.
- **4** Click the **OK** Button.

Changing All Target Device Information including Model Names and Revisions

- **1** Right-click one of the connection lines and select *Change Node Address* from the menu.
- **2** The Target Device Change Dialog Box is displayed. Select a target device from *New device*.





Precautions for Correct Use

- Changeable target devices are limited to ones that have "OMRON" in the Vendor ID and is an EDS device of the Communications Adapter in the Device Type.
- To display a device in the list of selectable new target devices, the device must be registered as the target device in the Toolbox.
- To apply the same change to other connections, select the Apply the change to other connections Check Box.
- Click the **OK** Button.


Registering the Network Variable for the Target Device

Assign the network variable to the tag used for the EtherNet/IP connection for Controller 2 (target device).

This network variable stores data to send to Controller 1 (originator device).

Set the Network Publish attribute to *Input* or *Output* in the Global Variable Table for the variable so that the variable serves as a network variable, i.e., the variable can be used for the Ether-Net/IP connections.

In this example, set the network variable for Controller 1 as shown below.

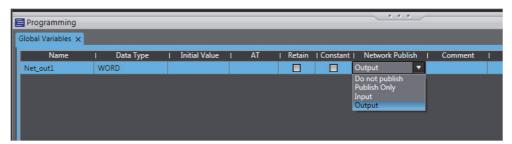

Name: Net_Out1Data type: WORD

· Network Publish attribute: Output

Registering the Tag and Tag Set for the Target Device


Set the tag and tag set for the target device.

1 Select EtherNet/IP Connection Settings from the Tools Menu.

The EtherNet/IP Device List Tab Page is displayed.


2 Right-click CJ1W-EIP21, the EtherNet/IP Unit connected to the Controller 2 (originator device in this example), and select *Edit* from the menu.

The EtherNet/IP Connection Setting Tab Page is displayed.

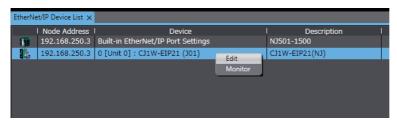

- 3 Click the [1]- (Show Tag Set Display) icon in the EtherNet/IP Connection Setting Tab Page.
- 4 Click the **Output** tab to switch to the Output Tab Page. Register the following tag and tag set.

 The tag and tag set can be registered in the same way as for the target device. (Refer to *Registering the Tag and Tag Set* on page A-13.)



Checking the Device Bandwidth Usage

The PPS for the device can be displayed from the EtherNet/IP Connection Setting Tab Page.

This value is for when multicast filtering is used.




Precautions for Correct Use

In the Device Bandwidth Dialog Box, you can only check the PPS being used for the EtherNet/IP connections from one originator device to its target devices.

The actual PPS used for the EtherNet/IP network must be calculated by taking into account of all PPS used on the EtherNet/IP network (i.e., PPS used for connections for the other devices in the EtherNet/IP network than the one given on the dialog box must be included into the calculation).

Procedure

Click the **Device Bandwidth** Button in the EtherNet/IP Connection Setting Tab Page for the target device.

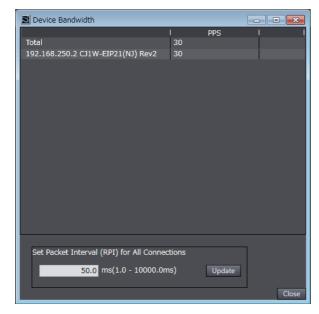

Menu	Description
PPS	Gives the PPS for each target device and total PPS used for all target devices.
Set Packet Interval (RPI) for All Connections	Changes all Packet Interval (RPI) values for all target devices.




Additional Information

You can specify a value in **Set Packet Interval (RPI) for All Connections** and click the **Update** Button to change packet interval (RPI) values set in the connection settings for all target devices to the specified value.


Calculation Example for PPS for Each Device by the EtherNet/IP Connections

Establishing following three EtherNet/IP connections between Controllers (1) to (3) in the EtherNet/IP network


Connection type	Relevant devices in the EtherNet/IP connections	Device PPS
Connection (1)	NJ-series Controller 2 (target device) to NJ-series Controller 1 (originator device)	50 pps
Connection (2)	NJ-series Controller 1 (target device) to NJ-series Controller 2 (originator device)	10 pps
Connection (3)	NJ-series Controller 3 (target device) to NJ-series Controller 1 (originator device)	210 pps



PPS for each EtherNet/IP device is as given below.

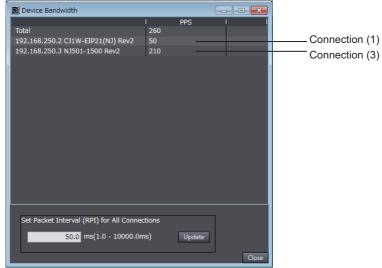

EtherNet/IP connection settings for Controller 1

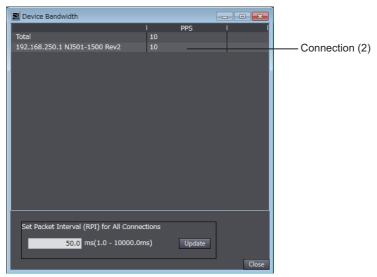

EtherNet/IP connection settings for Controller 2

In this example, the PPS for Connection (1) is 50 pps, the PPS for Connection (2) is 10 pps, and the PPS for Connection (3) is 210 pps. Therefore, PPS for each EtherNet/IP device is as given below.

192.168.250.1: 270 pps = 50 pps (for Connection (1)) + 10 pps (for Connection (2)) + 210 pps (for Connection (3))

192.168.250.2: 60 pps = 50 pps (for Connection (1)) + 10 pps (for Connection (2))

192.168.250.3: 210 pps = 210 pps (for Connection (3))

Adjusting Method

If the calculation result value exceeds the values in the specifications of the devices used in the EtherNet/IP connections, re-evaluate the overall network configuration and correct it by taking steps such as selecting a different Ethernet switch or splitting the network.

If the RPI is made longer, the PPS for the EtherNet/IP connections will decrease.

You can change the RPI value in the connection settings for all target devices by specifying a value in Set Packet Interval (RPI) for All Connections in this dialog box.

Refer to 12-2-2 Tag Data Link Bandwidth Usage and RPI on page 12-9 for the relationship between the PPS for the device and the RPI.

Transferring the Connection Settings Data




Precautions for Correct Use

- If the node addresses (IP addresses) are not set correctly, you may connect to the wrong Controller and set incorrect device parameters. Download data only after you confirm that you are connected to the correct Controller.
- If incorrect connection settings are set, it may cause equipment to operate unpredictably. Even
 when the correct connection settings are set, make sure that there will be no effect on equipment before you transfer the data.
- A connection error will result if the network variables that are used in the tag settings are not set in the Controller. Before downloading the connection settings, check to confirm that the network variables used in the tag settings are set in the Controller.
- If a communications error occurs, the output status depends on the specifications of the
 device being used. When a communications error occurs for a device that is used along with
 output devices, check the operating specifications and implement safety countermeasures.
- The built-in EtherNet/IP port and the port on the EtherNet/IP Unit are automatically restarted
 after the parameters are downloaded. This restart is required to enable the tag set and connection information. Before you download the parameters, check to confirm that problems will
 not occur with the equipment when the port is restarted.
- Do not disconnect the Ethernet cable or reset or turn OFF the power to the EtherNet/IP Unit during the parameter download.
- The EtherNet/IP connections between relevant nodes is stopped during a download. Before
 you download data in RUN mode, make sure that it will not affect the controlled system.
 - Also implement interlocks on data processing in ladder programming that uses EtherNet/IP connections when the connections are stopped or a connection error occurs.
- In the EtherNet/IP network, if the device PPS exceeds the unit's allowable bandwidth (PPS), the EtherNet/IP connection operations may not agree with the settings.
 - If you increase the RPI value in such a case, there are cases when the problem can be resolved (i.e., the operations agree the settings).

Synchronizing/Transferring a Whole Project


You can synchronize and transfer the EtherNet/IP connection settings along with the program data. You can also transfer all the EtherNet/IP connection settings along with the program data.

- · Synchronizing and transferring the data
- Establish an online connection between the computer and the Controller and then select **Synchronization** from the Controller Menu. (Or, click the Button on the Toolbar.)

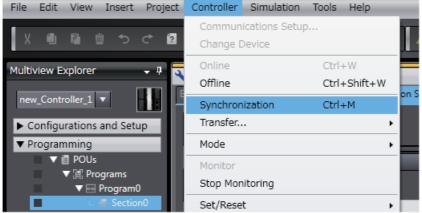

The Synchronization Window is displayed, and comparison of the user program and parameter settings between the Sysmac Studio and the Controller is started.

The following Uploading and Downloading Data Window is displayed after the automatic comparison.

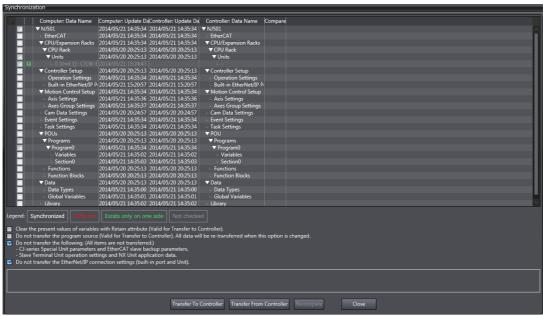

Clear the Do not transfer the EtherNet/IP connection settings (built-in port and Unit) Check Box and click the Transfer to Controller Button.

Then the EtherNet/IP connection settings are transferred along with the not-synchronized data. If no EtherNet/IP connection settings are set in the Sysmac Studio, no data will be sent.

- · Transferring all data
 - 1 Establish an online connection between the computer and the Controller and then select *Transfer To Controller* from the Controller Menu. (Or, click the Button on the Toolbar.)
 - **2** The **Transfer to Controller** Dialog Box is displayed.


Clear the *Do not transfer the EtherNet/IP connection settings (built-in port and Unit)* Check Box and click the **Execute** Button.



Precautions for Correct Use

To transfer only the connection settings, execute Transfer from the EtherNet/IP Connection Setting Tab Page.

The connection settings are not transferred from the Synchronization Window, the Transfer to Controller Dialog Box, and the Transfer from Controller Dialog Box, even if you clear the *Do not transfer the connection setting* Check Box, as long as the data in the computer and in the Controller is the same.

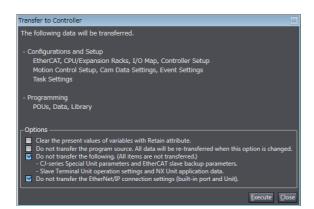


Transferring Only the EtherNet/IP Connection Settings

You can transfer tag sets and connections to the EtherNet/IP devices.

- **1** Establish an online connection with the Controller.
- 2 Click the Transfer to Controller or Transfer from Controller Button in the EtherNet/IP Connection Setting Tab Page.

The tag settings and connection settings set at that time are transferred to the Controller connected online.


If the Controller connected online is in RUN mode, the dialog box to confirm whether to switch to PROGRAM mode before transferring the settings is displayed.

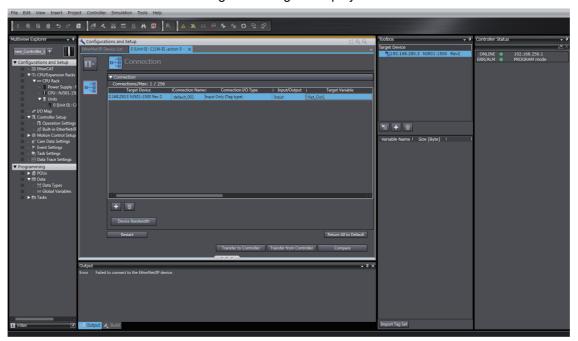

Comparison

The differences in the tag set and connection settings between the project and the EtherNet/IP devices can be displayed.

Click the Compare Button in the EtherNet/IP Connection Setting Tab Page.

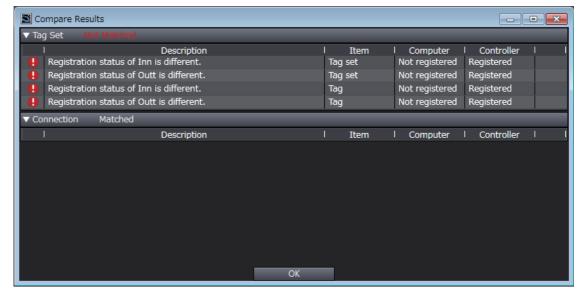

Starting and Stopping EtherNet/IP Connections

Automatically Starting EtherNet/IP Connections

The EtherNet/IP device is automatically restarted and EtherNet/IP connections are automatically started immediately after the connection settings are downloaded from the Sysmac Studio.



Precautions for Correct Use

Connections are adversely cut off if any of the following errors occurs in the CPU Unit that is the originator while EtherNet/IP connections are active.

- Major fault level Controller error
- · Partial fault level Controller error

Starting and Stopping the EtherNet/IP Connections for the Entire Network

You can start and stop EtherNet/IP connections from the user program or from the Sysmac Studio.



Precautions for Correct Use

Use the same method (i.e., either the user program or the tool software) to both start and stop EtherNet/IP connections.

For example, if you use the _EIP_TDLinkStopCmd (Tag Data Link Communications Stop Switch) system-defined variable to stop EtherNet/IP connections, you cannot start them from the Sysmac Studio and the Network Configurator.

A-2-5 Checking Communications Status with the Sysmac Studio and Troubleshooting

You can monitor the communications status of the EtherNet/IP connections after their settings are set. You can also check errors.



Precautions for Correct Use


Make sure that the connection settings in both the Sysmac Studio and the Controller are consistent before using the monitor functions. You can use the *Comparison* on page A-31 to see if they are the same.

Checking Communications Status with the Sysmac Studio

You can check the communications status on the EtherNet/IP connections in the EtherNet/IP Connection Monitor Tab Page.


- 1 Select *EtherNet/IP Connection Settings* from the Tools Menu to display the EtherNet/IP Device List Tab Page.
- 2 Right-click the Controller you want to check the communications status and select *Monitor* from the menu.

The pane to monitor the EtherNet/IP connection is displayed. This pane has six tabs for each communications status.




- $oldsymbol{3}$ Select one of the six tabs for which you want to confirm the communications status.
 - · Status Tab Page

This tab page gives the TRUE/FALSE status of the system-defined variables that monitors the tag data link errors and communication status. If any of the variables are TRUE, the checkbox in front of the variable will be selected. Refer to 13-1-1 The Network Configurator's Device Monitor Function for details on each status item.

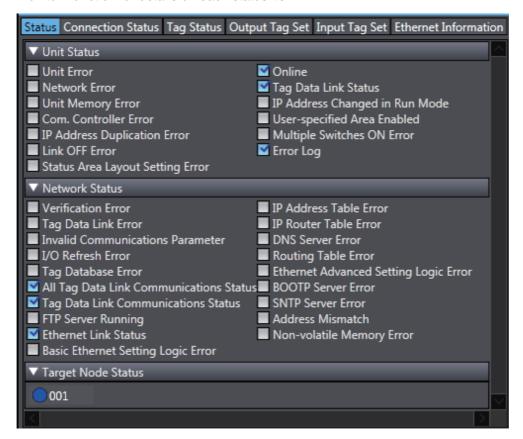


· Connection Status Tab Page Current status of each connection is given.



Name	Description
Connection Name	Gives the current status of each connection with the following text colors.
	Green: Normal
	Red: There is at least one connection that has not been established.
	Gray: There are no connections or the connection operation is stopped.
Туре	Gives the connection type.
Status	Gives the current status on each connection with codes.
	Normal operation: 00:0000
	Abnormal operation: Gives an error code. This information can be used to identify the cause of EtherNet/IP connection errors. Refer to 13-3 Connection Status Codes and Error Processing on page 13-20 for details on the connection status.

• Tag Status Tab Page

This tab page gives if the tag settings for each tag for EtherNet/IP connections are set so that data can be exchanged with target devices.




Name	Description
Tag Name	Gives the tag name.
Input/Output	Gives the type of the tag.
Status	The following status is displayed depending on the status that is set.
	Normally resolved: Normal data exchange is possible.
	 Different sizes: Different sizes are set for the network variables and the tag settings. A connection will not be established for a tag for which this error occurs.
	No tag: A network variable is not set in the variable table in the CPU Unit for the specified tag setting. A connection will not be catablished for a tag for which this arror.
	A connection will not be established for a tag for which this error occurs.Attribute error: Writing is not possible for Read Only and Constant attri-
	butes.

• Output Tag Set and Input Tag Set Tab Pages

You can monitor the status of each input/output tag set that is used for the EtherNet/IP connections.

Note The tag set status monitor is not available for a built-in EtherNet/IP port on NJ-series Controller version 1.08 or earlier.

Click ▼ of each tag to display its detailed information.

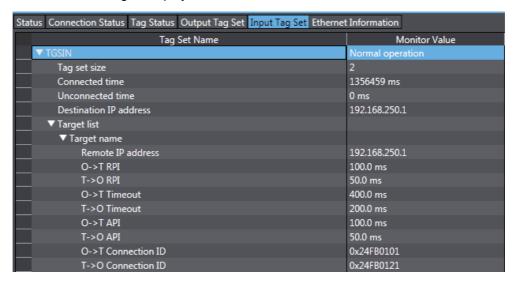

Name	Description
Tag Set Name	Gives the connection status.
	If there is a connection error, "Not connected or error" is given.
Tag set size	Gives the size of the tag set in bytes.
Connected time	Gives the total connection duration in milliseconds.
Unconnected time	Gives the total disconnection duration in milliseconds.
Number of connections (in the Output Tag Set Tab Page)	Gives the number of connections.
Number of connected originators (in the Output Tag Set Tab Page)	Gives the number of the connected originator devices.
Originator list (in the Output Tag Set Tab Page), Target list (in the Input Tag Set Tab Page)	Gives the detailed information of the connected originators.
Originator name (in the Output Tag Set Tab Page), Produced tag name (in the Input Tag Set Tab Page)	Gives no information.
IP address (in the Output Tag Set Tab Page), Remote IP address (in the Input Tag Set Tab Page)	Gives the IP addresses allocated for the originators.
Connected time (in the Output Tag Set Tab Page)	Gives the total duration of connection with the originator in milliseconds.
Unconnected time (in the Output Tag Set Tab Page)	Gives the total duration of disconnection with the originator in milliseconds.


Name	Description	
Destination IP address (in the Output Tag Set Tab Page)	Gives the destination IP addresses. If the multi-cast connections are used, its own multi-cast address is displayed.	
O->T RPI	Gives the RPI of connection from the originator to the target in milliseconds.	
T->O RPI	Gives the RPI of connection from the target to the originator in milliseconds.	
O->T Timeout	Gives the timeout time for the connections from the originator to the target in milliseconds.	
T->O Timeout	Gives the timeout time for the connections from the target to the originator in milliseconds.	
O->T API	Gives the API of connection from the originator to the target in milliseconds.	
T->O API	Gives the API of connection from the target to the originator in milliseconds.	
O->T Connection ID	Gives the connection identification for the connections from the originator to the target in hexadecimal.	
T->O Connection ID	Gives the connection identification for the connections from the target to the originator in hexadecimal.	

• Ethernet Information Tab Page

This tab page displays the communications status at the communications driver level of the EtherNet/IP Unit (built-in port).

The error counter information can be used to confirm whether communications problems have occurred.

Under the Tag Data Link, you can confirm characteristics such as the bandwidth usage (PPS).

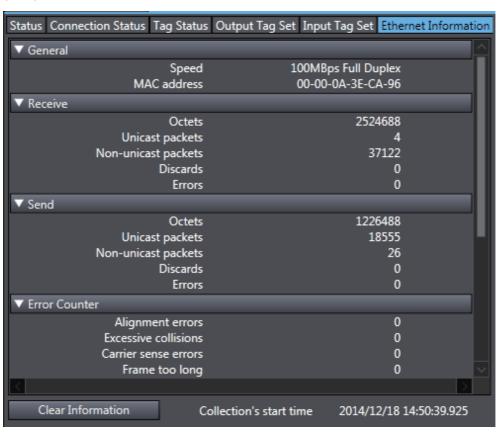

A-2-6 Troubleshooting

In the case that there is a setting error or a communications error in the EtherNet/IP networks, the Sysmac Studio displays the error in the Troubleshooting Dialog Box.

Refer to 13-6 Troubleshooting on page 13-48 for the confirmation methods for errors and information on errors.

Troubleshooting When Transferring and Monitoring the EtherNet/IP Connection Settings Fail with Sysmac Studio Version 1.10 or Higher

The first time you establish an online connection between the Controller and the computer that runs the Sysmac Studio version 1.10 or higher with Windows Firewall on the computer enabled, the dialog box to confirm the connection may be displayed. If that occurs, make the following selection in the dialog box.

- Unblock (on Windows XP/Vista)
- Allow access (on Windows 7)

If you make other selections than above, there are cases when transferring and monitoring the Ether-Net/IP connection settings cannot properly be performed even if the online connection is successfully established.

Disabling a part of Windows Firewall settings can resolve this.


(Refer to *Method 1: Changing the Memory Configuration of the Structure Variable in the NJ-series CPU Unit* on page A-59 for details.)

Problems

• The connection setting data cannot be transferred

Data Transmission Screen	Problem
Synchronization Window	The Sysmac Studio displays the following error message and the data will not be transferred.
	■ Do not transfer the EtherNet/IP connection settings (built-in port and Unit). ☐ Failed to transfer the EtherNet/IP connection settings from the Controller. (Communication error)
Transfer to Controller Dialog Box	The Sysmac Studio displays the following error dialog box and the data will not be transferred.
	Transfer from Controller
	Failed to transfer the EtherNet/IP connection settings from the Controller. (Communication error) Process was aborted. OK
EtherNet/IP Connection Setting Tab Page	The Transfer to Controller and Transfer from Controller Buttons are grayed out and the data cannot be transferred/compared.
	Configurations and Setup EtherNet/IP Device List Built-in EtherNet/IPection Se ×
	Connection
	Connections/Max: 1 / 32 Target Device Connection Name Connection I/O Type 192.168.250.10 NJ301-1200 Rev 2 default_001 Input Only (Tag type)
	▼
	Device Bandwidth
	Restart Return All to Default Transfer to Controller Transfer from Controller Compare

Monitoring the settings cannot be performed
 Monitor data items in the EtherNet/IP Connection Monitor Tab Page remain "---".

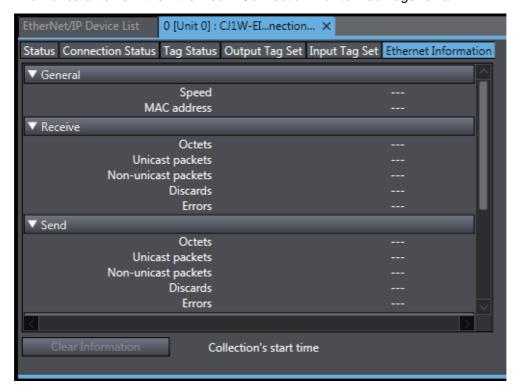

Method 1: Disabling Windows Firewall Settings



Precautions for Correct Use


The main function of the firewall is to prevent unwanted access from external sources (e.g., the Internet).

The changes that are made with the following procedures are to allow the Sysmac Studio and the NJ-series Controller to connect. If your computer is on an inhouse network, make sure that security will not be jeopardized before you change the settings.

- Windows XP
 - Open the Control Panel from the Windows Start Menu and then select Windows Firewall icon.

The Windows Firewall Dialog Box is displayed.

2 Click on the **Exceptions** tab and select **Sysmac Studio** in the **Programs and Services** list.

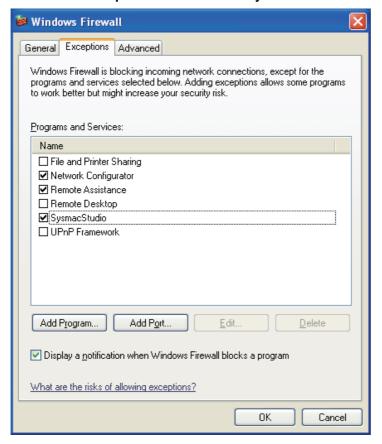


- Windows Vista, Windows 7, or later version
 - Open the Control Panel from the Windows Start Menu and then select Windows Firewall

The Windows Firewall Dialog Box is displayed.

Select Turn Windows Firewall on or off.


The Customize Settings Dialog box is displayed.

3 Clear the Block all incoming connections, including those in the list of allowed programs Check Box and click the OK Button.

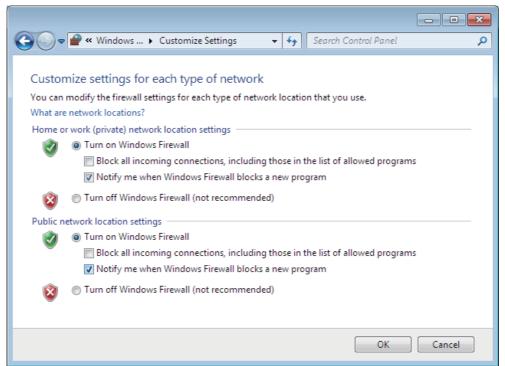

- Select Advanced settings in the Windows Firewall Dialog Box.
 - The Windows Firewall with Advanced Security Dialog Box is displayed.
- **5** Click *Inbound Rules* in the left pane and then double click **SysmacStudio** in the **Inbound Rules** list.

The SysmacStudio Properties Dialog Box is displayed.

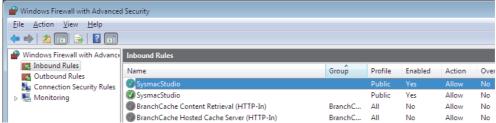

6 In the General Tab Page of the dialog box, set the following settings.

Select Enabled under the General section.

Select Allow the connection under the Action section.

Method 2: Cycle the power supply to the Controller

Cycle the power supply to the NJ-series Controller and transfer/monitor the EtherNet/IP connections settings again.

Note You may need to cycle the power supply when reflecting the changes in the IP address of the built-in EtherNet/IP port or executing Transfer to Controller.

A-3 EDS File Management


This section describes the EDS file management functions used in the Network Configurator.



Precautions for Correct Use

For Windows Vista or Windows 7, we recommend that you start the Network Configurator as the administrator. Otherwise, the following condition will result due to user management for Windows security functions. The results of the following operations are not applied for logins with other user accounts and must be repeated: installing, creating, and deleting EDS files, and creating EDS index files. You can run the Network Configurator as the administrator with the following procedure.

- 1. Select the Network Configurator from the Start Menu, and then right-click.
- 2. Select *Run as administrator* from the pop-up menu that is displayed.

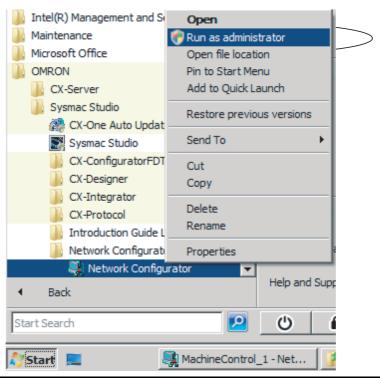

A-3-1 Installing EDS Files

EDS File – Install

The Network Configurator can support new devices if the proper EDS files are installed.

To install the EDS file, use the following procedure.

Select EDS File – Install.
The Install EDS File Dialog Box is displayed.

2 Select the EDS file to install and click the **Open** Button. Next, select the icon file (*.ico). The EDS file is added to the Hardware List as a new device. If the hardware already exists, the new Hardware List will overwrite the previous one. If the hardware versions are different, a hardware device is added to the Hardware List for each version.

A-3-2 Creating EDS Files

EDS File - Create

The EDS files are required by the Network Configurator to create a network configuration. To create an EDS file, use the following procedure.

1 Select EDS File - Create.

2 Set the device information. You can obtain the device information from the device on the network if the network is online.

3 The device is added to the Hardware List as a new device, just like when you install an EDS file.



Additional Information

You cannot set device parameters with the Network Configurator's EDS file creation function. Obtain a proper EDS file from the manufacturer of the device to make device parameter settings for the device.

A-3-3 **Deleting EDS Files**

EDS File – Delete

To delete an EDS file, use the following procedure.

- Select the device from the Hardware List.
- Select EDS File Delete. The following confirmation dialog box is displayed.



Click the Yes Button. The selected device is deleted from the Hardware List together with the EDS file.

A-3-4 Saving EDS Files

EDS File – Save

To save the EDS file, use the following procedure.

- Select the target hardware device in the Hardware List, and then select *EDS File Save*. A Save EDS File Dialog Box is displayed.
- Input the folder and file names and click the Save Button. The EDS file is saved.

A-3-5 **Searching EDS Files**

EDS File – Find

To search the devices (EDS files) displayed in the Hardware List, use the following procedure.

Select EDS file - Find. The following dialog box is displayed.



- Input the character string to search for and click the Find Next Button.
- When a matching device is found, the cursor moves to that position.
- To quit the search operation, click the Cancel Button.



Additional Information

- The device is found only if it is located below the present cursor position in the Hardware List.
- To search all the devices, select Hardware in the Hardware List before you perform the search procedure.

A-3-6 Displaying EDS File Properties

EDS File – Property

To display the properties of the EDS file, use the following procedure.

- **1** Select the desired hardware (device) from the Hardware List.
- 2 Select EDS File Property. The following dialog box is displayed.



The time and date when the EDS file was created is displayed, along with the device information.

A-3-7 Creating EDS Index Files

EDS File – Create EDS Index File

To manually add an EDS file or if a device is not displayed correctly in the hardware list, use the following procedure to recreate the EDS index file. (This applies to Network Configurator version 3.30 or higher.)

- 1 Select EDS File Create EDS Index File.
- Restart the Network Configurator.

Precautions for Using the Network A-4 Configurator on Windows XP, Windows Vista, or Windows 7

Better firewall security for Windows XP (SP2 or higher), Windows Vista, and Windows 7 has increased the restrictions for data communications. Therefore, you must perform the corresponding procedure given below to change the settings of the Windows firewall before you use the following operations to perform communications with the Network Configurator connected to an NJ-series CPU Unit.

- If you select Option Select Interface Ethernet I/F
- If you select Option Select Interface NJ/NX Series Ethernet Direct I/F
- If you select Option Select Interface NJ/NX Series USB Port



Precautions for Correct Use

The main function of the firewall is to prevent unwanted access from external sources (e.g., the Internet). The changes that are made with the following procedures are to allow the Network Configurator and the NJ-series CPU Unit to connect. If your computer is on an inhouse network, make sure that security will not be jeopardized before you change the settings.

A-4-1 **Changing Windows Firewall Settings**

Windows XP


- When you attempt to connect to the NJ-series CPU Unit from the Network Configurator, the Windows Security Warning Dialog Box is displayed.
- Click the **Unblock** Button.

A USB or EtherNet/IP connection will be approved for the Network Configurator, and you will be able to connect the Network Configurator in the future.

Windows Vista or Windows 7

Use the following procedure to change the settings. Always perform steps 1 to 6 if you cannot go online. The User Account Control Dialog Box may be displayed during this procedure. If it appears, click the **Continue** Button and continue with the procedure.


f 1 Select Control Panel from the Windows Start Menu and change the display to Classic View.




2 Open the Administrative Tools and select *Windows Firewall with Advanced Security* from the dialog box that is displayed.



3 Select Inbound Rules under Windows Firewall with Advanced Security on Local Computer on the left side of the Windows Firewall with Advanced Security Dialog Box.

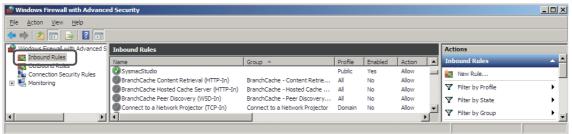

4 Select New Rule under Inbound Rules in the Actions Area on the right side of the dialog box.

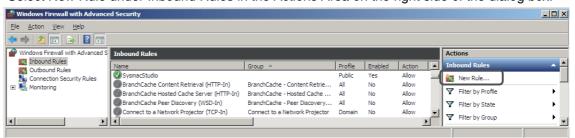


Make the following settings for each step in the New Inbound Rule Wizard Dialog Box, and click the Next Button to move between steps.

Rule Type	Select Custom.
Program	Select All Programs.
Protocol and support	Select ICMPv4 as the protocol type.
	Protocol number: ICMPv4 ▼ Protocol number: 1 △ V
Scope	Select Any IP address for everything.
Action	Select Allow the connection.
Profile	Select Domain, Private, and Public.
Name	Enter any name, e.g., Omron_EIP.

Click the **Finish** Button. The rule that you defined will be registered in the Inbound Rules (e.g., Omron EIP).

Close the Windows Firewall with Advanced Security Dialog Box.

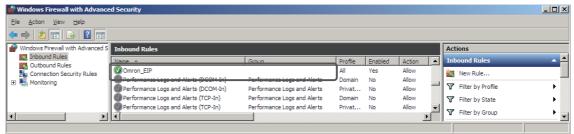

- When you attempt to connect to the NJ-series CPU Unit from the Network Configurator, the Windows Security Warning Dialog Box is displayed.
- 8 Click the **Unblock** Button.



(Windows 7)

A USB or EtherNet/IP connection will be approved for the Network Configurator, and you will be able to connect the Network Configurator in the future.

A-5 Variable Memory Allocation Methods

You must be aware of the way in which memory is allocated to variables to align the memory locations of the members of structure or union variables with variables in other devices. Adjustments are necessary mainly when structure variables are used in the following type of communications with other devices.


- When using EtherNet/IP tag data links or CIP messages to access variables between NJ-series CPU Units and other CPU Units
- When using structure variables to exchange data with devices other than CPU Units, such as ID Tags


A-5-1 Variable Memory Allocation Rules

The amount of memory and the memory locations that are allocated for a variable depend on the data type of the variable. The amount of memory and the memory locations that are allocated for array elements, structure members, and union members depend on the data types, but also on the declarations that are made for the arrays, structures, and unions.

Data Type Alignment and Memory Allocation Amounts

The data size is determined for each data type. The data size is the minimum amount of memory that is required to store the value or values of that data type. On the other hand, memory for variables is automatically structured by the Controller for the most efficient access. Therefore, the total amount of memory that is required for variables is not necessarily the total of the data sizes of the variables. For example, if WORD and DWORD variables are declared, the total of the data sizes is six bytes, but eight bytes are allocated in memory, as shown in the following figure.

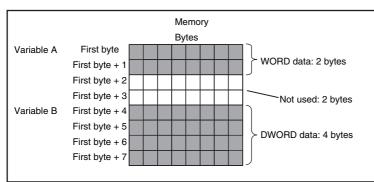



This information for determining the location of a variable in memory is called the alignment. The alignment is determined for each data type. The amount of memory and the memory locations for the variables are given below.

Item	Specification
Amount of memory that is allocated	An integral multiple of the alignment. However, the minimum amount of memory is the data size.
Locations in memory	At an integral multiple of the alignment starting from the start of the variable in memory.

The alignments and the amounts of memory that are allocated for the basic data types and enumerations are given below.

Data type	Alignment [bytes]	Amount of memory that is allocated [bytes]
BOOL	2	2
BYTE, USINT, or SINT	1	1
WORD, UINT, or INT	2	2
DWORD, UDINT, or DINT	4	4
LWORD, ULINT, or LINT	8	8
REAL	4	4
LREAL	8	8
TIME, DATE, TIME_OF_DAY, or DATE_AND_TIME	8	8
STRING[N+1] ^{*1}	1	N+1
Enumerations	4	4

N is the maximum number of characters handled. For example, if a maximum of 10 single-byte characters are handled, the NULL character is added, so memory for 11 characters must be reserved.

The elements of arrays and the members of structures and unions are located in memory for the most efficient access. The alignments and the amounts of memory that are allocated for arrays, structures, and unions are determined by the variable declarations, as described below.

Data type	Alignment	Amount of memory that is allocated	
Array	Same as alignment of the data type of the elements	(Amount of memory that is allocated for the data type of the elements) × Number of elements*	
Structure	The largest alignment of all of the members	The integral multiple of the alignment that is larger than the total amount of memory that is allocated when the members are arranged in order at integral multiples of the alignment of the data types of the members	
Union	The largest alignment of all of the members	The largest amount of memory that is allocated for any of the members	


BOOL arrays are an exception. Refer to Precautions for Correct Use, below, for the amount of memory that is allocated for BOOL arrays.



Precautions for Correct Use

Amount of Memory That Is Allocated for BOOL Arrays

Two bytes are allocated in memory for individual BOOL variables, BOOL structure members, and BOOL union variables. However, for a BOOL array, two bytes of memory are not allocated for each element. One bit is allocated in order for each element. For the entire array, a multiple of two bytes of memory is allocated (including unused bits).

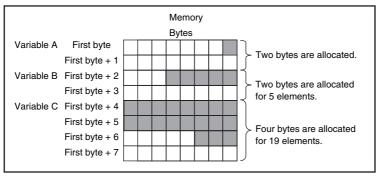

Variable Table			
:	Name	Data type	
	Α	BOOL	
	В	ARRAY[15]OF BOOL	
	С	ARRAY[018]OF BOOL	
			·

Therefore, the following formula gives the amount of memory that is allocated for a BOOL array. For 1 to 16 elements, 2 bytes are allocated. For 17 to 32 elements, 4 bytes are allocated.

Amount of memory =
$$2\left[\begin{array}{c} \text{Number of elements} - 1 \\ \hline 16 \end{array}\right] + 2$$

Truncate the decimal portion of the result of the calculation in brackets.


Specific examples of the rules for memory allocation for variables of each data type are given below.

Basic Data Types

Variables with One-Byte Alignments (e.g., BYTE)

One byte of memory is allocated for the one-byte alignment.


Example: Two consecutive BYTE variables




Variables with Two-byte Alignments (e.g., BOOL and WORD)

Two bytes of memory are allocated for the two-byte alignment.

Example: Two consecutive BOOL variables






Variables with Four-byte Alignments (e.g., DWORD)

Four bytes of memory are allocated for the four-byte alignment.

The location of the first byte of data in memory is an integer multiple of four bytes. Therefore, if a variable with a two-byte alignment, such as WORD data, is inserted, two bytes of unused memory will remain.

Example: Consecutive variables in the following order: DWORD, WORD, and DWORD

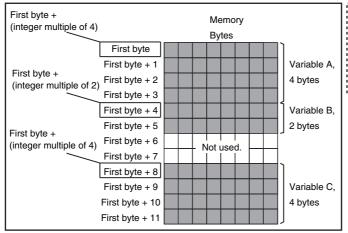


٧a	Variable Table				
	Name	Data type			
	Α	DWORD			
	В	WORD			
	С	DWORD			


Variables with Eight-byte Alignments (e.g., LWORD)

Eight bytes of memory are allocated for the eight-byte alignment.

The location of the first byte of data in memory is an integer multiple of eight bytes. Therefore, if a variable with a two-byte alignment, such as WORD data, is inserted, six bytes of unused memory will remain. If a variable with a four-byte alignment, such as DWORD data, is inserted, four bytes of unused memory will remain.

Example: Consecutive variables in the following order: LWORD, WORD, and LWORD

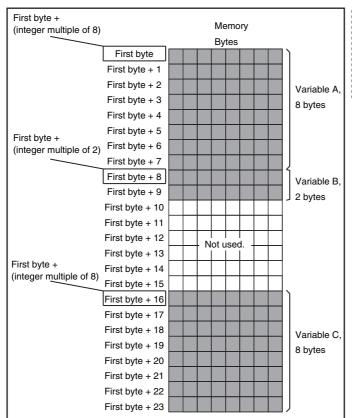




Arrays


A continuous section of memory is allocated for the elements of the array based on the data size of the data type of the array variable. The alignment of an array is the same as alignment of the data type of the elements.

Example: Continuous variables in the following order: two BOOL variable, one BOOL array with five elements, one BOOL array with 19 elements, and one BOOL array with four elements

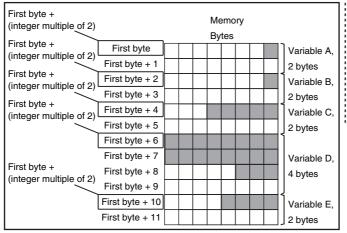

Variable Table				
Name Data type				
Α	BOOL			
В	BOOL			
С	ARRAY[15]OF BOOL			
D ARRAY[018]OF BOOL E ARRAY[58]OF BOOL				
	Name A B	Name Data type A BOOL B BOOL C ARRAY[15]OF BOOL D ARRAY[018]OF BOOL		

Example: INT array with five elements

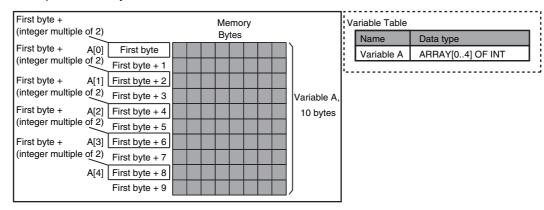


Structures

For a structure variable, the members are located in memory in the order that they are declared. Each member is located at an integer multiple of the alignment of the data type of the member. Therefore, there can be unused memory between members or at the end of members. The alignment of a structure is the largest alignment of all of the members. The amount of memory that is allocated is the integral multiple of the alignment that is larger than the total amount of memory that is allocated when the members are arranged in order at integral multiples of the alignment of the data types of the members.

Example: The alignments and the amounts of memory that are allocated for the four variable declarations given in the following figure are given in the following table.


Variable	Alignment [bytes]	Amount of memory that is allocated [bytes]
Α	4	8
В	4	8
С	4	16
D	4	16

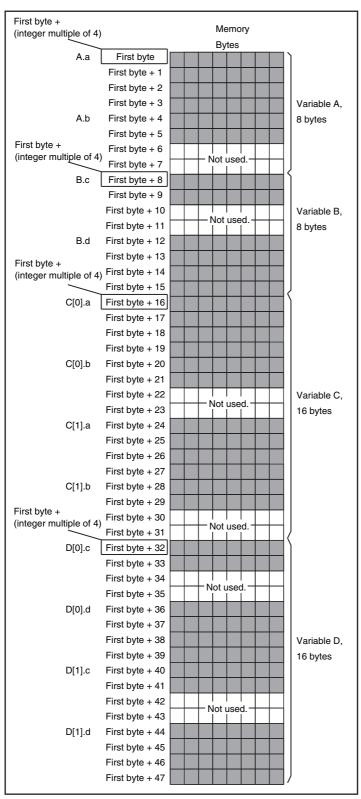

Name		Data type
Structure S	TR_A	STRUCT
а		DINT
b		INT
Name		Data type
Structure S	TR_B	STRUCT
С		INT
d		DINT
ariable Table		
	<u> </u>	type
Name	Data	.,,,,,
Name Variable A		ture STR_A
	Struc	
Variable A	Struc	ture STR_A

Example: The alignments and the amounts of memory that are allocated for the four variable declarations given in the following figure are given in the following table.

Variable	Alignment [bytes]	Amount of memory that is allocated [bytes]
E	2	4
F	2	4
G	2	8
Н	2	8

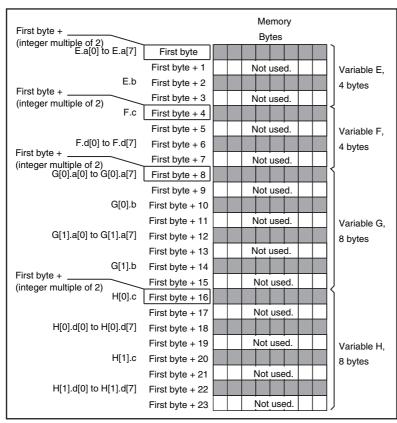


D	ata Type Definitions			
1	Name		Data type	
1	Structure STR_C		STRUCT	
	а		ARRAY[07] OF BOOL	
1	b		BYTE	
	Name		Data type	
	Structure STR_D		STRUCT	
	С		BYTE	
1	d		ARRAY[07] OF BOOL	
V	ariable Table			
	Name	Data	ı type	
1			cture <i>STR_C</i>	
			cture <i>STR_D</i>	
	Variable G	ARF	AY[01] OF STR_C	
H	Variable H	ARF	AY[01] OF STR_D	

Unions

For a union variable, the members overlap in the same memory locations. The alignment of a union is largest alignment of all of the members. The amount of memory that is allocated is the largest amount of memory that is allocated for any of the members.

Example: The alignments and the amounts of memory that are allocated for the four variable declarations given in the following figure are given in the following table.

Variable	Alignment [bytes]	Amount of memory that is allocated [bytes]
Α	4	4
В	4	4
С	4	8
D	4	8

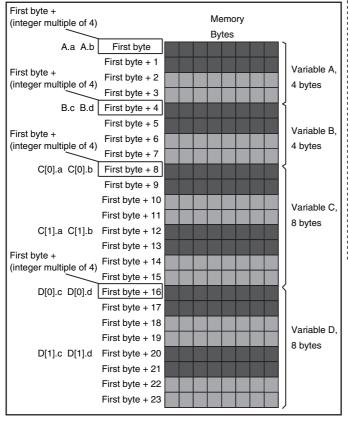

Da	Data Type Definitions				
	Name Union UNI_A		Data type		
			UNION		
	а		DWORD		
	b		WORD		
	Name		Data type		
	Union UNI_	В	UNION		
	С		WORD		
	d		DWORD		
Va	ariable Table				
	Name	Dat	ta type		
	Variable A	Uni	on <i>UNI_A</i>		
			on <i>UNI_B</i>		
			RAY[01] OF UNI_A		
	Variable D	ARRAY[01] OF UNI_B			

A-5-2 Important Case Examples

When you exchange structure variable data between an NJ-series CPU Unit and a remote device, you must align the memory configuration of the structure variable members with those of the remote device. This section describes what to do in either the NJ-series CPU Unit or in the remote device.




Additional Information

This is not necessary when you exchange data between NJ-series CPU Units.

Aligning the Memory Configuration with a Remote Device

There are two methods that you can use to align the memory configuration with a remote device. For example, the differences in the memory configuration for structure variables between an NJ-series CPU Unit and a CJ-series CPU Unit are shown below.

This section describes how to align the memory configuration for these Units.

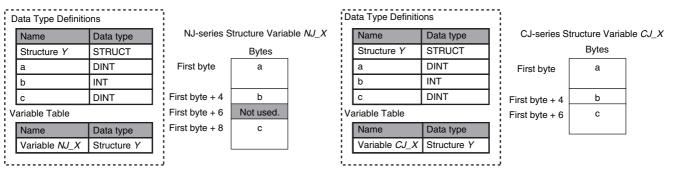

Method 1: Changing the Memory Configuration of the Structure Variable in the NJ-series CPU Unit

With an NJ-series CPU Unit, you can specify member offsets to change the memory configuration of the members of a structure variable. You can change the memory configuration of the members of a structure variable in the NJ-series CPU Unit so that it is the same as the memory configuration in a remote device that the CPU Unit will communicate with. Specify the member offsets for a structure variable when you register the structure data type.

To communicate with a CJ-series CPU Unit, you can set the offset type to CJ to automatically use the CJ-series memory structure. You can set the offset type to *User* to freely set your own offsets.



Version Information


The following table gives the unit version of the CPU Units and the Sysmac Studio version that are required to specify member offsets.

Unit version of CPU Unit	Sysmac Studio version			
Offic version of CPO Offic	1.01 or lower	1.02	1.03 or higher	
1.01 or later	Not possible.	Possible.*	Possible.	
1.00	Not possible.	Not possible.	Not possible.	

^{*} You cannot select the memory offset type. You can set member offsets.

If you change the memory configuration of a structure variable by setting offsets, you must make the same changes for the same structure variable in other NJ-series CPU Units on the network. Refer to the *Sysmac Studio Version 1 Operation Manual* (Cat. No W504-E1-03 or higher) for the procedure to change the memory configuration of a structure variable.


Example: The following example shows how the memory configuration of the structure variable members in the NJ-series CPU Unit is changed to match the memory configuration of the structure variable members in the CJ-series CPU Unit.

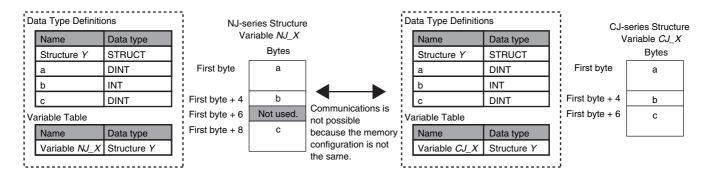



To align the memory configurations in the NJ-series and CJ-series CPU Units, offsets are set in the Sysmac Studio.



Here, the following offsets are set for member c of data type Y of the structure variable NJ_X.

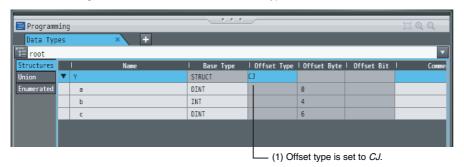

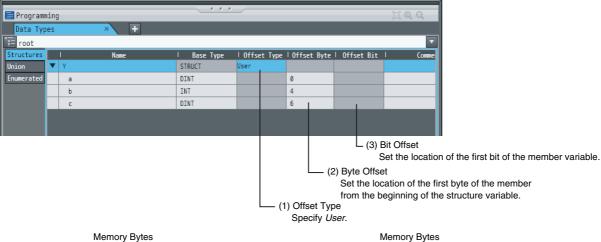


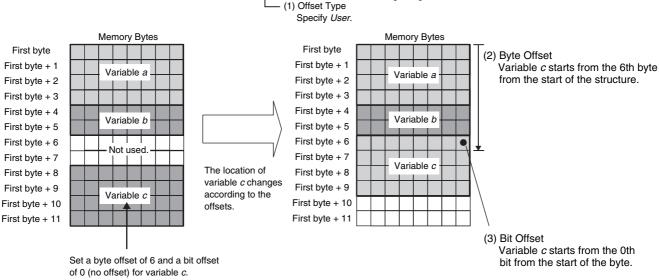

Method 2: Changing the Memory Configuration of the Structure Variable in the Remote Device

You can insert a member into the structure variable of the remote device to change it to match the memory configuration of the structure variable in the NJ-series CPU Unit. Both the memory configuration and the data types must be the same between the two structure variables. You therefore need to create the same members in both the remote device and the NJ-series CPU Unit.

Example: The following example shows how the memory configuration of the structure variable in the CJ-series CPU Unit is changed to match the memory configuration of the structure variable in the NJ-series CPU Unit.

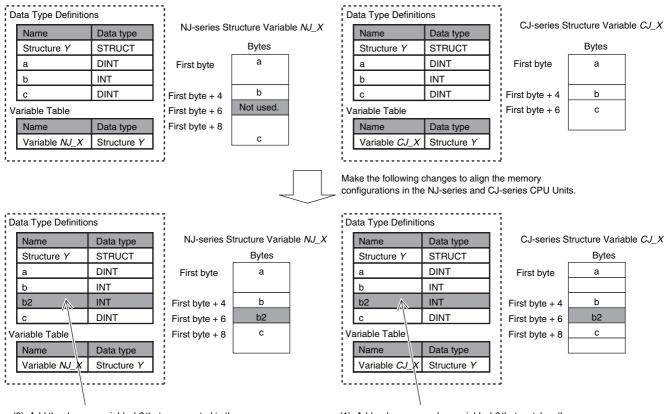

Add a dummy member variable b2 that matches the unused memory location on the NJ-series CPU Unit.

A-6 Precautions When Accessing External Outputs in CPU Units

Observe the following precautions when you access variables or I/O memory addresses that are assigned to external outputs in an NJ-series CPU Unit.

Precaution on Writing from External Devices, Variables* That Are Assigned to External Outputs
Any value that is written to a variable* that is assigned to an external output in an NJ-series CPU Unit
through a tag data link or communications instruction will be overwritten by the execution results of
the user program. The value that is written from the tag data link or communications instruction will
therefore not be output to the external device.

The following types of variable are assigned to the external outputs.

- The devices variables (or global variables) that are assigned to an I/O port of a CJ-series Basic Output Unit
- The devices variables (or global variables) that are assigned to an I/O port of an EtherCAT output slave
- The global variables with AT specifications to output bits that are assigned to CJ-series Basic Output Units
- Precaution When Directly Writing to I/O Memory Addresses Assigned to Output Bits for CJ-series Basic Output Units
 - Any value that is written to an I/O memory address that corresponds to an output bit that is assigned to a CJ-series Basic Output Unit through a tag data link will be overwritten by the execution results of the user program. The value that is written directly to the I/O memory address from the tag data link will therefore not be output to the external device.

A-7 Differences in Available Functions Depending on the CPU Unit (NJ or CJ Series)

Some of the specifications when an EtherNet/IP Unit is connected to a CJ-series CPU Unit are different from the specifications when the EtherNet/IP Unit is connected to an NJ-series CPU Unit. A list of these differences is provided below.

A-7-1 Functional Differences

There are differences in function support, function names, and specifications between when an Ether-Net/IP Unit is connected to a CJ-series CPU Unit and when the EtherNet/IP Unit is connected to an NJ-series CPU Unit.

Unsupported Functions

The following functions cannot be used when the EtherNet/IP Unit is connected to an NJ-series CPU Unit

- EtherNet/IP Datalink Tool in the Network Configurator
- Going online with the CPU Unit from the Sysmac Studio through the EtherNet/IP Unit (You can go online from the Network Configurator.)

Functions with Different Names

The names of the following functions are different between when an EtherNet/IP Unit is connected to a CJ-series CPU Unit and when the EtherNet/IP Unit is connected to an NJ-series CPU Unit. The corresponding names are listed in the following table.

Item	EtherNet/IP Unit connected to a CJ- series CPU Unit	EtherNet/IP Unit connected to an NJ-series CPU Unit
Backup functions	Simple backup function	SD Memory Card backup function*
	Backup with PLC backup tool	Sysmac Studio Controller backups*

^{*} An NJ-series CPU Unit with unit version 1.03 or later and Sysmac Studio version 1.04 or higher are required.



Precautions for Correct Use

Use an EtherNet/IP Unit with a unit version of 2.1 or later for an NJ-series CPU Unit. Also use a NJ-series CPU Unit with unit version 1.01 or later and Sysmac Studio version 1.02 or higher.

A-7-2 Differences in Access Methods from the User Program

When the EtherNet/IP Unit is used with an NJ-series CPU Unit, device variables for CJ-series Units with AT specifications in memory for CJ-series Units are used in the user program to access the functions of the EtherNet/IP Unit. The word addresses, bit numbers, and device variables for the CJ-series Unit in I/O memory in the CJ-series CPU Unit and in the memory for CJ-series Units in the NJ-series CPU Unit are given in the following tables.

First word allocated in the CIO Area: $n = 1,500 + Unit number \times 25$ (The unit number is from 0 to 15.) First word allocated in the DM Area: $m = D30000 + Unit number \times 100$ (The unit number is from 0 to 15.)

CIO Area Words Allocated to CPU Bus Units

CIO n: Software Switches

The device variable that corresponds to all of the bits in CIO n is given in the following table.

_	ocation in CJ- CPU Unit	Device variable for the CJ-series Unit in NJ-series CPU Unit		
Word address Bit numbers		Variable name	Description	
CIO n 00 to 15 *_SoftSwCmd		*_SoftSwCmd	Software Switches (The functions of bits 00 to 15 in CIO n correspond to the functions of the device variable given on the left.)	

The device variables that correspond to bits 00 to 15 in CIO n are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit		
Word address Bit numbers		Variable name	Description	
CIO n	00 and 01		Not used.	
2		*_TDLStartCmd	Tag Data Link Start Bit	
3			Not used.	
	4	*_TDLStopCmd	Tag Data Link Stop Bit	
5		*_AdjTmCmd	Adjust Clock Bit	
06 to 15			Not used.	

● CIO n+2 to n+5: Target Node PLC Operating Flags

The device variable that corresponds to all of the bits in CIO n+2 to n+5 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+2 to n+5	00 to 15 in each word	*_TargetPLCMdSta	Target Node PLC Operating Flags (The functions of bits 00 to 15 in these words and the functions of the device variable given on the left correspond as given below.) • Bits 00 to 15 of CIO n+2 correspond to bits 00 to 15 of the device variable given on the left. • Bits 00 to 15 of CIO n+3 correspond to bits 16 to 31 of the device variable given on the
			 left. Bits 00 to 15 of CIO n+4 correspond to bits 32 to 47 of the device variable given on the left. Bits 00 to 15 of CIO n+5 correspond to bits 48 to 63 of the device variable given on the left.

The device variables that correspond to bits 00 to 15 in CIO n+2 to n+5 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
CIO n+2	0	*_TargetPLCMdSta[0]	Target Node PLC Operating Flag for Node Address 0
	1	*_TargetPLCMdSta[1]	Target Node PLC Operating Flag for Node Address 1
	2	*_TargetPLCMdSta[2]	Target Node PLC Operating Flag for Node Address 2
	3	*_TargetPLCMdSta[3]	Target Node PLC Operating Flag for Node Address 3
	4	*_TargetPLCMdSta[4]	Target Node PLC Operating Flag for Node Address 4
	5	*_TargetPLCMdSta[5]	Target Node PLC Operating Flag for Node Address 5
	6	*_TargetPLCMdSta[6]	Target Node PLC Operating Flag for Node Address 6
	7	*_TargetPLCMdSta[7]	Target Node PLC Operating Flag for Node Address 7
CIO n+2	8	*_TargetPLCMdSta[8]	Target Node PLC Operating Flag for Node Address 8
	9	*_TargetPLCMdSta[9]	Target Node PLC Operating Flag for Node Address 9
	10	*_TargetPLCMdSta[10]	Target Node PLC Operating Flag for Node Address 10
	11	*_TargetPLCMdSta[11]	Target Node PLC Operating Flag for Node Address 11
	12	*_TargetPLCMdSta[12]	Target Node PLC Operating Flag for Node Address 12
	13	*_TargetPLCMdSta[13]	Target Node PLC Operating Flag for Node Address 13
	14	*_TargetPLCMdSta[14]	Target Node PLC Operating Flag for Node Address 14
	15	*_TargetPLCMdSta[15]	Target Node PLC Operating Flag for Node Address 15

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
CIO n+3	0	*_TargetPLCMdSta[16]	Target Node PLC Operating Flag for Node Address 16
	1	*_TargetPLCMdSta[17]	Target Node PLC Operating Flag for Node Address 17
	2	*_TargetPLCMdSta[18]	Target Node PLC Operating Flag for Node Address 18
	3	*_TargetPLCMdSta[19]	Target Node PLC Operating Flag for Node Address 19
	4	*_TargetPLCMdSta[20]	Target Node PLC Operating Flag for Node Address 20
	5	*_TargetPLCMdSta[21]	Target Node PLC Operating Flag for Node Address 21
	6	*_TargetPLCMdSta[22]	Target Node PLC Operating Flag for Node Address 22
	7	*_TargetPLCMdSta[23]	Target Node PLC Operating Flag for Node Address 23
	8	*_TargetPLCMdSta[24]	Target Node PLC Operating Flag for Node Address 24
	9	*_TargetPLCMdSta[25]	Target Node PLC Operating Flag for Node Address 25
	10	*_TargetPLCMdSta[26]	Target Node PLC Operating Flag for Node Address 26
	11	*_TargetPLCMdSta[27]	Target Node PLC Operating Flag for Node Address 27
	12	*_TargetPLCMdSta[28]	Target Node PLC Operating Flag for Node Address 28
	13	*_TargetPLCMdSta[29]	Target Node PLC Operating Flag for Node Address 29
	14	*_TargetPLCMdSta[30]	Target Node PLC Operating Flag for Node Address 30
	15	*_TargetPLCMdSta[31]	Target Node PLC Operating Flag for Node Address 31

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
CIO n+4	0	*_TargetPLCMdSta[32]	Target Node PLC Operating Flag for Node Address 32
	1	*_TargetPLCMdSta[33]	Target Node PLC Operating Flag for Node Address 33
	2	*_TargetPLCMdSta[34]	Target Node PLC Operating Flag for Node Address 34
	3	*_TargetPLCMdSta[35]	Target Node PLC Operating Flag for Node Address 35
	4	*_TargetPLCMdSta[36]	Target Node PLC Operating Flag for Node Address 36
	5	*_TargetPLCMdSta[37]	Target Node PLC Operating Flag for Node Address 37
	6	*_TargetPLCMdSta[38]	Target Node PLC Operating Flag for Node Address 38
	7	*_TargetPLCMdSta[39]	Target Node PLC Operating Flag for Node Address 39
	8	*_TargetPLCMdSta[40]	Target Node PLC Operating Flag for Node Address 40
	9	*_TargetPLCMdSta[41]	Target Node PLC Operating Flag for Node Address 41
	10	*_TargetPLCMdSta[42]	Target Node PLC Operating Flag for Node Address 42
	11	*_TargetPLCMdSta[43]	Target Node PLC Operating Flag for Node Address 43
	12	*_TargetPLCMdSta[44]	Target Node PLC Operating Flag for Node Address 44
	13	*_TargetPLCMdSta[45]	Target Node PLC Operating Flag for Node Address 45
	14	*_TargetPLCMdSta[46]	Target Node PLC Operating Flag for Node Address 46
	15	*_TargetPLCMdSta[47]	Target Node PLC Operating Flag for Node Address 47

	ocation in CJ- CPU Unit	Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
CIO n+5	0	*_TargetPLCMdSta[48]	Target Node PLC Operating Flag for Node Address 48
	1	*_TargetPLCMdSta[49]	Target Node PLC Operating Flag for Node Address 49
	2	*_TargetPLCMdSta[50]	Target Node PLC Operating Flag for Node Address 50
	3	*_TargetPLCMdSta[51]	Target Node PLC Operating Flag for Node Address 51
	4	*_TargetPLCMdSta[52]	Target Node PLC Operating Flag for Node Address 52
	5	*_TargetPLCMdSta[53]	Target Node PLC Operating Flag for Node Address 53
	6	*_TargetPLCMdSta[54]	Target Node PLC Operating Flag for Node Address 54
	7	*_TargetPLCMdSta[55]	Target Node PLC Operating Flag for Node Address 55
	8	*_TargetPLCMdSta[56]	Target Node PLC Operating Flag for Node Address 56
	9	*_TargetPLCMdSta[57]	Target Node PLC Operating Flag for Node Address 57
	10	*_TargetPLCMdSta[58]	Target Node PLC Operating Flag for Node Address 58
	11	*_TargetPLCMdSta[59]	Target Node PLC Operating Flag for Node Address 59
	12	*_TargetPLCMdSta[60]	Target Node PLC Operating Flag for Node Address 60
	13	*_TargetPLCMdSta[61]	Target Node PLC Operating Flag for Node Address 61
	14	*_TargetPLCMdSta[62]	Target Node PLC Operating Flag for Node Address 62
	15	*_TargetPLCMdSta[63]	Target Node PLC Operating Flag for Node Address 63

● CIO n+6 to n+9: Target Node PLC Error Flags

The device variable that corresponds to all of the bits in CIO n+6 to n+9 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+6 to n+9	00 to 15 in each word	*_TargetPLCErrSta	Target Node PLC Error Flags (The functions of bits 00 to 15 in these words and the functions of the device variable given on the left correspond as given below.)
			Bits 00 to 15 of CIO n+6 correspond to bits 00 to 15 of the device variable given on the left.
			Bits 00 to 15 of CIO n+7 correspond to bits 16 to 31 of the device variable given on the left.
			Bits 00 to 15 of CIO n+8 correspond to bits 32 to 47 of the device variable given on the left.
			Bits 00 to 15 of CIO n+9 correspond to bits 48 to 63 of the device variable given on the left.

The device variables that correspond to bits 00 to 15 in CIO n+6 to n+9 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable fo	r the CJ-series Unit in NJ-series CPU Unit
Word address	Bit number	Variable name	Description
CIO n+6	0	*_TargetPLCErrSta[0]	Target Node PLC Error Flag for Node Address 0
	1	*_TargetPLCErrSta[1]	Target Node PLC Error Flag for Node Address 1
	2	*_TargetPLCErrSta[2]	Target Node PLC Error Flag for Node Address 2
	3	*_TargetPLCErrSta[3]	Target Node PLC Error Flag for Node Address 3
	4	*_TargetPLCErrSta[4]	Target Node PLC Error Flag for Node Address 4
	5	*_TargetPLCErrSta[5]	Target Node PLC Error Flag for Node Address 5
	6	*_TargetPLCErrSta[6]	Target Node PLC Error Flag for Node Address 6
	7	*_TargetPLCErrSta[7]	Target Node PLC Error Flag for Node Address 7
	8	*_TargetPLCErrSta[8]	Target Node PLC Error Flag for Node Address 8
	9	*_TargetPLCErrSta[9]	Target Node PLC Error Flag for Node Address 9
	10	*_TargetPLCErrSta[10]	Target Node PLC Error Flag for Node Address 10
	11	*_TargetPLCErrSta[11]	Target Node PLC Error Flag for Node Address 11
	12	*_TargetPLCErrSta[12]	Target Node PLC Error Flag for Node Address 12
	13	*_TargetPLCErrSta[13]	Target Node PLC Error Flag for Node Address 13
	14	*_TargetPLCErrSta[14]	Target Node PLC Error Flag for Node Address 14
	15	*_TargetPLCErrSta[15]	Target Node PLC Error Flag for Node Address 15
CIO n+7	0	*_TargetPLCErrSta[16]	Target Node PLC Error Flag for Node Address 16
	1	*_TargetPLCErrSta[17]	Target Node PLC Error Flag for Node Address 17
	2	*_TargetPLCErrSta[18]	Target Node PLC Error Flag for Node Address 18
	3	*_TargetPLCErrSta[19]	Target Node PLC Error Flag for Node Address 19
	4	*_TargetPLCErrSta[20]	Target Node PLC Error Flag for Node Address 20
	5	*_TargetPLCErrSta[21]	Target Node PLC Error Flag for Node Address 21
	6	*_TargetPLCErrSta[22]	Target Node PLC Error Flag for Node Address 22
	7	*_TargetPLCErrSta[23]	Target Node PLC Error Flag for Node Address 23
	8	*_TargetPLCErrSta[24]	Target Node PLC Error Flag for Node Address 24
	9	*_TargetPLCErrSta[25]	Target Node PLC Error Flag for Node Address 25
	10	*_TargetPLCErrSta[26]	Target Node PLC Error Flag for Node Address 26
	11	*_TargetPLCErrSta[27]	Target Node PLC Error Flag for Node Address 27
	12	*_TargetPLCErrSta[28]	Target Node PLC Error Flag for Node Address 28
	13	*_TargetPLCErrSta[29]	Target Node PLC Error Flag for Node Address 29
	14	*_TargetPLCErrSta[30]	Target Node PLC Error Flag for Node Address 30
	15	*_TargetPLCErrSta[31]	Target Node PLC Error Flag for Node Address 31
CIO n+8	0	*_TargetPLCErrSta[32]	Target Node PLC Error Flag for Node Address 32
	1	*_TargetPLCErrSta[33]	Target Node PLC Error Flag for Node Address 33
	2	*_TargetPLCErrSta[34]	Target Node PLC Error Flag for Node Address 34
	3	*_TargetPLCErrSta[35]	Target Node PLC Error Flag for Node Address 35
	4	*_TargetPLCErrSta[36]	Target Node PLC Error Flag for Node Address 36
	5	*_TargetPLCErrSta[37]	Target Node PLC Error Flag for Node Address 37
	6	*_TargetPLCErrSta[38]	Target Node PLC Error Flag for Node Address 38
	7	*_TargetPLCErrSta[39]	Target Node PLC Error Flag for Node Address 39
	8	*_TargetPLCErrSta[40]	Target Node PLC Error Flag for Node Address 40
	9	*_TargetPLCErrSta[41]	Target Node PLC Error Flag for Node Address 41
	10	*_TargetPLCErrSta[42]	Target Node PLC Error Flag for Node Address 42
	11	*_TargetPLCErrSta[43]	Target Node PLC Error Flag for Node Address 43
	12	*_TargetPLCErrSta[44]	Target Node PLC Error Flag for Node Address 44
	13	*_TargetPLCErrSta[45]	Target Node PLC Error Flag for Node Address 45
	14	*_TargetPLCErrSta[46]	Target Node PLC Error Flag for Node Address 46
	15	*_TargetPLCErrSta[47]	Target Node PLC Error Flag for Node Address 47

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
CIO n+9	0	*_TargetPLCErrSta[48]	Target Node PLC Error Flag for Node Address 48
	1	*_TargetPLCErrSta[49]	Target Node PLC Error Flag for Node Address 49
	2	*_TargetPLCErrSta[50]	Target Node PLC Error Flag for Node Address 50
	3	*_TargetPLCErrSta[51]	Target Node PLC Error Flag for Node Address 51
	4	*_TargetPLCErrSta[52]	Target Node PLC Error Flag for Node Address 52
	5	*_TargetPLCErrSta[53]	Target Node PLC Error Flag for Node Address 53
	6	*_TargetPLCErrSta[54]	Target Node PLC Error Flag for Node Address 54
	7	*_TargetPLCErrSta[55]	Target Node PLC Error Flag for Node Address 55
	8	*_TargetPLCErrSta[56]	Target Node PLC Error Flag for Node Address 56
	9	*_TargetPLCErrSta[57]	Target Node PLC Error Flag for Node Address 57
	10	*_TargetPLCErrSta[58]	Target Node PLC Error Flag for Node Address 58
	11	*_TargetPLCErrSta[59]	Target Node PLC Error Flag for Node Address 59
	12	*_TargetPLCErrSta[60]	Target Node PLC Error Flag for Node Address 60
	13	*_TargetPLCErrSta[61]	Target Node PLC Error Flag for Node Address 61
	14	*_TargetPLCErrSta[62]	Target Node PLC Error Flag for Node Address 62
	15	*_TargetPLCErrSta[63]	Target Node PLC Error Flag for Node Address 63

CIO n+10: Unit Status 1

The device variable that corresponds to all of the bits in CIO n+10 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+10	00 to 15	*_UnitSta1	Unit Status 1 (The functions of bits 00 to 15 in CIO n+10 correspond to the functions of bits 00 to 15 of the device variable given on the left.)

The device variables that correspond to bits 00 to 15 in CIO n+10 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+10	0	*_UnitErr	Unit Error Occurred
	1	*_NetErr	Network Error Occurred
	02 and 03		Not used.
	4	*_UnitMemErr	Unit Memory Error
	5	*_LANHwErr	Communications Controller Error
	6	*_IPAdrDupErr	IP Address Duplication Error
	07 and 08		Not used.
	9	*_LkOffErr	Link OFF Error
	10 to 13		Not used.
	14	*_UserStaAreaCfgErr	Status Area Layout Setting Error
	15		Not used.

• CIO n+11: Unit Status 2

The device variable that corresponds to all of the bits in CIO n+11 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+11	00 to 15	*_UnitSta2	Unit Status 2 (The functions of bits 00 to 15 in CIO n+11 correspond to the functions of bits 00 to 15 of the device variable given on the left.)

The device variables that correspond to bits 00 to 15 in CIO n+11 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+11	0	*_ETNOnlineSta	Online
	1	*_TDLOprSta	Tag Data Link Operating
	2	*_IPAdrChgErr	Operating IP Address Change
	03 to 10		Not used.
	11	*_UserStaAreaEnblSta	User Settings Area Enabled
	12 and 13		Not used.
	14	*_MultiSwOnErr	Multiple Switches ON Error
	15	*_ErrLogStoreSta	Error Log Stored

CIO n+12: Communications Status 1

The device variable that corresponds to all of the bits in CIO n+12 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the	ne CJ-series Unit in NJ-series CPU Unit
Word address	Bit number	Variable name	Description
CIO n+12	00 to 15	Communications Status 1	Communications Status 1 (The functions of bits 00 to 15 in CIO n+12 correspond to the functions of bits 00 to 15 of the device variable given on the left.)

The device variables that correspond to bits 00 to 15 in CIO n+12 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
CIO n+12	0	*_TDLOpnErr	Verification Error
	1		Not used.
	2	*_TDLErr	Tag Data Link Error
	3		Not used.
	4	*_CommParamErr	Invalid Communications Parameter
	5	*_TagRefreshErr	Tag Refresh Error
	6	*_TagDbErr	Tag Database Error
	07 to 13		Not used.
	14	*_TDLAllRunSta	All Tag Data Links Operating
	15	*_TDLRunSta	Tag Data Links Operating

CIO n+13: Communications Status 2

The device variable that corresponds to all of the bits in CIO n+13 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+13	00 to 15	*_CommSta2	Communications Status 2 (The functions of bits 00 to 15 in CIO n+13 correspond to the functions of bits 00 to 15 of the device variable given on the left.)

The device variables that correspond to bits 00 to 15 in CIO n+13 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address Bit numbers		Variable name	Description
CIO n+13	0	*_FTPSta	FTP Status
	01 to 13		Not used.
	14	*_LkSta	Link Status
	15		Not used.

CIO n+14: Communications Status 3

The device variable that corresponds to all of the bits in CIO n+14 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+14	00 to 15	*_CommSta3	Communications Status 3 (The functions of bits 00 to 15 in CIO n+14 correspond to the functions of bits 0 to 15 of the device variable given on the left.)

The device variables that correspond to bits 00 to 15 in CIO n+14 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+14	00 and 01		Not used.
	2	*_ETNBaseSetErr	Basic Ethernet Settings Error
	3	*_IPAdrTblErr	IP Address Table Error
	4	*_IPRouterTblErr	IP Router Table Error
	5	*_DNSSvrErr	DNS Server Error
	6	*_RTblErr	Routing Table Error
	07 and 08		Not used.
	9	*_ETNAdvSetErr	Ethernet Advanced Settings Error
	10	*_BootpSvrErr	BOOTP Server Error
	11	*_SNTPSvrErr	SNTP Server Error
	12 and 13		Not used.
	14	*_AdrMismatchErr	Address Mismatch
	15	*_MemErr	Non-volatile Memory Error

• CIO n+16 to n+19: Registered Target Node Table

The device variable that corresponds to all of the bits in CIO n+16 to n+19 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+16 to n+19	00 to 15 in each word	*_RegTargetSta	Registered Target Node Table (The functions of bits 00 to 15 in these words and the functions of the device variable given on the left correspond as given below.)
			 Bits 00 to 15 of CIO n+16 correspond to bits 00 to 15 of the device variable given on the left. Bits 00 to 15 of CIO n+17 correspond to bits 16 to 31 of the device variable given on the left. Bits 00 to 15 of CIO n+18 correspond to bits 32 to 47 of the device variable given on the left. Bits 00 to 15 of CIO n+19 correspond to bits 48 to 63 of the device variable given on the left.

The device variables that correspond to bits 00 to 15 in CIO n+16 to n+19 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+16	0	*_RegTargetSta[0]	Registered Target Node Table Bit for Node Address 0
	1	*_RegTargetSta[1]	Registered Target Node Table Bit for Node Address 1
	2	*_RegTargetSta[2]	Registered Target Node Table Bit for Node Address 2
	3	*_RegTargetSta[3]	Registered Target Node Table Bit for Node Address 3
	4	*_RegTargetSta[4]	Registered Target Node Table Bit for Node Address 4
	5	*_RegTargetSta[5]	Registered Target Node Table Bit for Node Address 5
	6	*_RegTargetSta[6]	Registered Target Node Table Bit for Node Address 6
	7	*_RegTargetSta[7]	Registered Target Node Table Bit for Node Address 7
	8	*_RegTargetSta[8]	Registered Target Node Table Bit for Node Address 8
	9	*_RegTargetSta[9]	Registered Target Node Table Bit for Node Address 9
	10	*_RegTargetSta[10]	Registered Target Node Table Bit for Node Address 10
	11	*_RegTargetSta[11]	Registered Target Node Table Bit for Node Address 11
	12	*_RegTargetSta[12]	Registered Target Node Table Bit for Node Address 12
	13	*_RegTargetSta[13]	Registered Target Node Table Bit for Node Address 13
	14	*_RegTargetSta[14]	Registered Target Node Table Bit for Node Address 14
	15	*_RegTargetSta[15]	Registered Target Node Table Bit for Node Address 15

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+17	0	*_RegTargetSta[16]	Registered Target Node Table Bit for Node Address 16
	1	*_RegTargetSta[17]	Registered Target Node Table Bit for Node Address 17
	2	*_RegTargetSta[18]	Registered Target Node Table Bit for Node Address 18
	3	*_RegTargetSta[19]	Registered Target Node Table Bit for Node Address 19
	4	*_RegTargetSta[20]	Registered Target Node Table Bit for Node Address 20
	5	*_RegTargetSta[21]	Registered Target Node Table Bit for Node Address 21
	6	*_RegTargetSta[22]	Registered Target Node Table Bit for Node Address 22
	7	*_RegTargetSta[23]	Registered Target Node Table Bit for Node Address 23
	8	*_RegTargetSta[24]	Registered Target Node Table Bit for Node Address 24
	9	*_RegTargetSta[25]	Registered Target Node Table Bit for Node Address 25
	10	*_RegTargetSta[26]	Registered Target Node Table Bit for Node Address 26
	11	*_RegTargetSta[27]	Registered Target Node Table Bit for Node Address 27
	12	*_RegTargetSta[28]	Registered Target Node Table Bit for Node Address 28
	13	*_RegTargetSta[29]	Registered Target Node Table Bit for Node Address 29
	14	*_RegTargetSta[30]	Registered Target Node Table Bit for Node Address 30
	15	*_RegTargetSta[31]	Registered Target Node Table Bit for Node Address 31
CIO n+18	0	*_RegTargetSta[32]	Registered Target Node Table Bit for Node Address 32
	1	*_RegTargetSta[33]	Registered Target Node Table Bit for Node Address 33
	2	*_RegTargetSta[34]	Registered Target Node Table Bit for Node Address 34
	3	*_RegTargetSta[35]	Registered Target Node Table Bit for Node Address 35
	4	*_RegTargetSta[36]	Registered Target Node Table Bit for Node Address 36
	5	*_RegTargetSta[37]	Registered Target Node Table Bit for Node Address 37
	6	*_RegTargetSta[38]	Registered Target Node Table Bit for Node Address 38
	7	*_RegTargetSta[39]	Registered Target Node Table Bit for Node Address 39
	8	*_RegTargetSta[40]	Registered Target Node Table Bit for Node Address 40
	9	*_RegTargetSta[41]	Registered Target Node Table Bit for Node Address 41
	10	*_RegTargetSta[42]	Registered Target Node Table Bit for Node Address 42
	11	*_RegTargetSta[43]	Registered Target Node Table Bit for Node Address 43

_	I/O memory location in CJ- series CPU Unit		for the CJ-series Unit in NJ-series CPU Unit
Word address	Bit numbers	Variable name	Description
CIO n+18	12	*_RegTargetSta[44]	Registered Target Node Table Bit for Node Address 44
	13	*_RegTargetSta[45]	Registered Target Node Table Bit for Node Address 45
	14	*_RegTargetSta[46]	Registered Target Node Table Bit for Node Address 46
	15	*_RegTargetSta[47]	Registered Target Node Table Bit for Node Address 47
CIO n+19	0	*_RegTargetSta[48]	Registered Target Node Table Bit for Node Address 48
	1	*_RegTargetSta[49]	Registered Target Node Table Bit for Node Address 49
	2	*_RegTargetSta[50]	Registered Target Node Table Bit for Node Address 50
	3	*_RegTargetSta[51]	Registered Target Node Table Bit for Node Address 51
	4	*_RegTargetSta[52]	Registered Target Node Table Bit for Node Address 52
	5	*_RegTargetSta[53]	Registered Target Node Table Bit for Node Address 53
	6	*_RegTargetSta[54]	Registered Target Node Table Bit for Node Address 54
	7	*_RegTargetSta[55]	Registered Target Node Table Bit for Node Address 55
	8	*_RegTargetSta[56]	Registered Target Node Table Bit for Node Address 56
	9	*_RegTargetSta[57]	Registered Target Node Table Bit for Node Address 57
	10	*_RegTargetSta[58]	Registered Target Node Table Bit for Node Address 58
	11	*_RegTargetSta[59]	Registered Target Node Table Bit for Node Address 59
	12	*_RegTargetSta[60]	Registered Target Node Table Bit for Node Address 60
	13	*_RegTargetSta[61]	Registered Target Node Table Bit for Node Address 61
	14	*_RegTargetSta[62]	Registered Target Node Table Bit for Node Address 62
	15	*_RegTargetSta[63]	Registered Target Node Table Bit for Node Address 63

● CIO n+20 to n+23: Normal Target Node Table

The device variable that corresponds to all of the bits in CIO n+20 to n+23 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+20 to n+23	00 to 15 in each word	*_EstbRegTargetSta	Normal Target Node Table (The functions of bits 00 to 15 in these words and the functions of the device variable given on the left correspond as given below.) Bits 00 to 15 of CIO n+20 correspond to bits 00 to 15 of the device variable given on the left. Bits 00 to 15 of CIO n+21 correspond to bits 16 to 31 of the device variable given on the left. Bits 00 to 15 of CIO n+22 correspond to bits 32 to 47 of the device variable given on the left. Bits 00 to 15 of CIO n+23 correspond to bits 48 to 63 of the device variable given on the left.

The device variables that correspond to bits 00 to 15 in CIO n+20 to n+23 are given in the following

I/O memory location in CJ- series CPU Unit		Device variable for	r the CJ-series Unit in NJ-series CPU Unit
Word address	Bit numbers	Variable name	Description
CIO n+20	0	*_EstbRegTargetSta[0]	Normal Target Node Table Bit for Node Address 0
	1	*_EstbRegTargetSta[1]	Normal Target Node Table Bit for Node Address 1
	2	*_EstbRegTargetSta[2]	Normal Target Node Table Bit for Node Address 2
	3	*_EstbRegTargetSta[3]	Normal Target Node Table Bit for Node Address 3
	4	*_EstbRegTargetSta[4]	Normal Target Node Table Bit for Node Address 4
	5	*_EstbRegTargetSta[5]	Normal Target Node Table Bit for Node Address 5
	6	*_EstbRegTargetSta[6]	Normal Target Node Table Bit for Node Address 6
	7	*_EstbRegTargetSta[7]	Normal Target Node Table Bit for Node Address 7
	8	*_EstbRegTargetSta[8]	Normal Target Node Table Bit for Node Address 8
	9	*_EstbRegTargetSta[9]	Normal Target Node Table Bit for Node Address 9
	10	*_EstbRegTargetSta[10]	Normal Target Node Table Bit for Node Address 10
	11	*_EstbRegTargetSta[11]	Normal Target Node Table Bit for Node Address 11
	12	*_EstbRegTargetSta[12]	Normal Target Node Table Bit for Node Address 12
	13	*_EstbRegTargetSta[13]	Normal Target Node Table Bit for Node Address 13
	14	*_EstbRegTargetSta[14]	Normal Target Node Table Bit for Node Address 14
	15	*_EstbRegTargetSta[15]	Normal Target Node Table Bit for Node Address 15

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit		
Word address	Bit numbers	Variable name	Description	
CIO n+21	0	*_EstbRegTargetSta[16]	Normal Target Node Table Bit for Node Address 16	
	1	*_EstbRegTargetSta[17]	Normal Target Node Table Bit for Node Address 17	
	2	*_EstbRegTargetSta[18]	Normal Target Node Table Bit for Node Address 18	
	3	*_EstbRegTargetSta[19]	Normal Target Node Table Bit for Node Address 19	
	4	*_EstbRegTargetSta[20]	Normal Target Node Table Bit for Node Address 20	
	5	*_EstbRegTargetSta[21]	Normal Target Node Table Bit for Node Address 21	
	6	*_EstbRegTargetSta[22]	Normal Target Node Table Bit for Node Address 22	
	7	*_EstbRegTargetSta[23]	Normal Target Node Table Bit for Node Address 23	
	8	*_EstbRegTargetSta[24]	Normal Target Node Table Bit for Node Address 24	
	9	*_EstbRegTargetSta[25]	Normal Target Node Table Bit for Node Address 25	
	10	*_EstbRegTargetSta[26]	Normal Target Node Table Bit for Node Address 26	
	11	*_EstbRegTargetSta[27]	Normal Target Node Table Bit for Node Address 27	
	12	*_EstbRegTargetSta[28]	Normal Target Node Table Bit for Node Address 28	
	13	*_EstbRegTargetSta[29]	Normal Target Node Table Bit for Node Address 29	
	14	*_EstbRegTargetSta[30]	Normal Target Node Table Bit for Node Address 30	
	15	*_EstbRegTargetSta[31]	Normal Target Node Table Bit for Node Address 31	
CIO n+22	0	*_EstbRegTargetSta[32]	Normal Target Node Table Bit for Node Address 32	
	1	*_EstbRegTargetSta[33]	Normal Target Node Table Bit for Node Address 33	
	2	*_EstbRegTargetSta[34]	Normal Target Node Table Bit for Node Address 34	
	3	*_EstbRegTargetSta[35]	Normal Target Node Table Bit for Node Address 35	
	4	*_EstbRegTargetSta[36]	Normal Target Node Table Bit for Node Address 36	
	5	*_EstbRegTargetSta[37]	Normal Target Node Table Bit for Node Address 37	
	6	*_EstbRegTargetSta[38]	Normal Target Node Table Bit for Node Address 38	
	7	*_EstbRegTargetSta[39]	Normal Target Node Table Bit for Node Address 39	
	8	*_EstbRegTargetSta[40]	Normal Target Node Table Bit for Node Address 40	
	9	*_EstbRegTargetSta[41]	Normal Target Node Table Bit for Node Address 41	
	10	*_EstbRegTargetSta[42]	Normal Target Node Table Bit for Node Address 42	
	11	*_EstbRegTargetSta[43]	Normal Target Node Table Bit for Node Address 43	

I/O memory lo series C		Device variable fo	r the CJ-series Unit in NJ-series CPU Unit
Word address	Bit numbers	Variable name	Description
CIO n+22	12	*_EstbRegTargetSta[44]	Normal Target Node Table Bit for Node Address 44
	13	*_EstbRegTargetSta[45]	Normal Target Node Table Bit for Node Address 45
	14	*_EstbRegTargetSta[46]	Normal Target Node Table Bit for Node Address 46
	15	*_EstbRegTargetSta[47]	Normal Target Node Table Bit for Node Address 47
CIO n+23	0	*_EstbRegTargetSta[48]	Normal Target Node Table Bit for Node Address 48
	1	*_EstbRegTargetSta[49]	Normal Target Node Table Bit for Node Address 49
	2	*_EstbRegTargetSta[50]	Normal Target Node Table Bit for Node Address 50
	3	*_EstbRegTargetSta[51]	Normal Target Node Table Bit for Node Address 51
	4	*_EstbRegTargetSta[52]	Normal Target Node Table Bit for Node Address 52
	5	*_EstbRegTargetSta[53]	Normal Target Node Table Bit for Node Address 53
	6	*_EstbRegTargetSta[54]	Normal Target Node Table Bit for Node Address 54
	7	*_EstbRegTargetSta[55]	Normal Target Node Table Bit for Node Address 55
	8	*_EstbRegTargetSta[56]	Normal Target Node Table Bit for Node Address 56
	9	*_EstbRegTargetSta[57]	Normal Target Node Table Bit for Node Address 57
	10	*_EstbRegTargetSta[58]	Normal Target Node Table Bit for Node Address 58
	11	*_EstbRegTargetSta[59]	Normal Target Node Table Bit for Node Address 59
	12	*_EstbRegTargetSta[60]	Normal Target Node Table Bit for Node Address 60
	13	*_EstbRegTargetSta[61]	Normal Target Node Table Bit for Node Address 61
	14	*_EstbRegTargetSta[62]	Normal Target Node Table Bit for Node Address 62
	15	*_EstbRegTargetSta[63]	Normal Target Node Table Bit for Node Address 63

• CIO n+24: FINS/TCP Connection Status

The device variable that corresponds to all of the bits in CIO n+24 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
CIO n+24	00 to 15	*_FINSTCPConnSta	FINS/TCP Connection Status (The functions of bits 00 to 15 in CIO n+24 correspond to the functions of bits 0 to 15 of the device variable given on the left.)

The device variables that correspond to bits 00 to 15 in CIO n+24 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
CIO n+24	0	*_FINSTCPConnSta1	FINS/TCP Connection Status for Connection 1
	1	*_FINSTCPConnSta2	FINS/TCP Connection Status for Connection 2
	2	*_FINSTCPConnSta3	FINS/TCP Connection Status for Connection 3
	3	*_FINSTCPConnSta4	FINS/TCP Connection Status for Connection 4
	4	*_FINSTCPConnSta5	FINS/TCP Connection Status for Connection 5
	5	*_FINSTCPConnSta6	FINS/TCP Connection Status for Connection 6
	6	*_FINSTCPConnSta7	FINS/TCP Connection Status for Connection 7
	7	*_FINSTCPConnSta8	FINS/TCP Connection Status for Connection 8
	8	*_FINSTCPConnSta9	FINS/TCP Connection Status for Connection 9
	9	*_FINSTCPConnSta10	FINS/TCP Connection Status for Connection 10
	10	*_FINSTCPConnSta11	FINS/TCP Connection Status for Connection 11
	11	*_FINSTCPConnSta12	FINS/TCP Connection Status for Connection 12
	12	*_FINSTCPConnSta13	FINS/TCP Connection Status for Connection 13
	13	*_FINSTCPConnSta14	FINS/TCP Connection Status for Connection 14
	14	*_FINSTCPConnSta15	FINS/TCP Connection Status for Connection 15
	15	*_FINSTCPConnSta16	FINS/TCP Connection Status for Connection 16

DM Area Words Allocated to CPU Bus Units

● Words m+98 and m+99: IP Address Display/Setting Area

The device variable that corresponds to all of the bits in words m+98 and m+99 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
Words m+98 and m+99	00 to 15	*_IPAdrCfg	IP Address Display/Setting Area

The device variables that correspond to bits 00 to 15 in words m+98 and m+99 are given in the following table.

I/O memory location in CJ-series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit num- bers	Variable name	Description
Word m+98	00 to 03	*_IPAdr2Cfg	IP Address 2 (This is field 2 shown below.)
	04 to 07		
	08 to 11	*_IPAdr1Cfg	IP Address 1 (This is field 1 shown below.)
	12 to 15		
Word m+99	00 to 03	*_IPAdr4Cfg	IP Address 4 (This is field 4 shown below.)
	04 to 07		
	08 to 11	*_IPAdr3Cfg	IP Address 3 (This is field 3 shown below.)
	12 to 15		

IP address fields: 1.2.3.4 (hex)

User Settings Area

x: First I/O memory area address that is specified in the allocated CIO Area words.

● Words x to x+15: Registered Target Node Table

The device variable that corresponds to all of the bits in words x to x+15 is given in the following table.

	I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description	
Words x to x+15	00 to 15 in each word	*_x.RegTargetSta. TargetStaWd	Registered Target Node Table (The functions of bits 00 to 15 in these words and the functions of the device variable given on the left correspond as given below.) Bits 00 to 15 of word x correspond to bits 00 to 15 of the device variable given on the left.	
			 Bits 00 to 15 of word x +1 correspond to bits 16 to 31 of the device variable given on the left. Bits 00 to 15 of word x +2 correspond to bits 32 to 47 of the device variable given on the left. Bits 00 to 15 of word x+3 correspond to bits 48 to 	
			 63 of the device variable given on the left. Bits 00 to 15 of word x+4 correspond to bits 64 to 79 of the device variable given on the left. Bits 00 to 15 of word x+5 correspond to bits 80 to 	
			 95 of the device variable given on the left. Bits 00 to 15 of word x+6 correspond to bits 96 to 111 of the device variable given on the left. 	
			Bits 00 to 15 of word x+7 correspond to bits 112 to 127 of the device variable given on the left.	
			 Bits 00 to 15 of word x+8 correspond to bits 128 to 143 of the device variable given on the left. Bits 00 to 15 of word x+9 correspond to bits 144 	
			 to 159 of the device variable given on the left. Bits 00 to 15 of word x+10 correspond to bits 160 to 175 of the device variable given on the left. 	
			 Bits 00 to 15 of word x+11 correspond to bits 176 to 191 of the device variable given on the left. Bits 00 to 15 of word x+12 correspond to bits 192 	
			to 207 of the device variable given on the left. • Bits 00 to 15 of word x+13 correspond to bits 208	
			 to 223 of the device variable given on the left. Bits 00 to 15 of word x+14 correspond to bits 224 to 239 of the device variable given on the left. 	
			Bits 00 to 15 of word x+15 correspond to bits 240 to 255 of the device variable given on the left.	

The device variables that correspond to bits 00 to 15 in words x to x+15 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for t	he CJ-series Unit in NJ-series CPU Unit
Word address	Bit number	Variable name	Description
Word x	0	*_x.RegTargetSta.Target- Sta[0]	Registered Target Node Table Bit for Node Address 0
		· ·	: :
	15	*_x.RegTargetSta.Target- Sta[15]	Registered Target Node Table Bit for Node Address 15
Word x+1	0	*_x.RegTargetSta.Target- Sta[16]	Registered Target Node Table Bit for Node Address 16
	· ·		<u>:</u>
	15	*_x.RegTargetSta.Target- Sta[31]	Registered Target Node Table Bit for Node Address 31
Word x+2	0	*_x.RegTargetSta.Target- Sta[32]	Registered Target Node Table Bit for Node Address 32
		· ·	: :
	15	*_x.RegTargetSta.Target- Sta[47]	Registered Target Node Table Bit for Node Address 47
Word x+3	0	*_x.RegTargetSta.Target- Sta[48]	Registered Target Node Table Bit for Node Address 48
		· ·	: :
	15	*_x.RegTargetSta.Target- Sta[63]	Registered Target Node Table Bit for Node Address 63
Word x+4	0	*_x.RegTargetSta.Target- Sta[64]	Registered Target Node Table Bit for Node Address 64
		: :	· :
	15	*_x.RegTargetSta.Target- Sta[79]	Registered Target Node Table Bit for Node Address 79
Word x+5	0	*_x.RegTargetSta.Target- Sta[80]	Registered Target Node Table Bit for Node Address 80
		· · ·	: :
	15	*_x.RegTargetSta.Target- Sta[95]	Registered Target Node Table Bit for Node Address 95
Word x+6	0	*_x.RegTargetSta.Target- Sta[96]	Registered Target Node Table Bit for Node Address 96
		· ·	
	15	*_x.RegTargetSta.Target- Sta[111]	Registered Target Node Table Bit for Node Address 111

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
Word x+7	0	*_x.RegTargetSta.Target- Sta[112]	Registered Target Node Table Bit for Node Address 112
	-		
	15	*_x.RegTargetSta.Target- Sta[127]	Registered Target Node Table Bit for Node Address 127
Word x+8	0	*_x.RegTargetSta.Target- Sta[128]	Registered Target Node Table Bit for Node Address 128
		:	: :
	15	*_x.RegTargetSta.Target- Sta[143]	Registered Target Node Table Bit for Node Address 143
Word x+9	0	*_x.RegTargetSta.Target- Sta[144]	Registered Target Node Table Bit for Node Address 144
			:
	15	*_x.RegTargetSta.Target- Sta[159]	Registered Target Node Table Bit for Node Address 159
Word x+10	0	*_x.RegTargetSta.Target- Sta[160]	Registered Target Node Table Bit for Node Address 160
	-		
	•		
	15	*_x.RegTargetSta.Target- Sta[175]	Registered Target Node Table Bit for Node Address 175
Word x+11	0	*_x.RegTargetSta.Target- Sta[176]	Registered Target Node Table Bit for Node Address 176
			·
	•	·	
	15	*_x.RegTargetSta.Target- Sta[191]	Registered Target Node Table Bit for Node Address 191
Word x+12	0	*_x.RegTargetSta.Target- Sta[192]	Registered Target Node Table Bit for Node Address 192
		·	·
	15	*_x.RegTargetSta.Target- Sta[207]	Registered Target Node Table Bit for Node Address 207
Word x+13	0	*_x.RegTargetSta.Target- Sta[208]	Registered Target Node Table Bit for Node Address 208
	•		·
	•	·	·
	15	*_x.RegTargetSta.Target- Sta[223]	Registered Target Node Table Bit for Node Address 223
Word x+14	0	*_x.RegTargetSta.Target- Sta[224]	Registered Target Node Table Bit for Node Address 224
			·
	15	*_x.RegTargetSta.Target- Sta[239]	Registered Target Node Table Bit for Node Address 239

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
Word x+15	0	*_x.RegTargetSta.Target- Sta[240]	Registered Target Node Table Bit for Node Address 240
			·
	•		•
	15	*_x.RegTargetSta.Target- Sta[255]	Registered Target Node Table Bit for Node Address 255

● Words x+16 to x+31: Normal Target Node Table

The device variable that corresponds to all of the bits in words x+16 to x+31 is given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit numbers	Variable name	Description
			 111 of the device variable given on the left. Bits 00 to 15 of word x+23 correspond to bits 112 to 127 of the device variable given on the left. Bits 00 to 15 of word x+24 correspond to bits 128 to 143 of the device variable given on the left. Bits 00 to 15 of word x+25 correspond to bits 144 to 159 of the device variable given on the left. Bits 00 to 15 of word x+26 correspond to bits 160 to 175 of the device variable given on the left. Bits 00 to 15 of word x+27 correspond to bits 176 to 191 of the device variable given on the left. Bits 00 to 15 of word x+28 correspond to bits 192 to 207 of the device variable given on the left. Bits 00 to 15 of word x+29 correspond to bits 208 to 223 of the device variable given on the left. Bits 00 to 15 of word x+30 correspond to bits 224 to 239 of the device variable given on the left. Bits 00 to 15 of word x+31 correspond to bits 240 to 255 of the device variable given on the left.

The device variables that correspond to bits 00 to 15 in words x+16 to x+31 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable	e for the CJ-series Unit in NJ-series CPU Unit
Word address	Bit number	Variable name	Description
Word x+16	0	*_x.EstbTarget- Sta.TargetSta[0]	Normal Target Node Table Bit for Node Address 0
			· .
	15	*_x.EstbTarget- Sta.TargetSta[15]	Normal Target Node Table Bit for Node Address 15
Word x+17	0	*_x.EstbTarget- Sta.TargetSta[16]	Normal Target Node Table Bit for Node Address 16
	· ·		· :
	15	*_x.EstbTarget- Sta.TargetSta[31]	Normal Target Node Table Bit for Node Address 31
Word x+18	0	*_x.EstbTarget- Sta.TargetSta[32]	Normal Target Node Table Bit for Node Address 32
	•		
	15	*_x.EstbTarget- Sta.TargetSta[47]	Normal Target Node Table Bit for Node Address 47
Word x+19	0	*_x.EstbTarget- Sta.TargetSta[48]	Normal Target Node Table Bit for Node Address 48
	· ·		: :
	15	*_x.EstbTarget- Sta.TargetSta[63]	Normal Target Node Table Bit for Node Address 63
Word x+20	0	*_x.EstbTarget- Sta.TargetSta[64]	Normal Target Node Table Bit for Node Address 64
			· :
	15	*_x.EstbTarget- Sta.TargetSta[79]	Normal Target Node Table Bit for Node Address 79
Word x+21	0	*_x.EstbTarget- Sta.TargetSta[80]	Normal Target Node Table Bit for Node Address 80
			·
	15	*_x.EstbTarget- Sta.TargetSta[95]	Normal Target Node Table Bit for Node Address 95
Word x+22	0	*_x.EstbTarget- Sta.TargetSta[96]	Normal Target Node Table Bit for Node Address 96
			: :
	15	*_x.EstbTarget- Sta.TargetSta[111]	Normal Target Node Table Bit for Node Address 111

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit		
Word address	Bit number	Variable name	Description	
Word x+23	0	*_x.EstbTarget- Sta.TargetSta[112]	Normal Target Node Table Bit for Node Address 112	
			·	
			i :	
	15	*_x.EstbTarget- Sta.TargetSta[127]	Normal Target Node Table Bit for Node Address 127	
Word x+24	0	*_x.EstbTarget- Sta.TargetSta[128]	Normal Target Node Table Bit for Node Address 128	
			· ·	
	15	*_x.EstbTarget- Sta.TargetSta[143]	Normal Target Node Table Bit for Node Address 143	
Word x+25	0	*_x.EstbTarget- Sta.TargetSta[144]	Normal Target Node Table Bit for Node Address	
			:	
	15	*_x.EstbTarget- Sta.TargetSta[159]	Normal Target Node Table Bit for Node Address 159	
Word x+26	0	*_x.EstbTarget- Sta.TargetSta[160]	Normal Target Node Table Bit for Node Address 160	
			:	
	15	*_x.EstbTarget-	Normal Target Node Table Bit for Node Address	
	15	Sta.TargetSta[175]	175	
Word x+27	0	*_x.EstbTarget- Sta.TargetSta[176]	Normal Target Node Table Bit for Node Address 176	
			:	
	15	*_x.EstbTarget- Sta.TargetSta[191]	Normal Target Node Table Bit for Node Address 191	
Word x+28	0	*_x.EstbTarget- Sta.TargetSta[192]	Normal Target Node Table Bit for Node Address 192	
			·	
			·	
	15	*_x.EstbTarget- Sta.TargetSta[207]	Normal Target Node Table Bit for Node Address 207	
Word x+29	0	*_x.EstbTarget- Sta.TargetSta[208]	Normal Target Node Table Bit for Node Address 208	
	15	*_x.EstbTarget- Sta.TargetSta[223]	Normal Target Node Table Bit for Node Address 223	
Word x+30	0	*_x.EstbTarget- Sta.TargetSta[224]	Normal Target Node Table Bit for Node Address 224	
		•		
	15	*_x.EstbTarget- Sta.TargetSta[239]	Normal Target Node Table Bit for Node Address 239	

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit		
Word address	Bit number	Variable name	Description	
Word x+31	0	*_x.EstbTarget- Sta.TargetSta[240]	Normal Target Node Table Bit for Node Address 240	
	•		•	
	15	*_x.EstbTarget- Sta.TargetSta[255]	Normal Target Node Table Bit for Node Address 255	

● Words x+32 to x+47: Target Nod4e PLC Operating Flags

The device variable that corresponds to all of the bits in words x+32 to x+47 is given in the following table.

Words x+32 to x+47 Words x+32 to each w	5 in *_x.	Variable name TargetPLCMdSta. petStaWd	Description Target Node PLC Operating Flags (The functions of bits 00 to 15 in these words and the functions of the device variable given on the left correspond as given below.) Bits 00 to 15 of word x+32 correspond to bits 00
	_		(The functions of bits 00 to 15 in these words and the functions of the device variable given on the left correspond as given below.) • Bits 00 to 15 of word x+32 correspond to bits 00
			 to 15 of the device variable given on the left. Bits 00 to 15 of word x+33 correspond to bits 16
			 to 31 of the device variable given on the left. Bits 00 to 15 of word x+34 correspond to bits 32 to 47 of the device variable given on the left. Bits 00 to 15 of word x+35 correspond to bits 48 to 63 of the device variable given on the left. Bits 00 to 15 of word x+36 correspond to bits 64 to 79 of the device variable given on the left. Bits 00 to 15 of word x+37 correspond to bits 80 to 95 of the device variable given on the left. Bits 00 to 15 of word x+38 correspond to bits 96 to 111 of the device variable given on the left.
			 Bits 00 to 15 of word x+39 correspond to bits 112 to 127 of the device variable given on the left. Bits 00 to 15 of word x+40 correspond to bits 128 to 143 of the device variable given on the left. Bits 00 to 15 of word x+41 correspond to bits 144 to 159 of the device variable given on the left. Bits 00 to 15 of word x+42 correspond to bits 160 to 175 of the device variable given on the left. Bits 00 to 15 of word x+43 correspond to bits 176 to 191 of the device variable given on the left. Bits 00 to 15 of word x+44 correspond to bits 192 to 207 of the device variable given on the left. Bits 00 to 15 of word x+45 correspond to bits 208 to 223 of the device variable given on the left. Bits 00 to 15 of word x+46 correspond to bits 224 to 239 of the device variable given on the left. Bits 00 to 15 of word x+47 correspond to bits 224 to 239 of the device variable given on the left. Bits 00 to 15 of word x+47 correspond to bits 224 to 255 of the device variable given on the

The device variables that correspond to bits 00 to 15 in words x+32 to x+47 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit		
Word address	Bit number	Variable name	Description	
Word x+32	0	*_x.TargetPLCMdSta. TargetSta[0]	Target Node PLC Operating Flag for Node Address 0	
	15	*_x.TargetPLCMdSta. TargetSta[15]	Target Node PLC Operating Flag for Node Address 15	
Word x+33	0	*_x.TargetPLCMdSta. TargetSta[16]	Target Node PLC Operating Flag for Node Address 16	
			: :	
	15	*_x.TargetPLCMdSta. TargetSta[31]	Target Node PLC Operating Flag for Node Address 31	
Word x+34	0	*_x.TargetPLCMdSta. TargetSta[32]	Target Node PLC Operating Flag for Node Address 32	
			·	
	15	*_x.TargetPLCMdSta. TargetSta[47]	Target Node PLC Operating Flag for Node Address 47	
Word x+35	0	*_x.TargetPLCMdSta. TargetSta[48]	Target Node PLC Operating Flag for Node Address 48	
		· ·	:	
	15	*_x.TargetPLCMdSta. TargetSta[63]	Target Node PLC Operating Flag for Node Address 63	
Word x+36	0	*_x.TargetPLCMdSta. TargetSta[64]	Target Node PLC Operating Flag for Node Address 64	
	•		: :	
-	15	*_x.TargetPLCMdSta. TargetSta[79]	Target Node PLC Operating Flag for Node Address 79	
Word x+37	0	*_x.TargetPLCMdSta. TargetSta[80]	Target Node PLC Operating Flag for Node Address 80	
			·	
	15	*_x.TargetPLCMdSta. TargetSta[95]	Target Node PLC Operating Flag for Node Address 95	
Word x+38	0	*_x.TargetPLCMdSta. TargetSta[96]	Target Node PLC Operating Flag for Node Address 96	
			: :	
	15	*_x.TargetPLCMdSta. TargetSta[111]	Target Node PLC Operating Flag for Node Address 111	

I/O memory Io	ocation in CJ- PU Unit	Device variable	for the CJ-series Unit in NJ-series CPU U
Word address	Bit number	Variable name	Description
Word x+39	0	*_x.TargetPLCMdSta. TargetSta[112]	Target Node PLC Operating Flag for Node Address 112
	15	*_x.TargetPLCMdSta. TargetSta[127]	Target Node PLC Operating Flag for Node Address 127
Word x+40	0	*_x.TargetPLCMdSta. TargetSta[128]	Target Node PLC Operating Flag for Node Address 128
	15	*_x.TargetPLCMdSta. TargetSta[143]	Target Node PLC Operating Flag for Node Address 143
Word x+41	0	*_x.TargetPLCMdSta. TargetSta[144]	Target Node PLC Operating Flag for Node Address 144
	15	*_x.TargetPLCMdSta. TargetSta[159]	Target Node PLC Operating Flag for Node Address 159
Word x+42	0	*_x.TargetPLCMdSta. TargetSta[160]	Target Node PLC Operating Flag for Node Address 160
			· ·
	15	*_x.TargetPLCMdSta. TargetSta[175]	Target Node PLC Operating Flag for Node Address 175
Word x+43	0	*_x.TargetPLCMdSta. TargetSta[176]	Target Node PLC Operating Flag for Node Address 176
			:
	15	*_x.TargetPLCMdSta. TargetSta[191]	Target Node PLC Operating Flag for Node Address 191
Word x+44	0	*_x.TargetPLCMdSta. TargetSta[192]	Target Node PLC Operating Flag for Node Address 192
			:
	15	*_x.TargetPLCMdSta. TargetSta[207]	Target Node PLC Operating Flag for Node Address 207
Word x+45	0	*_x.TargetPLCMdSta. TargetSta[208]	Target Node PLC Operating Flag for Node Address 208
			:
	15	*_x.TargetPLCMdSta. TargetSta[223]	Target Node PLC Operating Flag for Node Address 223
Word x+46	0	*_x.TargetPLCMdSta. TargetSta[224]	Target Node PLC Operating Flag for Node Address 224
	15	*_x.TargetPLCMdSta. TargetSta[239]	Target Node PLC Operating Flag for Node Address 239

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
Word x+47	0	*_x.TargetPLCMdSta. TargetSta[240]	Target Node PLC Operating Flag for Node Address 240
			•
			•
	15	*_x.TargetPLCMdSta. TargetSta[255]	Target Node PLC Operating Flag for Node Address 255

● Words x+48 to x+63: Target Node PLC Error Flags

The device variable that corresponds to all of the bits in words x+48 to x+63 is given in the following table.

-	ocation in CJ- CPU Unit	Device variable for	or the CJ-series Unit in NJ-series CPU Unit
Word address	Bit numbers	Variable name	Description
series C	PU Unit		Target Node PLC Error Flags (The functions of bits 00 to 15 in these words and the functions of the device variable given on the left correspond as given below.) Bits 00 to 15 of word x+48 correspond to bits 00 to 15 of the device variable given on the left. Bits 00 to 15 of word x+49 correspond to bits 16 to 31 of the device variable given on the left. Bits 00 to 15 of word x+50 correspond to bits 32 to 47 of the device variable given on the left. Bits 00 to 15 of word x+51 correspond to bits 48 to 63 of the device variable given on the left. Bits 00 to 15 of word x+52 correspond to bits 64 to 79 of the device variable given on the left. Bits 00 to 15 of word x+53 correspond to bits 80 to 95 of the device variable given on the left.
			 Bits 00 to 15 of word x+54 correspond to bits 96 to 111 of the device variable given on the left. Bits 00 to 15 of word x+55 correspond to bits 112 to 127 of the device variable given on the left. Bits 00 to 15 of word x+56 correspond to bits 128 to 143 of the device variable given on the left. Bits 00 to 15 of word x+57 correspond to bits 144 to 159 of the device variable given on the left. Bits 00 to 15 of word x+58 correspond to bits 160 to 175 of the device variable given on the left. Bits 00 to 15 of word x+59 correspond to bits 176 to 191 of the device variable given on the left. Bits 00 to 15 of word x+60 correspond to bits 192 to 207 of the device variable given on the left. Bits 00 to 15 of word x+61 correspond to bits 208 to 223 of the device variable given on the left. Bits 00 to 15 of word x+62 correspond to bits 208 to 223 of the device variable given on the left. Bits 00 to 15 of word x+62 correspond to bits 224 to 239 of the device variable given on the left. Bits 00 to 15 of word x+63 correspond to bits 224 to 239 of the device variable given on the left. Bits 00 to 15 of word x+63 correspond to bits 240 to 255 of the device variable given on the

The device variables that correspond to bits 00 to 15 in words x+48 to x+63 are given in the following table.

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit		
Word address	Bit number	Variable name	Description	
Word x+48	0	*_x.TargetPLCErrSta. TargetSta[0]	Target Node PLC Error Flag for Node Address 0	
	15	*_x.TargetPLCErrSta. TargetSta[15]	Target Node PLC Error Flag for Node Address	
Word x+49	0	*_x.TargetPLCErrSta. TargetSta[16]	Target Node PLC Error Flag for Node Address 16	
			÷	
	15	*_x.TargetPLCErrSta. TargetSta[31]	Target Node PLC Error Flag for Node Address 31	
Word x+50	0	*_x.TargetPLCErrSta. TargetSta[32]	Target Node PLC Error Flag for Node Address 32	
			:	
	15	*_x.TargetPLCErrSta. TargetSta[47]	Target Node PLC Error Flag for Node Address 47	
Word x+51	0	*_x.TargetPLCErrSta. TargetSta[48]	Target Node PLC Error Flag for Node Address 48	
		· ·	: :	
	15	*_x.TargetPLCErrSta. TargetSta[63]	Target Node PLC Error Flag for Node Address 63	
Word x+52	0	*_x.TargetPLCErrSta. TargetSta[64]	Target Node PLC Error Flag for Node Address 64	
			· ·	
	15	*_x.TargetPLCErrSta. TargetSta[79]	Target Node PLC Error Flag for Node Address 79	
Word x+53	0	*_x.TargetPLCErrSta. TargetSta[80]	Target Node PLC Error Flag for Node Address 80	
			i :	
	15	*_x.TargetPLCErrSta. TargetSta[95]	Target Node PLC Error Flag for Node Address 95	
Word x+54	0	*_x.TargetPLCErrSta. TargetSta[96]	Target Node PLC Error Flag for Node Address 96	
			:	
	15	*_x.TargetPLCErrSta. TargetSta[111]	Target Node PLC Error Flag for Node Address	

I/O memory location in CJ- series CPU Unit		Device variable for the CJ-series Unit in NJ-series CPU Unit		
Word address	Bit number	Variable name	Description	
Word x+55	0	*_x.TargetPLCErrSta. TargetSta[112]	Target Node PLC Error Flag for Node Address 112	
	15	*_x.TargetPLCErrSta. TargetSta[127]	Target Node PLC Error Flag for Node Address	
Word x+56	0	*_x.TargetPLCErrSta. TargetSta[128]	Target Node PLC Error Flag for Node Address 128	
			÷	
	15	*_x.TargetPLCErrSta. TargetSta[143]	Target Node PLC Error Flag for Node Address 143	
Word x+57	0	*_x.TargetPLCErrSta. TargetSta[144]	Target Node PLC Error Flag for Node Address 144	
			·	
	15	*_x.TargetPLCErrSta. TargetSta[159]	Target Node PLC Error Flag for Node Address	
Word x+58	0	*_x.TargetPLCErrSta. TargetSta[160]	Target Node PLC Error Flag for Node Address 160	
			:	
	15	*_x.TargetPLCErrSta. TargetSta[175]	Target Node PLC Error Flag for Node Address 175	
Word x+59	0	*_x.TargetPLCErrSta. TargetSta[176]	Target Node PLC Error Flag for Node Address 176	
			:	
	15	*_x.TargetPLCErrSta. TargetSta[191]	Target Node PLC Error Flag for Node Address 191	
Word x+60	0	*_x.TargetPLCErrSta. TargetSta[192]	Target Node PLC Error Flag for Node Address 192	
			:	
	15	*_x.TargetPLCErrSta. TargetSta[207]	Target Node PLC Error Flag for Node Address 207	
Word x+61	0	*_x.TargetPLCErrSta. TargetSta[208]	Target Node PLC Error Flag for Node Address 208	
			:	
	15	*_x.TargetPLCErrSta. TargetSta[223]	Target Node PLC Error Flag for Node Address 223	
Word x+62	0	*_x.TargetPLCErrSta. TargetSta[224]	Target Node PLC Error Flag for Node Address 224	
			:	
	15	*_x.TargetPLCErrSta. TargetSta[239]	Target Node PLC Error Flag for Node Address 239	

_	ocation in CJ- PU Unit	CJ- Device variable for the CJ-series Unit in NJ-series CPU Unit	
Word address	Bit number	Variable name	Description
Word x+63	0	*_x.TargetPLCErrSta. TargetSta[240]	Target Node PLC Error Flag for Node Address 240
•			•
	15	*_x.TargetPLCErrSta. TargetSta[255]	Target Node PLC Error Flag for Node Address 255


A-8 Version Information

This appendix describes the changes in and additions to functional specifications that were made for changes in the unit version of the CPU Units.

Changes in and Additions to Functional Specifications

The following table shows the unit version of the CPU Units and the version of the Sysmac Studio that correspond to changes in or additions to the functional specifications.

	tem	Change or addition	Reference	Unit ver- sion	Sysmac Studio version
Offsets for struc- ture members	Cl	Addition	A-59	1.02	1.03

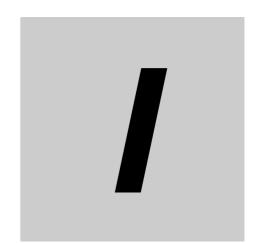

Index

Index

Numerics	Communications Status3	
	Connecting the Shield to Connector Hoods	
100M indicator1-11	Connection I/O Type	
10M indicator1-11	Connection Name	7-36, 7-37
	connection settings	
A	automatically setting connections	
	batch editing	
*_AdjTmCmd(Adjust Clock Bit)3-7	editing individual connections	
*_AdrMismatchErr(Address Mismatch)	Register Device List	
array variables	connection status	
preparing array variables to input and	Connection Type	7-36, 7-37
output service data and response data8-12	connections	
Auto Connection Configuration	checking	
automatically setting connections	Controller Object	
additionally country control	Controller status	7-10
В	cyclic communications	1-16
bandwidth usage	D	
requested packet intervals12-3		
tag data links12-8	data areas	
binary format9-16	data exchange with the CPU unit	3-2
BOOTP client1-18	data processing time	
*_BootpSvrErr(BOOTP Server Error)3-14	calculation example	
boots	overview	12-23
	data transmissions	
C	timing	
	default gateway	5-3
cable	destination IP address	5-4
connections2-12	device bandwidth usage	
calculating the number of connections	adjusting	12-10
CIDR4-3	Device Connection Structure Tree	7-41
CIP Communications	device parameters	
CIP communications instructions8-4	clearing	
using8-5	verifying	7-58
	device status	
CIP message communications	displaying	7-70
using8-3	device variables for CJ-series Unit	3-3
CIP message communications service	devices	
overview8-2	changing	7-69
specifications8-2	registering	7-19
clock	dimensions	1-15
automatic adjustment1-19	DNS	5-4
required settings	*_DNSSvrErr(DNS Server Error)	3-14
specifications	domain name	5-4
Close CIP Class 3 Connection8-4		
COMM indicator1-11	E	
*_CommParamErr(Invalid Communications Parameter)		
3-12	EDS files	
*_CommSta1(Communications Status1)	management	A-43
*_CommSta2(Communications Status2)	equipment	
*_CommSta3(Communications Status3)3-13	*_ErrLogStoreSta(Error Log Stored)	
communications load	error log	
adjusting	error log error codes	
Communications Status13-12	error table	
Communications Status23-13	* FothPosTorgotSto(Normal Torgot Node)	

*_EstbRegTargetSta(Normal Target Node)3-15

x. EstbTargetSta. TargetSta(Normal Target Node)		global addresses	4-10
x. EstbTargetSta. TargetStaWd(Normal Target No	=	н	
Ethernet addresses		<u>п</u>	
Ethernet connectors	_		
Ethernet Link Object		host names	
Ethernet switches		specifying	1-18
functions	•	1	
selection precautions		1	
types			
EtherNet/IP Unit	2-3	Identity Object	
settings	5-1	indicators	
specifications		input ON response time	12-26
*_ETNAdvSetErr(Ethernet Advanced Setting Erro		instructions	
ETNAUVSetEIT(Ethernet Advanced Setting End		CIPClose	
*_ETNBaseSetErr(Basic Ethernet Settings Error)		CIPOpen	
*_ETNOnlineSta(Online)		CIPOpenWithDataSize	
Event		CIPRead	
Event Log		CIPSend	
Eveni Log	13-31	CIPUCMMRead	
F		CIPUCMMSend	
<u> </u>		CIPUCMMWrite	
ETD.		CIPWrite	_
FTP commands	0.44	IOI	
bye		IP address configuration	
cd		IP Address Display/Setting Area	
close		IP addresses	
delete		allocation	
dir		setting	
get		*_IPAdr1Cfg(IP Address 1)	
ls		*_IPAdr2Cfg(IP Address 2)	
mdelete		*_IPAdr3Cfg(IP Address 3)	
mget		*_IPAdr4Cfg(IP Address 4)	
mkdir		*_IPAdrCfg(IP Address Display/Setting Area)	
mput		*_IPAdrChgErr(Operating IP Address Change)	
open		*_IPAdrDupErr(IP Address Duplication Error)	
put		*_IPAdrTblErr(IP Address Table Error)	3-13
pwd		*_IPRouterTblErr(IP Router Table Error)	3-13
quit		_	
rename		L	
rmdir			
type		*_LANHwErr(Communications Controller Error)	3-9
user		LED indicators	
FTP server		using for troubleshooting	13-10
application example		LINK settings	5-5
application example from host computer		link settings display	5-5
application procedure		*_LkOffErr(Link OFF Error)	3-10
commands		*_LkSta(Link Status)	3-13
overview			
specifications		M	
*_FTPSta(FTP Status)	3-13		
functions		maintenance	13-52
comparison between NJ Series and Other Se	ries	*_MemErr(Non-volatile Memory Error)	
	A-2	message communications	
		message service	1-17
G		transmission delay	19-99
		MIB	12-20
gateway address	5-4	groups	11 /
general status		system design	
general status codes		MIB objects	11-4
		MID ODJECIO	

detailed descriptions	1-5 *_RegTargetSta(Registered Target Node)3-15 x. RegTargetSta. TargetSta(Registered Target Node)
MS indicator	
multicast filtering	
*_MultiSwOnErr(Multiple Switches ON Error)3-	
N	Requested Packet Interval (RPI) and Bandwidth Usage
*_NetErr(Network Error Occurred)	• •
network configuration	changing12-11
verifying7-	-57 settings12-2
network configuration file	response codes8-27
reading7-	-66 route path8-6
saving7-	
Network Configurator	
connections through NJ-series CPU Unit's	*_RTblErr(Routing Table Error)3-14
USB port7-	-50
Ethernet connections7-	
network transmission delay time12-	-27
network variables	
importing to Network Configurator7-	
node address setting switch1-	•
node addresses	format of variable data9-16
setting	
Normal Target Node	-
NS indicator	
number of connections	send data processing time12-27
calculating12	
- Calculating	settings5-1
0	seven-segment display1-12
	SNMP agent1-20, 11-2
Originator Variable7-	
output ON response time	
output variables	SNMP messages11-3
-	
operation and timing8	SNMP specifications11-3
Р	SNMP traps11-3
Г	*_SNTPSvrErr(SNTP Server Error)
	a ftura a suitala a
Packet Interval (RPI)	status and authors display
part name and function	atmost one conduction
part names and functions	1-9
PING command	~ _
PPS	
precautions on equipment replacement	
Precautions When Installing Ethernet Switches 2-	
priority DNS server	0-4
private addresses4	
programming	tag data link
CIP message communications8	
ladder programming for tag data links7	
_	tag data link parameters
R	downloading7-51
	setting and downloading7-8
Read Variable Class 3 Explicit	8-4 uploading all7-54
Read Variable UCMM Explicit	8-4 uploading from individual devices7-56
receive data processing time12-	-27 tag data links1-16
Registered Target Node3	-15 automatically starting7-61
	bandwidth usage and requested packet intervals

	40.0
communications method	
data concurrency	7-12
effect on task periods	12-25
introduction	7-2
maximum response time	12-26
models other than NJ-series CPU Units	
setting	
starting and stopping	
starting and stopping for individual devices	
verifying	
tag sets	
creating	
*_TagDbErr(Tag Database Error)	
*_TagRefreshErr(Tag Refresh Error)	
tags	7-3
Target Device	7-37
Target Node PLC Error Flags	3-8
Target Node PLC Operating Flags	
Target Variable	
*_TargetPLCErrSta(Target Node PLC Error Flag	
x. TargetPLCErrSta. TargetSta	3) 0-0
	0.40
(Target Node PLC Error Flags)	3-19
x. TargetPLCErrSta. TargetStaWd	
(Target Node PLC Error Flags)	3-19
*_TargetPLCMdSta	
(Target Node PLC Operating Flags)	3-8
x. TargetPLCMdSta. TargetSta	
(Target Node PLC Operating Flags)	3-19
x. TargetPLCMdSta. TargetStaWd	
(Target Node PLC Operating Flags)	3-19
TCP/IP Interface Object	
TCP/IP settings display	
*_TDLAllRunSta(All Tag Data Links Operating) .	
*_TDLErr(Tag Data Link Error)	
*_TDLOpnErr(Verification Error)	
*_TDLOprSta(Tag Data Link Operating)	
*_TDLRunSta(Tag Data Links Operating)	
*_TDLStartCmd(Tag Data Link Start Bit)	3-6
*_TDLStopCmd(Tag Data Link Stop Bit)	3-7
testing communications	
timeout errors	
Timeout Value	
troubleshooting	•
twisted-pair cable	
twisteu-pail cable	1-5
U	
U	
_uCJEIP21_TargetSta	
(Target Node PLC Error Flags)	3-17
_uCJEIP21_TargetSta	
(Target Node PLC Operating Flags)	3-17
_uCJEIP21_TargetSta(Normal Target Node)	
_uCJEIP21_TargetSta(Registered Target Node)	
unit	
unit number setting switch	
and named sound switch	
unit numbare	
unit numbers	1-14
unit numbers setting unit setup	1-14

Unit Status1 3	5-9
Unit Status2 3-	10
*_UnitErr(Unit Error Occurred)3	9-9
*_UnitMemErr(Unit Memory Error)	9-9
*_UnitSta1(UnitSta1) 3	3-9
*_UnitSta2(Unit Status2)	10
User Definition Settings for the Status Area 3-	17
*_UserStaAreaCfgErr	
(Status Area Layout Setting Error)3-	10
*_UserStaAreaEnblSta	
(User Setting Area Enabled)3-	11
V	
<u> </u>	_
variable memory allocation	50
<u> </u>	50
variable memory allocation	50
variable memory allocation rules	50
variable memory allocation rules	_
variable memory allocation rules	47
variable memory allocation rules	47 3-4

Index

OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC

2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD.
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2012 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Cat. No. W495-E1-08