

YASKAWA AC Drive High Performance Vector Control A 1000

200 V CLASS, 0.4 to 110 kW 400 V CLASS, 0.4 to 630 kW



The Birth of Yaskawa's Ace Drive

Offering limitless possibilities....

A top quality drive: silent, beautiful, and incredibly powerful. Perfectly designed functions open a new field with A1000. A product only possible from Yaskawa, knowing everything there is to know about the world of drive technology to create the most efficient operation possible with an inverter drive. You just have to try it to know how easy it is to use. High level, Yaskawa quality. Integrating the latest vector control technology in a general-purpose drive with the performance of a higher order demanded by the drives industry. A1000 is the answer to user needs, carrying on the Yaskawa traditions of absolute quality in this next generation product line.



The Answer is A1000

Contents

Features	4
Features for Every Application	10
Product Lineup	14
Model Selection	15
Software Functions	16
Parameter List	18
Basic Instructions	24
Standard Specifications	26
Standard Connection Diagram	28
Dimensions	30
Fully-Enclosed Design	32
Peripheral Devices and Options	34
Application Notes	56
YASKAWA AC Drive Series	62
01110 : 111	00

The Drive for a Greener World

Motor Drive Performance Leading the Pack

Transforming the Application Installation with Unparalleled Performance.










Motor Drive Performance Leading the Pack

The Most Advanced Drive Technology

- Capable of driving any kind of motor. A1000 runs not only induction motors, but also synchronous motors like IPM and SPM motors with high performance vector control.
- Minimize equipment needed for your business by using the same drive to run induction and synchronous motors.
- Switch easily between motor types with a single parameter setting.

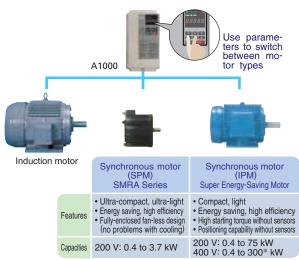


* 160 kW without PG

Positioning Capability without External Devices

- Use an IPM motor to perform position control without motor feedback. Electrical saliency in IPM motors makes it possible to detect speed, direction, and rotor position without the use of extraneous sensors.
- Precision positioning functionality without an upper controller.

Visual programming in DriveWorksEZ lets the user easily create a customized position control sequence, without the use of sensors or motor feedback.

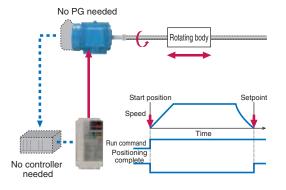

Cutting-Edge Torque Characteristics

Powerful torque at 0 Hz, without the use of sensors or feedback devices

Once out of reach for AC drives, Yaskawa now offers sensorless
control with synchronous motors. Achieve even more powerful
starting torque at zero speed with an IPM motor.




Synchronous Motor

Proper output torque depends on matching drive and motor capacity.

- Advanced Open Loop Vector Control for PM 200% rated torque at 0 r/min*, speed range of 1:100
- Closed Loop Vector Control for PM 200% rated torque at 0 r/min*, speed range of 1:1500


Torque characteristics

Advanced Open Loop Vector Control for PM with an IPM motor

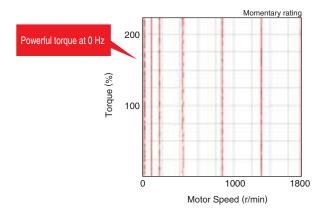

Comparing the speed control range

Advanced Open Loop Vector Control for PM with an IPM motor

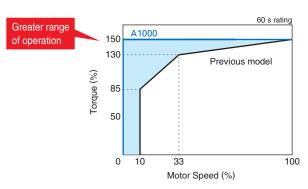

High-performance current vector control achieves powerful starting torque with an induction motor.



Loaded with Auto-Tuning Features

- Auto-Tuning features optimize drive parameters for operation with induction motors as well as synchronous motors to achieve the highest performance levels possible.
- Perfects not only the drive and motor performance, but also automatically adjusts settings relative to the connected machinery.
 - A variety of ways to automatically optimize drive settings and performance

Tuning the Motor			
Rotational	Applications requiring high starting torque, high		
Auto-Tuning	speed, and high accuracy.		
Stationary	Applications where the motor must remain con-		
Auto-Tuning	nected to the load during the tuning process.		
Line-to-Line	For re-tuning after the cable length between		
Resistance	the motor and drive has changed, or when		
Auto-Tuning	motor and drive capacity ratings differ.		
Energy-Saving	For running the motor at top efficiency all the		
Auto-Tuning	time.		


Tuning the	Load
Inertia Tuning	Optimizes the drive's ability to decelerate the load. Useful for applications using KEB and Feed Forward functions.
ASR Gain Auto-Tuning * Automatic Speed Regulator	Automatically adjusts ASR gain to better match the frequency reference.

▲ Brand-new Auto-Tuning methods.

A1000 continuously analyzes changes in motor characteristics during run for highly precise speed control.

Smooth Operation

- Smooth low speed operation thanks to even better torque ripple suppression.
 - Comparing torque ripple at zero speed (Closed Loop Vector)

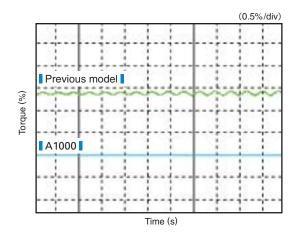

Tackling Power Loss and Recovery


- A1000 offers two ways to handle momentary power loss.
- ▲ A1000 is capable of handling momentary power loss with sensorless control for induction motors as well as synchronous motors.

Speed Search

Easily find the speed of a coasting motor for a smooth restart.

Applications

Perfect for fans, blowers, and other rotating, fluid-type applications.

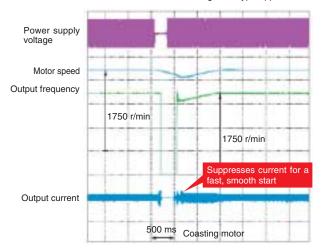


KEB

Keep the motor running without allowing it to coast.

Applications

Highly recommended for film lines and other applications requiring continuous operation.

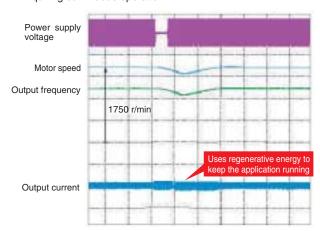

Note: Requires a separate sensor to detect power loss.

The drive may trip depending on load conditions, and the motor coast to stop.

- Ride through power loss for up to 2 seconds.
 - · Crucial for semi-conductor manufacturers
 - · No need to purchase a back-up power supply
 - Detects, outputs an undervoltage signal during power loss
 - * The Momentary Power Loss Recovery Unit option may be required depending on the capacity of the drive.




Energy Saving

Next-Generation Energy Saving

- Loaded with the most advanced energy-saving control technology Energy Saving control makes highly efficient operation possible with an induction motor.
- Amazing energy saving with a synchronous motor Combining the high efficiency of a synchronous motor along with A1000's Energy Saving control capabilities allows for unparalleled energy saving.

Efficiency using a motor drive

Example shows a 200 V 3.7 kW drive in a fan or pump application.

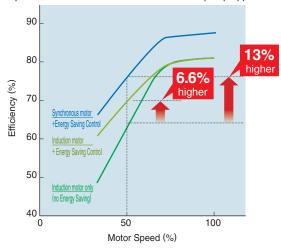

Examples of energy saving with drives

Conditions

A: Induction motor + A1000

B: IPM motor + A1000

Annual energy savings for an HVAC fan application running 100 3.7 kW motors. Electric costs of 15 cents/kWH, operating 365 days/year

Annual Energy Savings

A: Induction motor + A1000

Power consumption: 1,903,100 kWH

Electrical costs: \$285,500


B: IPM motor + A1000

Power consumption: 1,754,600 kWH

Electrical costs: \$263,200

Annual savings on energy costs: (A) vs. (B)
Energy saved: 148,500 kWH

Energy saved: 148,500 kWH
Electrical costs: \$22.300

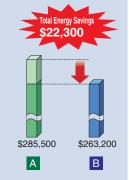

Annual reduction in CO₂

148,500 kWH×0.555÷1,000 = **82.4 tons!**Assumes 1 kWH of power consumed creates 0.555 kg/kWH of CO₂

Environmental Features

Protective Design

- A variety of protective designs are available to reinforce the drive against moisture, dust, oil mist, vibration, corrosive sulfur gas, conductive particles, and other harsh environments.
- IP54 drip-proof and dustproof options are also offered.*

* Available soon

RoHS


All standard products are fully compliant with the EU's RoHS directive.

RoHS

compliant

Noise Reduction


- A1000 uses Yaskawa's Swing PWM function to suppress electromagnetic and audible motor noise, creating a more peaceful environment.
 - Comparing our former product line with our new Swing PWM feature

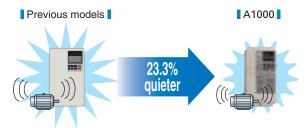

Note: Calculated by comparing peak values during noise generation

Suppressing Power Supply Harmonics

A DC reactor minimizes harmonic distortion, standard on drives 22 kW and above.

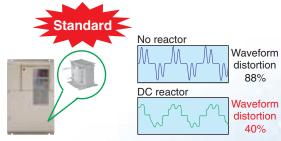

- Yaskawa also offers 12-pulse and 18-pulse rectifier options*, as well as filters to minimize harmonic distortion.
 - * Available soon. Requires a separate 3-winding or 4-winding transformer.

Al OO

Safety

Safety Regulations


- All models have a Safe Disable function to stop the motor in accordance with EN954-1 safety category 3, IEC/EN61508 SIL2 requirements.
- An External Device Monitor (EDM) function has also been added to monitor the safety status of the drive.

Safe Disable wiring example

A1000 is equipped with 2 input terminals and a single output terminal for connecting a safe disable device.

Input: Triggered when either terminal H1 or H2 opens.

Output: EDM output monitors the safety status of the drive.

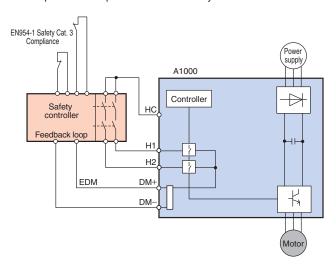


Controlled Stop Despite Power Loss


- Should a power outage occur, A1000 can bring the application to controlled stop quickly and safely using the KEB function.
 - Quickly ramp to stop with KEB function

Perfect for spindle drive application and film production lines where stopping methods are crucial to the application to reduce production cost.


Previous model

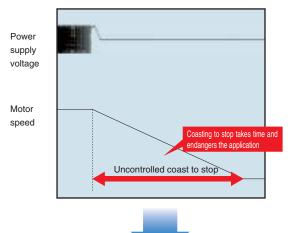

A1000

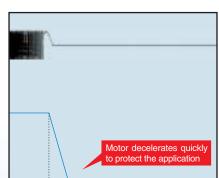

Controlled ramp to stop

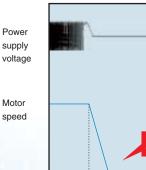





Transforming the Application Installation with Unparalleled Performance


Even More and More Compact

- Yaskawa continues to make applications even smaller by combining the world's smallest drive in its class with the light, efficient design of a synchronous motor.
 - Comparing drive dimensions

Example: 400 V Class 75 kW



Comparing motor dimensions



- ✓ Use Side-by-Side installation* for an even more compact setup.
 * For models up to 18.5 kW.
- Finless models* also available.

* For release soon


Customize Your Drive

DriveWorksEZ visual programming tool with all models

Simply drag and drop icons to completely customize your drive. Create special sequences and detection functions, then load them onto the drive.


Program a customized sequence

Example: Sensorless positioning control function



Create customized detection features

Example: Machine weakening analysis using torque pulse detection




- USB for connecting to a PC
 - USB port lets the drive connect to a PC




Note: Drives are also equipped with an RJ-45 comm. port that takes the existing WV103 cable used in Yaskawa's previous models. Simply remove the operator keypad for to the RJ-45 connector.

- Dual Rating allows for an even more compact setup Each drive lets the user choose between Normal Duty or Heavy Duty operation. Depending on the application, A1000 can run a motor an entire frame size larger than our previous model.
 - Select the drive rating that best fits the application needs

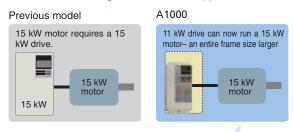

Dual Ratings in A1000



Note: Always select a drive with a current rating greater than the motor rated current.

Breeze-Easy Setup

Immediate setup with Application Presets

A1000 automatically sets parameters needed for most major applications. Simply selecting the appropriate application instantly optimizes the drive for top performance, saving enormous time setting up for a trial run.



Example using Application Presets

Selecting "Conveyor" optimizes five parameter settings so the drive is ready to start running your conveyor application immediately.



Setting	Application		D	
00	General-purpose		Parameters are	programmed automatically
01	Water Supply Pump		A1-02	Control mode selection
02	Conveyor	-	C1-01	Accel Time 1
03	Exhaust Fan		01-01	Accel Time 1
04	HVAC Fan		C1-02	Decel Time 1
05	Air Compressor		C6-01	ND/HD Selection
06	Crane (Hoist)			
07	Crane (Traverse)	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		

Variety of Braking Functions

- Overexcitation deceleration capabilities bring the motor to an immediate stop without the use of a braking resistor.
- All models up to 30 kW are equipped with a braking transistor for even more powerful braking options by just adding a braking resistor.



All Major Serial Network Protocols

- RS-422/485 (MEMOBUS/Modbus at 115.2 kbps) standard on all models.
- Option cards available for all major serial networks used across the globe: PROFIBUS-DP, DeviceNet, CC-Link, CANopen, LONWORKS*, MECHATRO-LINK-II*, among others.

* Available soon Note: Registered trademarks of those companies.

Less wiring and space-saving features make for easy installation and maintenance.

Long Performance Life

Ten Years of Durable Performance

- Cooling fan, capacitors, relays, and IGBTs have been carefully selected and designed for a life expectancy up to ten years.*

Motor Life

■ Thanks to relatively low copper loss in the rotor and a cool shaft during operation, synchronous motors have a bearing life twice that of induction motors.

Performance Life Monitors

- Yaskawa's latest drive series is equipped with performance life monitors that notify the user of part wear and maintenance periods to prevent problems before they occur.
 - Drive outputs a signal to the control device indicating components may need to be replaced



Operator Display	Corresponding Component
LT-1	Cooling fan
LT-2	Capacitors
LT-3	Inrush prevention relay
LT-4	IGBTs

Easy Maintenance

The First Terminal Board with a Parameter Backup Function


- The terminal block's ability to save parameter setting data makes it a breeze to get the application back online in the event of a failure requiring drive replacement.
 - A1000 Terminal Block



Parameter					
Name	Number	Setting			
ND/HD Selection	C6-01	1			
Control Mode Selection	A1-02	0			
Frequency Reference Selection 1	b1-01	1			
Run Command Selection 1	b1-02	1			

Engineering Tool DriveWizard Plus

- Manage the unique settings for all your drives right on your PC.
- An indispensable tool for drive setup and maintenance. Edit parameters, access all monitors, create customized operation sequences, and observe drive performance with the oscilloscope function.
- The Drive Replacement feature in DriveWizard Plus saves valuable time during equipment replacement and application upgrades by converting previous Yaskawa product parameter values to the new A1000 parameters automatically.
 - Drive Replacement Function

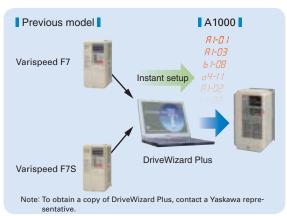

Parameter Copy Function

- All standard models are equipped with a Parameter Copy function using the keypad that allows parameter settings to be easily copied from the drive or uploaded for quick setup.
- A USB Copy Unit is also available as an even faster, more convenient way to back up settings and instantly program the drive.

Features for Every Application

A1000 is loaded with functions to match the particular needs of every application.



Cranes



1 Application Presets

Selecting "Crane" from A1000's Application Presets automatically programs A1000 for optimal performance with crane application. Save valuable setup time and start running immediately.

Switch Between Motors

Use the same drive to control one motor for hoisting, another motor for traverse operation. Terminal inputs let the user set up relay to switch back and forth between motors.

3 Powerful Starting Torque

Powerful torque at low speeds ensures the power needed for the application and prevents problems with slipping.

4 Safety Functions

The Safe Disable function comes standard for compliance with various safety regulations.


5 Visual Programming with DriveWorksEZ Easily customize the drive using a PC.

6 Performance Life Diagnostic Features

A1000 notifies the user or controller when maintenance may be required for certain components such as fan or capacitors.

7 Terminal Block with Parameter Backup Function

The terminal block can be transferred to a new drive keeping all terminal wiring intact, and built-in memory backs up all parameter settings. An incredible time saver when replacing a drive.

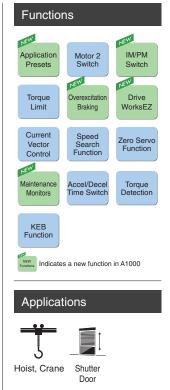



Fans and Pumps



Application Presets

Selecting "Fan" or "Pump" from A1000's Application Presets automatically programs A1000 for optimal performance specific for those applications. Save valuable setup time and start running immediately.

Compact Design

Yaskawa offers a compact solution for both drive and motor.

- · Dual ratings
- Selecting Normal Duty makes it possible to use a smaller drive.
- · Combine with a synchronous motor
- Run a synchronous motor instead of an induction motor for an even more compact installation.

Astounding Efficiency

Combine A1000 with a synchronous motor and save on energy costs.

4 Output Power Pulse Monitor

Pulse output feature can send a signal to the PLC to keep track of kilowatt hours. No extra power meter needed.

Efficiency (%) Total 2.2 Motor Capacity (kW)

Note: Cannot legally be used as proof of power consumption.

Speed Search

Yaskawa's unique speed search functions easily carry the motor through momentary power loss. No back-up power supply needed to keep the entire application running smoothly.

6 24 V Control Power Supply Option

Lets the user monitor drive data from a PLC even when the power goes out.

Terminal Block with Parameter Backup Function

The terminal block can be transferred to a new drive keeping all terminal wiring intact, and built-in memory backs up all parameter settings. An incredible time saver when replacing a drive.

Representation Performance Life Diagnostic Features

A1000 notifies the user or controller when maintenance may be required for certain components such as fan or capacitors.

9 Low Harmonic Distortion

DC reactor comes standard on all model above 22 kW to minimize harmonic distortion. This built-in feature saves space and wiring.

Functions






























Applications



HVAC





Features for Every Application

A1000 is loaded with functions to match the particular needs of every application.



Metal Working



1 KEB Function

The KEB function can quickly decelerate the motor to stop in case of a power outage, rather than putting equipment at risk by simply allowing the motor to coast. Easy to program to match application needs.

Overvoltage Suppression

Particularly beneficial for die cushion and other press-type machinery, overvoltage suppression prevents faults and keeps the application running.

3 Visual Programming with DriveWorksEZ Easily customize the drive using a PC.

4 Safety Functions

Safe Disable feature comes standard for compliance with various safety regulations.

5 Current Vector Control

Protect connected machinery by controlling torque directly through torque detection and torque limits offered by current vector control.

6 Performance Life Diagnostic Features

A1000 notifies the user or controller when maintenance may be required for certain components such as fan or capacitors.

7 Terminal Block with Parameter Backup Function

The terminal block can be transferred to a new drive keeping all terminal wiring intact, and built-in memory backs up all parameter settings. An incredible time saver when replacing a drive.

Functions KEB Function Overexcitation Braking Pulse Train Input Pulse Train Input Pulse Train Input Pulse Train Input Overload Search Output Overload Fault Vector Control Maintenance Monitors Drive WorksEZ Indicates a new function in A1000 Applications





Press

Machine Tool



Conveyor Systems



1 Application Presets

Selecting "Conveyor" from A1000's Application Presets presets automatically programs A1000 for optimal performance specific for those applications. Save valuable setup time and start running immediately.

2 Safety Functions


Safe Disable feature comes standard for compliance with various safety regulations.

3 Astounding Efficiency

Combine A1000 with a synchronous motor and save on energy costs.

4 Overexcitation Braking

Bring the motor to an Output frequency immediate stop without Output the use of a braking resistor (IM motors only).



Note: Varies in accordance with motor specifications and load.

5 Visual Programming with DriveWorksEZ Easily customize the drive using a PC.

24 V Control Power Supply Option

7 Verify Menu

Quickly reference any settings that have been changed from their original default values.

Changed Value					
Name	Parameter	Default	Set Value		
Frequency Ref. Selection1	b1-01	1	0		
Acceleration Time1	C1-01	10.00 s	15.00 s		
Deceleration Time1	C1-02	10.00 s	15.00 s		
-	L :		:		
	_				



8 Performance Life Diagnostic Features

A1000 notifies the user or controller when maintenance may be required for certain components such as fan or capacitors.

Lets the user monitor drive data from a PLC even when the main power is removed.

9 Low Harmonic Distortion

DC reactor comes standard on all model above 22 kW to minimize harmonic distortion. This built-in feature saves space and wiring.

Functions







Braking





Tuning








Applications



Conveyor

Product Lineup

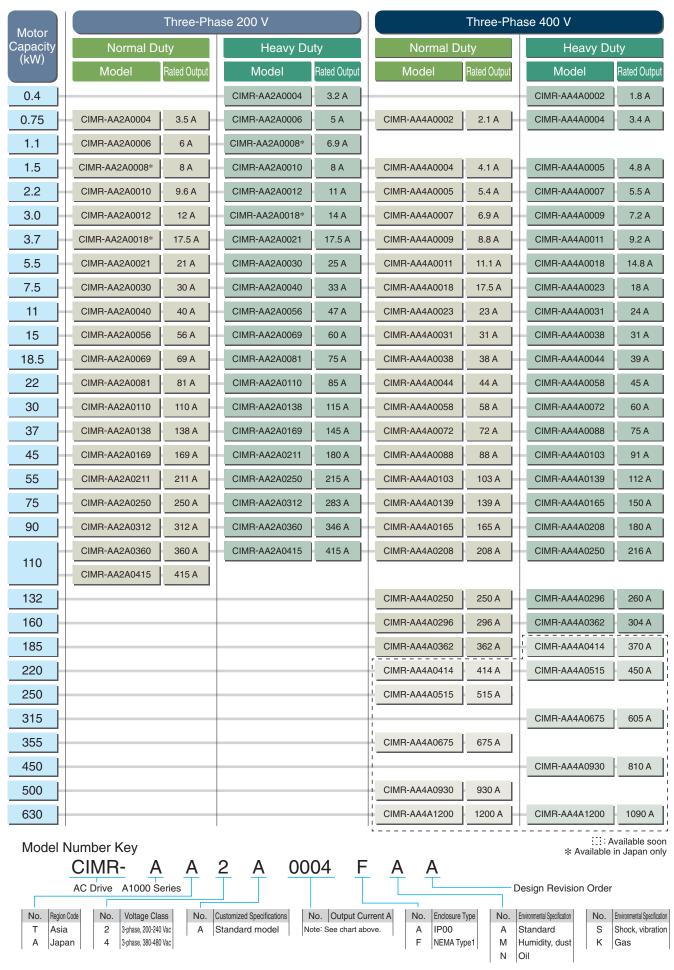

Optimizing Control for Each Application

A1000 offers two separate performance ratings: Normal Duty and Heavy Duty.

Heavy Duty is capable of creating more powerful torque, while Normal Duty allows the drive to operate a larger motor.

Difference between load ratings:

	Normal Duty Rating	Heavy Duty Rating
Parameter settings	C6-01=1	C6-01=0 (default)
Overload tolerance	120% for 60 s	150% for 60 s
Carrier frequency	Low carrier frequency (Swing PWM)*	Low carrier frequency

^{*} Use Swing PWM to quiet undesirable motor noise generated when operating with a low carrier frequency.

Normal Duty Applications

Applications







Heavy Duty Applications

Applications
















Selecting a Drive

For a fan application using a 11 kW motor, select CIMR-AA2A0040 and set it for Normal Duty performance (C6-01 = 1).

Model: CIMR-AA2A0040



Selecting a Drive

For a conveyor application using an 11 kW motor, select CIMR-AA2A0056 and set it for Heavy Duty performance (default).

Model: CIMR-AA2A0056

Heavy Duty: 11 kW 11 kW Conveyor

Use the table below to transition from Varispeed F7 and Varispeed F7S to the A1000 series.

Po	wer Supply		200 V 400 V				
		Varispeed F7	Varispeed F7S	A1000	Varispeed F7	Varispeed F7S	A1000
	Model	CIMR-	CIMR-	CIMR-	CIMR-	CIMR-	CIMR-
		F7A2[[[[]]]]	F7S2[[[[]]]]	AA2A[[#[#[#]]	F7A4[[#]#]]	F7S4[[[[]]]]	AA4AEEEEEEE
Ann	licable Motor	Induction Motor	Synchronous	Induction Motor	Induction Motor	Synchronous	Induction Motor
Арр	licable Motor	induction Motor	Motor	Synchronous Motor	muuciion wotoi	Motor	Synchronous Motor
	0.4	0P4	0P4	0004	0P4	0P4	0002
	0.75	0P7	0P7	0006	0P7	0P7	0004
	1.5	1P5	1P5	0010	1P5	1P5	0005
	2.2	2P2	2P2	0012	2P2	2P2	0007
<u>\$</u>	3.7	3P7	3P7	0021	3P7	3P7	0011
Applicable Motor Capacity (kW)	5.5	5P5	5P5	0030	5P5	5P5	0018
city	7.5	7P5	7P5	0040	7P5	7P5	0023
ıpa	11	011	011	0056	011	011	0031
Ő	15	015	015	0069	015	015	0038
oto	18.5	018	018	0081	018	018	0044
Σ	22	022	022	0110	022	022	0058
able	30	030	030	0138	030	030	0072
oli c	37	037	037	0169	037	037	0088
App	45	045	045	0211	045	045	0103
Мах.	55	055	055	0250	055	055	0139
Σ	75	075	075	0312	075	075	0165
	90	090	-	0360	090	090	0208
	110	110	-	0415	110	110	0250
	132	-	-	-	132	132	0296
	160	-	_	-	160	160	0362

Software Functions

Loaded with software functions just right for your application.



 $New\ software\ available\ to\ upgrade\ from\ F7\ to\ A1000,\ automatically\ matching\ function\ and\ sequence\ settings.$

Note: Major functions listed below



No need to struggle with difficult parameters and complex calculations. Parameters are set instantly simply by selecting the appropriate Application Preset.

Functions at Start and Stop



Optimal deceleration without needing to set the deceleration time. Drive slows the application smoothly controlling DC bus voltage.



Perfect for applications with high load inertia that rarely need to be stopped. Stop quickly: 50% faster without the use of a braking resistor.

Note: Stopping times may vary based on motor characteristics.



Start a coasting motor.

Automatically brings a coasting motor back to the target frequency without the need for extra speed sensors.



Accelerate and decelerate smoothly with large inertia loads.

Drive prevents speed loss by holding the output frequency at a constant level during acceleration and deceleration.



Switch easily between accel/decel times. Switch acceleration and deceleration rates when running two motors from the same drive, or change accel/decel times when operating at high speed.

Reference Functions



Limit motor speed.

Set speed limits and eliminate the need for extra peripheral devices and extraneous hardware.



Skip over troublesome resonant frequencies. Drive can be programmed to avoid machine resonance problems by avoiding constant speed operation at certain speeds.



Improved operability.

Momentarily hold the operating frequency during acceleration or deceleration as the load is lowered or raised.



Balances the load automatically between motors.

Calculates the ratio of the load torque and adjusts motor speed accordingly.

Functions for Top Performance



Run both IM and PM motors with a single drive. The most advanced motor drive technology can run both IM and PM motors, allowing for even greater energy savings and a more compact setup.



No extra watt hour meter needed.

A pulse output lets the user monitor power consumption.*

* Cannot legally be used as proof of power consumption.



Automatically runs at top efficiency.

The drive supplies voltage to the motor relative to the speed and load so that the application is for operating at the most efficient level.



Enables high-precision operation.

Automatically adjusts resistance between motor conductors during operation, thus improving speed accuracy when there are motor temperature fluctuations. This function is active only for Open Loop Vector Control.



Achieve high levels of performance.

The drive comes with current vector control capabilities for high performance applications.



Customize the perfect drive to fit your needs. Upper controller circuitry and drive I/O terminals can be programmed so that extra hardware is no longer needed. Dragand-drop. Visual programming makes customization a breeze.



Automatic PID control.

The internal PID controller fine-tunes the output frequency for precise control of pressure, flow, or other variables.



One drive runs two motors.

Use a single drive to operate two different motors. Only one PM motor may be used.



Improved operability.

Use the Pulse Train Input to control not only the frequency reference, but also PID feedback and PID input.



Improved monitor functions.

Pulse output lets the user observe everything from the frequency reference and output frequency to motor speed, softstart output frequency, PID feedback, and PID input. Torque Detection

Protects the load and helps ensure continuous operation.

An output terminal is triggered when motor torque rises above or falls below a specified level. Useful as an interlock signal for protecting equipment when blade problems arise in a machine tool application or for detecting a broken belt.

Torque Limit

Better reliability: Keep the application running while protecting the load.

A1000 helps protect your application by restricting the amount of torque the motor can create.

Torque Control

Freely adjust torque levels with an external reference signal.

Perfect for tension control in winders and assisting torque followers.

Feed Forward Control

Optimizes speed changes when working with high-inertia loads.

Estimates the acceleration/deceleration torque required for the change in speed, and then recalculates the torque reference.



Automatically optimize ASR settings for superior responsiveness. Optimizes the drive's ability to decelerate the load. Useful for applications using KEB and Feed Forward functions.

Speed Search Function

Automatically switches to line power.

Switches operation between line power and inverter drive operation without stopping the motor.

Timer Function

No need for extra hardware.

Control timing by opening and closing the output signal relative to the input signal.



Locks the motor at zero speed.

Holds the motor solidly at 0 Hz, regardless of external influences on the load.



Set the carrier frequency to best match application needs.

Reduces noise and resonance in the both the motor as well as the mechanical system. The Swing PWM feature can be used to minimize audible motor noise.

Continuous Run during Reference Loss

Keeps the application running.

Maintains continuous operation even if the controller fails or frequency reference is lost. An indispensable feature for large HVAC applications. Fault Restart Keep running when a fault occurs. A1000 has full self-diagnostic features

and can restart the application in the event of a fault. Up to 10 restarts possible.

Protective Functions



Keep running even during a momentary loss in power.

A1000 automatically restarts the motor and keeps the application going in the event of a power loss.



Avoid overvoltage trip.

Effective for punching presses and crank shafts where repetitive motion creates large amounts of regenerative energy. The drive increases or decreases the frequency in correspondence with regen levels to prevent overvoltage from occurring.



Prevents overload faults to keep the application running at all times.

Ensures continuous operation during sudden changes in the load that may briefly rise above overload levels and would otherwise shut the application down.



Monitor actual speed of the motor and load.

Monitors let the user keep track of motor rotations and line speed.



Save parameter setting to the digital operator.

Copy all parameter settings to the operator keypad, and then transfer those settings to another drive. Saves valuable setup and maintenance time.



Notifies the user when maintenance may be required.

An output signal is triggered when certain components such as the cooling fan or capacitors are nearing their expected performance life.



Decelerate to stop when the power goes out.

A1000 uses regenerative energy from the motor to bring the application to a stop, rather than simply letting it coast.



Parameter List

Defends the A1000 Technical Manual for details

Function	No.	Name	Range	Default	Changes during Ru
ırs	A1-00	Language Selection	0 to 7	1*1	0
iete	A1-01	Access Level Selection	0 to 2	2*2	0
ran	A1-02	Control Method Selection	0,1,2,3,5,6,7	2*1	×
Initialization Parameters	A1-03	Initialize Parameters	0 to 5550	0	×
ion	A1-04	Password	0 to 9999	0	×
izat	A1-05	Password Setting	0 to 9999	0	×
itial	A1-06	Application Preset	0 to 7	0	×
п	A1-07	DWEZ Function Selection	0 to 2	0	×
ers	A2-01		b1-01 to		
User Parameters	to A2-32	User Parameters, 1 to 32	02-08	*2	×
User P	A2-33	User Parameter Automatic Selection	0, 1	1*2	×
	b1-01	Frequency Reference Selection 1	0 to 4	1	×
	b1-02	Run Command Selection 1	0 to 3	1	×
LC.	b1-03	Stopping Method Selection	0 to 3*3	0	×
ectic	b1-04	Reverse Operation Selection	0, 1	0	×
Sele	b1-05	Action Selection below Minimum Output Frequency	0 to 3	0	×
Je S	b1-06	Digital Input Reading	0, 1	1	×
Moc	b1-07	LOCAL/REMOTE Run Selection	0, 1	0	×
no	b1-07	Run Command Selection while in Programming Mode	0, 1 0 to 2	0	×
Operation Mode Selection	b1-08	Phase Order Selection	0, 1	0	×
ed(b1-14		0, 1 0 to 4	0	×
O	b1-15	Frequency Reference Selection 2 Run Command Selection 2	0 to 3	0	×
				_	
	b1-17	Run Command at Power Up	0, 1	0	×
g çing	b2-01	DC Injection Braking Start Frequency	0.0 to 10.0	*3	×
C Injection Braking Short Circuit Braking	b2-02	DC Injection Braking Current	0 to 100	50%	×
Bra	b2-03	DC Injection Braking Time at Start	0.00 to 10.00	0.00 s	×
irc	b2-04	DC Injection Braking Time at Stop	0.00 to 10.00	*3	×
DC Injection Braking d Short Circuit Brakir	b2-08	Magnetic Flux Compensation Capacity	0 to 1000	0%	×
: Inj	b2-12	Short Circuit Brake Time at Start	0.00 to 25.50	0.00 s	×
DC and 9	b2-13	Short Circuit Brake Time at Stop	0.00 to 25.50	0.50 s	×
a	b2-18	Short Circuit Braking Current	0.0 to 200.0	100.0%	×
	b3-01	Speed Search Selection at Start	0, 1	*3	×
	b3-02	Speed Search Deactivation Current	0 to 200	*3	×
	b3-03	Speed Search Deceleration Time	0.1 to 10.0	2.0 s	×
	b3-04	V/f Gain during Speed Search	10 to 100	*4	×
ırch	b3-05	Speed Search Delay Time	0.0 to 100.0	0.2 s	×
beed Search	b3-06	Output Current 1 during Speed Search	0.0 to 2.0	*4	×
þ	b3-10	Speed Search Detection Compensation Gain	1.00 to 1.20	1.05	×
	b3-14	Bi-Directional Speed Search Selection	0, 1	*3	×
S	b3-17	Speed Search Restart Current Level	0 to 200	150%	×
	b3-18	Speed Search Restart Detection Time	0.00 to 1.00	0.10 s	×
	b3-19	Number of Speed Search Restarts	0 to 10	3	×
	b3-19	Speed Search Method Selection	0, 1	0	×
	b3-24	Speed Search Wait Time	0.0 to 30.0	0.5 s	×
13 3r	b4-01	Timer Function On-Delay Time	0.0 to 3000.0	0.5 s	×
Delay Timer	b4-02	Timer Function Off-Delay Time	0.0 to 3000.0	0.0 s	×
	b5-01	PID Function Setting	0 to 4	0	×
	b5-02	Proportional Gain Setting (P)	0.00 to 25.00	1.00	0
	b5-03	Integral Time Setting (I)	0.0 to 360.0	1.0 s	0
	b5-04	Integral Limit Setting	0.0 to 100.0	100.0%	0
	b5-05	Derivative Time (D)	0.00 to 10.00	0.00 s	0
	b5-05	PID Output Limit	0.00 to 100.00	100.0%	0
lo l	b5-06 b5-07				0
PID Control		PID Offset Adjustment	-100.0 to 100.0	0.0%	-
00	b5-08	PID Primary Delay Time Constant	0.00 to 10.00	0.00 s	0
Ы	b5-09	PID Output Level Selection	0, 1	0	×
	b5-10	PID Output Gain Setting	0.00 to 25.00	1.00	×
	b5-11	PID Output Reverse Selection	0, 1	0	×
	b5-12	PID Feedback Loss Detection Selection	0 to 5	0	×
	b5-13	PID Feedback Low Detection Level	0 to 100	0%	×
	b5-14	PID Feedback Low Detection Time	0.0 to 25.5	1.0 s	×
	b5-15	PID Sleep Function Start Level	0.0 to 400.0	0.0 Hz	

	Refer to the A1000 Technical Manual for d				
Function	No.	Name	Range	Default	Changes during Run
,	b5-16	PID Sleep Delay Time	0.0 to 25.5	0.0 s	×
	b5-17	PID Accel/Decel Time	0 to 6000.0	0.0 s	×
	b5-18	PID Setpoint Selection	0, 1	0	×
	b5-19	PID Setpoint Value	0.00 to 100.00	0.00%	×
_	b5-20	PID Setpoint Scaling	0 to 3	1	×
PID Control	b5-34	PID Output Lower Limit	-100.0 to 100.0	0.0%	0
ပိ	b5-35	PID Input Limit	0.0 to 1000.0	1000.0%	0
은	b5-36	PID Feedback High Detection Level	0 to 100	100%	×
_	b5-37	PID Feedback High Detection Time	0.0 to 25.5	1.0 s	×
	b5-38	PID Setpoint User Display	1 to 60000	dep. on	×
	b5-39	PID Setpoint Display Digits	0 to 3	b5-20	×
	b5-40	Frequency Reference Monitor Content during PID	0, 1	0	×
ion	b6-01	Dwell Reference at Start	0.0 to 400.0	0.0 Hz	×
nuct	b6-02	Dwell Time at Start	0.0 to 10.0	0.0 s	×
Dwell Function	b6-03	Dwell Frequency at Stop	0.0 to 400.0	0.0 Hz	×
D.W.	b6-04	Dwell Time at Stop	0.0 to 10.0	0.0 s	×
t ob	b7-01	Droop Control Gain	0.0 to 100.0	0.0%	0
Droop Control	b7-02	Droop Control Delay Time	0.03 to 2.00	0.05 s	0
	b8-01	Energy Saving Control Selection	0, 1	*3	×
	b8-02	Energy Saving Gain	0.0 to 10.0	*3	0
aving	b8-03	Energy Saving Control Filter Time Constant	0.00 to 10.00	*3 *4	0
Energy Saving	b8-04	Energy Saving Coefficient Value	0.00 to 655.00	*4 dep. on E2-11	×
	b8-05	Power Detection Filter Time	0 to 2000	20 ms	×
	b8-06	Search Operation Voltage Limit	0 to 100	0%	×
0 0	b9-01	Zero Servo Gain	0 to 100	5	×
Zero Servo	b9-02	Zero Servo Completion Width	0 to 16383	10	×
	C1-01	Acceleration Time 1	0.0 to 6000.0*2	10.0 s	0
Acceleration and Deceleration Times	C1-02	Deceleration Time 1	0.0 to 6000.0*2	10.0 s	0
Ξ		Acceleration Time 2	0.0 to 6000.0*2	10.0 s	0
atio	C1-04	Deceleration Time 2	0.0 to 6000.0*2	10.0 s	0
eler		Acceleration Time 3 (Motor 2 Accel Time 1)	0.0 to 6000.0*2	10.0 s	0
)ec	C1-06	Deceleration Time 3 (Motor 2 Decel Time 1)	0.0 to 6000.0*2	10.0 s	0
nd	C1-07	Acceleration Time 4 (Motor 2 Accel Time 2)	0.0 to 6000.0*2	10.0 s	0
on a		Deceleration Time 4 (Motor 2 Decel Time 2)	0.0 to 6000.0*2	10.0 s	0
ratio	C1-09	Fast Stop Time	0.0 to 6000.0*2	10.0 s	×
ele	C1-10	Accel/Decel Time Setting Units	0, 1	1	×
Acc	C1-11	Accel/Decel Time Switching Frequency	0.0 to 400.0	0.0 Hz	×
"	C2-01		0.00 to 10.00		×
/e ristica	C2-02	S-Curve Characteristic at Accel End	0.00 to 10.00	0.20 s	×
S-Curve aracterist	C2-03	S-Curve Characteristic at Decel Start	0.00 to 10.00	0.20 s	×
S-Curve Characteristics	C2-04	S-Curve Characteristic at Decel End	0.00 to 10.00	0.00 s	×
	C3-04	Slip Compensation Gain	0.00 to 10.00	*3	$\hat{}$
	C3-02	Slip Compensation Primary Delay Time	0 to 10000	*3	0
	C3-03	Slip Compensation Limit	0 to 250	200%	×
ıtion	C3-04	Slip Compensation Selection	0 to 2	0	×
pensa	C3-05	during Regeneration Output Voltage Limit Operation Selection	0, 1	0	×
Slip Compensation	C3-21	Motor 2 Slip Compensation Gain	0.00 to 2.50	dep. on E3-01	0
Sij	C3-22	Motor 2 Slip Compensation Primary Delay Time	0 to 10000	*3	0
	C3-23	Motor 2 Slip Compensation Limit	0 to 250	200%	×
	C3-24	Motor 2 Slip Compensation Selection during Regeneration	0 to 2	0	×
Torque Compensation	C4-01	Torque Compensation Gain	0.00 to 2.50	*3	(PM mo- tor ×)
Jeu	C4-02	Torque Compensation Primary Delay Time	0 to 60000	*3 *4	0
Щ	C4-03	Torque Compensation at Forward Start	0.0 to 200.0	0.0%	×
ğ	C4-04	Torque Compensation at Reverse Start	-200.0 to 0.0	0.0%	×
Jane.	C4-05	Torque Compensation Time Constant	0 to 200	10 ms	×
卢	C4-06	Torque Compensation Primary Delay Time 2	0 to 10000	150 ms	×
l	C4-07	Motor 2 Torque Compensation Gain	0.00 to 2.50	1.00	0

^{*1:} Parameter is not reset to the default value when the drive is initialized (A1-03).
*2: Default value depends on other related parameter settings. Refer to A1000 Technical Manual for details.
*3: Default setting depends on the control mode (A1-02). Refer to A1000 Technical Manual for details.
*4: Default setting depends on drive capacity (o2-04). Refer to A1000 Technical Manual for details.



Function	No.	Name	Range	Default	Changes during Run
	C5-01	ASR Proportional Gain 1	0.00 to 300.00*1	*1	0
	C5-02	ASR Integral Time 1	0.000 to 10.000	*1	0
	C5-03	ASR Proportional Gain 2	0.00 to 300.00*1	*1	0
	C5-04	ASR Integral Time 2	0.000 to 10.000	*1	0
	C5-05	ASR Limit	0.0 to 20.0	5.0%	×
		ASR Primary Delay Time Constant	0.000 to 0.500	*1	×
	C5-07	0 1 ,	0.0 to 400.0	0.0 Hz	×
	C5-08	ASR Integral Limit	0 to 400	400%	×
≈	C5-12	Integral Value during Accel/Decel	0, 1	0	×
r (ASF	C5-17	Motor Inertia	0.0001 to 600.00	*2 *4 dep. on E5-01	×
ato	C5-18	Load Inertia Ratio	0.0 to 6000.0	1.0	×
Regul	C5-21	Motor 2 ASR Proportional Gain 1	0.00 to 300.00*1	dep. on E3-01	0
Speed	C5-22	Motor 2 ASR Integral Time 1	0.000 to 10.000	dep. on E3-01	0
Automatic Speed Regulator (ASR)	C5-23	Motor 2 ASR Proportional Gain 2	0.00 to 300.00*1	dep. on E3-01	0
Auto	C5-24	Motor 2 ASR Integral Time 2	0.000 to 10.000	dep. on E3-01*1	0
	C5-25	Motor 2 ASR Limit	0.0 to 20.0	5.0%	×
	C5-26	Motor 2 ASR Primary Delay Time Constant	0.000 to 0.500	0.004 s	×
	C5-27	Motor 2 ASR Gain Switching Frequency	0.0 to 400.0	0.0 Hz	×
	C5-28	Motor 2 ASR Integral Limit	0 to 400	400%	×
	C5-32	Integral Operation during Accel/ Decel for Motor 2	0, 1	0	×
	C5-37	Motor 2 Inertia	0.0001 to 600.00	*2 *4	×
	C5-38	Motor 2 Load Inertia Ratio	0.0 to 6000.0	1.0	×
	C6-01	Drive Duty Selection	0, 1	0	×
	C6-02	Carrier Frequency Selection	1 to F	*1 *2 *4	×
arrier	C6-03	Carrier Frequency Upper Limit	1.0 to 15.0	*4	×
Carrier	C6-04	Carrier Frequency Lower Limit	1.0 to 15.0	*4	×
O P	C6-05	Carrier Frequency Proportional Gain	0 to 99	*4	×
	C6-09	Carrier Frequency during Rotational Auto-Tuning	0, 1	0	×
	d1-01	Frequency Reference 1			0
	d1-02	Frequency Reference 2			0
	d1-03	Frequency Reference 3			0
	d1-04	Frequency Reference 4			0
	d1-05	Frequency Reference 5			0
9	d1-06	Frequency Reference 6			0
ren	d1-07	Frequency Reference 7			0
efe	d1-08	Frequency Reference 8	0.00 +- 400 000***	0.00	0
Frequency Reference	d1-09	Frequency Reference 9	0.00 to 400.00*1*4	0.00 Hz	0
3nc	d1-10	Frequency Reference 10			0
du	d1-11	Frequency Reference 11			0
Fre	d1-12	Frequency Reference 12			0
	d1-13	Frequency Reference 13			0
	d1-14	Frequency Reference 14			0
	d1-15	Frequency Reference 15			0
	d1-16	Frequency Reference 16			Ō
	d1-17	Jog Frequency Reference	0.00 to 400.00*1*4	6.00 Hz	Ō
,ued	d2-01	Frequency Reference Upper Limit		100.0%	×
Frequency Upper Lower Limits	d2-02	Frequency Reference Lower Limit		0.0%	×
-reque	d2-03	Master Speed Reference Lower Limit		0.0%	×
	50				

Function	No.	Name	Range	Default	Changes during Ru
>	d3-01	Jump Frequency 1			×
Jump Frequency	d3-02	Jump Frequency 2	0.0 to 400.0	0.0 Hz	×
	d3-03	Jump Frequency 3			×
ш.	d3-04	Jump Frequency Width	0.0 to 20.0	1.0 Hz	×
	d4-01	Freq. Ref. Hold Function Selection	0, 1	0	×
-	d4-03	Freq. Ref. Bias Step (Up/Down 2)	0.00 to 99.99	0.00 Hz	0
호텔	d4-04	Freq. Ref. Bias Accel/Decel (Up/Down 2)	0, 1	0	0
Frequency Reference Hold and Up/Down 2 Function	d4-05	Freq. Ref. Bias Operation Mode Selection (Up/Down 2)	0, 1	0	0
Refer wn 2	d4-06	Freq. Ref. Bias (Up/Down 2)	-99.9 to 100.0	0.0%	×
ency f Jp/Do	d4-07	Analog Freq. Ref. Fluctuation Limit (Up/Down 2)	0.1 to 100.0	1.0%	0
9 5 10 10 10 10 10 10 10 10 10 10 10 10 10	d4-08	Freq. Ref. Bias Upper Limit (Up/Down 2)	0.0 to 100.0	0.0%	0
a Fe	d4-09	Freq. Ref. Bias Lower Limit (Up/Down 2)	-99.9 to 0.0	0.0%	0
	d4-10	Up/Down Freq. Ref. Limit Selection	0, 1	0	×
	d5-01	Torque Control Selection	0, 1	0	×
	d5-02	Torque Reference Delay Time	0 to 1000	0 ms	×
a _	d5-03	Speed Limit Selection	1, 2	1	×
Torque	d5-04	Speed Limit	-120 to 120	0%	×
칠	d5-05	Speed Limit Bias	0 to 120	10%	×
	d5-06	Speed/Torque Control Switchover Time	0 to 1000	0 ms	×
ł	d5-08	Unidirectional Speed Limit Bias	0, 1	1	×
D D	d6-01	·	0, 1 0 to 100	80%	×
Field Weakening and Field Forcing		Field Weakening Level			
eak P	d6-02	Field Weakening Frequency Limit	0.0 to 400.0	0.0 Hz	×
Field Weakening and Field Forcing	d6-03	Field Forcing Selection	0, 1	0	×
ᆲ	d6-06	Field Forcing Limit	100 to 400	400%	×
ت و	d7-01	Offset Frequency 1			0
Offset	d7-02	Offset Frequency 2	-100.0 to 100.0	0.0%	0
Offset Frequency	d7-03	Offset Frequency 3			0
	E1-01	Input Voltage Setting	155 to 255	200 V *5	×
	E1-03	V/f Pattern Selection	0 to F*1	F*3	×
	E1-04	Maximum Output Frequency	40.0 to 400.0*1	*1 dep. on E5-01 for PM motor	×
	E1-05	Maximum Voltage	0.0 to 255.0*5	*1 dep. on E5-01 for PM motor	×
V/f Pattern for motor 1	E1-06	Base Frequency	0.0 to E1-04*1	¾1 dep. on E5-01 for PM motor	×
ttern fo	E1-07	Middle Output Frequency	0.0 to E1-04	*1	×
V/f Pa	E1-08	Middle Output Frequency Voltage	0.0 to 255.0*5	*1 *5	×
	E1-09	Minimum Output Frequency	0.0 to E1-04*1	*1 dep. on E5-01 for PM motor	×
	E1-10	Minimum Output Frequency Voltage	0.0 to 255.0*5	*1 *5	×
	E1-11	Middle Output Frequency 2	0.0 to E1-04*1*4	0.0 Hz	×
	E1-12	Middle Output Frequency Voltage 2	0.0 to 255.0*4*5	0.0 V	×
	E1-13	Base Voltage	0.0 to 255.0*5	0.0 V*4	×
		<u> </u>	<u> </u>	<u> </u>	

^{*1:} Default setting depends on the control mode (A1-02). Refer to the A1000 Technical Manual for details.

*2: Default setting depends on drive capacity (o2-04). Refer to the A1000 Technical Manual for details.

*3: Parameter is not reset to the default value when the drive is initialized (A1-03).

^{*4:} Default value depends on other related parameter settings. Refer to the A1000 Technical Manual for details. *5: Values shown here are for 200 V class drives. Double the value when using a 400 V class drive.



Parameter List (continued)

Function	No.	Name	Range	Default	Changes during Run
	E2-01	Motor Rated Current	10% to 200% of the drive	*1	×
			rated current*1		
	E2-02	Motor Rated Slip	0.00 to 20.00	*1	×
	E2-03	Motor No-Load Current	0 to E2-01*1	*1	×
ters	E2-04	Number of Motor Poles	2 to 48	4	×
ıme	E2-05	Motor Line-to-Line Resistance	0.000 to 65.000	*1	×
ara	E2-06	Motor Leakage Inductance	0.0 to 40.0	*1	×
Motor 1 Parameters	E2-07	Motor Iron-Core Saturation Coefficient 1	E2-07 to 0.50	0.50	×
Mo	E2-08	Motor Iron-Core Saturation Coefficient 2	E2-07 to 0.75	0.75	×
	E2-09	Motor Mechanical Loss	0.0 to 10.0	0.0%	×
	E2-10	Motor Iron Loss for Torque	0 to 65535	*1	×
	E2-10	Compensation	0 10 65555	<u>ጥ</u> 1	^
	E2-11	Motor Rated Power	0.00 to 650.00*2	*1	×
	E3-01	Motor 2 Control Mode Selection	0 to 3	0	×
	E3-04	Motor 2 Max. Output Frequency	40.0 to 400.0	dep. on E3-01	×
	E3-05	Motor 2 Max. Voltage	0.0 to 255.0*3	dep. on E3-01	×
7	E3-06	E3-06 Motor 2 Base Frequency 0.0 to E3-04		dep. on E3-01	×
V/f Pattern for Motor 2	E3-07	Motor 2 Mid Output Freq.	0.0 to E3-04	dep. on E3-01	×
ern for	E3-08	Motor 2 Mid Output Freq. Voltage	0.0 to 255.0*3	* 3 dep. on E3-01	×
//f Patt	E3-09	Motor 2 Min. Output Freq.	0.0 to E3-04	dep. on E3-01	×
	E3-10	Motor 2 Min. Output Freq. Voltage	0.0 to 255.0*3	* 3 dep. on E3-01	×
	E3-11	Motor 2 Mid Output Frequency 2	0.0 to E3-04*4	0.0*5	×
	E3-12	Motor 2 Mid Output Frequency Voltage 2	0.0 to 255.0*3	0.0*5	×
	E3-13	Motor 2 Base Voltage	0.0 to 255.0*3	0.0*5	×
	E4-01	Motor 2 Rated Current	10% to 200% of the drive rated current*1	*1	×
	E4-02	Motor 2 Rated Slip	0.00 to 20.00*1	*1	×
ers	E4-03	Motor 2 Rated No-Load Current	0 to E4-01*1	*1	×
met	E4-04	Motor 2 Motor Poles	2 to 48	4	×
ara	E4-05	Motor 2 Line-to-Line Resistance	0.000 to 65.000	*1	×
2 F	E4-06	Motor 2 Leakage Inductance	0.0 to 40.0	*1	×
Motor 2 Parameters	E4-07	Motor 2 Motor Iron-Core Saturation Coefficient 1	0.00 to 0.50	0.50	×
	E4-08	Motor 2 Motor Iron-Core Saturation Coefficient 2	E4-07 to 0.75	0.75	×
	E4-09	Motor 2 Mechanical Loss	0.0 to 10.0	0.0%	×
	E4-10	Motor 2 Iron Loss	0 to 65535	*1	×
	E4-11	Motor 2 Rated Capacity	0.00 to 650.00*2	*1	×
S	E5-01	Motor Code Selection	0000 to FFFF	*1 *4 *6	×
Setting	E5-02	Motor Rated Capacity	0.10 to 650.00*2	*6 dep. on E5-01	×
PM Motor Settings	E5-03	Motor Rated Current	10% to 200% of the drive rated current*1	*6 dep. on E5-01	×
ш	E5-04	Number of Motor Poles	2 to 48	*6 dep. on E5-01	×

Function	No.	Name	Range	Default	Changes during Run
	E5-05	Motor Stator Resistance	0.000 to 65.000	*6 dep. on E5-01	×
sbu	E5-06	Motor d-Axis Inductance	0.00 to 300.00	*6 dep. on E5-01	×
PM Motor Settings	E5-07	Motor q-Axis Inductance	0.00 to 600.00	*6 dep. on E5-01	×
M Mot	E5-09	Motor Induction Voltage Constant 1	0.0 to 2000.0	≭6 dep. on E5-01	×
<u>-</u>	E5-11	E5-11 Encoder Z Pulse Offset		0.0 deg	×
	E5-24	Motor Induction Voltage Constant 2	0.0 to 2000.0	*6 dep. on E5-01	×
	F1-01	PG 1 Pulses Per Revolution	0 to 60000	600 ppr	×
	F1-02	Operation Selection at PG Open Circuit (PGo)	0 to 3	1	×
	F1-03	Operation Selection at Overspeed (oS)	0 to 3	1	×
	F1-04	Operation Selection at Deviation	0 to 3	3	×
	F1-05	PG 1 Rotation Selection	0, 1	0	×
	F1-06	PG 1 Division Rate for PG Pulse Monitor	1 to 132	1	×
	F1-08	Overspeed Detection Level	0 to 120	115%	×
×	F1-09	Overspeed Detection Delay Time	0.0 to 2.0	*4	×
3/PG	F1-10	Excessive Speed Deviation Detection Level Excessive Speed Deviation	0 to 50	10%	×
PG Speed Control Card (PG-B3/PG-X3)	F1-11 F1-12	Detection Delay Time	0.0 to 10.0	0.5 s	×
<u>5</u>		PG 1 Gear Teeth 1	0 to 1000	0	×
Ca	F1-13	PG 1 Gear Teeth 2	0 to 1000	0	
ō	F1-14	PG Open-Circuit Detection Time	0.0 to 10.0	2.0 s	×
ŏ	F1-18	dv3 Detection Selection	0 to 10	10	×
8	F1-19	dv4 Detection Selection 0 to 5000		128	×
bee	F1-20	PG Option Card Disconnect Detection 1	0, 1	1	×
S	F1-21	PG 1 Signal Selection	0, 1	0	×
Z	F1-30	PG Card Option Port for Motor 2 Selection	0, 1	1	×
	F1-31	PG 2 Pulses Per Revolution	0 to 60000	1024 ppr	×
	F1-32	PG 2 Rotation Selection	0, 1	0	×
	F1-33	PG 2 Gear Teeth 1	0 to 1000	0	×
	F1-34	PG 2 Gear Teeth 2	0 to 1000	0	×
-	F1-35	PG 2 Division Rate for PG Pulse Monitor	1 to 132	1	×
	F1-36	PG Option Card Disconnect Detection 2	0, 1	1	×
Analog Input Card (AI-A3)	F1-37 F2-01	PG 2 Signal Selection Analog Input Option Card Operation Selection	0, 1	0	×
er er	F2-02	Analog Input Option Card Gain	-999.9 to 999.9	100.0%	0
	F2-03	Analog Input Option Card Bias	-999.9 to 999.9		0
Input II-A3)	F3-01	Digital Input Option Card Input Selection	0 to 7	0	×
Digital Input Card (DI-A3)	F3-03	Digital Input Option DI-A3 Data Length Selection	0 to 2	2	×
	F4-01	Terminal V1 Monitor Selection	000 to 999	102	×
ard	F4-02	Terminal V1 Monitor Gain	-999.9 to 999.9	100.0%	0
ပ္	F4-03	Terminal V2 Monitor Selection	000 to 999	103	×
Analog Monitor Card (AO-A3)	F4-04	Terminal V2 Monitor Gain	-999.9 to 999.9		0
Monito AO-A3)	F4-05	Terminal V1 Monitor Bias	-999.9 to 999.9	0.0%	0
₽ĕ	F4-05	Terminal V2 Monitor Bias	-999.9 to 999.9	0.0%	0
lalc	F4-07	Terminal V1 Signal Level	0, 1	0.070	×
₹	F4-08	Terminal V2 Signal Level	0, 1	0	×
<u></u>	F5-01	Terminal M1-M2 Output Selection	0 to 192	0	×
Ā	F5-02	Terminal M3-M4 Output Selection	0 to 192	1	×
8	F5-03	Terminal P1-PC Output Selection	0 to 192	2	×
<u>p</u>	F5-04	Terminal P2-PC Output Selection	0 to 192	4	×
Ca	F5-04 F5-05	Terminal P3-PC Output Selection	0 to 192	6	×
bnt	F5-05	·			×
Jut		Terminal P4-PC Output Selection	0 to 192	37	×
Digital Output Card (DO-A3)	F5-07	Terminal P5-PC Output Selection	0 to 192	F	
Jigit	F5-08	Terminal P6-PC Output Selection	0 to 192	F	×
	F5-09	DO-A3 Output Mode Selection	0 to 2	0	×

^{*1:} Default setting depends on drive capacity (o2-04). Refer to the A1000 Technical Manual for details.
*2: The setting value has two decimal places for drives up to 300 kW, and one decimal place for larger drives.
*3: Values shown here are for 200 V class drives. Double the value when using a 400 V class drive.

^{*4:} Default setting depends on the control mode (A1-02). Refer to the A1000 Technical Manual for details.

*5: Default value depends on other related parameter settings. Refer to the A1000 Technical Manual for details.

^{*6:} Parameter is not reset to the default value when the drive is initialized (A1-03).



Function	No.	Name	Range	Default	Changes during Rur
	F6-01	Communications Error Operation Selection	0 to 3	1	×
	F6-02	External Fault from Comm. Option Detection Selection	0, 1	0	×
	F6-03	External Fault from Comm.	0 to 3	1	×
	F6-04	Option Operation Selection bUS Error Detection Time	0.0 to 5.0	2.0 s	×
	F6-06	Torque Reference/Torque Limit Selection from Communications Option	0, 1	0	×
ard	F6-07	NetRef/ComRef Function Selection	0,1	0	×
ပ္ပို	F6-08	Reset Communication Parameters	0,1	0*1	×
tio	F6-10	CC-Link Node Address	0 to 64	0	×
o	F6-11	Communication Speed	0 to 4	0	×
tion	F6-14	CC-Link bUS Error Auto Reset	0, 1	0	×
ica	F6-30	PROFIBUS-DP Node Address	0 to 125	0	×
Communication Option Card	F6-31	PROFIBUS-DP Clear Mode Selection	0, 1	0	×
ပိ	F6-32	PROFIBUS-DP Data Format Selection	0, 1	0	×
	F6-35	CANopen Node ID Selection	0 to 127	0	×
	F6-36 F6-50	CANopen Communication Speed	0 to 8	6	×
	to F6-63	DeviceNet Parameters	_	_	×
	F6-64				
	to F6-71	Reserved	_	_	×
	H1-01	Multi-Function Digital Input Terminal S1 Function Selection	1 to 9F		×
	H1-02	Multi-Function Digital Input Terminal S2 Function Selection	1 to 9F	41 (F)*2	×
	H1-03	Multi-Function Digital Input Terminal S3 Function Selection	1 to 9F	24	×
nction nputs	H1-04	Multi-Function Digital Input Terminal S4 Function Selection	1 to 9F	14	×
Multi-Functior Digital Inputs	H1-05	Multi-Function Digital Input Terminal S5 Function Selection	1 to 9F	3 (0)*2	×
∑⊔	H1-06	Multi-Function Digital Input Terminal S6 Function Selection	1 to 9F	4 (3)*2	×
	H1-07	Multi-Function Digital Input Terminal S7 Function Selection	1 to 9F	6 (4)*2	×
	H1-08	Multi-Function Digital Input Terminal S8 Function Selection	1 to 9F	8	×
	H2-01	Terminals M1-M2 Function	0 to 192	0	×
ction	H2-02	Selection (relays) Terminal P1-PC Function	0 to 192	1	×
Multi-Function Digital Outputs	H2-03	Selection (photocoupler) Terminal P2-PC Function	0 to 192	2	×
ML	H2-06	Selection (photocoupler) Watt Hour Output Unit Selection	0 to 4	0	×
	H3-01	Terminal A1 Signal Level Selection	0, 1	0	×
ø	H3-02	Terminal A1 Function Selection	0 to 31	0	×
g Input					0
Multi-Function Analog Inputs	H3-03	Terminal A1 Rice Setting	-999.9 to 999.9		
Inction	H3-04	Terminal A1 Bias Setting Terminal A3 Signal Level	-999.9 to 999.9	0.0%	0
lulti-Fu	H3-05	Selection	0, 1	0	×
Σ	H3-06 H3-07	Terminal A3 Function Selection Terminal A3 Gain Setting	0 to 31 -999.9 to 999.9	2	×
	110-07	rommai Ao Gairi Setting	222.2 IU 339.9	100.070	\vdash

Function	No.	Name	Range	Default	Changes during Run
Multi-Function Analog Inputs	H3-09	Terminal A2 Signal Level Selection	I Selection 0 to 3		×
nalog	H3-10	Terminal A2 Function Selection	0 to 31	0	×
l A	H3-11	Terminal A2 Gain Setting	-999.9 to 999.9	100.0%	0
ctio	H3-12	Terminal A2 Bias Setting	-999.9 to 999.9	0.0%	0
l F	H3-13	Analog Input Filter Time Constant	0.00 to 2.00	0.03 s	×
Multi-	H3-14	Analog Input Terminal Enable Selection	1 to 7	7	×
	H4-01	Multi-Function Analog Output Terminal FM Monitor Selection	000 to 999	102	×
	H4-02	Multi-Function Analog Output Terminal FM Gain	-999.9 to 999.9	100.0%	0
Outputs	H4-03	Multi-Function Analog Output Terminal FM Bias	-999.9 to 999.9	0.0%	0
nalog (H4-04	Multi-Function Analog Output Terminal AM Monitor Selection	000 to 999	103	×
tion A	H4-05	Multi-Function Analog Output Terminal AM Gain	-999.9 to 999.9	50.0%	0
Multifunction Analog Outputs	H4-06	Multi-Function Analog Output Terminal AM Bias	-999.9 to 999.9	0.0%	0
Σ	H4-07	Multi-Function Analog Output Terminal FM Signal Level Selection	0, 1	0	×
	H4-08	Multi-Function Analog Output Terminal AM Signal Level Selection	0, 1	0	×
	H5-01	Drive Node Address	0 to FFH	1F	×
L L	H5-02	Communication Speed Selection	0 to 8	3	×
catio	H5-03	<u>'</u>		0	×
nmunic	H5-04 Stopping Method After Communication Error (CE)		0 to 2 0 to 3	0	×
MEMOBUS/Modbus Serial Communication	H5-05	Communication Fault Detection Selection	0, 1	0	×
Se	H5-06	Drive Transmit Wait Time	5 to 65	5 ms	×
snq	H5-07	RTS Control Selection	0, 1	1	×
lod	H5-09	CE Detection Time	0.0 to 10.0	2.0 s	×
BUS/N	H5-10	Unit Selection for MEMOBUS/ Modbus Register 0025H	0, 1	0	×
MEMO	H5-11	Communications ENTER Function Selection	0, 1	1	×
_	H5-12	Run Command Method Selection	0, 1	0	×
	H6-01	Pulse Train Input Terminal RP Function Selection	0 to 3	0	×
	H6-02	Pulse Train Input Scaling	1000 to 32000	1440 Hz	0
out		Pulse Train Input Gain	0.0 to 1000.0		0
)ut	H6-04	·	-100.0 to 100.0		0
ut/C	H6-05	·	0.00 to 2.00	0.10 s	0
Pulse Train Input/Output	H6-06	Pulse Train Monitor Selection	000 to 502	102	0
<u>ا</u> م	H6-07	Pulse Train Monitor Scaling	0 to 32000	1440 Hz	0
	H6-08	Pulse Train Input Minimum Frequency	0.1 to 1000.0	0.5 Hz	×
	L1-01	Motor Overload Protection Selection	0 to 5	*4	×
K	L1-02	Motor Overload Protection Time	0.1 to 5.0	1.0 min.	×
Motor Protection	L1-03	Motor Overheat Alarm Operation Selection (PTC input)	0 to 3	3	×
lotor Pı	L1-04	Motor Overheat Fault Operation Selection (PTC input)	0 to 2	1	×
∑	L1-05	Motor Temperature Input Filter Time (PTC input)	0.00 to 10.00	0.20 s	×
	L1-13	Continuous Electrothermal Operation Selection	0, 1	1	×

^{*1:} Parameter is not reset to the default value when the drive is initialized (A1-03).

*2: Value in parenthesis is the default setting for a 3-wire sequence.

*3: Default value depends on other related parameter settings. Refer to the A1000 Technical Manual for details.

*4: Default setting depends on the control mode (A1-02). Refer to the A1000 Technical Manual for details.



Parameter List (continued)

Function	No.	Name	Range	Default	Online Changing
	L2-01	Momentary Power Loss Operation Selection	0 to 5	0	×
	L2-02	Momentary Power Loss Ride-Thru Time	0.0 to 25.5	*1	×
	L2-03	Momentary Power Loss Minimum Baseblock Time	0.1 to 5.0	*1	×
Thru	L2-04	Momentary Power Loss Voltage Recovery Ramp Time	0.0 to 5.0	*1	×
Momentary Power Loss Ride-Thru	L2-05	Undervoltage Detection Level (Uv1)	150 to 210*2	*1*4 dep. on E1-01	×
y Pc	L2-06	KEB Deceleration Time	0.00 to 6000.00*3	0.00 s	×
tan					×
ner	L2-07	KEB Acceleration Time	0.00 to 6000.00*3	0.00 s	
Jon	L2-08	Frequency Gain at KEB Start	0 to 300	100%	×
_	L2-10	KEB Detection Time	0 to 2000	52 ms	×
	L2-11	DC Bus Voltage Setpoint during KEB	150 to 400*2	*2 reset by E1-01, E-01 × 1.22	×
Ì	L2-29	KEB Method Selection	0 to 3	0	×
	L3-01	Stall Prevention Selection during Acceleration	0 to 2	1	×
	L3-02 Stall Prevention Level during Acceleration		0 to 150*3	*3	×
Ì	L3-03	Stall Prevention Limit during Acceleration	0 to 100	50%	×
	L3-04	Stall Prevention Selection during Deceleration	0 to 5*4	1	×
	L3-05	Stall Prevention Selection during Run	0 to 2	1	×
}	L3-06	Stall Prevention Level during Run	30 to 150*3	*3	×
	L3-11	Overvoltage Suppression Function Selection	0, 1	0	×
ntion	L3-17	Target DC Bus Voltage for Overvoltage Suppression and Stall Prevention	150 to 400*2 dep. on E1-01, reset by E1-01	370 Vdc dep. on E1-01	×
Stall Prevention	L3-20	3-20 DC Bus Voltage Adjustment Gain 0.00 to 5.0		*4	×
Ste	L3-21	Accel/Decel Rate Calculation Gain	0.10 to 200.0	*4	×
	L3-22	Deceleration Time at Stall Prevention during Acceleration	0.0 to 6000.0	0.0 s	×
	L3-23	Automatic Reduction Selection for Stall Prevention during Run	0, 1	0	×
	L3-24	Motor Acceleration Time for Inertia Calculations	0.001 to 10.000	* 1 dep. on E2-11 dep. on E5-01	×
	L3-25	Load Inertia Ratio	0.0 to 1000.0	1.0	×
Ì	L3-26	Additional DC Bus Capacitors	0 to 65000	0 <i>μ</i> F	×
	L3-27	Stall Prevention Detection Time	0 to 5000	50 ms	×
	L4-01	Speed Agreement Detection Level	0.0 to 400.0	0.0 Hz	×
ł	L4-02	Speed Agreement Detection Width	0.0 to 20.0	2.0 Hz	×
Ę	L4-03	Speed Agreement Detection Level (+/-)	-400.0 to 400.0	0.0 Hz	×
cţi	L4-03	Speed Agreement Detection Width (+/-)	0.0 to 20.0		×
ete	L4-04		0.0 10 20.0	2.0 Hz	^
	L4-05	Frequency Reference Loss Detection Selection	0, 1	0	×
eed D		Frequency Reference at	0.0 to 100.0	80.0%	×
Speed Detection	L4-06	Reference Loss	0.0 10 100.0		
Speed D	L4-06 L4-07		0, 1	0	×
		Reference Loss			×
Fault Reset Speed D	L4-07	Reference Loss Speed Agreement Detection Selection	0, 1	0	

Function	No.	Name	Range	Default	Online Changing
	L6-01	Torque Detection Selection 1	0 to 8	0	×
	L6-02	Torque Detection Level 1	0 to 300	150%	×
ڃ	L6-03	Torque Detection Time 1	0.0 to 10.0	0.1 s	×
Torque Detection	L6-04	Torque Detection Selection 2	0 to 8	0	×
ete	L6-05	Torque Detection Level 2	0 to 300	150%	×
e l	L6-06	Torque Detection Time 2	0.0 to 10.0	0.1 s	×
Jr G	L6-08	Mechanical Weakening Detection Operation	0 to 8	0	×
₽ [L6-09	Mechanical Weakening Detection Speed Level	- 110.0 to 110.0	110.0%	×
	L6-10	Mechanical Weakening Detection Time	0.0 to 10.0	0.1 s	×
	L6-11	Mechanical Weakening Detection Start Time	0 to 65535	0	×
	L7-01	Forward Torque Limit	0 to 300	200%	×
. <u>.</u>	L7-02	Reverse Torque Limit	0 to 300	200%	×
Ë.	L7-03	Forward Regenerative Torque Limit	0 to 300	200%	×
- P	L7-04	Reverse Regenerative Torque Limit	0 to 300	200%	×
Torque Limit	L7-06	Torque Limit Integral Time Constant	5 to 10000	200 ms	×
۲	L7-07	Torque Limit Control Method Selection during Accel/Decel	0, 1	0	×
	L8-01	Internal Dynamic Braking Resistor Protection Selection (ERF type)	0, 1	*1	×
ľ	L8-02	Overheat Alarm Level	50 to 130	*1	×
ł	L8-03	Overheat Pre-Alarm Operation Selection	0 to 4	3	×
ŀ	L8-05	Input Phase Loss Protection Selection	0, 1	0	×
ł	L8-07	Output Phase Loss Protection	0 to 2	0	×
}	L8-09	Output Ground Fault Detection Selection	0, 1	*1	×
ŀ	L8-10	Heatsink Cooling Fan Operation Selection	0, 1	0	×
	L8-11	Heatsink Cooling Fan Off Delay Time	0 to 300	60 s	×
۾	L8-12	Ambient Temperature Setting	-10 to 50	40°C	×
Drive Protection	L8-15	oL2 Characteristics Selection at Low Speeds	0, 1	1	×
rote	L8-18	Software Current Limit Selection	0, 1	0	×
<u>-</u>	L8-19	Frequency Reduction Rate during oH Pre-Alarm	0.1 to 0.9	0.8	×
)riv	L8-27	Overcurrent Detection Gain	0.0 to 300.0	300.0%	×
	L8-29	Current Unbalance Detection (LF2)	0,0 10 300.0	1	×
,	L8-35	Installation Method Selection	0 to 3	*1 *5	×
	L8-38	Carrier Frequency Reduction Selection 0 to 2		*1*4	×
	L8-40	Carrier Frequency Reduction Off DelayTime 0.00 to 2.00		0.50 s	×
	L8-41	High Current Alarm Selection 0, 1		0	×
	L8-55	Internal Braking Transistor Protection	0,1	1	×
۲	n1-01	Hunting Prevention Selection	0, 1	1	×
nting vention	n1-02	Hunting Prevention Gain Setting	0.00 to 2.50	1.00	×
	n1-03	Hunting Prevention Time Constant	0 to 500	*1	×
Hur Pre	n1-05	Hunting Prevention Gain while in Reverse	0.00 to 2.50	0.00	
DetectionTuning	n2-01	Speed Feedback Detection Control (AFR) Gain	0.00 to 10.00	1.00	×
dbac	n2-02	Speed Feedback Detection Control (AFR) Time Constant 1	0 to 2000	50 ms	×
Speed Fee Control	n2-03	Speed Feedback Detection Control (AFR) Time Constant 2	0 to 2000	750 ms	×
- D	n3-01	High-Slip Braking Deceleration Frequency Width	1 to 20	5%	×
an kin	n3-02	High-Slip Braking Current Limit	100 to 200	*3	×
ing Bra	n3-03	High-Slip Braking Dwell Time at Stop	0.0 to 10.0	1.0 s	×
울 등	n3-04	High-Slip Braking Overload Time	30 to 1200	40 s	×
p B itati	n3-13	Overexcitation Deceleration Gain	1.00 to 1.40	1.10	×
High Slip Braking and Overexcitation Braking	n3-14	High Frequency Injection during Overexcitation Deceleration	0, 1	0	×
Ξó	n3-21	High-Slip Suppression Current Level	0 to 150	100%	×
ŀ	n3-23	Overexcitation Operation Selection	0 to 130	0	×
g		Feed Forward Control Selection			×
Feed Forward Control	n5-01 n5-02	Motor Acceleration Time	0, 1 0.001 to	*1	×
Feed F		Feed Forward Control Gain	10.000 0.00 to 100.00	dep. on E5-01	×
		•			

^{*1:} Default setting depends on drive capacity (o2-04). Refer to the A1000 Technical Manual for details.

*2: Values shown here are for 200 V class drives. Double the value when using a 400 V class drive.

*3: Default value depends on other related parameter settings. Refer to the A1000 Technical Manual for details.

*4: Default setting depends on the control mode (A1-02). Refer to the A1000 Technical Manual for details.

*5: Parameter is not reset to the default value when the drive is initialized (A1-03).



Function	No.	Name	Range	Default	Online Changing
Online Tuning	n6-01	Online Tuning Selection	0 to 2	2	×
Online	n6-05 Online Tuning Gain		0.10 to 5.00	1.00	×
	n8-01	Initial Rotor Position Estimation Current	0 to 100	50%	×
	n8-02	Pole Attraction Current	0 to 150	80%	×
_	n8-35 Initial Rotor Position Detection Selection n8-45 Speed Feedback Detection Control Gain		0 to 2 0.00 to 10.00	0.80	×
ning	n8-47	Pull-In Current Compensation Time Constant	0.0 to 100.0	5.0 s	×
₽ [n8-48	Pull-In Current	20 to 200	30%	×
PM Motor Control Tuning	n8-49	d-Axis Current for High Efficiency Control	-200.0 to 0.0	dep. on E5-01	×
tor	n8-51	Acceleration/Deceleration Pull-In Current	0 to 200	50%	×
Σ	n8-54	Voltage Error Compensation Time Constant		1.00 s	×
₽	n8-55	Load Inertia	0 to 3	0	×
	n8-57 n8-62	High Frequency Injection Output Voltage Limit	0, 1 0.0 to 230.0*1	O 200.0 Vac	×
	n8-65	Speed Feedback Detection Control Gain during ov Suppression	0.00 to 10.00	1.50	×
	o1-01	Drive Mode Unit Monitor Selection	104 to 809	106	0
ılay	o1-02	User Monitor Selection After Power Up	1 to 5	1	0
Jish	o1-03 Digital Operator Display Selection		0 to 3	0	×
Operator E Selection	o1-04	V/f Pattern Display Unit	0, 1	0	×
Digital Operator Display Selection	o1-10	User-Set Display Units Maximum Value	1 to 60000	*2	×
Digi	o1-11	User-Set Display Units Decimal Display	0 to 3	*2	×
SL	o2-01	LO/RE Key Function Selection	0, 1	1	×
tioi	o2-02	STOP Key Function Selection	0, 1	1	×
<u>'</u> in	o2-03	User Parameter Default Value	0 to 2	0	×
ypad F	o2-04	Drive Model Selection	_	dep. on drive capacity	×
igital Operator Keypad Functions	o2-05	Frequency Reference Setting Method Selection	0, 1	0	×
per	o2-06	Operation Selection when Digital Operator is Disconnected	0, 1	0	×
gital O	o2-07	Motor Direction at Power Up when Using Operator	0, 1	0	×
i	o2-09	Reserved	-	_	×
py ction	o3-01	Copy Function Selection	0 to 3	0	×
Copy Function	03-02	Copy Allowed Selection	0, 1	0	×
SÉ	o4-01	Cumulative Operation Time Setting	0 to 9999	0 H	×
tting	04-02	Cumulative Operation Time Selection	0, 1	0	×
Maintenance Monitor Settings	04-03	Cooling Fan Operation Time Setting	0 to 9999	0 H	×
/lon	o4-05	Capacitor Maintenance Setting	0 to 150	0%	×
_ Se	04-07	DC Bus Pre-charge Relay Maintenance Setting	0 to 150	0%	×
lanc	04-09	IGBT Maintenance Setting	0 to 150	0%	×
) ten	04-11	U2, U3 Initialize Selection	0, 1	0	×
//air	04-12	kWh Monitor Initialization	0, 1	0	×
	04-13	Number of Run Commands Counter Initialization	0, 1	0	×
DWEZ Parameters	q1-01 to q6-07	DWEZ Parameters	-	-	0

Function	No.	Name	Range	Default	Online Changing
DWEZ Connection Parameters	r1-01 to r1-40	DWEZ Connection Parameter 1 to 20 (upper/lower)	0 to FFFFH	0	×
	T1-00	Motor 1 / Motor 2 Selection	1, 2	1	×
	T1-01	Auto-Tuning Mode Selection	0 to 4,8,9*5	0	×
	T1-02	Motor Rated Power	0.00 to 650.00	*3	×
uning	T1-03	Motor Rated Voltage	0.0 to 255.0*1	200.0 Vac	×
Induction Motor Auto-Tuning	T1-04	Motor Rated Current	10% to 200% of the drive rated current	*3	×
tion	T1-05	Motor Base Frequency	0.0 to 400.0	60.0 Hz	×
duc	T1-06	Number of Motor Poles	2 to 48	4	×
Ĕ	T1-07	Motor Base Speed	0 to 24000	1750 r/min	×
	T1-08	PG Number of Pulses Per Revolution	0 to 60000	600 ppr	×
	T1-09	Motor No-Load Current (Stationary Auto-Tuning)	0 to T1-04	_	-
			0.00 to 20.00	-	-
	T1-11	Motor Iron Loss	0 to 65535	14 W*2	×
	T2-01	PM Motor Auto-Tuning Mode Selection	0 to 3,8,9*5	0	×
	T2-02	PM Motor Code Selection	0000 to FFFF	*3 *5	×
	T2-03	PM Motor Type	0,1	1	×
	T2-04	PM Motor Rated Power	0.00 to 650.00	*3	×
	T2-05	PM Motor Rated Voltage	0.0 to 255.0	200.0 Vac	×
PM Motor Auto-Tuning	T2-06	PM Motor Rated Current	10% to 200% of the drive rated current	*3	×
to-1	T2-07	PM Motor Base Frequency	0.0 to 400.0	87.5 Hz	×
. Au	T2-08	Number of PM Motor Poles	2 to 48	6	×
otor	T2-09	PM Motor Base Speed	0 to 24000	1750 r/min	×
PM M	T2-10	PM Motor Stator Resistance	0.000 to 65.000	*6	×
	T2-11	PM Motor d-Axis Inductance	0.00 to 600.00	*6	×
	T2-12	PM Motor q-Axis Inductance	0.00 to 600.00	*6	×
	T2-13	Induced Voltage Constant Unit Selection	0,1	1	×
	T2-14	PM Motor Induced Voltage Constant	0.1 to 2000.0	*6	×
	T2-15	Pull-In Current Level for PM Motor Tuning	0 to 120	30%	_
	T2-16	PG Number of Pulses Per Revolution for PM Motor Tuning	0 to 60000	1024 ppr	_
	T2-17	Encoder Z Pulse Offset	-180.0 to	0.0°	×
<u>.</u>	T3-01	Test Signal Frequency	0.1 to 20.0*2	3.0 Hz	×
ASR and Inertia Tuning	T3-02	Test Signal Amplitude	0.1 to 10.0*2	0.5 rad	×
SR an Tun	T3-03	Motor Inertia	0.0001 to	*3	×
<	T2 04	System Possesso Francisco	600.00*6	dep. on E5-01	
T3-04 System Response Frequency 0.1 to 50.0*6 10.0 Hz				×	

- *1: Values shown here are for 200 V class drives. Double the value when using a 400 V class drive.

 *2: Default value depends on other related parameter settings. Refer to the A1000 Technical Manual for details.

 *3: Default setting depends on drive capacity (o2-04). Refer to the A1000 Technical Manual for details.

 *4: Parameter is not reset to the default value when the drive is initialized (A1-03).


 *5: Default setting depends on the control mode (A1-02). Refer to the A1000 Technical Manual for details.

 *6: Default setting is determined by the drive capacity and the motor code selected in T2-02.

Basic Instructions

Outstanding operability and quick setup

Operator Names and Functions

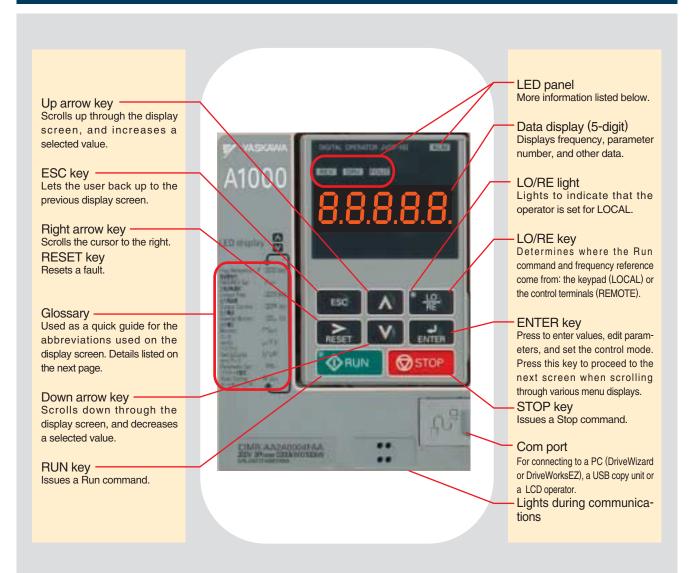




LED Display Guide

LED	ON	Flashing	OFF
ALM	A fault has occurred.	Alarm situation detected. Operator error (OPE)	Normal operation
REV	Motor is rotating in reverse.		Motor is rotating forward.
DRV	In the "Drive Mode"	_	Programming Mode
FOUT	Output frequency	<u> </u>	_
LO RE	Run command assigned to the operator (LOCAL)	_	Control assigned to remote location
⊕ RUN	During run	During deceleration Run command is present but the frequency reference is zero.	Drive is stopped.

How the RUN light works:




Operation Example

Using the LED Operator to Run the Drive

Drive Mode: Run and Stop commands, displays operation status such as the frequency reference, output frequency, output current, output voltage, etc.

How to Monitor the Frequency Reference

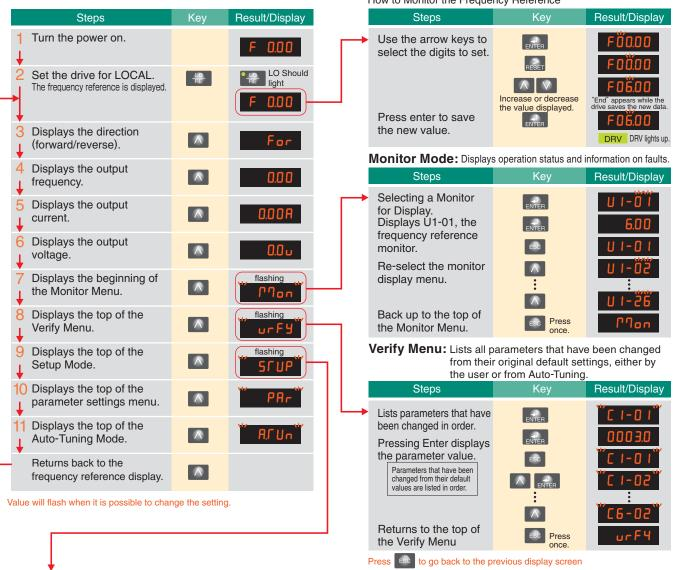

Setup Mode

The list of Applications Presets can be accessed in the Setup Mode. Each Application Preset automatically programs drive parameters to their optimal settings specific to the application selected. All parameters affected by the Application Preset are then listed as Preferred Parameters for quick access.

r (A1-06-1)

Selecting a Conveyor (A1-0	06=1)	
Steps	Key	Result/Display
Application Selection	ENTER	" APPL"
	ENTER	ÕO
	RESET	oö
Select, "Conveyor".	\wedge	"End" appears while the
All parameters relating to the preset values for a Conveyor application are then listed as	ENTER	drive saves the new data.
Preferred Parameters.	Scroll to the Preferred Parameter using the up arrow key and see which parameters have been selected.	

Conveyor Application Presets

No.	Parameter Name	Optimum Setting
A1-02	Control Method Selection	0: V/f Control
C1-01	Acceleration Time 1	3.0 (s)
C1-02	Deceleration Time 1	3.0 (s)
C6-01	Duty Mode Selection	0: Heavy Duty (HD)
L3-04	Stall Prevention Selection during Deceleration	1: Enabled

Preferred Parameters

No.	Parameter Name	No.	Parameter Name
A1-02	Control Method Selection	C1-02	Deceleration Time 1
b1-01	Frequency Reference Selection 1	E2-01	Motor Rated Current
b1-02	Run Command Selection 1	L3-04	Stall Prevention Selection during Deceleration
C1-01	Acceleration Time 1	_	_



Standard Specifications

Parameter C6-01 sets the drive for Normal Duty or Heavy Duty performance (default).

200 V Class

Mo	odel CIMR-A	AA2A		0004	0006	0008*7	0010	0012	0018*7	0021	0030	0040	0056	0069	0081	0110	0138	0169	0211	0250	0312	0360	0415
Ma	x. Applicable		Normal Duty	0.75	1.1	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	110
Mo	tor Capacity*1	kW	Heavy Duty	0.4	0.75	1.1	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110
put	Rated Input		Normal Duty	3.9	7.3	8.8	10.8	13.9	18.5	24	37	52	68	80	92	111	136	164	200	271	324	394	471
녈	Current*2	Α	Heavy Duty	2.9	5.8	7	7.5	11	15.6	18.9	28	37	52	68	80	82	111	136	164	200	271	324	394
	Rated Output		Normal Duty*4	1.3	2.3	3	3.7	4.6	6.7	8	11.4	15.2	21	26	31	42	53	64	80	95	119	137	158
	Capacity*3	kVA	Heavy Duty	1.2*5	1.9*5	2.6*5	3*5	4.2*5	5.3*5	6.7*5	9.5*5	12.6*5	17.9*5	23*5	29*5	32*5	44*5	55*5	69*6	82*6	108*6	132*6	158*4
	Rated Output		Normal Duty*4	3.5	6	8	9.6	12	17.5	21	30	40	56	69	81	110	138	169	211	250	312	360	415
	Current	Α	Heavy Duty	3.2*5	5*5	6.9*5	8*5	11*5	14*5	17.5*5	25*5	33*5	47*5	60*5	75*5	85*5	115*5	145*5	180*6	215*6	283*6	346*6	415*4
Output	Overload Tole	rance	•						avy [Outy F	Rating	j: 150)% of	f rated rated red fo	outp	ut cui	rent f	for 60					
	Carrier Freque	ency									2	2 to 1	5 kHz	z (use	r-set))							
	Max. Output V	/oltag	je						Thre	e-pha	se 20	00 to	240 V	/ (rela	tive t	o inpi	ut vol	tage)					
	Max. Output F	requ	ency									400) Hz (user-	set)								
	Rated Voltage	/Rate	d Frequency					Т	hree-	phas	e 200	to 24	40 Va	c 50/	60 Hz	270	to 34	40 Vd	С				
er	Allowable Volt	age I	Fluctuation									-1	5% to	o +10	%								
8	Allowable Fred	quenc	y Fluctuation										±5	5%									
	Power Supply	kVA	Normal Duty	2.2	3.1	4.1	5.8	7.8	9.5	14	18	27	36	44	52	51	62	75	91	124	148	180	215
	Fower Supply	NVA	Heavy Duty	1.3	2.2	3.1	4.1	5.8	7.8	9.5	14	18	27	36	44	37	51	62	75	91	124	148	180
Hai	monic Suppression	DC I	Reactor						Opt	ion									Bui	lt-in			
Bra	king Function	Brak	ing Resistor							Bui	lt-in									Opt	tion		

^{*1:} The motor capacity (kW) refers to a Yaskawa 4-pole, 60 Hz, 200 V motor. The rated output current of the drive output amps should be equal to or greater than the motor rated current.

- *4: This value assumes a carrier frequency of 2 kHz. Increasing the carrier frequency requires a reduction in current.
- *5: This value assumes a carrier frequency of 8 kHz. Increasing the carrier frequency requires a reduction in current.
- *6: This value assumes a carrier frequency of 5 kHz. Increasing the carrier frequency requires a reduction in current.
- *7: These models are available in Japan only.

400 V Class

M	odel CIMR-A	4 A4A		0002	0004	0005	0007	0009	0011	0018	0023	0031	0038	0044	0058	0072	0088	0103	0139	0165	0208	0250	0296	0362
Ma	x. Applicable		Normal Duty	0.75	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	185
Mo	otor Capacity*1	kW	Heavy Duty	0.4	0.75	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160
put	Rated Input		Normal Duty	2.1	4.3	5.9	8.1	9.4	14	20	24	38	44	52	58	71	86	105	142	170	207	248	300	346
트	Current*2	Α	Heavy Duty	1.8	3.2	4.4	6	8.2	10.4	15	20	29	39	44	43	58	71	86	105	142	170	207	248	300
	Rated Output		Normal Duty*4	1.6	3.1	4.1	5.3	6.7	8.5	13.3	17.5	24	29	34	44	55	67	78	106	126	159	191	226	276
	Capacity*3	kVA	Heavy Duty	1.4*5	2.6*5	3.7*5	4.2*5	5.5*5	7*5	11.3*5	13.7*5	18.3*5	24*5	30*5	34*5	46*5	57*5	69*5	85*5	114*6	137*6	165*6	198*6	232*6
	Rated Output		Normal Duty*4	2.1	4.1	5.4	6.9	8.8	11.1	17.5	23	31	38	44	58	72	88	103	139	165	208	250	296	362
	Current	Α	Heavy Duty	1.8*5	3.4*5	4.8*5	5.5*5	7.2*5	9.2*5	14.8*5	18*5	24*5	31*5	39*5	45*5	60*5	75*5	91*5	112*5	150*6	180*6	216*6	260*6	304*6
Output	Overload Tole	rance	e						leavy	Duty	Rati	ng: 1	50%	of ra	ated o ted or d for r	utput	curre	ent fo	r 60 s					
	Carrier Freque	ency										2 to	15 k	Hz (ι	user-s	set)								
	Max. Output V	/oltag	je						Thr	ee-pl	nase	380 1	to 480) V (r	elativ	e to i	nput	volta	ge)					
	Max. Output F	requ	ency									4	00 H	z (us	er-se	t)								
	Rated Voltage	/Rate	d Frequency						Thre	e-pha	ise 3	80 to	480	Vac 5	0/60	Hz 5	510 to	o 680	Vdc					
ē	Allowable Volt	tage I	Fluctuation										-15%	6 to +	-10%									
Powe	Allowable Fred	quenc	y Fluctuation											±5%										
-	Power Supply	. L\/^	Normal Duty	2.3	4.3	6.1	8.1	10	14.4	19.4	28.4	37.5	46.6	54.9	53	64.9	78.6	96	129.9	155.5	189.3	226.8	274.4	316.4
	1 Ower Supply	KVA	Heavy Duty	1.4	2.3	4.3	6.1	8.1	10	14.6	19.2	28.4	37.5	46.6	39.3	53	64.9	78.6	96	129.9	155.5	189.3	226.8	274.4
На	monic Suppression	DC I	Reactor					(Option	1									Bui	lt-in				
Br	aking Function	Brak	ing Resistor						Е	Built-ii	า									Opt	tion			

^{*1:} The motor capacity (kW) refers to a Yaskawa 4-pole, 60 Hz, 400 V motor. The rated output current of the drive output amps should be equal to or greater than the motor rated current.

- *4: This value assumes a carrier frequency of 2 kHz. Increasing the carrier frequency requires a reduction in current.
- *5: This value assumes a carrier frequency of 8 kHz. Increasing the carrier frequency requires a reduction in current.
- *6: This value assumes a carrier frequency of 5 kHz. Increasing the carrier frequency requires a reduction in current.

^{*2:} Value displayed is for when operating at the rated output current. This value may fluctuate based on the power supply side impedance, as well as the input current, power supply transformer, input side reactor, and wiring conditions.
*3: Rated output capacity is calculated with a rated output voltage of 220 V.

^{*2:} Value displayed is for when operating at the rated output current. This value may fluctuate based on the power supply side impedance, as well as the input current, power supply transformer, input side reactor, and wiring conditions.
*3: Rated output capacity is calculated with a rated output voltage of 440 V.



Common Specifications

Co	mmon Specifications	
	Item	Specifications
	Control Method	V/f Control, V/f Control with PG, Open Loop Vector Control, Closed Loop Vector Control with PG, Open Loop Vector Control for PM, Advanced Open Loop Vector Control for PM, Closed Loop Vector Control for PM
	Frequency Control Range	0.01 to 400 Hz
	Frequency Accuracy	Digital reference: within $\pm 0.01\%$ of the max. output frequency (-10 to $+40^{\circ}$ C)
	(Temperature Fluctuation)	Analog reference: within $\pm 0.1\%$ of the max. output frequency (25°C ± 10 °C)
	Frequency Setting Resolution	Digital reference: 0.01 Hz Analog reference: 0.03 Hz / 60 Hz (11 bit)
	Output Frequency Resolution	0.001 Hz
	Frequency Setting Resolution	-10 to +10 V, 0 to +10 V, 4 to 20 mA, pulse train
	Starting Torque	150%/3 Hz (V/f Control and V/f Control with PG), 200%/0.3 Hz*1 (Open Loop Vector Control), 200%/0 r/min*1 (Closed Loop Vector Control, Closed Loop Vector Control for PM, and Advanced Open Loop Vector Control for PM), 100%/5% speed (Open Loop Vector Control for PM)
Characteristics	Speed Control Range	1:1500 (Closed Loop Vector Control and Closed Loop Vector Control for PM) 1:200 (Open Loop Vector Control) 1:40 (V/f Control and V/f Control with PG) 1:20 (Open Loop Vector Control for PM) 1:100 (Advanced Open Loop Vector Control for PM)
ırac	Spood Control Aggregation	±0.2% in Open Loop Vector Control (25°C ±10°C) *2, ±0.02% in Closed Loop Vector Control (25°C±10°C)
Cha	Speed Control Accuracy	
Control	Speed Response	10 Hz in Open Loop Vector Control (25°C ±10°C), 50 Hz in Closed Loop Vector Control (25°C±10°C) (excludes temperature fluctuation when performing Rotational Auto-Tuning)
ပြ	Torque Limit	All vector control modes allow separate settings in four quadrants
	Accel/Decel Time	0.00 to 6000.0 s (4 selectable combinations of independent acceleration and deceleration settings)
	Braking Torque	Drives of 200/400 V 30 kW or less have a built-in braking transistor. ① Short-time decel torque*3: over 100% for 0.4/ 0.75 kW motors, over 50% for 1.5 kW motors, and over 20% for 2.2 kW and above motors (Overexcitation Deceleration, High Slip Braking: approx. 40%) ② Continuous regen. torque: approx. 20% (approx. 125% with dynamic braking resistor option*4: 10% ED,10 s, internal braking transistor)
	V/f Characteristics	User-selected programs and V/f preset patterns possible
	Main Control Functions	Torque Control, Droop Control, Speed/Torque Control switch, Feed Forward Control, Zero Servo Control, Momentary Power Loss Ride-Thru, Speed Search, Overtorque detection, torque limit, 17 Step Speed (max.), accel/decel time switch, S-curve accel/decel, 3-wire sequence, Auto-Tuning (rotational, stationary), Online Tuning, Dwell, cooling fan on/off switch, slip compensation, torque compensation, Frequency Jump, Upper/lower limits for frequency reference, DC Injection Braking at start and stop, Overexcitation Deceleration, High Slip Braking, PID control (with Sleep function), Energy Saving Control, MEMOBUS comm. (RS-485/422, max. 115.2 kbps), Fault Restart, Application Presets, DriveWorksEZ (customized functions), Removable Terminal Block with Parameter Backup
	Motor Protection	Motor overheat protection based on output current
	Momentary Overcurrent Protection	Drive stops when output current exceeds 200% of Heavy Duty rating
	Overload Protection	Drive stops after 60 s at 150% of rated output current (Heavy Duty rating)*5
nction	Overvoltage Protection	200 V class: Stops when DC bus exceeds approx. 410 V, 400 V class: Stops when DC bus exceeds approx. 820 V
	Undervoltage Protection	200 V class: Stops when DC bus exceeds approx. 190 V, 400 V class: Stops when DC bus exceeds approx. 380 V
Protection Fi	Momentary Power Loss Ride-Thru	Stops immediately after 15 ms or longer power loss (default). Continuous operation during power up to 2 s (standard).*6
ecti	Heatsink Overheat Protection	Thermistor
rot	Braking Resistance Overheat Protection	Overheat sensor for braking resistor (optional ERF-type, 3% ED)
-	Stall Prevention	Stall prevention during acceleration/deceleration and constant speed operation
	Ground Fault Protection	Protection by electronic circuit *7
	Charge LED	Charge LED remains lit until DC bus has fallen below approx. 50 V
	Area of Use	Indoors
Ħ	Ambient Temperature	-10 to +50°C (open-chassis), -10 to +40°C (NEMA Type 1)
me	Humidity	95% RH or less (no condensation)
Environment	Storage Temperature	-20 to +60°C (short-term temperature during transportation)
In	Altitude	Up to 1000 meters
Ш	Shock	10 Hz to 20 Hz, 9.8 m/s 2 max. 20 Hz to 55 Hz, 5.9 m/s² (200 V: 45 kW or more, 400 V: 55 kW or more) or 2.0 m/s² max. (200 V: 55 kW or less, 400 V: 75 kW or less)
Sat	ety Standards	UL508C, EN954-1 Cat. 3, IEC/EN61508 SIL2
	tection Design	IP00 open-chassis, NEMA Type 1 enclosure
		The state of the s


- *1: Requires a drive with recommended capacity.
- *2: Speed control accuracy may vary slightly depending on installation conditions or motor used. Contact Yaskawa for details.
- *3: Momentary average deceleration torque refers to the deceleration torque from 60 Hz down to 0 Hz. This may vary depending on the motor.
- *4: If L3-04 is enabled when using a braking resistor or braking resistor unit, the motor may not stop within the specified deceleration time.
- \$\\$5: Overload protection may be triggered when operating with 150% of the rated output current if the output frequency is less than 6 Hz.
- *6: Varies in accordance with drive capacity and load. Drives with a capacity of smaller than 11 kW in the 200 V (model: CIMR-AA2A0056) or 400 V (model: CIMR-AA4A0031) require a separate Momentary Power Loss Recovery Unit to continue operating during a momentary power loss of 2 s or longer.
- *7: Protection may not be provided under the following conditions as the motor windings are grounded internally during run:
 - · Low resistance to ground from the motor cable or terminal block. · Drive already has a short-circuit when the power is turned on.



Standard Connection Diagram

Standard Connection Diagram

Example: 200 V Class 3.7 kW

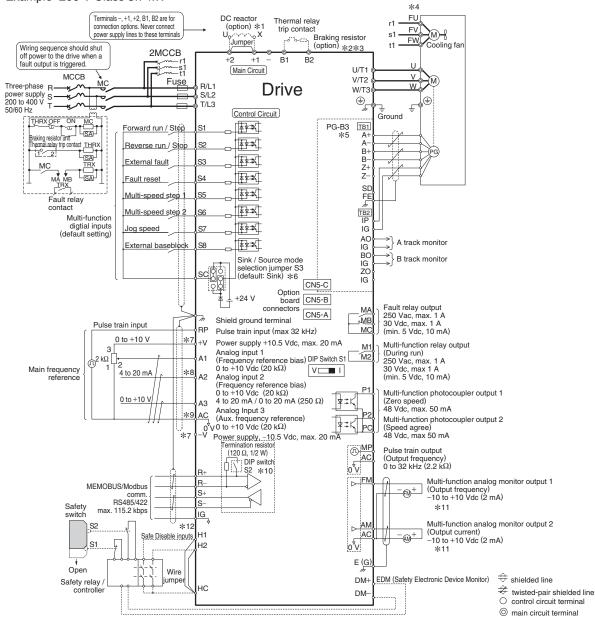


- ★1: Remove the jumper when installing a DC reactor. Models 2A0110 through 0211 and 4A0058 through 0165 come with a built-in DC reactor.
- *2: Make sure Stall Prevention is disabled (L3-04 = 0) whenever using a braking resistor. If left enabled, the drive may not stop within the specified deceleration time.
- *3: Enable the drive's braking resistor overload protection by setting L8-01 = 1 when using ERF type braking resistors. Wire the thermal overload relay between the drive and the braking resistor and connect this signal to a drive digital input. Use this input to trigger a fault in the drive in case of a braking resistor overload.
- *4: Self-cooling motors do not require wiring that would be necessary with motors using a cooling fan.
- *5: For control modes that do not use a motor speed feedback signal, PG option card wiring is not necessary.
- *6: This figure shows an example of a sequence input to S1 through S8 using a non-powered relay or an NPN transistor (0 V common/sink mode: default). When sequence connections by PNP transistor (+24 V common/source mode) or preparing a external +24 V power supply, refer to A1000 Technical Manual for details.
- The maximum output current capacity for the +V and -V terminals on the control circuit is 20 mA. Never short terminals +V, -V, and AC, as this can cause erroneous operation or damage the drive.
- *8: Set DIP switch S1 to select between a voltage or current input signal to terminal A2. The default setting is for voltage input.
- *9: Never connect to the AC terminal ground or chassis. This can result in erroneous operation or cause a fault.
- *10: Enable the termination resistor in the last drive in a MEMOBUS/Modbus network by setting DIP switch S2 to the ON position.
- *11: Monitor outputs work with devices such as analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use these outputs in a feedback loop. *12: Disconnect the wire jumper between HC H1 and HC H2 when utilizing the Safe Disable input.
- - The sink/source setting for the Safe Disable input is the same as with the sequence input. Jumper S3 has the drive set for an external power supply. When not using the Safe Disable input feature, remove the jumper shorting the input and connect an external power supply.
- Time from input open to drive output stop is less than 1 ms. The wiring distance for the Safe Disable inputs should not exceed 30 m.

Note: When an Application Preset is selected, the drive I/O terminal functions change.

Control Circuit and Serial Communication Circuit Terminal Layout







MA	МВ	МС
M1	M2	E(G)



Terminal Functions

Main Circuit Terminals

Max. Applicable Motor Capacity indicates Heavy Duty

Voltage		200 V			400 V	
Model CIMR-AA	2A0004 to 2A0081	2A0110, 2A0138	2A0169 to 2A0415	4A0002 to 4A0044	4A0058, 4A0072	4A0088 to 4A0362
Max. Applicable Motor Capacity kW	0.4 to 18.5	22, 30	37 to 110	0.4 to 18.5	22, 30	37 to 160
R/L1, S/L2, T/L3	Mai	n circuit input power su	pply	Mai	n circuit input power su	pply
U/T1, V/T2, W/T3		Drive output			Drive output	
B1, B2	Braking re	esistor unit	_	Braking re	esistor unit	_
- +1 +2	· DC reactor (+1, +2) · DC power supply (+1, -)*	DC power supply (+1, -)*	DC power supply (+1, -)* Braking unit (+3, -)	· DC reactor (+1, +2) · DC power supply (+1, -)*	DC power supply (+1, -)*	DC power supply (+1, -)* Braking unit (+3, -)
+3	- Grou	und terminal (100 Ω or	 ess)	- Gro	und terminal (10 Ω or le	' ' '


^{*} DC power supply input terminals (+1, -) are not UL/cUL and CE certified.

Control Circuit Input Terminals (200 V/400 V Class)

		par 101111111aio (200 17 100 1 010	,	
Terminal Type	Termi- nal	Signal Function	Description	Signal Level
	S1	Multi-function input selection 1	Closed: Forward run (default) Open: Stop (default)	
	S2	Multi-function input selection 2	Closed: Reverse run (default) Open: Stop (default)	
	S3	Multi-function input selection 3	External fault, N.O. (default)	
Multi-Function	S4	Multi-function input selection 4	Fault reset (default)	
	S5	Multi-function input selection 5	Multi-step speed reference 1 (default)	Photocoupler 24 Vdc, 8 mA
Digital Input	S6	Multi-function input selection 6	Multi-step speed reference 2 (default)	
	S7	Multi-function input selection 7	Jog frequency (default)	
	S8	Multi-function input selection 8	Closed: External baseblock	
	SC	Multi-function input selection common	Multi-function input selection common	
	RP	Multi-function pulse train input	Frequency reference (default) (H6-01 = 0)	0 to 32 kHz (3 kΩ)
	+V	Setting power supply	+10.5 V power supply for analog reference (2	0 mA max.)
	-V	Setting power supply	-10.5 V power supply for analog reference (2	0 mA max.)
	A1	Multi-function analog input 1	-10 to +10 Vdc for -100 to 100%, 0 to +10 Vdc for 0 to 10	0% (impedance 20 kΩ), Main frequency reference (default)
Main Francis			DIP switch S1 sets the terminal for a voltage or	current input signal
Main Frequen-	4.0	Marki for this a small and in mark O	-10 to +10 Vdc for -100 to +100%, 0 to +10 Vd	dc for 0 to 100% (impedance 20 kΩ)
cy Reference	A2	Multi-function analog input 2	4 to 20 mA for 0 to 100%, 0 to 20 mA for 0 to 10	00% (impedance 250 Ω)
Input			Added to the reference value of the analog frequency	
	40	Multi-function analysis input 2	-10 to +10 Vdc for -100 to +100%, 0 to +10	Vdc for 0 to 100% (impedance 20 kΩ)
	A3	Multi-function analog input 3	Auxiliary frequency reference (default)	
	AC	Frequency reference common	0 V	
	E(G)	Connection to wire shielding and option card ground wire	-	_
Multi-Function	P1	Multi-function photocoupler output (1)	Zero speed (default)	48 Vdc, 2 to 50 mA
Photocoupler	P2	Multi-function photocoupler output (2)	Speed agree (default)	Photocoupler output*1
Output	PC	Photocoupler output common	_	Priotocoupler output
Fault Relay	MA	N.O. output	Closed: Fault	
Output	MB	N.O. output	Open: Fault	Relay output
Output	MC	Digital output common	_	250 Vac, 10 mA to 1 A, 30 V, 10 mA to 1 A
Multi-Function	M1	Multi-function digital output	During run (default)	Minimum load: 5 Vdc, 10 mA
Digital Output*2	M2	Walti-Turiction digital output	Closed: During run	
	MP	Pulse train input	Output frequency (default) (H6-06 = 102)	0 to 32 kHz (2.2 kΩ)
Monitor Output	FM	Multi-function analog monitor (1)	Output frequency (default)	0 to +10 Vdc for 0 to 100%
Mornitor Output	AM	Multi-function analog monitor (2)	Output current (default)	-10 to 10 Vdc for -100 to 100%
	AC	Analog common	0 V	
	H1	Safety input 1	24 Vdc 8 mA. One or both open: Output disab	oled. Both closed: Normal operation.
Safety Input	H2	Safety input 2	Internal impedance 3.3 k Ω , switching time at	least 1 ms.
	HC	Safety input common	Safety input common	
Safety Monitor	DM+	Safety monitor output	Outputs status of Safe Disable function. Closed	48 Vdc, 50 mA or less
Output	DM-	Safety monitor output common	when both Safe Disable channels are closed.	40 Vuo, 50 IIIA OI IESS

- *1: Connect a flywheel diode as shown below when driving a reactive load such as a relay coil. Diode must be rated higher than the circuit voltage.

 *2: Refrain from assigning functions to terminals M1 and M2 that involve frequent switching, as doing so may shorten relay performance life. Switching life is estimated at 200,000 times (assumes 1 A, resistive load).



Serial Communication Terminals (200 V/400 V Class)

Classification	Termi- nal	Signal Function	Description	Signal Level
MEMOBUS/	R+	Communications input (+)	MEMOBUS/Modbus communications: Use a	RS-422/485
Modbus	R-	Communications input (–)	RS-485 or RS-422 cable to connect the	MEMOBUS/Modbus
Communica-	S+	Communications output (+)	drive.	communications protocol
tions	S-	Communications output (–)	dilve.	115.2 kbps (max.)
tions	IG	Shield ground	0	V



Dimensions

Enclosures

Enclosures of standard products vary depending on the model. Refer to the table below.


200 V Class

Model CIMR-AA2A	(INIMINI)	0004	0006	8000	0010	0012	0018	0021	0030	0040	0056	0069	0081	0110	0138	0169	0211	0250	0312	0360	0415
Max. Applicable	Normal Duty	0.75	1.1	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	110
Motor Capacity (kW)	Heavy Duty	0.4	0.75	1.1	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110
Enclosure Panel [NEMA	Type 1]	Stand	ard											Made	to ord	er					_
Open-Chassis [IP00]		Witho	ut top	and bo	ottom o	covers								Stand	ard						

400 V Class

Model CIMR-AA4A	ACHORORO	0002	0004	0005	0007	0009	0011	0018	0023	0031	0038	0044	0058	0072	0088	0103	0139	0165	0208	0250	0296	0362
Max. Applicable	Normal Duty	0.75	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	185
Motor Capacity (kW)	Heavy Duty	0.4	0.75	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160
Enclosure Panel [NEMA Type 1] Standard													Made	to or	der			•				
Open-Chassis [IP00]		Witho	ut top	1.5 2.2 3 3.7 5.5 7.5 11 15 18.5 22 30 37 45 55 75 90 110 132																		

■ Open-Chassis [IP00]

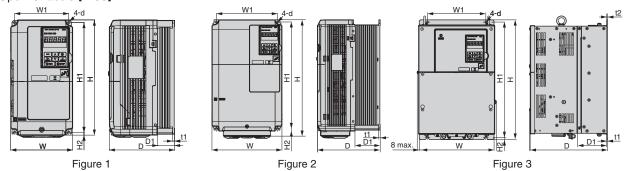


200 V Class															
Model	Max. Applicable M	lotor Capacity (kW)	Eiguro					Dimensi	ons (mm	ı)				Weight	Cooling
CIMR-AA2A::::::::::	Normal Duty	Heavy Duty	Figure	W	Н	D	W1	H1	H2	D1	t1	t2	d	(kg)	Cooling
0004	0.75	0.4												3.1	
0006	1.1	0.75												3.1	Self
8000	1.5	1.1	1	140	260	147	122	248	6	38	5	_			
0010	2.2	1.5	1											3.2	cooling
0012	3	2.2	1 .										M5		
0018	3.7	3	1 '			164							CIVI	3.5	
0021	5.5	3.7		140	260	104	122	248	6	55	5	_		3.5	
0030	7.5	5.5		140	200	167	122	240	6	35	5	_		4	
0040	11	7.5				107								-	
0056	15	11		180	300	187	160	284	8	75	5	_		5.6	
0069	18.5	15	1	220	350	197	192	335	8	78	5	_		8.7	
0081	22	18.5	2	220	365	197	192	335	8	78	5	_		9.7	Fan
0110	30	22		250	400	258	195	385	7.5	100	2.3	2.3	M6	21	
0138	37	30		275	450	258	220	435	7.5	100	2.3	2.3	IVIO	25	cooled
0169	45	37		325	550	283	260	535	7.5	110	2.3	2.3		37	
0211	55	45	3	323	330	203	200	555	7.5	110	2.3	2.3		38]
0250	75	55]	450	705	330	325	680	12.5	130	3.2	3.2	M10	76]
0312	90	75		430	705	330	325	000	12.5	130	3.2	3.2	IVITO	80	
0360	110	90		500	800	350	370	773	13	130	4.5	4.5	M12	98	
0415	110	110		500	000	330	3/0	1/3	13	130	4.5	4.5	IVI I Z	99]

400 V Class

Model	Max. Applicable M	otor Capacity (kW)	Figure					Dimensi	ons (mm)				Weight	Cooling
CIMR-AA4A[[#]#]#	Normal Duty	Heavy Duty	rigure	W	Н	D	W1	H1	H2	D1	t1	t2	d	(kg)	Cooling
0002	0.75	0.4													Self
0004	1.5	0.75		140	260	147	122	248	6	38	5	_		3.2	
0005	2.2	1.5													cooling
0007	3	2.2												3.4	
0009	3.7	3		140	260	164	122	248	6	55	5	-	M5	3.5	
0011	5.5	3.7	1										IVIO	3.5	
0018	7.5	5.5		140	260	167	122	248	6	55	5	_		3.9	
0023	11	7.5		140	200	107	122	240	0	55	5			3.9	
0031	15	11		180	300	167	160	284	8	55	5	_		5.4	
0038	18.5	15		100	300	187	100	204	0	75	J			5.7	
0044	22	18.5		220	350	197	192	335	8	78	5	_		8.3	
0058	30	22		250	400	258	195	385	7.5	100		2.3		21	Fan
0072	37	30		275	450	230	220	435	7.5	100		2.0		25	cooled
0088	45	37		325	510	258	260	495		105	2.3	3.2	M6	36	
0103	55	45		020	310	230	200	433	7.5	103	2.0	0.2		30	
0139	75	55	3	325	550	283	260	535	7.5	110		2.3		41	
0165	90	75		020										42	
0208	110	90		450	705	330	325	680	12.5	130	3.2	3.2	M10	79	
0250	132	110												96	
0296	160	132		500	800	350	370	773	13	130	4.5	4.5	M12	102	
0362	185	160												107	



■ Enclosure Panel [NEMA Type 1]

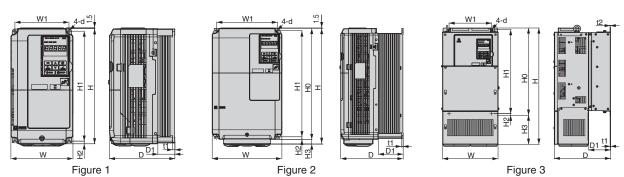

	J					J									0		
200 V Class																	
Model	Max. Applicable M	otor Capacity (kW)	Figure					imens	sions (ı	mm)						Weight	Cooling
CIMR-AA2A	Normal Duty	Heavy Duty	rigule	W	Н	D	W1	H0	H1	H2	Н3	D1	t1	t2	d	(kg)	Cooling
0004	0.75	0.4														3.1	
0006	1.1	0.75														3.1	Self
8000	1.5	1.1		140	260	147	122	_	248	6	-	38	5	-			cooling
0010	2.2	1.5														3.2	cooling
0012	3.0	2.2													For		
0018	3.7	3.0	'			164								_	M5	3.5	
0021	5.5	3.7		140	260	104	122	_	248	6	_	55	5	_		3.5	
0030	7.5	5.5		140	200	167	122	_	240	0	_	55	5	_		4.0	
0040	11	7.5				107								_		4.0	
0056	15	11		180	300	187	160	-	284	8	_	75	5	_		5.6	
0069	18.5	15	1	220	350	197	192	_	335	8	_	78	5	_		8.7	
0081	22	18.5	2	220	365	197	192	350	335	8	15	78	5	_		9.7	Fan
0110	30	22		254	534	258	195	400	385		134	100			For	23	cooled
0138	37	30		279	614	230	220	450	435	7.5	164	100	2.3	2.3	M6	28	
0169	45	37		329	730	283	260	550	535	7.5	180	110	2.3	2.3		41	
0211	55	45	3	329	730	203	200	550	555		100	110				42	
0250	75	55		456	960	330	325	705	680	12.5	255	130	3.2	3.2	M10	83	
0312	90	75		430	900	330	323	705	000	12.5	255	130	3.2	3.2	IVIIU	88	
0360	110	90		504	1168	350	370	800	773	13	368	130	4.5	4.5	M12	108	

400 V Class	,																
Model	Max. Applicable M	otor Capacity (kW)	Figure					imens	ions (ı	mm)						Weight	Cooling
CIMR-AA4A: :: :: :: ::	Normal Duty	Heavy Duty	riguie	W	Н	D	W1	H0	H1	H2	Н3	D1	t1	t2	d	(kg)	Cooming
0002	0.75	0.4															Self
0004	1.5	0.75		140	260	147	122	_	248	6	-	38	5	_		3.2	cooling
0005	2.2	1.5															cooming
0007	3.0	2.2														3.4	
0009	3.7	3.0				164									For	3.5	
0011	5.5	3.7	1	140	260		122	_	248	6	-	55	5	-	M5	0.0	
0018	7.5	5.5														3.9	
0023	11	7.5				167										0.9	
0031	15	11		180	300		160	_	284	8	_	55	5	_		5.4	
0038	18.5	15		100	300	187	100		204			75	J			5.7	
0044	22	18.5		220	350	197	192	_	335	8	_	78	5	_		8.3	
0058	30	22		254	465	258	195	400	385		65	100		2.3		23	Fan
0072	37	30		279	515	258	220	450	435			100		2.0	For	27	cooled
0088	45	37			630	258		510	495	7.5	120	105	2.3	3.2	M6	39	
0103	55	45		329	000	230	260	310	433	7.5	120	103	2.0	0.2	IVIO	00	
0139	75	55	3	523	730	283	200	550	535		180	110		2.3		45	
0165	90	75			730	200		330	555		100	110		2.0		46	
0208	110	90		456	960	330	325	705	680	12.5	255	130	3.2	3.2	M10	87	
0250	132	110														106	
0296	160	132		504	1168	350	370	800	773	13	368	130	4.5	4.5	M12	112	
0362	185	160														117	



Fully-Enclosed Design

The Open-Chassis type drive can be installed in a fully-enclosed panel.

An open-chassis model in a protective enclosure with the heatsink inside the panel allows for intake air temperature up to 50°C.

The heatsink can alternatively be mounted outside the enclosure panel, thus reducing the amount of heat inside the panel and allowing for a more compact set up.

Current derating or other steps to ensure cooling are required at 50°C

 $\cdot \ \, \text{Cooling Design for Fully-Closed Enclosure Panel} \quad \cdot \ \, \text{Mounting the External Heatsink}$


Air temperature

Ambient temperature 50°C

Fully-enclosed panel


60°C

at top of panel -10 to +60°C Heatsink IP20/Open-Chassis Bottom cover Drive intake temperature -10 to +50°C

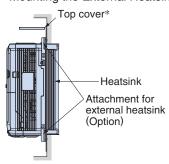

* Enclosure panel (CIMR-AA2A0004 to 0081, CIMR-AA4A0002 to 0044) can be installed with the top and bottom covers

Ventilation Space

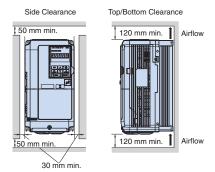

For installing the drive with capacity of 200 V class 22 kW or 400 V class 22kW, be sure to leave enough clearance during installation for suspension eye bolts on both side of the unit and main circuit wiring for maintenance.

Drive Watts Loss Data

200 V Class Normal Duty Ratings

	odel Number		0004	0006	0008	0010	0012	0018	0021	0030	0040	0056	0069	0081	0110	0138	0169	0211	0250	0312	0360	0415
Max. Applica	ble Motor Capacity	kW	0.75	1.1	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	110
Rated Ou	utput Current*	Α	3.5	6	8	9.6	12	17.5	21	30	40	56	69	81	110	138	169	211	250	312	360	415
	Heatsink	W	18	31	43	57	77	101	138	262	293	371	491	527	718	842	1014	1218	1764	2020	2698	2672
Heat Loss	Internal	W	47	51	52	58	64	67	83	117	144	175	204	257	286	312	380	473	594	665	894	954
	Total Heat Loss	W	65	82	95	115	141	168	221	379	437	546	696	784	1004	1154	1394	1691	2358	2685	3591	3626

400 V Class Normal Duty Ratings

	odel Number R-AA4A::::::::::::::::::::::::::::::::::		0002	0004	0005	0007	0009	0011	0018	0023	0031	0038	0044	0058	0072	0088	0103	0139	0165	0208	0250	0296	0362
Max. Applica	ble Motor Capacity	kW	0.75	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	185
Rated Ou	utput Current*	Α	2.1	4.1	5.4	6.9	8.8	11.1	17.5	23	31	38	44	58	72	88	103	139	165	208	250	296	362
	Heatsink	W	20	32	45	62	66	89	177	216	295	340	390	471	605	684	848	1215	1557	1800	2379	2448	3168
Heat Loss	Internal	W	48	49	53	59	60	73	108	138	161	182	209	215	265	308	357	534	668	607	803	905	1130
	Total Heat Loss	W	68	81	98	121	126	162	285	354	456	522	599	686	870	992	1205	1749	2225	2407	3182	3353	4298

^{*} Rated output current based on carrier frequency of 2 kHz.

200 V Class Heavy Duty Ratings

	Jiaco i icavy	<u> </u>	,	tii ige																		
	lodel Number R-AA2A		0004	0006	8000	0010	0012	0018	0021	0030	0040	0056	0069	0081	0110	0138	0169	0211	0250	0312	0360	0415
Max. Applica	able Motor Capacity	kW	0.4	0.75	1.1	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110
Rated O	utput Current	Α	3.2*1	5*1	6.9*1	8*1	11*1	14*1	17.5*1	25*1	33*1	47*1	60*1	75*1	85*1	115*1	145*1	180*2	215*2	283*2	346*2	415*3
	Heatsink	W	15	24	35	43	64	77	101	194	214	280	395	460	510	662	816	976	1514	1936	2564	2672
Heat Loss	Internal	W	44	48	49	52	58	60	67	92	105	130	163	221	211	250	306	378	466	588	783	954
	Total Heat Loss	W	59	72	84	95	122	137	168	287	319	410	558	681	721	912	1122	1354	1980	2524	3347	3626

400 V Class Heavy Duty Ratings

	odel Number R-AA4A		0002	0004	0005	0007	0009	0011	0018	0023	0031	0038	0044	0058	0072	0088	0103	0139	0165	0208	0250	0296	0362
Max. Applica	ble Motor Capacity	kW	0.4	0.75	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160
Rated Ou	utput Current	Α	1.8*1	3.4*1	4.8*1	5.5*1	7.2*1	9.2*1	14.8*1	18*1	24*1	31*1	39*1	45*1	60*1	75*1	91*1	112*1	150*2	180*2	216*2	260*2	304*2
	Heatsink	W	16	25	37	48	53	68	135	150	208	263	330	348	484	563	723	908	1340	1771	2360	2391	3075
Heat Loss	Internal	W	45	46	49	53	55	61	86	97	115	141	179	170	217	254	299	416	580	541	715	787	985
	Total Heat Loss	W	61	71	86	101	108	129	221	247	323	404	509	518	701	817	1022	1324	1920	2312	3075	3178	4060

^{*1:} Rated output current based on carrier frequency of 8 kHz.

^{*2:} Rated output current based on carrier frequency of 5 kHz.


^{*3:} Rated output current based on carrier frequency of 2 kHz.




Attachment for External Heatsink

Additional attachments are required to install the following models: CIMR-AA2A0004 to 0081, CIMR-AA4A0002 to 0044. The final product will be wider and taller than the drive. Additional attachments are required for CIMR-AA2A0110 and above, CIMR-AA4A0058 and above.

Note: Contact Yaskawa for information on attachments for earlier models.

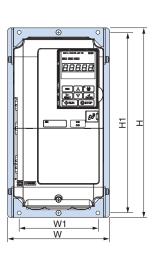

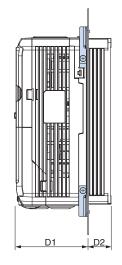


200 V Class

Model		D	imensi	on (mn	n)		Code No.
CIMR-AA2A	W	Н	W1	H1	D1	D2	Code No.
0004							
0006							
0008					109	36.4	EZZ020800A
0010							
0012	158	294	122	280			
0018					109	53.4	
0021					109	33.4	EZZ020800B
0030					112	53.4	
0040					112	55.4	
0056	198	329	160	315	112	73.4	EZZ020800C
0069	238	380	192	362	119	76.4	EZZ020800D
0081	230	300	192	302	119	70.4	EZZUZU600D


400 V Class

100 V 01000							
Model		D	imensi	on (mr	n)		Code No.
CIMR-AA4A::::::::::::::::::::::::::::::::::	W	Н	W1	H1	D1	D2	Code No.
0002							
0004					109	36.4	EZZ020800A
0005							
0007	158	294	122	280			
0009	130	254	122	200	109	53.4	
0011							EZZ020800B
0018					112	53.4	
0023					112	55.4	
0031	198	329	160	315	112	53.4	EZZ020800C
0038	130	329	100	313	112	73.4	EZZUZU600C
0044	238	380	192	362	119	76.4	EZZ020800D


Panel Modification for External Heatsink

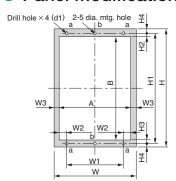

Modification Figure 1

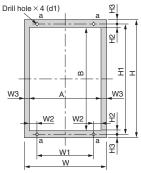

Modification Figure 2

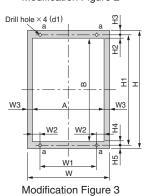

200 V Class


Model	Modification						Dime	nsions	(mm)					
CIMR-AA2A[[#[#]]	Figure	W	Н	W1	W2	W3	H1	H2	НЗ	H4	H5	Α	В	d1
0004														
0006														
0008														
0010														
0012	1	158	294	122	9	9	280	8.5	8.5	7	_	140	263	M5
0018														
0021														
0030														
0040														
0056	1	198	329	160	10	9	315	17.5	10.5	7	_	180	287	M5
0069	1	238	380	192	14	9	362	13	8	9	_	220	341	
0081	'	230	300	192	14	9	302	13	0	ס		220	341	
0110		250	400	195	19.5	8	385	8	7.5	_	_	234	369	M6
0138	2	275	450	220	19.5	0	435	0	7.5			259	419	IVIO
0169		325	550	260	24.5	8	535	8	7.5	_	_	309	519	
0211		323	330	200	24.5	0	555	0	7.5			309	519	
0250	2	450	705	325	54.5	8	680	12.5	12.5	_	_	434	655	M10
0312	2	+30	700	525	54.5	٥	000	12.5	12.0			+04	000	IVITO
0360	3	500	800	370	57	8	773	16	14	17	13	484	740	M12
0415		300	000	370	37		173	10	14	17	13	+04	740	IVITZ

400 V Class

Model	Modification						Dime	nsions	(mm)					
CIMR-AA4A[[#]#]	Figure	W	Н	W1	W2	W3	H1	H2	H3	H4	H5	Α	В	d1
0002														
0004														
0005														
0007	1	158	294	122	9	9	280	8.5	8.5	7	_	140	263	
0009	'	130	234	122	3	9	200	0.5	0.5	'		140	200	M5
0011														IVIS
0018														
0023														
0031	1	198	329	160	10	9	315	17.5	10.5	7	_	180	287	
0038	'	190	328	100	10	ð	313	17.5	10.5	1		100	201	
0044	1	238	380	192	14	9	362	13	8	9	_	220	341	M6
0058	2	250	400	195	19.5	8	385	8	7.5	_	_	234	369	M6
0072		275	450	220	13.5	0	435	0	7.5			259	419	IVIO
0088			510				495						479	
0103	2	325	310	260	24.5	8	433	8	7.5	_	_	309	473	M6
0139		323	550	200	24.5	0	535	0	7.5			309	519	IVIO
0165			550				555						519	
0208	2	450	705	325	54.5	8	680	12.5	12.5	_	_	434	655	M10
0250														
0296	3	500	800	370	57	8	773	16	14	17	13	484	740	M12
0362														



Peripheral Devices and Options

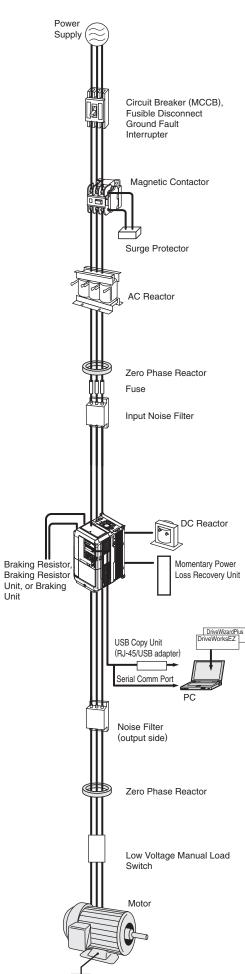

Name	Purpose	Model, Manufacturer	Page
Circuit Breaker	Protects circuitry from excessive current. A circuit breaker should be installed between the main power supply and	Recommended: NF series by Mitsubishi	P.36
Ground Fault Interrupter (GFI)	an AC reactor. Choose a GFI designed for use with a frequency meter. Should be designed for use with AC drives and have a current rating of at least 30 mA.	Electric Corporation Recommended: NV series by Mitsubishi Electric Corporation EG, SG series by Fuji Electric FA Components & Systems Co., Ltd	_
Magnetic Contactor	Interrupts the power supply to the drive. In addition to protecting drive circuitry, a magnetic contactor also prevents damage to a braking resistor if used.	Recommended: SC series by Fuji Electric FA Components & Systems Co., Ltd	P.36
Surge Protector	Absorbs the voltage surge from switching of electro-magnetic contactors and control relays. Install a surge protector to the magnetic contactors and control relays as well as magnetic valves and magnetic braking coil.	DCR2 series RFN series by Nippon Chemi- con Corporation	P.37
DC Reactor	Improve the input power ratio of the drive. The DC reactor is a built-in model of 22 kW or more. Option: 18.5 kW or less. Used for harmonic current suppression and total improving power factor.	UZDA series	P.38
AC Reactor	Should be used if the power supply capacity is larger than 600 kVA. Suppresses harmonic current Improves the power factor of the input power supply	UZBA series	P.39
Zero Phase Reactor	Reduces noise from the line that enters into the drive input power system. Should be installed as close as possible to the drive. Can be used on both the input and output sides.	F6045GB F11080GB by Hitachi Metals, Ltd.	P.40
Fuse / Fuse Holder	Protects internal circuitry in the event of component failure. Fuse should be connected to the input terminal of the drive.	CR2LS series CR6L series CM, CMS series by Fuji Electric FA Compo- nents & Systems Co., Ltd	P.41
Capacitor-Type Noise Filter	Reduces noise from the line that enters into the drive input power system. The noise filter can be used in combination with a zero-phase reactor. Note: Available for drive input only. Do not connect the noise filter to the output terminals.	3XYG 1003 by Okaya Electric Industries Co., Ltd.	P.41
Input Noise Filter	Reduces noise from the line that enters into the drive input power system. Should be installed as close as possible to the drive. Note: For CE Marking (EMC Directive) compliant models, refer to A1000 Technical Manual.	LNFD series LNFB series FN series	P.42
Output Noise Filter	Reduces noise from the line that enters into the drive input power system. Should be installed as close as possible to the drive.	LF series by NEC Tokin Corporation	P.44
Braking Resistor	Used to shorten the deceleration time by dissipating regenerative energy through a resistor in (3% ED).	ERF-150WJ series CF120-B579 series	P.46
Attachment for Braking Resistor	A braking resistor can be attached to the drive.	EZZ020805A	P.49
Braking Resistor Unit	Used to shorten the deceleration time by dissipating regenerative energy through a resistor. A thermal overload relay is built in (10% ED).	LKEB series	P.46
Braking Unit	Shortened deceleration time results when used with a Braking Resistor Unit.	CDBR series	P.46
24 V Power Supply	Provides power supply for the control circuit and option boards. Note: Parameter settings cannot be changed when the drive is operating solely from this power supply.	PS-A10H PS-A10L	P.45
VS System Module	System control device that enables optimum system configuration by combining modules for automatic control system.	JGSM series	P.50
USB Copy Unit (RJ-45/ USB compatible plug)	Can copy parameter settings easily and quickly to be later transferred to another drive. Adapter for connecting the drive to the USB port of a PC	JVOP-181	P.53
Support Tools USB Cable	Connect the drive and PC when using DriveWizard or DriveWorksEZ. The cable length must be 3 m or less.	Commercially available USB2.0 A/B cable.	_
LCD Operator	For easier operation when using the optional LCD operator. Allows for remote operation. Includes a Copy function for saving drive settings.	JVOP-180	P.52
LCD Operator Extension Cable	Cable for connecting the LCD operator.	WV001: 1 m WV003: 3 m	P.52
Momentary Power Loss Recovery Unit	Ensures continuous drive operation for a power loss of up to 2 s.	P0010 Type (200 V class) P0020 Type (400 V class)	P.45
Frequency Meter, Current Meter Frequency Setting		DCF-6A	P.54
Potentiometer (2 kΩ) Frequency Meter Adjusting	Allows the user to set and monitor the frequency,	RH000739	P.54 P.54
Potentiometer (20 kΩ) Control Dial for Frequency	current, and voltage using an external device.	RH000850 CM-3S	P.54 P.54
Setting Potentiometer Output Voltage Meter		SCF-12NH	P.55
Attachment for External Heatsink	Required for heatsink installation. Current derating may be needed when using a heatsink.	-	P.33
Low Voltage Manual Load Switch	Prevents shock from the voltage created on the terminals board from a coasting synchronous motor.	Recommended: AICUT, LB series by Aichi Elec- tric Works Co., Ltd	_

Note: Contact the manufacturer in question for availability and specifications of non-Yaskawa products.

Ground



Option Cards

Ту	_′ ре	Name	Model	Function	Manual No.
	Speed Reference Card	Analog Input	AI-A3	Enables high-precision and high-resolution analog speed reference setting. $ \begin{tabular}{l} \label{localization} \cdot & \line \label{localization} \cdot & \line \li$	TOBPC73060038
	Speed F	Digital Input	DI-A3	Enables 16-bit digital speed reference setting. Input signal: 16 bit binary, 2 digit BCD + sign signal + set signal Input voltage: +24 V (isolated) Input current: 8 mA User-set: 8 bit, 12 bit, 16 bit	TOBPC73060039
		DeviceNet Interface	SI-N3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through	TOBPC73060043
		RoHS	01110	DeviceNet communication with the host controller.	SIEPC73060043
		CC-Link Interface	SI-C3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through	TOBPC73060044
	Card	RoHS compliant	01 00	CC-Link communication with the host controller.	SIEPC73060044
	Option	PROFIBUS-DP	SI-P3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through	TOBPC73060042
Ē	ns Op	Interface RoHS compliant	31-1-3	CANopen communication with the host controller.	SIEPC73060042
necto	Communications	CANonen Interfese	SI-S3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through	TOBPC73060045
con	muni	CANopen Interface RoHS compliant	51-53	CANopen communication with the host controller.	SIEPC73060045
Built-in Type (connected to connector)	Com	MECHATROLINK-II Interface	Available soon	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through MECHATROLINK-II communication with the host controller.	-
n Type (cc		LONWORKS Interface	Available soon	Used for HVAC control, running or stopping the drive, setting or referencing parameters, and monitoring output current, watt-hours, or similar items through LONWORKS communications with the host controller.	-
Built	Option Card	Analog Monitor	AO-A3	Outputs analog signal for monitoring drive output state (output freq., output current etc.). Output resolution: 11 bit signed (1/2048) Output voltage: -10 to +10 Vdc (non-isolated) Terminals: 2 analog outputs	TOBPC73060040
	Monitor O	Digital Output	DO-A3	Outputs isolated type digital signal for monitoring drive run state (alarm signal, zero speed detection, etc.) • Terminals: 6 photocoupler outputs (48 V, 50 mA or less) 2 relay contact outputs (250 Vac, 1 A or less 30 Vdc, 1 A or less)	TOBPC73060041
	Speed Controller Card	Complimentary Type PG RoHS compliant	PG-B3	For control modes requiring a PG encoder for motor feedback. · Phase A, B, and Z pulse (3-phase) inputs (complementary type) · Max. input frequency: 50 kHz · Pulse monitor output: Open collector, +24 V, max. current 30 mA · Power supply output for PG: +12 V, max. current 200 mA	TOBPC73060036
	PG Speed Co	Line Driver PG	PG-X3	For control modes requiring a PG encoder for motor feedback. · Phase A, B, and Z pulse (differential pulse) inputs (RS-422) · Max. input frequency: 300 kHz · Pulse monitor output: RS-422 · Power supply output for PG: +5 V or +12 V, max. current 200 mA	TOBPC73060037

Note: 1. Each communication option card requires a separate configuration file to link to the network. 2. PG speed controller card is required for PG control.



Peripheral Devices and Options (continued)

Circuit Breaker, Magnetic Contactor

Base device selection on motor capacity.



Circuit Breaker [Mitsubishi Electric Corporation]



Magnetic Contactor [Fuji Electric FA Components & Systems Co., Ltd]

200 V Class

Motor		Circuit I	Breaker		Magnetic Contactor				
Capacity	Without	Without Reactor		With Reactor		Without Reactor		With Reactor	
(kW)	Model	Rated Current (A)	Model	Rated Current (A)	Model	Rated Current (A)	Model	Rated Current (A)	
0.4	NF32	5	NF32	5	SC-03	11	SC-03	11	
0.75	NF32	10	NF32	10	SC-05	13	SC-03	11	
1.5	NF32	15	NF32	10	SC-4-0	18	SC-05	13	
2.2	NF32	20	NF32	15	SC-N1	26	SC-4-0	18	
3.7	NF32	30	NF32	20	SC-N2	35	SC-N1	26	
5.5	NF63	50	NF63	40	SC-N2S	50	SC-N2	35	
7.5	NF125	60	NF63	50	SC-N3	65	SC-N2S	50	
11	NF125	75	NF125	75	SC-N4	80	SC-N4	80	
15	NF250	125	NF125	100	SC-N5	93	SC-N4	80	
18.5	NF250	150	NF250	125	SC-N5	93	SC-N5	93	
22	_	_	NF250	150	_	_	SC-N6	125	
30	_	_	NF250	175	_	_	SC-N7	152	
37	_	_	NF250	225	_	_	SC-N8	180	
45	1	_	NF400	250	_	_	SC-N10	220	
55	_	_	NF400	300	_	_	SC-N11	300	
75	_	_	NF400	400	_	_	SC-N12	400	
90	-	_	NF630	500	_	_	SC-N12	400	
110	_	_	NF630	600	_	_	SC-N14	600	

Note: To improve the input power factor, 200 V class drives larger than 22 kW come standard with a built-in DC reactor.


400 V Class

Motor		Circuit I	Breaker		Magnetic Contactor			
Capacity	Without Reactor		With Reactor		Without Reactor		With Reactor	
(kW)	Model	Rated Current (A)	Model	Rated Current (A)	Model	Rated Current (A)	Model	Rated Current (A)
0.4	NF32	3	NF32	3	SC-03	7	SC-03	7
0.75	NF32	5	NF32	5	SC-03	7	SC-03	7
1.5	NF32	10	NF32	10	SC-05	9	SC-05	9
2.2	NF32	15	NF32	10	SC-4-0	13	SC-4-0	13
3	NF32	20	NF32	15	SC-4-1	17	SC-4-1	17
3.7	NF32	20	NF32	15	SC-4-1	17	SC-4-1	17
5.5	NF32	30	NF32	20	SC-N2	32	SC-N1	25
7.5	NF32	30	NF32	30	SC-N2S	48	SC-N2	32
11	NF63	50	NF63	40	SC-N2S	48	SC-N2S	48
15	NF125	60	NF63	50	SC-N3	65	SC-N2S	48
18.5	NF125	75	NF125	60	SC-N3	65	SC-N3	65
22	_	_	NF125	75	_	_	SC-N4	80
30	_	_	NF125	100	_	_	SC-N4	80
37	_	_	NF250	125	_	_	SC-N5	90
45	_	_	NF250	150	_	_	SC-N6	110
55	_	_	NF250	175	_	_	SC-N7	150
75	_	_	NF250	225	_	_	SC-N8	180
90	_	_	NF400	250	_	_	SC-N10	220
110	_	_	NF400	300	_	_	SC-N11	300
132	_	_	NF400	350	_	_	SC-N11	300
160	_	_	NF400	400	_	_	SC-N12	400
185	_	_	NF630	500	_	_	SC-N12	400



Surge Protector

Dimensions (mm)

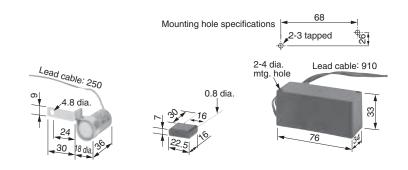

Weight: 22 g Weight: 5 g Model: DCR2-50A22E Model: DCR2-10A25C

Weight: 150 g Model: RFN3AL504KD

[Nippon Chemi-Con Corporation]

Product Line

Peripheral Device	ces	Surge Protector	Model	Specifications	Code No.
		Large-Capacity Coil (other than relay)	DCR2-50A22E	220 Vac 0.5 μ F+200 Ω	C002417
200 to 230 V	Control Relay	MY2, MY3 [Omron Corporation] MM2, MM4 [Omron Corporation] HH22, HH23 [Fuji Electric FA Components & Systems Co., Ltd]	DCR2-10A25C	250 Vac 0.1 μ F+100 Ω	C002482
		380 to 460 V	RFN3AL504KD	1000 Vdc 0.5 μ F+220 Ω	C002630



DC Reactor (UZDA-B for DC circuit)


Base device selection on motor capacity.



Note: DC Reactor with terminal of blocks is available (0.4 to 18.5 kW). Contact Yaskawa for details.

Reactor required Reactor unnecessary 60 Drive Capacity (kVA)

Note: Reactor recommended for power supplies larger than 600 kVA.

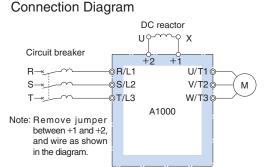



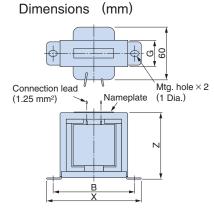


Figure 1

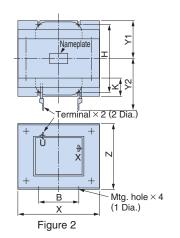

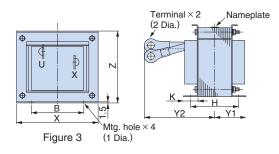

200 V C	lass																
Motor									Dimer	nsions						Watt	Wire
Capacity	Current	Inductance	Code No.	Figure					(m	m)					Weight	Loss	Gauge*1
(kW)	(A)	(mH)			Х	Y2	Y1	Z	В	Н	K	G	1 Dia.	2 Dia.	(kg)	(W)	(mm ²)
0.4	5.4	8	X010048	1	85	_	_	53	74	-	_	32	M4	_	0.8	8	2
0.75	5.4	8	X010048	1	85	_	_	53	74	_	_	32	M4	-	0.8	8	2
1.5	18	3	X010049	2	86	80	36	76	60	55	18	_	M4	M5	2	18	5.5
2.2	18	3	X010049	2	86	80	36	76	60	55	18	-	M4	M5	2	18	5.5
3.7	18	3	X010049	2	86	80	36	76	60	55	18	_	M4	M5	2	18	5.5
5.5	36	1	X010050	2	105	90	46	93	64	80	26	_	M6	M6	3.2	22	8
7.5	36	1	X010050	2	105	90	46	93	64	80	26	-	M6	M6	3.2	22	8
11	72	0.5	X010051	2	105	105	56	93	64	100	26	_	M6	M8	4.9	29	30
15	72	0.5	X010051	2	105	105	56	93	64	100	26	_	M6	M8	4.9	29	30
18.5	90	0.4	X010176	2	133	120	52.5	117	86	80	25	_	M6	M8	6.5	45	30
22*2	105	0.3	300-028-140	3	133	120	52.5	117	86	80	25	-	M6	M10	8	55	50
22 to 110							В	uilt-in									

- *1: Cable: IV, 75°C, ambient temperature 45°C, 3 lines max.
- *2: Select a motor of this capacity when using a CIMR-AA2A0081.

Motor					Dimensions										Watt	Wire	
Capacity	Current	Inductance	Code No.	Figure	(mm)							Weight	Loss	Gauge*1			
(kW)	(A)	(mH)			Χ	Y2	Y1	Z	В	Н	K	G	1 Dia.	2 Dia.	(kg)	(W)	(mm²)
0.4	3.2	28	X010052	1	85	_	-	53	74	-	_	32	M4	-	0.8	9	2
0.75	3.2	28	X010052	1	85	_	_	53	74	-	_	32	M4	_	0.8	9	2
1.5	5.7	11	X010053	1	90	_	_	60	80	-	_	32	M4	-	1	11	2
2.2	5.7	11	X010053	1	90	_	-	60	80	-	_	32	M4	-	1	11	2
3	12	6.3	X010054	2	86	80	36	76	60	55	18	_	M4	M5	2	16	2
3.7	12	6.3	X010054	2	86	80	36	76	60	55	18	-	M4	M5	2	16	2
5.5	23	3.6	X010055	2	105	90	46	93	64	80	26	-	M6	M5	3.2	27	5.5
7.5	23	3.6	X010055	2	105	90	46	93	64	80	26	_	M6	M5	3.2	27	5.5
11	33	1.9	X010056	2	105	95	51	93	64	90	26	_	M6	M6	4	26	8
15	33	1.9	X010056	2	105	95	51	93	64	90	26	-	M6	M6	4	26	8
18.5	47	1.3	X010177	2	115	125	57.5	100	72	90	25	_	M6	M6	6	42	14
22*2	56	1	300-028-141	3	133	105	52.5	117	86	80	25	_	M6	M6	7	50	22
22 to 185							В	uilt-in									

^{*1:} Cable: IV, 75°C, ambient temperature 45°C, 3 lines max.

^{*2:} Select a motor of this capacity when using a CIMR-AA4A0044.




AC Reactor (UZBA-B for 50/60 Hz Input)

Base device selection on motor capacity.





Note: AC Reactor with terminal blocks is available (0.4 to 18.5 kW). Contact Yaskawa for details.


Connection Diagram

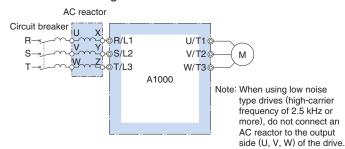

Dimensions (mm)

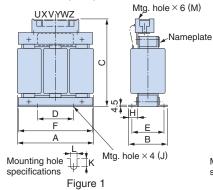

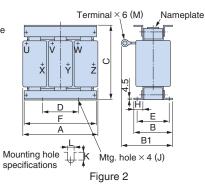

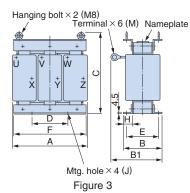

200 V Class

	1000																	
Motor										Dimer	sions							Watt
Capacity	Current	Inductance	Code No.	Figure						(m	m)						Weight	Loss
(kW)	(A)	(mH)			Α	В	B1	С	D	Е	F	Н	J	K	L	M	(kg)	(W)
0.4	2.5	4.2	X002553		120	71	_	120	40	50	105	20	M6	10.5	7	M4	2.5	15
0.75	5.0	2.1	X002554	1	120	/ 1	_	120	40	50	105	20	IVIO	10.5	'	IVI4	2.5	15
1.5	10	1.1	X002489] '	100	88	_	100	F0	70	100	22	MC	11 5	7	N//	0	25
2.2	15	0.71	X002490	1	130	00	-	130	50	/0	130	22	M6	11.5	′	M4	3	30
3.7	20	0.53	X002491			88	114			70				11.5		M5	3	35
5.5	30	0.35	X002492	1	130	00	119	105	50	/0	130	22	M6	9	7	CIVI	3	45
7.5	40	0.265	X002493	1		98	139]		80				11.5		M6	4	50
11	60	0.18	X002495		160	105	147.5	130	75	85	160	25	M6	10	7	M6	6	65
15	80	0.13	X002497				155									M8		75
18.5	90	0.12	X002498	2	180	100	150	150	75	80	180	25	M6	10	7	IVIO	8	90
22	120	0.09	X002555				155]								M10		90
30	160	0.07	X002556		210	100	170	175	75	80	205	25	M6	10	7	M10	12	100
37	200	0.05	X002557		210	115	183	1/5	75	95	205	25	IVIO	10	′	IVITO	15	110
45	240	0.044	X002558]	240	126	218	215±5	150	110	240	25	M6	- 8	7	M10	23	125
55	280	0.038	X002559		240	120	210	21315	130	110	240	25	M8	°	10	M12	23	130
75	360	0.026	X002560	2	270	162	241	230±5	150	130	260	40	M8	16	10	M12	32	145
90	500	0.02	X010145	- 3	330	162	286	315±5	150	130	320	40	M10	16	10	M12	55	200
110	500	0.02	X010145	٦	550	102	200	01015	130	130	320	40	IVITO	10	10	IVIIZ	55	200


400 V C	1400																	
Motor										Dimen								Watt
Capacity	Current	Inductance	Code No.	Figure						(mı	m)						Weight	Loss
(kW)	(A)	(mH)			Α	В	B1	С	D	E	F	Н	J	K	L	M	(kg)	(W)
0.4	1.3	18	X002561]	120	71	_	120	40	50	105	20	M6	10.5	7	M4	2.5	15
0.75	2.5	8.4	X002562]	120	_ ′ '		120	40	30	103	20	IVIO	10.5	,	IVI	2.5	13
1.5	5.0	4.2	X002563											9				25
2.2	7.5	3.6	X002564	1		88				70							3	35
3	10	2.2	X002500]	130	00	-	130	50	/ 0	130	22	M6		7	M4	3	40
3.7	10	2.2	X002500]							11.5				40
5.5	15	1.42	X002501			98				80							4	50
7.5	20	1.06	X002502		160	90	115	130	75	70	160	25	M6	10	7	M5	5	50
11	30	0.7	X002503		100	105	132.5	130	75	85	100	25	IVIO	10	,	IVIO	6	65
15	40	0.53	X002504]			140										8	
18.5	50	0.42	X002505]	180	100	145	150	75	80	180	25	M6	10	7	M6		90
22	60	0.36	X002506				150										8.5	
30	80	0.26	X002508	2	210	100	150	175	75	80	205	25	M6	10	7	M8	12	95
37	90	0.24	X002509]	210	115	178	175	/5	95	203	25	IVIO	10	,	IVIO	15	110
45	120	0.18	X002566		240	126	193	205±5	150	110	240	25	M8	8	10	M10	23	130
55	150	0.15	X002567]	240	120	198	200-0	130	110	240	20	IVIO	0	10	IVITO	20	150
75	200	0.11	X002568]	270	162	231	230±5	150	130	260	40	M8	16	10	M10	32	135
90	250	0.09	X002569		270	102	231	230±3	150	130	200	40	IVIO	10	10	IVITO	32	133
110	250	0.09	X002569]	270	162	231	230±5	150	130	260	40	M8	16	10	M10	32	135
132	330	0.06	X002570	2	320	165	253	230±5	150	130	320	40	M10	17.5	12	M12	55	200
160	330	0.06	X002570															
185	490	0.04	X002690	3	330	176	293	315±5	150	150	320	40	M10	13	12	M12	60	340



Zero Phase Reactor

Base device selection on motor capacity. Compatible with the input and output side of the drive.

Finemet Zero-Phase Reactor to Reduce Radio Noise Note: Finemet is a registered trademark of Hitachi Metals, Ltd.

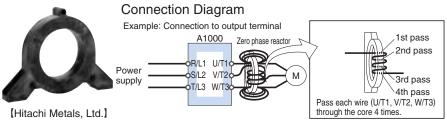

Power supply S/L2 V/T2 V/T3 Put all wires (U/T1, V/T2, W/T3) through 4 cores

Zero phase reactor


Diagram a


in series without winding.


Diagram b

A1000

Dimensions (mm)

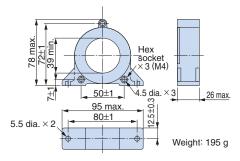

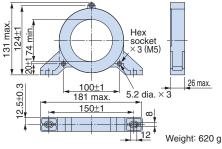

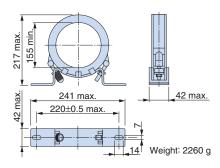

Model F6045GB

Model F11080GB

Model F200160PB

200 V Class

Motor	A10	000				Zero Phas	e Reactor			
Capacity (kW)		ided Gauge m²)		Input Side				Output Side		
(KVV)	Input Side	Output Side	Model	Code No.	Qty.	Diagram	Model	Code No.	Qty.	Diagram
0.4 0.75 1.5 2.2	2	2	F6045GB	FIL001098	1	a	F6045GB	FIL001098	1	а
3.7	5.5	3.5								
5.5	14	8			4		F11080GB	FIL001097]
7.5		14			7		F6045GB	FIL001098	4	
11	22	14								
15	30	22	F6045GB	FIL001098			F6045GB	FIL001098		
18.5	38	30	F0045GB	F1E001090			F0045GB	11001090		
22	30	38								
30	60	60								
37	80	80			4	b			4	b
45	100	50×2P	F11080GB	FIL001097			F11080GB	FIL001097		
55 75	80×2P	80×2P								
90	100×2P	100×2P	E200160DB	DD 200 001 041			F200160PB	B 300-001-041		
110	125×2P	125×2P	F200160PB 300-001-041			F200100FB	300-001-041			

Motor	A10	000				Zero Phas	e Reactor			
Capacity (kW)	(mı	ded Gauge m²)		Input Side				Output Side		
(KVV)	Input Side	Output Side	Model	Code No.	Qty.	Diagram	Model	Code No.	Qty.	Diagram
0.4										
0.75										
1.5	2	2								
2.2	2						ECO4ECD	EII 001000		
3							F6045GB	FIL001098		
3.7			F6045GB	FIL001098	1	a			1	а
5.5	3.5	3.5								
7.5	5.5	5.5								
11		8					F11080GB	FIL001097		
15	14	14					F6045GB	FIL001098		
18.5		14					F0045GB	11001090		
22	14	14								
30	22	22	F6045GB	FIL001098			F6045GB	FIL001098		
37	30	30	F0045GB	FIL001090			F0045GB	11001090		
45	38	38								
55	60	60								
75	80	80			4	b			4	b
90	150	150								
110		150	F11080GB	FIL001097			F11080GB	FIL001097		
132	200	200								
160 185	250	250								

+ + x x x

Fuse and Fuse Holder

Install a fuse to the drive input terminals to prevent damage in case a fault occurs.





[Fuji Electric FA Components & Systems Co., Ltd]

200 V Class

200 V Class	Fuse		Fuse Holde	
Model CIMR-AA2A	Model	Qty.	Model	Qty.
0004	Model	Qty.	Model	Qty.
0004	CR2LS-30			
0008	0.1220 00			
0010		3	CM-1A	1
0012	CR2LS-50			
0018	CR2LS-75			
0021	CR2LS-100	1		
0030	CR2L-125			
0040	CR2L-150	3	CM-2A	1
0056	CR2L-175			
0069	CR2L-225			
0081	CR2L-260			
0110	CR2L-300			
0138	CR2L-350			
0169	CR2L-400	3	*	
0211	CR2L-450] 3		
0250				
0312	CR2L-600			
0360				
0415	CS5F-800			

^{*} Manufacturer does not recommend a specific fuse holder for this fuse. Contact the manufacturer for information on fuse dimensions.

400 V Class

400 V Class				
Model	Fuse		Fuse Holde	er
CIMR-AA4A[[#][#][#]	Model	Qty.	Model	Qty.
0002	CR6L-20			
0004	CR6L-30			
0005		3	CMS-4	3
0007	CR6L-50	3	CIVIS-4	3
0009	OTIOL 30			
0011				
0018	CR6L-75			
0023	OHOL 75			
0031	CR6L-100	3	CMS-5	3
0038	CR6L-150			
0044	OTIOL 130			
0058	CR6L-200			
0072	CR6L-250			
0088	01102 230			
0103	CR6L-300			
0139	CR6L-350	3	*	
0165	CR6L-400		7,	
0208				
0250	CS5F-600			
0296				
0362	CS5F-800			

Capacitor-Type Noise Filter

Capacitor-type noise filter exclusively designed for drive input.

The noise filter can be used in combination with a zero-phase reactor. For both 200 V and 400 V classes.


Note: The capacitor-type noise filter can be used for drive input only. Do not connect the noise filter to the output terminals.



[Okaya Electric Industries Co., Ltd.]

Model	Code No.
3XYG 1003	C002889

Connection Diagram




Specifications

_	70000		
	Rated Voltage	Capacitance (3 devices each)	Operating Temperature (°C)
	440 V	X (Δ connection) : 0.1 μ F ± 20 % Y (λ connection) : 0.003 μ F ± 20 %	- 40 to +85

Note: For use with 460 V and 480 V units, contact Yaskawa directly.

Dimensions (mm)

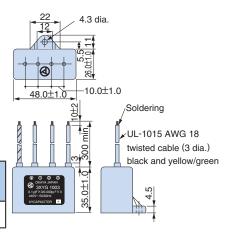



Input Noise Filter

Base device selection on motor capacity.



Noise Filter without Case




Noise Filter with Case



[Schaffner EMC K.K.] Noise Filter

Connection Diagram



Note: Do not connect the input noise filter to the drive output terminals (U, V, W). Connect in parallel when using two filters. Only a single noise filter is required if the filter is made by Schaffner EMC K.K.

Note: Contact Yaskawa for CE compliant models (EMC directive).

200 V Class

Motor	Noise	Filter without	Case		Nois	se Filter with C	ase		Noise Filte	r by Schaffner	EMC K.	K.
Capacity (kW)	Model	Code No.	Qty.	Rated Current (A)	Model	Code No.	Qty.	Rated Current (A)	Model	Code No.	Qty.	Rated Current (A)
0.4 0.75 1.5	LNFD-2103DY	FIL000132	1	10	LNFD-2103HY	FIL000140	1	10	-	_	-	_
2.2	LNFD-2153DY	FIL000133	1	15	LNFD-2153HY	FIL000141	1	15	_	_	_	_
3.7	LNFD-2303DY	FIL000135	1	30	LNFD-2303HY	FIL000143	1	30	_	_	_	_
5.5	LNFD-2203DY	FIL000134	2	40	LNFD-2203HY	FIL000142	2	40	FN258L-42-07	FIL001065	1	42
7.5			2	60			2	60	FN258L-55-07	FIL001066	1	55
11	==	=	3	90			3	90	FN258L-75-34	FIL001067	1	75
15 18.5	LNFD-2303DY	FIL000135			LNFD-2303HY	FIL000143			FN258L-100-35	FIL001068	1	100
22			4	120			4	120	FN258L-130-35	FIL001069	1	130
30									FN258L-130-35	FIL001069	1	130
37 45									FN258L-180-07	FIL001070	1	180
55	-	_	_	_	_	_	_	_	FN359P-250-99	FIL001071	1	250
75									FN359P-400-99	FIL001073	1	400
90									FN359P-500-99	FIL001074	1	500
110									FN359P-600-99	FIL001075	1	600

Motor	Noise	e Filter without	Case		Noi	se Filter with C	ase		Noise Filte	r by Schaffner	EMC K.	K.
Capacity (kW)	Model	Code No.	Qty.	Rated Current (A)	Model	Code No.	Qty.	Rated Current (A)	Model	Code No.	Qty.	Rated Current (A)
0.4	LNFD-4053DY	FIL000144	1	5	LNFD-4053HY	FIL000149	1	5				
1.5 2.2	LNFD-4103DY	FIL000145	1	10	LNFD-4103HY	FIL000150	1	10				
3.7	LNFD-4153DY	FIL000146	1	15	LNFD-4153HY	FIL000151	1	15		_	_	
5.5	LNFD-4203DY	FIL000147	1	20	LNFD-4203HY	FIL000152	1	20				
7.5	LNFD-4303DY	FIL000148	1	30	LNFD-4303HY	FIL000153	1	30				
11	LNFD-4203DY	FIL000147	2	40	LNFD-4203HY	FIL000152	2	40	FN258L-42-07	FIL001065	1	42
15 18.5			2	60			2	60	FN258L-55-07	FIL001066	1	55
22 30	LNFD-4303DY	FIL000148	3	90	LNFD-4303HY	FIL000153	3	90	FN258L-75-34	FIL001067	1	75
37									FN258L-100-35	FIL001068	1	100
45			4	120			4	120	FN258L-100-35	FIL001068	1	100
55									FN258L-130-35	FIL001069	1	130
75 90									FN258L-180-07	FIL001070	1	180
110	_	_	_	_	_	_	_	_	FN359P-300-99	FIL001072	1	300
132 160									FN359P-400-99	FIL001073	1	400
185	1								FN359P-500-99	FIL001074	1	500



Weight

(kg)

0.2

0.4

0.5

0.3


0.4

0.5

0.6

Without Case

Dimensions (mm)

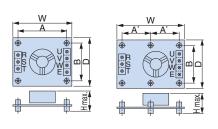


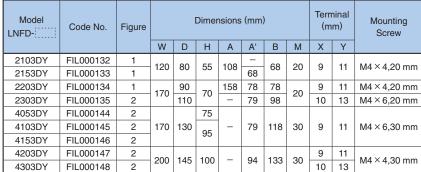



Figure 1

Figure 2



With Case

Dimensions (mm)

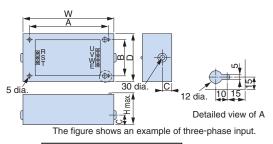

LNFD-:				monsic	ons (mi	n)		(m	ninal m)	Weight (kg)
		W	D	Н	Α	В	С	Х	Υ	
2103HY F	FIL000140	185	95	85	155	65	33	9	11	0.9
2153HY F	FIL000141	100	95	00	155	05	33	Э	11	0.9
2203HY F	FIL000142	040	125	100	210	95	20	9	11	1.5
2303HY F	FIL000143	240	125	100	210	95	33	10	13	1.6
4053HY F	FIL000149									1.6
4103HY F	FIL000150	235	140	120	205	110	43	9	11	4.7
4153HY F	FIL000151									1.7
4203HY F	FIL000152	070	155	105	040	125	40	9	11	0.0
4303HY F	FIL000153	270	100	125	240	125	43	10	13	2.2



Manufactured by Schaffner EMC K.K.

Dimensions (mm)





Figure 1

Figure 2



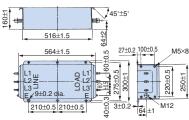


Figure 3

Figure 4

Model	Weight (kg)
FN359P-250-99	16
FN359P-300-99	16
FN359P-400-99	18.5
FN359P-500-99	19.5
FN359P-600-99	20.5
FN359P-900-99	33

Model	Eiguro					Dim	ensions (r	nm)					Wire Gauge	Weight
iviodei	Figure	Α	В	С	D	Е	F	G	Н	J	L	0	Р	(kg)
FN258L-42-07			185 ± 1	70			45		500		12		AWG8	2.8
FN258L-55-07	1	329	100 ± 1	80	300	314	55	6.5	500	1.5	12	M6	AWG6	3.1
FN258L-75-34			220	00			55		_		_		-	4
FN258L-100-35	2	379±1.5	220	90±0.8	350±1.2	364	65			1.5	_			5.5
FN258L-130-35	2	439±1.5	240	110±0.8	400±1.2	414	80	6.5	_	3	_	M10	_	7.5
FN-258L-180-07	3	438±1.5	240	110±0.8	400±1.2	413	80		500	4	15		50 mm ²	11
FN359P-	4		D 11 15 15										Shown in the	
	1-1 11 1	Described in Figure 4										above table.		



Output Noise Filter


Base device selection on motor capacity.



[NEC Tokin Corporation]

Output noise filter A1000 Circuit breaker IN R/L1 U/T1 S/L2 V/T2 М T/L3 W/T3 Use the mounting screw as the grounding terminal.

Connection Diagram

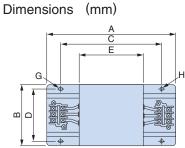



200 V Class

Motor Capacity (kW)	Model	Code No.	Qty.*1	Rated Current (A)	A	В	С		ensions mm)	F	G	Н	Terminal	Weight*2 (kg)
				(A)	А	Б	U	D		Г	G	П		(kg)
0.4														
0.75	LF-310KA	FIL000068	1	10	140	100	100	90	70	45	$7 \times \phi 4.5$	φ4.5	TE-K5.5 M4	0.5
1.5														
2.2	I E 000KA	EII 000000	1	00	140	100	100	00	70	45	71/45		TE 1/5 5 144	
3.7	LF-320KA	FIL000069	ı	20	140	100	100	90	70	45	$7 \times \phi 4.5$	φ4.5	TE-K5.5 M4	0.6
5.5			_											
7.5			1	50										
11	LF-350KA	FIL000070			260	180	180	160	120	65	7× \phi 4.5	φ4.5	TE-K22 M6	2.0
15			2	100										
18.5														
22	LF-350KA*3	FIL000070	2	150	260	180	180	160	120	65	7× \phi 4.5	φ4.5	TE-K22 M6	2.0
22	LF-3110KB*3	FIL000076	1	110	540	340	480	300	340	240	9× <i>ϕ</i> 6.5	φ6.5	TE-K60 M8	19.5
00	LF-350KA*3	FIL000070	3	150	260	180	180	160	120	65	7× \phi 4.5	φ4.5	TE-K22 M6	2.0
30	LF-375KB*3	FIL000075	2	150	540	320	480	300	340	240	9×φ6.5	φ6.5	TE-K22 M6	12.0
37														
45	LF-3110KB	FIL000076	2	220	540	340	480	300	340	240	9× <i>ϕ</i> 6.5	φ6.5	TE-K60 M8	19.5
55														
75			3	330										
90	LF-3110KB	FIL000076	4	440	540	340	480	300	340	240	9× <i>ϕ</i> 6.5	φ6.5	TE-K60 M8	19.5
110			5	550										

^{*1:} Connect in parallel when using more than one filter.

400 V CI	a55													
Motor				Rated					ensions					
Capacity	Model	Code No.	Qty.*1	Current					nm)				Terminal	Weight*2
(kW)				(A)	А	В	С	D	Е	F	G	Н		(kg)
0.4														
0.75														
1.5	LF-310KB	FIL000071	1	10	140	100	100	90	70	45	7× \(\phi 4.5	φ4.5	TE-K5.5 M4	0.5
2.2									'-		, ,	,		
3														
3.7														
5.5	LF-320KB	FIL000072		20										0.6
7.5		200007.2	1		140	100	100	90	70	45	7× φ 4.5	<i>φ</i> 4.5	TE-K5.5 M4	0.0
11	LF-335KB	FIL000073		35					'-		, , ,	,		0.8
15														
18.5	LF-345KB	FIL000074	1	45	260	180	180	160	120	65	7× φ 4.5	φ4.5	TE-K22 M6	2.0
22	LF-375KB	FIL000075	1	75	540	320	480	300	340	240	9×φ6.5	φ6.5	TE-K22 M6	12.0
30			-								7 7 7 7	7		
37	LF-3110KB	FIL000076	1	110	540	340	480	300	340	240	9×φ6.5	φ6.5	TE-K60 M8	19.5
45											′	,		
55	LF-375KB	FIL000075	2	150	540	320	480	300	340	240	$9 \times \phi 6.5$	φ6.5	TE-K22 M6	12.0
75	LF-3110KB	FIL000076	2	220	540	340	480	300	340	240	9×φ6.5	φ6.5	TE-K60 M8	19.5
90	El CITORD	1.1200070	_		J 70	3 70	.50	- 550	J 10	+0	υν.φυ.σ	ψ 0.0	1 = 1100 WIO	10.0
110	LF-3110KB	FIL000076	3	330	540	340	480	300	340	240	9×φ6.5	φ6.5	TE-K60 M8	19.5
132	21 011010	. 12000070	Ü		J-0	0-10	-00	000	0,0	2-10	υλψυ.υ	# 0.5	12 100 100	10.0
160	LF-3110KB	FIL000076	4	440	540	340	480	300	340	240	9×φ6.5	φ6.5	TE-K60 M8	19.5
185	בו טווטונט	112000070		770	340	040	400	300	340	240	$\int A \psi 0.5$	ψ 0.3	1 - 100 100	19.5

^{*1:} Connect in parallel when using more than one filter.*2: Weight of one filter.

^{*2:} Weight of one filter.

^{*3:} Either noise filter model can be used.





24 V Power Supply

The 24 V Power Supply Option maintains drive control circuit power in the event of a main power outage. The control circuit keeps the network communications and I/O data operational in the event of a power outage. It supplies external power to the control circuit only.

Note: Parameter settings cannot be changed when the drive is operating solely from this power supply.

The installed option adds 50 mm to the total depth of the drive.




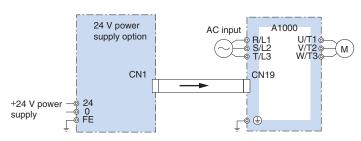


Connection Diagram

Model	Code No.
200 V Class: PS-A10L	PS-A10L
400 V Class: PS-A10H	PS-A10H

Momentary Power Loss Recovery Unit

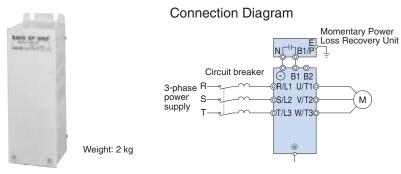

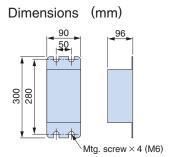

Model	Code No.
200 V Class: P0010	P0010
400 V Class: P0020	P0020

Note: Functions as a back-up power supply for drives up to 11 kW. Allows the drive to ride through a power loss up to 2 s long. The drive alone can continue running through a power loss lasting 0.1 s to 1.0 s. Results may vary with drive capacity.



Braking Unit, Braking Resistor, Braking Resistor Unit

Braking units come standard with 200 V and 400 V class drives 0.4 to 30 kW. If the application requires a braking resistor or braking unit, choose from built-in and stand-alone types in accordance with motor capacity.



Braking Unit

[CDBR series]





Braking Resistor [ERF-150WJ series]



Braking Resistor with Fuse [CF120-B579 series]



Braking Resistor Unit [LKEB series]

Max.	Ola	A1000	Braking	Unit		Braking	, Re	sistor ([Duty Fac	ctor: 3% El	D, 10 s m	ax.)	*1		Braking Re	sistor Unit (Duty Facto	r: 10%	% ED, 10	s max.)*1	Min.*2
Applicable	ND/UD	Model	Model		Model	Desistance			Braking	Model	Danietonaa			Braking	Model	Resistor			Braking	Connectable
Motor	ND/HD	CIMR-AA2A	CDBR-	Qty.	ERF-150WJ	Resistance	Qty.	Diagram	Torque*3	CF120-B579	Resistance	Qty.	Diagram	Torque	LKEB-	Specifications	Qty.	Diagram	Torque*3	Resistance
(kW)						(Ω)			(%)		(Ω)			(%)		(per unit)			(%)	(Ω)
0.4	HD	0004			201	200	1	Α	220	В	200	1	Α	220	20P7	70 W 200 Ω	1	В	220	48
0.75	ND HD	0004 0006			201	200	1	Α	125	В	200	1	Α	125	20P7	70 W 200 Ω	1	В	125	48
	ND	0006	1		201	200			85	В	200	1		85	20P7	70 W 200 Ω			85	
1.1	HD	0008	1		101	100	1	Α	150	С	100	1	Α	150	21P5	260 W 100 Ω	1	В	150	48
1.5	ND	0008			101	100	1	А	125	С	100	1	А	125	21P5	260 W 100 Ω	1	В	125	48
	HD	0010	-																	40
2.2	ND	0010	-		700	70	1	Α	120	D	70	1	Α	120	22P2	260 W 70 Ω	1	В	120	48
	HD ND	0012 0012	-																	16
3	HD	0012			620	62	1	Α	100	Е	62	1	Α	100	22P2	390 W 40 Ω	1	В	150	16
	ND	0018	1																	
3.7	HD	0021	1		620	62	1	Α	80	E	62	1	Α	80	23P7	390 W 40 Ω	1	В	125	16
	ND	0021	1		620	62	2	Α	110	Е	62	2	Α	110						
5.5	HD	0030	Built-	in	_	_	_	_	_	_	_	1-	_	_	25P5	520 W 30 Ω	1	В	115	16
7.5	ND	0030			_	-	_	_	_	-	_	-	-	-	0705	700 111 00 0		_	405	16
7.5	HD	0040	1		-	_	-	-	-	_	_	-	-	-	27P5	780 W 20 Ω	1	В	125	9.6
11	ND	0040	1		_	_	-	-	-	_	_	-	_	_	0011	0400111 4000	4	В	105	0.0
11	HD	0056	1		_	_	-	_	_	-	_	-	_	_	2011	2400 W 13.6 Ω	1	В	125	9.6
15	ND	0056]		_	_	_	_	-	_	_	-	_	_	2015	2000 W 10 O	1	В	125	9.6
15	HD	0069			_	_	_	_	_	_	_	-	_	_	2015	3000 W 10 Ω	'	Ь	125	9.0
18.5	ND	0069			_	_	_	_	_	_	_	-	_	_	2015	3000 W 10 Ω	1	В	100	9.6
10.5	HD	0081			-	_	_	_	_	_	-	-	-	_	2013	3000 W 10 12	'	В	100	3.0
22	ND	0081			_	_	_	_	_	_	_	_	_	_	2015	3000 W 10 Ω	1	В	85	9.6
	HD	0110]		_	_	_	_	-	-	_	_	_	_	2022	4800W 6.8 Ω	<u>'</u>		125	6.4
30	ND	0110			_	_	_	_	_	-	-	-	_	_	2022	4800 W 6.8 Ω	1	В	90	6.4
	HD	0138			_	_	_	_	_	-	-	-	-	_						
37	ND	0138			_	_	_	_	-	_	_	-	_	_	2022	4800 W 6.8 Ω	1	В	70	6.4
	HD	0169	2015B	2	-	_	_	_	-	_	_	_	_	_	2015	3000 W 10 Ω	2	D	100	9.6
45	ND	0169	2015B	2	_	_	_	_	_	_	_	-	_	_	2015	3000 W 10 Ω	2	D	80	9.6
	HD	0211	2022B	2	_	_	_	_	_	_	_	-	_	_	2022	4800 W 6.8 Ω			120	6.4
55	ND	0211	2022B	2	_	_	_	_	_	_	_	-	_	_	2022	4800 W 6.8 Ω	2	D	100	6.4
	HD	0250																		
75	ND	0250	2110B	1	_	_	_	_	_	_	_	-	_	_	2022	4800 W 6.8 Ω	3	Е	110	1.6
	HD	0312																		
90	ND	0312	2110B	1	_	_	_	-	_	_	_	-	_	_	2022	4800 W 6.8 Ω	4	Е	120	1.6
	HD	0360																	_	
110	ND	0360	01100	4											2010	4000 144 0 0	_	_	100	1.0
110	ND	0415	2110B	1	_	_		_	_	_	_	-		_	2018	4800 W 8 Ω	5	Е	100	1.6
	HD	0415																		

^{*1 :} Refers to a motor coasting to stop with a constant torque load. Constant output and regenerative braking will reduce the duty factor.

^{*2 :} Assumes the use of a single braking unit. The braking unit should have a resistance higher than the minimum connectable resistance value and be able to generate enough braking torque to stop the motor.

Applications with a relatively large amount of regenerative power (elevators, hoists, etc.) may require more braking power than is possible with only the standard braking unit and braking resistor. Contact Yaskawa for information if braking torque exceeds the value shown.

Note: 1. Braking resistor (ERF-150WJ and CF120-B579) requires a separate attachment for installation. See attachment for braking resistor unit on page 49.

^{2.} See the connection diagram on page 48.



700 V	Ola	00																		
Max.		A1000	Braking	Unit		Braking	g Re	sistor (I	Outy Fac	ctor: 3% El	D, 10 s m	ax.)	*1		Braking Re	sistor Unit (Duty Facto	r: 109	% ED, 10	s max.)*1	Min.*2
Applicable	ND/IID	Model	Model		Model				Braking	Model				Braking	Model	Resistor			Braking	Connectable
Motor	ND/HD	CIMR-AA4A	CDBR-	Qty.	ERF-150WJ	Resistance	Qty.	Diagram	Torque*3	CF120-B579	Resistance	Qty.	Diagram		LKEB-	Specifications	Qty.	Diagram		Resistance
(kW)				"	1-11-11-1	(Ω)	,	""	(%)		(Ω)	"		(%)		(per unit)	,		(%)	(Ω)
0.4	HD	0002			751	750	1	Α	230	F	750	1	Α	230	40P7	70 W 750 Ω	1	В	230	96
0.1	ND	0002	1		701	700		- / (200		700	Ė	- / (200	101 7	70 W 730 32	Ė		200	00
0.75	HD	0002	1		751	750	1	Α	130	F	750	1	Α	130	40P7	70 W 750 Ω	1	В	130	96
																				00
1.5	ND	0004			401	400	1	Α	125	G	400	1	Α	125	41P5	260 W 400 Ω	1	В	125	96
	HD	0005																		64
2.2	ND	0005			301	300	1	Α	115	Н	300	1	Α	115	42P2	260 W 250 Ω	1	В	135	64
	HD	0007														200 11 200	·	_		
3	ND	0007			201	200	1	Α	125	J	250	1	A	100	42P2	260 W 250 Ω	1	В	100	64
٦	HD	0009			201	200	'	_ ^	123	J	250	l '	_ ^	100	43P7	390 W 150 Ω	'		150	32
0.7	ND	0009			001	200	1	_	105		050	4	_	00	4007	00004 450 0	4	В	105	20
3.7	HD	0011	1		201	200	1	A	105	J	250	1	Α	83	43P7	390W 150 Ω	1	В	135	32
	ND	0011			201	200	2	Α	135	J	250	2	Α	105		_				
5.5	HD	0018	1		_	_	_	-	_	_	_	1-	_	_	45P5	520 W 100 Ω	1	В	135	32
	ND	0018	Built-	·in	_	_	_	_	_	_	_	_	_	_						
7.5	HD	0023	{		_	_	_	_	_	_	_		_	_	47P5	780 W 75 Ω	1	В	130	32
	ND	0023	1		_	_		_	_	_	_		_	_						32
11	HD		-												4011	1040 W 50 Ω	1	В	135	
		0031					_					_								20
15	ND	0031			_	_	_	-	_		-	二	_	_	4015	1560 W 40 Ω	1	В	125	20
	HD	0038			_	_	_	_	_	_	_	-	_	_						
18.5	ND	0038			-	_	-	_	_	_	_	-	_	_	4018	4800 W 32 Ω	1	В	125	20
10.0	HD	0044	[_	_	_	_	_	_	_	_	_	_	1010	4000 VV 02 32	Ľ.		120	19.2
22	ND	0044			-	_	_	_	_	_	_	-	_	_	4022	4000 W 07 0 O	1	В	125	19.2
	HD	0058			_	_	_	_	_	_	_	-	_	_	4022	4800 W 27.2 Ω	'		123	19.2
-00	ND	0058	1		_	_	-	-	_	_	_	-	_	_	4000			_	105	40.0
30	HD	0072	1		-	_	_	-	_	_	_	-	_	_	4030	6000 W 20 Ω	1	В	125	19.2
	ND	0072	ĺ		_	_	_	_	_	_	_	-	_	_	4030	6000 W 20 Ω		В	100	19.2
37	HD	0088	4045B	1	_	_	_	_	_	_	_	-	_	_	4037	9600 W 16 Ω	1	C	125	12.8
	ND	0088														0000 14 10 22				
45	HD	0103	4045B	1	_	_	_	-	_	_	_	-	_	-	4045	9600 W 13.6 Ω	1	С	125	12.8
	ND	0103	4045B	1	_	_		_	_	_	_		_	_	4045	0600 W 12 C O	1	С	100	12.8
55	HD			-		_	_					F				9600 W 13.6 Ω		D		
		0139	4030B	2			_	_	_	_	_		_	_	4030	6000 W 20 Ω	2	D	135	19.2
75	ND	0139	4030B	2	_	_	_	-	-	_	_	-	-	_	4030	6000 W 20 Ω	2	D	100	19.2
	HD	0165	4045B		_	_	_	-	_	_	_	_	-	_	4045	9600W 13.6 Ω			145	12.8
90	ND	0165	4045B	2	_	_	_	_	_	_	_	_	_	_	4045	9600W 13.6 Ω	2	D	120	12.8
	HD	0208	.0 100	_											1010	JUJUVV 13.0 12	_		120	12.0
110	ND	0208	4220B	1	_	_	_	_	_	_	_	_	_	_	4030	6000 W 20 O	3	Е	100	3.2
110	HD	0250	4220B	'	_	_	-	-	_	_	_	_	_	_	4030	6000 W 20 Ω	3	-	100	3.2
465	ND	0250	40000												40.15			_	450	0.0
132	HD	0296	4220B	1	_	_	_	_	_	_	_	-	_	_	4045	9600W 13.6 Ω	4	E	150	3.2
	ND	0296																		
160	HD	0362	4220B	1	_	_	_	-	_	_	-	-	_	_	4045	9600W 13.6 Ω	4	E	140	3.2
185	ND	0362	4220B	1	_	_	_	_	_				_	_	4045	9600W 13.6 Ω	4	Е	120	3.2
100	IND	0302	TZZUD												4040	300000 13.0 12	4		120	0.2

^{*1:} Refers to a motor coasting to stop with a constant torque load. Constant output and regenerative braking will reduce the duty factor.

*2: Assumes the use of a single braking unit. The braking unit should have a resistance higher than the minimum connectable resistance value and be able to generate enough braking torque to stop the motor.


*3: Applications with a relatively large amount of regenerative power (elevators, hoists, etc.) may require more braking power than is possible with only the standard braking unit and braking resistor. Contact Yaskawa for information if braking torque exceeds the value shown.

Note: 1. Braking resistor (ERF-150WJ and CF120-B579) requires a separate attachment for installation. See attachment for braking resistor unit on page 49.

^{2.} See the connection diagram on page 48.




Connection Diagram

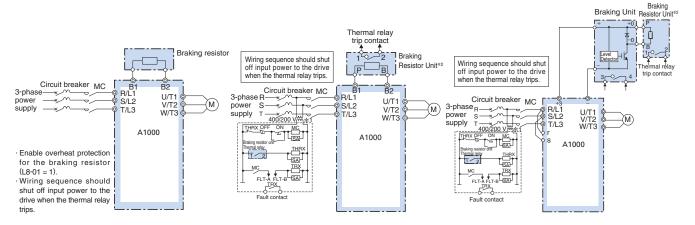

Connection Diagram A

Connection Diagram B

Connection Diagram C

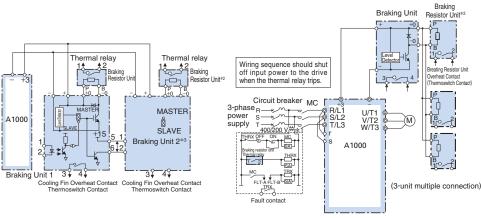


Connection Diagram D


Connection Diagram E

- *1:200 V class drives do not require a control circuit transformer.
- *2: Disable Stall Prevention during deceleration by setting L3-04 to 0 or 3 when using a Braking Resistor Unit.
 - The motor may not stop within the deceleration time if this setting is not changed.
- *3: When using more than one braking unit connected in parallel, set one of the braking units to be the master, and the others to be slaves.
- Note: When connecting a separately-installed type braking resistor unit (model CDBR) to drives with a built-in braking transistor (200 V/400 V 30 kW or less), connect the B1 terminal of the drive to the positive terminal of the braking resistor unit and connect the negative terminal of the drive to the negative terminal of the braking resistor unit. The B2 terminal is not used in this case.

Dimensions (mm) **Braking Unit**

Model: CDBR-2015B, -2022B, -4030B, -4045B

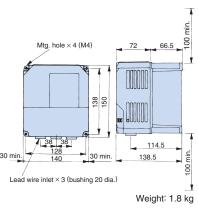

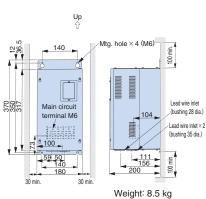

Model: CDBR-2110B

Mtg. hole × 4 (M6) Lead wire inlet (bushing 28 dia.) (bushing 35 dia.) 156.5 118.5 5 30 min Weight: 12 kg


Model: CDBR-4220B


Model	Heat Loss
CDBR-[[]]	(W)
2015B	32
2022B	38
2110B	64
4030B	54
4045B	59
4220B	71



Braking Resistor


A separate attachment is need. Contact Yaskawa for details. The following attachment can be used to install to the drive.

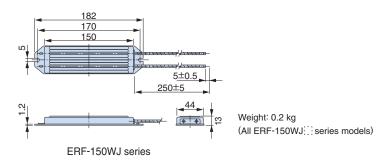

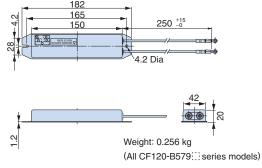


CF120-B579 series

Braking Resistor Unit (stand-alone)

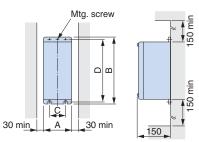



Applicable	Braking Resistor			Dime	ensio	ns (m	m)	14/-:	Allowable Average
Voltage Class	Unit Model	Figure	А	В	С	D	MTG Screw	Weight (kg)	Power Consumption (W)
	20P7	1	105	275	50	260	M5×3	3.0	30
	21P5							4.5	60
	22P2	1	130	350	75	335	$M5 \times 4$	4.5	89
	23P7							5.0	150
200 V	25P5	1	250	350	200	225	M6×4	7.5	220
Class	27P5	'	250	350	200	333	IVIO × 4	8.5	300
	2011		266		246			10	440
	2015	2	356	543	336	340	M8×4	15	600
	2018		446	543	426	340	IVIO ^ 4	19	740
	2022		440		420			19	880

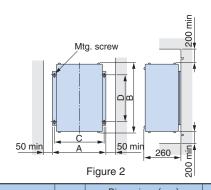


Applicable	Braking Resistor			Dimensions (mm)				Allowable Average	
Voltage Class	ŭ		А	В	С	D	MTG Screw	Weight (kg)	Power Consumption (VV)
	40P7	1	105	275	50	260	M5×3	3.0	30
	41P5	1	130	350	75	335	M5×4	4.5	60
	42P2							4.5	89
	43P7							5.0	150
	45P5	1	250 35	350	200	335	M6×4	7.5	220
400.17	47P5			330				8.5	300
400 V Class	4011	2	350	412	330	325	M6×4	16	440
Olass	4015							18	600
	4018	2	446	543	426	340	M8×4	19	740
	4022							19	880
	4030		356		336			25	1200
	4037	2	446	956	426	740	M8×4	33	1500
	4045							33	1800

Attachment for Braking Resistor





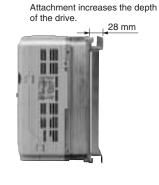

Model	Code No.
EZZ020805A	100-048-123



VS System Module (Power Supply Capacity 6 VA or less)

Name (Model)	Exterior	Function
Soft Starter A (JGSM-01) Soft Starter B (JGSM-02)		Provides smooth changes in speed during start, stop, and when sudden changes in the speed reference would otherwise impact the load. Independent accel/decel settings, an output signal during speed changes, and fast stopping features are included. Capable of detecting zero speed and motor direction. Acceleration and deceleration time setting ranges: Soft Starter A: 1.5 to 30 s Soft Starter B: 5 to 90 s
Ratio Setter A (JGSM-03)		Converts the current signal 4 to 20 mA of master setter JVOP-03*1 to a voltage signal. Sets five types of ratios and biases.
Ratio Setter B (JGSM-04)		Converts the frequency signal 0 to 2 kHz of master setter JVOP-04*1 to a voltage signal. Sets five types of ratios and biases.
Ratio Setter C (JGSM-17)		Converts a 200 Vac signal, a 30 Vac tachgenerator signal, or a 10 Vdc signal to DC for use as the speed reference. Allows the user to set up to five ratios and biases.
Follower Ratio Setter (JGSM-05)		Converts a frequency signal from a tachgenerator for voltage input. Allows the user to set up to five ratios and biases.
Position Controller (JGSM-06)		Converts a self-synchronizing signal from YVGC-500W*1, then converts that signal to DC voltage proportional to the rotational angle. Equipped with a signal mixing function to minimize deviation from the reference signal.
PID Controller (JGSM-07)		Independently sets ratio gain, integral, and differential time for the simple process control. Integral reset, stepless operation, and wind-up functions are available.
Preamplifier (JGSM-09-□□)*²		Amplifies both the power of DC input signal and output of snap-in function modules JZSP-11 to 16*1.
UP/DOWN Setter (JGSM-10B)		Executes "UP" or "DOWN" command from remote control type VS operator model JVOP-10*1 by lowering or raising reference voltage.
Operational Amplifier (JGSM-12-□□)*3		Required operational circuits are provided through a range of operational impedances.
Signal Selector A (JGSM-13)		Consists of power supply circuit and two relay circuits. Used as a selector circuit of control signals.




Name (Model)	Appearance	Function
Signal Selector B (JGSM-14)		Contains three relay circuits to switch between control signals. Must be using in combination with JGSM-13, which supplies power.
Comparator (JGSM-15-□□)*²		Detects signal levels for DC voltage, current, AC tachogenerator, or frequency reference and compares them with two preset levels. The snap-in module*1 is used to drive relays and output contact signals.
V/I Converter (JGSM-16-□□)*²		Converts DC voltage into a 4 to 20 mA current signal for use with other monitoring devices. A snap-in module*1 can also be added to monitor frequency or provide feedback for a tachogenerator.
D/A Converter (JGSM-18) (JGSM-19)		Converts BCD 3-digit or 12-bit binary digital signals to analog signals of -10 to +10 V with high accuracy. Model JGSM-18: For BCD 3-digit input signals Model JGSM-19: For 12-bit binary signals
Static Potentiometer (JGSM-21 D/A Converter) (JGSM-22 Controller)		Static potentiometer can be used in combination with remote setting device JGSM-10B for the following applications: · Maintain reference values despite power loss · Set deceleration times externally · Operate as a soft-starter for an analog signal JGSM-21 and JGSM-22 must be used in combination with one another.

- *1: Offered as a standard Yaskawa product.
- *2: □□ shows model number of VS snap-in function modules. Refer to the VS Snap-in Module list for more information.

*2:
| indicates impedance class.

Note: Both 200 V/220 V at 50 Hz/60 Hz are available as standard models. Use a transformer for other power supplies with a capacity of 6 VA or less.

VS System Module Dimensions (mm)

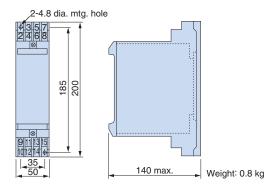

VS Snap-in Module List


Application	Name	Model
Short-circuit of mounting connector of VS snap-in module	Short-circuit PC board	JZSP-00
Buffer accel/decel operation	Soft starter	JZSP-12
Operation with a process controller or VS operator JVOP-03	I/V converter	JZSP-13
Control using digital operator JVOP-04	f/V converter	JZSP-14
Sequence operation with main unit	Tachogenerator follower	JZSP-15
		JZSP-16□□
Amplify or reduce cignal	Cignal miyer	JZSP-16-01
Amplify or reduce signal	Signal mixer	JZSP-16-02
		JZSP-16-03




LCD Operator/LCD Operator Extension Cable

For easier operation when using the optional LCD operator. Enables remote operation. Includes a copy function for saving drive settings.

Connection

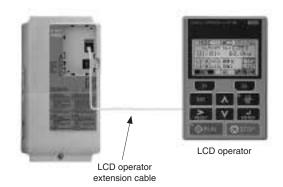

Dimensions (mm)

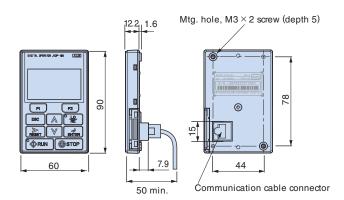

LCD Operator

Model		Code No.	
	JVOP - 180	100-041-022	

Operator Extension Cable

Model	Code No.
WV001 (1 m)	WV001
WV003 (3 m)	WV003

To install the digital operator on the door of the enclosure panel, the following tools are required:


Item	Model	Code No.	Installation	Notes
Installation Support Set A	EZZ020642A	100-039-992	M4×10 truss head screw M3×6 pan head screw min.50	For use with holes through the panel
Installation Support Set B	EZZ020642B	100-039-993	M4 nut M3×6 pan head screw	For use with panel mounted threaded studs Note: If weld studs are on the back of the panel, use the In- stallation Support Set B.



USB Copy Unit (Model: JVOP-181)

Can copy parameter settings easily and quickly to be later transferred to another drive. An adapter to connect the RJ-45 with the USB port of a PC.

Connection

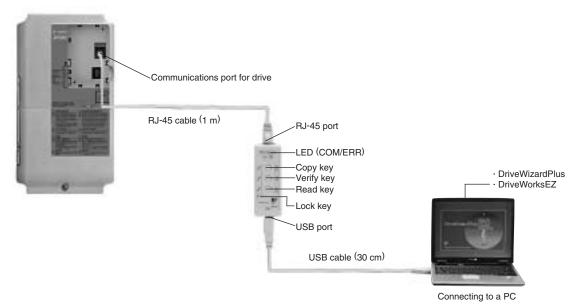

Note: No USB cable is needed to copy parameters to other drives.

Model	Code No.
JVOP-181	100-038-281

Note: JVOP-181 is a set consisting of a USB copy unit, RJ-45 cable, and USB cable.

Specifications

Item	Specifications
Port	LAN (RJ-45)
Port	USB (Ver.2.0 compatible)
Power Supply	Supplied from a PC or the drive
Operating System	Windows2000/XP
Memory	Memorizes the parameters for one drive.
Dimensions	30 (W) × 80 (H) × 20 (D) mm
Accessories	RJ-45 Cable(1 m), USB Cable(30 cm)

- Note: 1. Drives must have identical software versions to copy parameters settings.
 2. Requires a USB driver.
 3. Parameter copy function disabled when connected to a PC.



Frequency Meter/Current Meter



Model	Code No.
Scale-75 Hz full-scale: DCF-6A	FM000065
Scale-60/120 Hz full-scale: DCF-6A	FM000085
Scale-5 A full-scale: DCF-6A	DCF-6A-5A
Scale-10 A full-scale: DCF-6A	DCF-6A-10A
Scale-20 A full-scale: DCF-6A	DCF-6A-20A
Scale-30 A full-scale: DCF-6A	DCF-6A-30A
Scale-50 A full-scale: DCF-6A	DCF-6A-50A

Note: DCF-6A specifications are 3 V, 1 mA, and 3 k Ω inner impedance. Because the A1000 multi-function analog monitor output default setting is 0 to 10 V, set frequency meter adjusting potentiometer (20 $k\Omega$) or parameter H4-02 (analog monitor output gain) within the range of 0 to 3 V.

Dimensions (mm) Terminal screw × 2 (M4) Mtg. bolt × 4 (M3)

Panel Cut-Out Weight: 0.3 kg

Variable Resistor Board (installed to drive terminals)



Model	Code No.
Frequency reference 2 kΩ	ETX003270
Meter scale 20 k Ω	ETX003120

Connection Diagram




Weight: 20 g

Frequency Setting Potentiometer/Frequency Meter Adjusting Potentiometer



Model	Code No.
RV30YN20S 2 kΩ	RH000739
RV30YN20S 20 kΩ	RH000850

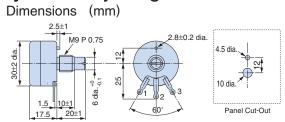


Weight: 0.2 kg

Control Dial for Frequency Setting Potentiometer/Frequency Meter Adjusting Potentiometer Dimensions (mm)




Model	Code No.
CM-3S	HLNZ-0036

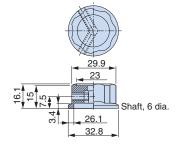

Meter Plate for Frequency Setting Potentiometer/Frequency Meter Adjusting Potentiometer



Model	Code No.
NPJT41561-1	NPJT41561-1

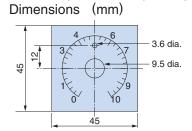




Output Voltage Meter



Model	Code No.			
Scale-300 V full-scale	vM000481			
(Rectification Type Class 2.5: SCF-12NH)	V IVIUUU48 I			
Scale-600 V full-scale	VM000502			
(Rectification Type Class 2.5: SCF-12NH)	V IVIOU0502			

Dimensions (mm)

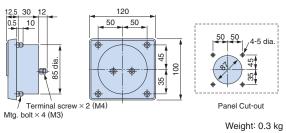

Potential Transformer




Model	Code No.		
600 V Transformer for Instrument	DT000004		
: UPN-15B 400 V/100 V	PT000084		

Note: For use with a standard voltage regulator.

A standard voltage regulator may not match the drive output voltage. Select a regulator specifically designed for the drive output (PT000084), or a voltmeter that does not use a transformer and offers direct read out.

Dimensions (mm)

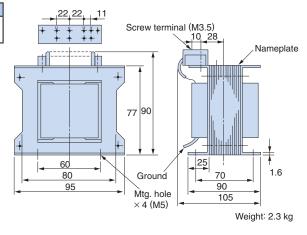



Application Notes

Application Notes

Selection


Installing a Reactor

An AC or DC reactor can be used for the following situations:

- · when the power supply is 600 kVA or more.
- · to smooth peak current that results from switching a phase advance capacitor.
- · to improve the power supply power factor.

A DC reactor comes standard with 200 V and 400 V class models with a capacity of 22 kW or more.

Be sure to use an AC reactor when the drive is using a power supply system with a thyristor converter.



■ Drive Capacity

When running a specialized motor or more than one motor in parallel from a single drive, the capacity of the drive should be larger than 1.1 times of the total motor rated current.

■ Starting Torque

The overload rating for the drive determines the starting and accelerating characteristics of the motor. Expect lower torque than when running from line power. To get more starting torque, use a larger drive or increase both the motor and drive capacity.

■ Emergency Stop

When the drive faults out, a protective circuit is activated and drive output is shut off. This, however, does not stop the motor immediately. Some type of mechanical brake may be needed if it is necessary to halt the motor faster than the Fast Stop function is able to.

Options

The B1, B2, +1, and +2 terminals are used to connect optional devices. Connect only A1000-compatible devices.

■ Repetitive Starting/Stopping

Cranes (hoists), elevators, punching presses, and other such applications with frequent starts and stops often exceed 150% of their rated current values. Heat stress generated from repetitive high current can shorten the lifespan of the IGBTs. The expected lifespan for the IGBTs is about 8 million start and stop cycles with a 4 kHz carrier frequency and a 150% peak current.

Yaskawa recommends lowering the carrier frequency, particularly when audible noise is not a concern. The user can also choose to reduce the load, increase the acceleration and deceleration times, or switch to a larger drive. This will help keep peak current levels under 150%. Be sure to check the peak current levels when starting and stopping repeatedly during the initial test run, and make adjustments accordingly.

For cranes and other applications using the inching function in which the drives starts and stops the motor repeatedly, Yaskawa recommends the following steps to ensure torque levels:

- · Select a large enough drive so that peak current levels remain below 150%.
- \cdot The drive should be one frame size larger than the motor.

Installation

■ Enclosure Panels

Keep the drive in a clean environment by either selecting an area free of airborne dust, lint, and oil mist, or install the drive in an enclosure panel. Leave the required space between the drives to provide for cooling, and take steps to ensure that the ambient temperature remains within allowable limits. Keep flammable materials away from the drive. If the drive must be used in an area where it is subjected to oil mist and excessive vibration, protective designs are available. Contact Yaskawa for details.

■ Installation Direction

The drive should be installed upright as specified in the manual.

Settings

- Use V/f Control when running multiple induction motors at the same time.
- If using Open Loop Vector Control designed for permanent magnet motors, make sure that the proper motor code has been set to parameter E5-01 before performing a trial run.

■ Upper Limits

Because the drive is capable of running the motor at up to 400 Hz, be sure to set the upper limit for the frequency to control the maximum speed. The default setting for the maximum output frequency is 60 Hz.

■ DC Injection Braking

Motor overheat can result if there is too much current used during DC Injection Braking, or if the time for DC Injection Braking is too long.

++××*

■ Acceleration/Deceleration Times

Acceleration and deceleration times are affected by how much torque the motor generates, the load torque, and the inertia moment (GD²/4). Set a longer accel/decel time when Stall Prevention is enabled. The accel/decel times are lengthened for as long as the Stall Prevention function is operating. For faster acceleration and deceleration, increase the capacity of the drive.

Compliance with Harmonic Suppression Guidelines

A1000 conforms to strict guidelines in Japan covering harmonic suppression for power conversion devices. Defined in JEM-TR201 and JEM-TR226 and published by the Japan Electrical Manufacturers' Association, these guidelines define the amount of harmonic current output acceptable for new installation. Refer to JEM-TR226 for more information on Japanese standards for harmonic suppression for power convertors.

General Handling

■ Wiring Check

Never connect the power supply lines to output terminals U/T1, V/T2, or W/T3. Doing so will destroy the drive. Be sure to perform a final check of all sequence wiring and other connections before turning the power on. Make sure there are no short circuits on the control terminals (+V, AC, etc.), as this could damage the drive.

■ Magnetic Contactor Installation

Avoid switching a magnetic contactor on the power supply side more frequently than once every 30 minutes. Frequent switching can cause damage to the drive.

Inspection and Maintenance

Capacitors in the drive take time to discharge even after the power has been shut off. To prevent shock, wait until the charge LED has gone out before attempting any maintenance on the drive.

The heatsink can become quite hot during operation, and proper precautions should be taken to prevent burns. When replacing the cooling fan, shut off the power and wait at least 15 minutes to be sure that the heatsink has cooled down.

■ Wiring

Make sure to use ring tongue solderless terminals when wiring UL/cUL-certified drives. Use the tools recommended by the terminal manufacturer for caulking.

■ Transporting the Drive

Never steam clean the drive.

During transport, keep the drive from coming into contact with salts, fluorine, bromine and other such harmful chemicals.

Peripheral Devices

■ Installing an MCCB

Install an MCCB to the power supply side of the drive to protect internal circuitry. The type of MCCB needed depends on the power supply power factor (power supply voltage, output frequency, load characteristics, etc.). Sometimes a fairly large MCCB may be required due to the affects of harmonic current on operating characteristics. Use a leakage breaker with harmonic suppression capability that has been designed specifically for operation with an AC drive. The rated current of the leakage breaker must be 30 mA or higher per drive unit. If a leakage breaker faults out without reducing harmonic current, then reduce the carrier frequency of the drive, replace it with a breaker that has better harmonic suppression capabilities, or provide a leakage breaker with at least a 200 mA current rating to each drive unit.

■ Magnetic Contactor for Input Power

Use a magnetic contactor (MC) to ensure that power to the drive can be completely shut off when necessary. The MC should be wired so that it opens when a fault output terminal is triggered.

Even though an MC is designed to switch to a momentary power loss, frequent MC use can damage other components. Avoid switching the MC more than once every 30 minutes. The MC will not be activated after a momentary power loss if using the operator keypad to run the drive. This is because the drive is unable to restart automatically when set for LOCAL. Although the drive can be stopped by using an MC installed on the power supply side, the drive cannot stop the motor in a controlled fashion, and it will simply coast to stop. If a braking resistor or dynamic braking unit has been installed, be sure to set up a sequence that opens the MC with a thermal protector switch connected to the braking resistor device.

■ Magnetic Contactor for Motor

As a general principle, the user should avoid opening and closing the magnetic contactor between the motor and the drive during run. Doing so can cause high peak currents and overcurrent faults. If magnetic contactors are used to bypass the drive by connecting the motor to the power supply directly, make sure to close the bypass only after the drive is stopped and fully disconnected



Application Notes (continued)

from the motor. The Speed Search function can be used to start a coasting motor.

Use an MC with delayed release if momentary power loss is a concern.

■ Motor Thermal Over Load Relay Installation

The drive comes with built in electrothermal protection to prevent damage from overheat. If running several motors from the same drive or if using a multi-pole motor, a thermal relay (THR) should be connected between the drive and each motor. Disable the motor protection selection parameter (L1-01 = 0), and set the thermal relay or thermal protection value in accordance with the data listed on the motor nameplate when running at 50 Hz, and 1.1 times the value listed on the motor nameplate when running at $60 \, \text{Hz}$.

■ Improving the Power Factor

Installing a DC or AC reactor to the input side of the drive can help improve the power factor.

Refrain from using a capacitor or surge absorber on the output side as a way of improving the power factor, because harmonic contents on the output side can lead to damage from overheat. This can also lead to problems with overcurrent.


■ Radio Frequency Interference

Drive output contains harmonic contents that can affect the performance of surrounding electronic instruments such as an AM radio. These problems can be prevented by installing a noise filter, as well as by using a properly grounded metal conduit to separate wiring between the drive and motor.

■ Wire Gauges and Wiring Distance

Motor torque can suffer as a result of voltage loss across a long cable running between the drive and motor, especially when there is low frequency output. Make sure that a large enough wire gauge is used.


The optional LCD operator requires a proprietary cable to connect to the drive. If an analog signal is used to operate the drive via the input terminals, make sure that the wire between the analog operator and the drive is no longer than 50 m, and that it is properly separated from the main circuit wiring. Use reinforced circuitry (main circuit and relay sequence circuitry) to prevent inductance from surrounding devices. To run the drive with a frequency potentiometer via the external terminals, use twisted shielded pair cables and ground the shield.

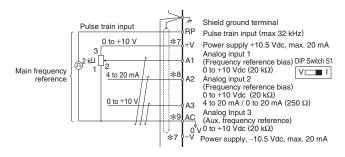

■ Counteracting Noise

Because A1000 is designed with PWM control, a low carrier frequency tends to create more motor flux noise than using a higher carrier frequency. Keep the following points in mind when considering how to reduce motor noise:

- · Lowering the carrier frequency minimizes the effects of noise.
- · A line noise filter can reduce the affects on AM radio frequencies and poor sensor performance. See "Options and Peripheral Devices" on page 24.
- · Make sure the distance between signal and power lines is at least 10 cm (up to 30 cm is preferable), and use twisted pair cable to prevent induction noise from the drive power lines.

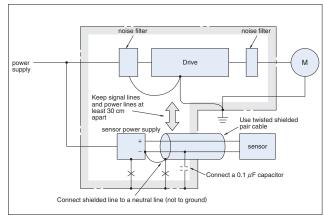

<Provided by JEMA>

■ Leakage Current

Harmonic leakage current passes through stray capacitance that exists between the power lines to the drive, ground, and the motor lines. Consider using the following peripheral devices to prevent problems with leakage current.

Problem		Solution		
Ground Leakage Current	MCCB is mistakenly triggered	Lower the carrier frequency set to parameter C6-02. Try using a component designed to minimize harmonic distortion for the MCCB such as the NV series by Mitsubishi.		
Current Leakage Between Lines	Thermal relay connected to the external terminals is mistakenly triggered by harmonics in the leakage current	Lower the carrier frequency set to parameter C6-02. Use the drive's built-in thermal motor protection function.		

+ + x x x

Setting the Carrier Frequency Relative to Wiring Distance

Wiring Distance	50 m or less	100 m or less	100 m or more
C6-02:	1 to A	1, 2, 7 to A	1, 7 to A
Carrier Frequency Selection	(15 kHz or less)	(5 kHz or less)	(2 kHz or less)

When a single drive is used to run multiple motors, the length of the motor cable should be calculated as the total distance between the drive and each motor.

A lower carrier should be used if the cable running between the motor and drive is relatively long when using Open Loop Vector Control or Open Loop Vector Control for PM, preferably as low as 2 kHz. If the motor cable is longer than 100 m, switch to V/f Control.


Use Current Detection Speed Search to find the speed of the motor.

Notes on Motor Operation

Using a Standard Motor

■ Low Speed Range

There is a greater amount of loss when operating a motor using an drive than when running directly from line power. With a drive, the motor can become quite hot due to the poor ability to cool the motor at low speeds. The load torque should be re-

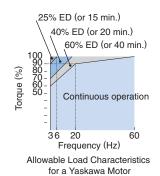

duced accordingly at low speeds. The figure above shows the allowable load characteristics for a standard Yaskawa motor. A motor designed specifically for operation with a drive should be used when 100% continuous torque is needed at low speeds.

■ Insulation Tolerance

Consider voltage tolerance levels and insulation in applications with an input voltage of over 440 V or particularly long wiring distances. Contact Yaskawa for consultation.

■ High Speed Operation

Problems may occur with the motor bearings and dynamic balance in applications operating at over 60 Hz. Contact Yaskawa for consultation.

■ Torque Characteristics

Torque characteristics differ when operating directly from line power. The user should have a full understanding of the load torque characteristics for the application.

■ Vibration and Shock

A1000 lets the user choose between high carrier PWM

control and low carrier PWM. Selecting high carrier PWM can help reduce motor oscillation. Keep the following points in mind when using high carrier PWM:

(1) Resonance

Take particular caution when using a variable speed drive for an application that is conventionally run from line power at a constant speed. Shock-absorbing rubber should be installed around the base of the motor and the Jump Frequency selection should be enabled to prevent resonance.

(2) Any imperfection on a rotating body increases vibration with speed.

Caution should be taken when operating above the motor rated speed.

■ Audible Noise

Noise created during run varies by the carrier frequency setting. Using a high carrier frequency creates about as much noise as running from line power. Operating above the rated speed (i.e., above 60 Hz), however, can create unpleasant motor noise.

Using a Synchronous Motor

- When the power to a drive running a PM motor is shut off, voltage continues to be generated at the motor terminals while the motor coasts to stop. Take the precautions described below to prevent shock and injury:
- Applications where the machine can still rotate even though the drive has fully stopped should have a load switch installed to the output side of the drive. Yaskawa recommends manual load switches from the AICUT LB Series by Aichi Electric Works Co., Ltd.
- Do not connect to a load that could potentially rotate the motor faster than the maximum allowable speed even when the drive has been shut off.
- Wait at least one minute after opening the load switch on the output side before inspecting the drive or performing any maintenance.
- Do not open and close the load switch while the motor is running, as this can damage the drive.
- If the motor is coasting, make sure the power to the drive is turned on and the drive output has completely stopped before closing the load switch.
- Synchronous motors cannot be started directly from line power. Applications requiring line power to start should use an induction motor with the drive.
- A single drive is not capable of running multiple synchronous motors at the same time. Use a standard induction motor for such setups.



Application Notes (continued)

- At start, a synchronous motor may rotate slightly in the opposite direction of the Run command depending on parameter settings and motor type.
- The amount of starting torque that can be generated differs by the type of motor being used. Set up the motor with the drive after verifying the starting torque, allowable load characteristics, impact load tolerance, and speed control range.
 - Contact Yaskawa if you plan to use a motor that does not fall within these specifications.
- Even with a braking resistor, braking torque is less than 125% when running between 20% to 100% speed, and falls to less than half the braking torque when running at less than 20% speed.
- The allowable load inertia moment is 50 times less than the motor inertia moment. Contact Yaskawa concerning applications with a larger inertia moment.
- When using a holding brake, release the brake prior to starting the motor. Failure to set the proper timing can result in speed loss. Conveyor, transport, and hoist applications using a holding brake should run an IPM motor in Closed Loop Vector Control for PM motors.
- To restart a coasting motor rotating at over 120 Hz, use the Short Circuit Braking* function to first bring the motor to a stop. Short Circuit Braking requires a special braking resistor. Contact Yaskawa for details.
 - Speed Search can be used to restart a coasting motor rotating slower than 120 Hz. If the motor cable is relatively long, however, the motor should instead be stopped using Short Circuit Braking and then restarted.
 - * Short Circuit Braking creates a short-circuit in the motor windings to forcibly stop a coasting motor.

Applications with Specialized Motors

■ Multi-Pole Motor

Because the rated current will differ from a standard motor, be sure to check the maximum current when selecting a drive. Always stop the motor before switching between the number of motor poles. If a regen overvoltage fault occurs or if overcurrent protection is triggered, the motor will coast to stop.

■ Submersible Motor

Because motor rated current is greater than a standard motor, select the drive capacity accordingly. Be sure to use a large enough motor cable to avoid decreasing the maximum torque level on account of voltage drop caused by a long motor cable.

■ Explosion-Proof Motor

Both the motor and drive need to be tested together to be certified as explosion-proof. The drive is not for explosion proof areas.

An explosion-proof pulse generators (PG) is used for an explosion-proof with voltage tolerance. Use a specially designed pulse coupler between the drive and the PG when wiring.

■ Geared Motor

Continuous operation specifications differ by the manufacturer of the lubricant. Due to potential problems of gear damage when operating at low speeds, be sure to select the proper lubricant. Consult with the manufacturer for applications that require speeds greater than the rated speed range of the motor or gear box.

■ Single-Phase Motor

Variable speed drives are not designed for operating single phase motors. Using a capacitor to start the motor causes excessive current to flow into the capacitors, potentially causing damage. A split-phase start or a repulsion start can end up burning out the starter coils because the internal centrifugal switch is not activated. A1000 is for use only with 3-phase motors.

■ Uras Vibrator

Uras vibrator is a vibration motor that gets power from centrifugal force by rotating unbalanced weights on both ends of the shaft. Make the following considerations when selecting a drive for use with an Uras vibrator:

- (1) Uras vibrator should be used within the drive rated frequency
- (2) Use V/f Control
- (3) Increase the acceleration time five to fifteen times longer than would normally be used due to the high amount of load inertia of an Uras vibrator
 - Note: Contact Yaskawa for applications that require an acceleration time of less than 5 s.
- (4) Drive may have trouble starting due to undertorque that results from erratic torque (static friction torque at start)



■ Motor with Brake


Caution should be taken when using a drive to operate a motor with a built-in holding brake. If the brake is connected to the output side of the drive, it may not release at start due to low voltage levels. A separate power supply should be installed for the motor brake. Motors with a built-in brake tend to generate a fair amount of noise when running at low speeds.

Power Driven Machinery (decelerators, belts, chains, etc.)

Continuous operation at low speeds wears on the lubricating material used in gear box type systems to accelerate and decelerate power driven machinery. Caution should also be taken when operating at speeds above the rated machine speed due to noise and shortened performance life.



YASKAWA AC Drive Series

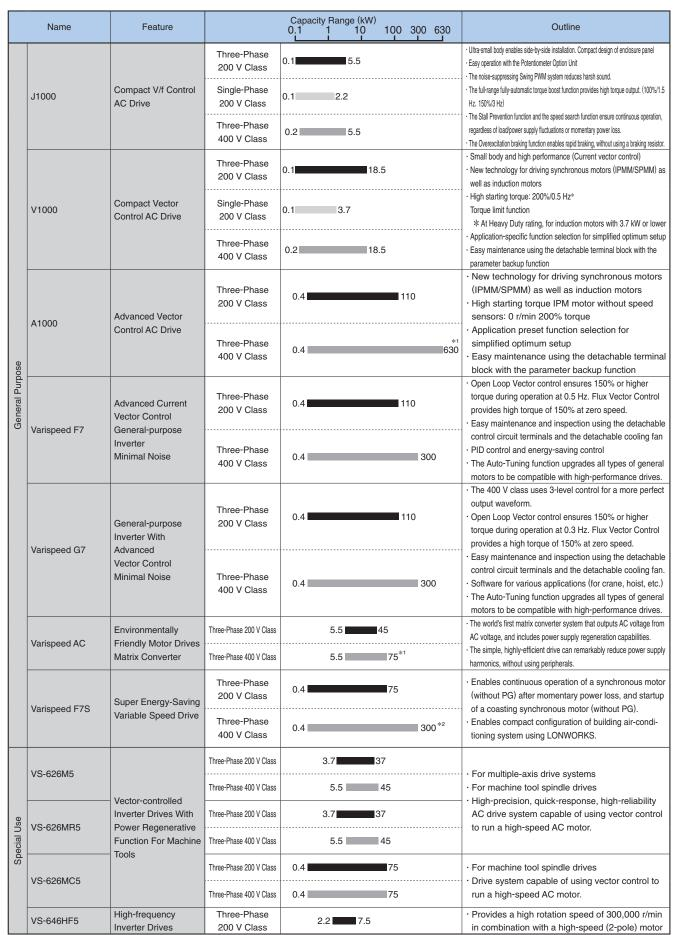

^{*1:} Some models are under development.

^{*2:} Maximum capacity without PG: 160 kW

Global Service Network



Region	Service Area	Service Location	Service Agency	Telephone/Fax
North America	U.S.A.	Chicago (HQ) Los Angeles New Jersey Boston San Francisco Ohio North Carolina	①YASKAWA ELECTRIC AMERICA INC.	Headquarters 12 +1-847-887-7303 FAX +1-847-887-7070
	Mexico	Mexico City	❷PILLAR MEXICANA. S.A. DE C.V.	+52-5593-28-69 FAX +52-5651-55-73
South	South America	Sao Paũlo	€YASKAWA ELÉCTRICO DO BRASIL LTD.A.	+55-11-3585-1100 FAX +55-11-5581-8795
America	Colombia	Bogota	OVARIADORES LTD.A.	+57-91-635-7460 FAX +57-91-611-3872
Furons	Europe,	Frankfurt	9YASKAWA ELECTRIC EUROPE GmbH	+49-6196-569-300 FAX +49-6196-569-398
Europe	South Africa		9YASKAWA ENGINEERING EUROPE GmbH	+49-6196-569-520 FAX +49-6196-888-598
	Japan	Tokyo, offices nationwide	YASKAWA ELECTRIC CORPORATION (Manufacturing, sales)	+81-3-5402-4502 FAX +81-3-5402-4580
			(After-sales service) (After-sales service)	+81-4-2931-1810 FAX +81-4-2931-1811
	South Korea	0	9YASKAWA ELECTRIC KOREA CORPORATION	+82-2-784-7844 FAX +82-2-784-8495
		Seoul	OYASKAWA ENGINEERING KOREA Co.	+82-2-3775-0337 FAX +82-2-3775-0338
	China	Beijing, Shanghai, Guangzhou	①YASKAWA ELECTRIC (SHANGHAI) Co., Ltd.	+86-21-5385-2200 FAX +86-21-5385-3299
Asia	Taiwan	Taipei	@YASKAWA ELECTRIC TAIWAN Co.	+886-2-2502-5003 FAX +886-2-2505-1280
	Singapore Sin	0:	(SYASKAWA ELECTRIC (SINGAPORE) Pte. Ltd.	+65-6282-3003 FAX +65-6289-3003
		Singapore	® YASKAWA ENGINEERING ASIA-PACIFIC Pte. Ltd.	+65-6282-1601 FAX +65-6282-3668
	Thailand	Bangkok	(5)YASKAWA ELECTRIC (THAILAND) Co., Ltd.	+66-2-693-2200 FAX +66-2-693-2204
	India	Mumbai	(BLARSEN & TOUBRO LIMITED	Headquarters
Oceania	Australia	Sydney (HQ) Melbourne	®ROBOTIC AUTOMATION Pty. Ltd.	Headquarters 15 +61-2-9748-3788 FAX +61-2-9748-3817

IRUMA BUSINESS CENTER (SOLUTION CENTER)

480, Kamifujisawa, Iruma, Saitama 358-8555, Japan Phone 81-4-2962-5696 Fax 81-4-2962-6138

YASKAWA ELECTRIC AMERICA, INC.

2121 Norman Drive South, Waukegan, IL 60085, U.S.A. Phone 1-847-887-7000 Fax 1-847-887-7370

YASKAWA ELÉTRICO DO BRASIL LTDA.

Avenida Fagundes Filho, 620 São Paulo-SP CEP 04304-000, Brazil Phone 55-11-3585-1100 Fax 55-11-5581-8795

YASKAWA ELECTRIC EUROPE GmbH

Hauptstraβe 185, 65760 Eschborn, Germany Phone 49-6196-569-300 Fax 49-6196-569-398

YASKAWA ELECTRIC UK LTD.

1 Hunt Hill Orchardton Woods Cumbernauld, G68 9LF, United Kingdom Phone 44-1236-735000 Fax 44-1236-458182

YASKAWA ELECTRIC KOREA CORPORATION

7F, Doore Bldg. 24, Yeoido-dong, Youngdungpo-Ku, Seoul 150-877, Korea Phone 82-2-784-7844 Fax 82-2-784-8495

YASKAWA ELECTRIC (SINGAPORE) PTE. LTD.

151 Lorong Chuan, #04-01, New Tech Park 556741, Singapore Phone 65-6282-3003 Fax 65-6289-3003

YASKAWA ELECTRIC (SHANGHAI) CO., LTD.
No.18 Xizang Zhong Road. Room 1702-1707, Harbour Ring Plaza Shanghai 200001, China Phone 86-21-5385-2200 Fax 86-21-5385-3299

YASKAWA ELECTRIC (SHANGHAI) CO., LTD. BEIJING OFFICE Room 1011A, Tower W3 Oriental Plaza, No.1 East Chang An Ave.,

Dong Cheng District, Beijing 100738, China Phone 86-10-8518-4086 Fax 86-10-8518-4082

YASKAWA ELECTRIC TAIWAN CORPORATION

9F, 16, Nanking E. Rd., Sec. 3, Taipei, Taiwan Phone 886-2-2502-5003 Fax 886-2-2505-1280



YASKAWA ELECTRIC CORPORATION

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply

Specifications are subject to change without notice for ongoing product modifications and improvements.

© 2008-2009 YASKAWA ELECTRIC CORPORATION. All rights reserved.

LITERATURE NO. KAEP C710616 22C

Published in Japan January 2009 08-7 �-0 08-5-11

Printed on 100% recycled paper SOYINK, with soybean oil ink.